



**NC Software**  
**81762x-18**

English (en)  
10/2023



## Table of contents

<b>1</b>	<b>New and Modified Functions.....</b>	<b>35</b>
<b>2</b>	<b>About the User's Manual.....</b>	<b>55</b>
<b>3</b>	<b>About the Product.....</b>	<b>65</b>
<b>4</b>	<b>First Steps.....</b>	<b>107</b>
<b>5</b>	<b>Status Displays.....</b>	<b>119</b>
<b>6</b>	<b>Powering On and Off.....</b>	<b>153</b>
<b>7</b>	<b>Manual Operation.....</b>	<b>161</b>
<b>8</b>	<b>NC Fundamentals.....</b>	<b>169</b>
<b>9</b>	<b>Tools.....</b>	<b>175</b>
<b>10</b>	<b>Coordinate Transformation.....</b>	<b>221</b>
<b>11</b>	<b>Collision Monitoring.....</b>	<b>249</b>
<b>12</b>	<b>Control Functions.....</b>	<b>279</b>
<b>13</b>	<b>Monitoring.....</b>	<b>303</b>
<b>14</b>	<b>Opening CAD files with CAD Viewer.....</b>	<b>333</b>
<b>15</b>	<b>User aids.....</b>	<b>355</b>
<b>16</b>	<b>The MDI Application.....</b>	<b>365</b>
<b>17</b>	<b>Touch Probes.....</b>	<b>371</b>
<b>18</b>	<b>Touch Probe Functions in the Manual Operating Mode.....</b>	<b>375</b>
<b>19</b>	<b>Program Run.....</b>	<b>411</b>
<b>20</b>	<b>Tables.....</b>	<b>437</b>
<b>21</b>	<b>Electronic Handwheel.....</b>	<b>507</b>
<b>22</b>	<b>Override Controller.....</b>	<b>521</b>
<b>23</b>	<b>Embedded Workspace and Extended Workspace.....</b>	<b>529</b>
<b>24</b>	<b>Integrated Functional Safety (FS).....</b>	<b>533</b>
<b>25</b>	<b>The Settings Application.....</b>	<b>541</b>
<b>26</b>	<b>User Administration.....</b>	<b>605</b>
<b>27</b>	<b>HEROS Operating System.....</b>	<b>631</b>
<b>28</b>	<b>Overviews.....</b>	<b>653</b>





<b>1</b>	<b>New and Modified Functions.....</b>	<b>35</b>
<b>1.1</b>	<b>New functions.....</b>	<b>36</b>
1.1.1	User's Manual as integrated product aid: <b>TNCguide</b> .....	36
1.1.2	Operation.....	36
1.1.3	Status displays.....	36
1.1.4	Manual operation.....	37
1.1.5	Tools.....	37
1.1.6	Milling Cycles.....	38
1.1.7	Coordinate transformation.....	38
1.1.8	Files.....	38
1.1.9	Collision monitoring.....	38
1.1.10	Variable programming.....	39
1.1.11	Graphical programming.....	39
1.1.12	ISO.....	39
1.1.13	User aids.....	39
1.1.14	The Simulation workspace.....	39
1.1.15	Touch Probe Functions in the <b>Manual</b> Operating Mode.....	40
1.1.16	Program run.....	40
1.1.17	Tables.....	40
1.1.18	Override Controller.....	41
1.1.19	Integrated functional safety (FS).....	41
1.1.20	HEROS operating system.....	41

<b>1.2</b>	<b>Modified or extended functions.....</b>	<b>41</b>
1.2.1	Operation.....	41
1.2.2	Status displays.....	42
1.2.3	Manual operation.....	42
1.2.4	Programming fundamentals.....	43
1.2.5	Tools.....	43
1.2.6	Programming techniques.....	44
1.2.7	Contour and Point Definitions.....	44
1.2.8	Milling Cycles.....	44
1.2.9	Mill-Turning Cycles (#50 / #4-03-1).....	45
1.2.10	Files.....	45
1.2.11	Monitoring.....	46
1.2.12	Miscellaneous functions.....	46
1.2.13	Variable programming.....	46
1.2.14	Graphical programming.....	46
1.2.15	CAD Viewer.....	47
1.2.16	ISO.....	47
1.2.17	User aids.....	48
1.2.18	The <b>Simulation</b> workspace.....	48
1.2.19	Touch Probe Functions in the <b>Manual</b> Operating Mode.....	49
1.2.20	Touch-Probe Cycles for Workpieces.....	50
1.2.21	Touch-Probe Cycles for Tools.....	50
1.2.22	Touch-Probe Cycles for Kinematics Measuring.....	50
1.2.23	Program Run.....	51
1.2.24	Tables.....	52
1.2.25	The <b>The Settings</b> Application.....	53
1.2.26	User Administration.....	53
1.2.27	Machine parameters.....	53

<b>2</b>	<b>About the User's Manual.....</b>	<b>55</b>
2.1	Target group: Users.....	56
2.2	Available user documentation.....	57
2.3	Types of notes used.....	58
2.4	Notes on using NC programs.....	59
2.5	User's Manual as integrated product aid: TNCguide.....	60
2.5.1	Search in TNCguide.....	63
2.5.2	Copying NC examples to clipboard.....	64
2.6	Contacting the editorial staff.....	64

<b>3</b>	<b>About the Product.....</b>	<b>65</b>
<b>3.1</b>	<b>The TNC7.....</b>	<b>66</b>
3.1.1	Proper and intended use.....	67
3.1.2	Intended place of operation.....	67
<b>3.2</b>	<b>Safety precautions.....</b>	<b>68</b>
<b>3.3</b>	<b>Software.....</b>	<b>71</b>
3.3.1	Software options.....	73
3.3.2	Information on licensing and use.....	81
<b>3.4</b>	<b>Hardware.....</b>	<b>81</b>
3.4.1	Touchscreen and keyboard unit.....	82
3.4.2	Hardware enhancements.....	86
<b>3.5</b>	<b>Areas of the control's user interface.....</b>	<b>88</b>
<b>3.6</b>	<b>Overview of the operating modes.....</b>	<b>89</b>
<b>3.7</b>	<b>Workspaces.....</b>	<b>91</b>
3.7.1	Operating elements within the workspaces.....	91
3.7.2	Symbols within the workspaces.....	92
3.7.3	Overview of workspaces.....	92
<b>3.8</b>	<b>Operating elements.....</b>	<b>95</b>
3.8.1	Common gestures for the touchscreen.....	95
3.8.2	Operating elements of the keyboard unit.....	95
3.8.3	Keyboard shortcuts for operating the control.....	102
3.8.4	Icons on the control's user interface.....	103
3.8.5	The Desktop menu workspace.....	105

<b>4</b>	<b>First Steps.....</b>	<b>107</b>
4.1	Chapter overview.....	108
4.2	Switching on the machine and the control.....	108
4.3	Configuring a tool.....	109
4.3.1	Selecting the Tables operating mode.....	109
4.3.2	Configuring the control's user interface.....	110
4.3.3	Preparing and measuring tools.....	110
4.3.4	Editing within tool management.....	111
4.3.5	Editing the pocket table.....	112
4.4	Setting up a workpiece.....	113
4.4.1	Selecting an operating mode.....	113
4.4.2	Clamping the workpiece.....	113
4.4.3	Workpiece presetting with a touch probe.....	113
4.5	Machining a workpiece.....	116
4.5.1	Selecting an operating mode.....	116
4.5.2	Opening an NC program.....	116
4.5.3	Starting an NC program.....	116
4.6	Switching the machine off.....	117

<b>5</b>	<b>Status Displays.....</b>	<b>119</b>
5.1	Overview.....	120
5.2	The Positions workspace.....	121
5.3	Status overview on the TNC bar.....	127
5.4	The Status workspace.....	129
5.5	The Simulation status workspace.....	146
5.6	Display of the program run time.....	147
5.7	Position displays.....	148
5.7.1	Switching the position display mode.....	150
5.8	Defining the contents of the QPARA tab.....	151

<b>6</b>	<b>Powering On and Off.....</b>	<b>153</b>
<b>6.1</b>	<b>Powering on.....</b>	<b>154</b>
6.1.1	Powering the machine and the control on.....	155
<b>6.2</b>	<b>The Referencing workspace.....</b>	<b>157</b>
6.2.1	Axis reference run.....	157
<b>6.3</b>	<b>Powering off.....</b>	<b>158</b>
6.3.1	Shutting down the control and powering-off the machine.....	159

<b>7</b>	<b>Manual Operation.....</b>	<b>161</b>
<b>7.1</b>	<b>The Manual operation application.....</b>	<b>162</b>
<b>7.2</b>	<b>Moving the machine axes.....</b>	<b>163</b>
7.2.1	Using axis keys to move the axes.....	164
7.2.2	Incremental jog positioning of axes.....	165
<b>7.3</b>	<b>Unbalance functions (#50 / #4-03-1).....</b>	<b>166</b>
7.3.1	Overview.....	166
7.3.2	Calibrate unbalance (#50 / #4-03-1).....	166
7.3.3	Measure unbalance (#50 / #4-03-1).....	167



<b>8</b>	<b>NC Fundamentals.....</b>	<b>169</b>
<b>8.1</b>	<b>NC fundamentals.....</b>	<b>170</b>
8.1.1	Programmable axes.....	170
8.1.2	Designation of the axes of milling machines.....	170
8.1.3	Position encoders and reference marks.....	171
8.1.4	Presets in the machine.....	172

<b>9</b>	<b>Tools.....</b>	<b>175</b>
<b>9.1</b>	<b>Fundamentals.....</b>	<b>176</b>
<b>9.2</b>	<b>Presets on the tool.....</b>	<b>177</b>
9.2.1	Tool carrier reference point.....	177
9.2.2	Tool tip TIP .....	178
9.2.3	Tool center point (TCP, tool center point).....	179
9.2.4	Tool location point (TLP, tool location point).....	179
9.2.5	Tool rotation point (TRP, tool rotation point).....	180
9.2.6	Tool radius 2 center (CR2, center R2).....	180
<b>9.3</b>	<b>Tool data.....</b>	<b>181</b>
9.3.1	Tool ID number.....	181
9.3.2	Tool name.....	181
9.3.3	Database ID.....	182
9.3.4	Indexed tool.....	182
9.3.5	Tool types.....	188
9.3.6	Tool data for the tool types.....	191
<b>9.4</b>	<b>Tool management.....</b>	<b>205</b>
9.4.1	Importing and exporting tool data.....	206
<b>9.5</b>	<b>Tool carrier management.....</b>	<b>209</b>
9.5.1	Assigning a tool carrier.....	210
<b>9.6</b>	<b>Customizing tool carrier templates with ToolHolderWizard.....</b>	<b>212</b>
9.6.1	Parameterizing tool carrier templates.....	213
<b>9.7</b>	<b>Tool model (#140 / #5-03-2).....</b>	<b>213</b>
9.7.1	Assigning a tool model.....	215
<b>9.8</b>	<b>Tool usage test.....</b>	<b>215</b>
9.8.1	Performing the tool usage test.....	218

<b>10</b>	<b>Coordinate Transformation.....</b>	<b>221</b>
<b>10.1</b>	<b>Reference systems.....</b>	<b>222</b>
10.1.1	Overview.....	222
10.1.2	Basics of coordinate systems.....	223
10.1.3	Machine coordinate system M-CS.....	224
10.1.4	Basic coordinate system B-CS.....	227
10.1.5	Workpiece coordinate system W-CS.....	229
10.1.6	Working plane coordinate system WPL-CS.....	231
10.1.7	Input coordinate system I-CS.....	234
10.1.8	Tool coordinate system T-CS.....	235
<b>10.2</b>	<b>Preset management.....</b>	<b>238</b>
10.2.1	Setting a preset manually.....	241
10.2.2	Activating a preset manually.....	242
<b>10.3</b>	<b>Tilting the working plane (#8 / #1-01-1).....</b>	<b>243</b>
10.3.1	Fundamentals.....	243
10.3.2	The 3-D rotation window (#8 / #1-01-1).....	245

<b>11 Collision Monitoring.....</b>	<b>249</b>
<b>11.1 Dynamic Collision Monitoring (DCM) (#40 / #5-03-1).....</b>	<b>250</b>
<b>11.2 Fixture management.....</b>	<b>257</b>
11.2.1 Fundamentals.....	257
11.2.2 Integrating fixtures into collision monitoring (#140 / #5-03-2).....	260
11.2.3 Editing CFG files with KinematicsDesign.....	270
11.2.4 Combining fixtures in the New Fixture window.....	275

<b>12 Control Functions.....</b>	<b>279</b>
<b>12.1 Adaptive feed control (AFC) (#45 / #2-31-1).....</b>	<b>280</b>
12.1.1 Fundamentals.....	280
12.1.2 Activating and deactivating AFC.....	283
12.1.3 AFC teach-in cut.....	286
12.1.4 Monitoring tool wear and tool load.....	288
<b>12.2 Active Chatter Control (ACC) (#145 / #2-30-1).....</b>	<b>290</b>
<b>12.3 Global program settings (GPS) (#44 / #1-06-1).....</b>	<b>291</b>
12.3.1 Fundamentals.....	291
12.3.2 The Additive offset (M-CS) function.....	293
12.3.3 The Additive basic rotat. (W-CS) function.....	295
12.3.4 The Shift (W-CS) function.....	295
12.3.5 The Mirroring (W-CS) function.....	296
12.3.6 The Shift (mW-CS) function.....	297
12.3.7 The Rotation (WPL-CS) function.....	298
12.3.8 The Handwheel superimp. function.....	298
12.3.9 TheFeed rate factor function.....	301

<b>13</b>	<b>Monitoring.....</b>	<b>303</b>
<b>13.1</b>	<b>Process monitoring (#168 / #5-01-1).....</b>	<b>304</b>
13.1.1	Fundamentals.....	304
13.1.2	First steps in process monitoring.....	306
13.1.3	The Process Monitoring workspace (#168 / #5-01-1).....	309
13.1.4	Monitoring tasks.....	320

<b>14 Opening CAD files with CAD Viewer.....</b>	<b>333</b>
<b>14.1 Fundamentals.....</b>	<b>334</b>
<b>14.2 Workpiece preset in the CAD file.....</b>	<b>339</b>
14.2.1 Setting the workpiece preset or workpiece datum and orienting the coordinate system.....	341
<b>14.3 Workpiece datum in the CAD file.....</b>	<b>342</b>
<b>14.4 Loading contours and positions to NC programs with CAD Import (#42 / #1-03-1).....</b>	<b>344</b>
14.4.1 Selecting and saving a contour.....	347
14.4.2 Selecting positions.....	349
<b>14.5 Generating STL files with 3D mesh (#152 / #1-04-1).....</b>	<b>351</b>
14.5.1 Positioning the 3D model for rear-face machining.....	354

<b>15</b>	<b>User aids.....</b>	<b>355</b>
15.1	Virtual keyboard of the control bar.....	356
15.1.1	Opening and closing the virtual keyboard.....	359
15.2	Message menu on the information bar.....	360
15.2.1	Creating a service file manually.....	362
15.2.2	Creating a service file automatically.....	363



<b>16 The MDI Application.....</b>	<b>365</b>
------------------------------------	------------

<b>17 Touch Probes.....</b>	<b>371</b>
17.1 Setting up touch probes.....	372

<b>18 Touch Probe Functions in the Manual Operating Mode.....</b>	<b>375</b>
<b>18.1 Fundamentals.....</b>	<b>376</b>
18.1.1 Setting a preset in a linear axis.....	384
18.1.2 Determining the circle center point of a stud using the automatic probing method.....	386
18.1.3 Determining and compensating the rotation of a workpiece.....	388
18.1.4 Using touch probe functions with mechanical probes or dial gages.....	389
<b>18.2 Calibrating the workpiece touch probe.....</b>	<b>391</b>
18.2.1 Calibrating the length of the workpiece touch probe.....	394
18.2.2 Calibrating the radius of the workpiece touch probe.....	395
18.2.3 3D calibration of workpiece touch probe (#92 / #2-02-1).....	396
<b>18.3 Setting up the workpiece with graphical support (#159 / #1-07-1).....</b>	<b>398</b>
18.3.1 Setting up the workpiece.....	404
<b>18.4 Measuring the tool by scratching.....</b>	<b>405</b>
18.4.1 Tool measurement by scratching.....	407
<b>18.5 Suppressing touch probe monitoring.....</b>	<b>408</b>
18.5.1 Deactivating touch probe monitoring.....	408
<b>18.6 Comparison of offset and 3D basic rotation.....</b>	<b>409</b>

<b>19 Program Run.....</b>	<b>411</b>
<b>19.1 The Program Run operating mode.....</b>	<b>412</b>
19.1.1 Fundamentals.....	412
19.1.2 Navigation path in the Program workspace.....	420
19.1.3 Manual traverse during an interruption.....	422
19.1.4 Block scan for mid-program startup.....	423
19.1.5 Returning to the contour.....	430
<b>19.2 Compensation during program run.....</b>	<b>432</b>
19.2.1 Opening tables from within the Program Run operating mode.....	433
<b>19.3 The Retract application.....</b>	<b>434</b>

<b>20 Tables.....</b>	<b>437</b>
<b>20.1 The Tables operating mode.....</b>	<b>438</b>
20.1.1 Editing the contents of tables.....	440
<b>20.2 The Create new table window.....</b>	<b>440</b>
<b>20.3 The Table workspace.....</b>	<b>442</b>
<b>20.4 The Form workspace for tables.....</b>	<b>448</b>
20.4.1 Adding a column in the workspace.....	450
<b>20.5 Tool tables.....</b>	<b>451</b>
20.5.1 Overview.....	451
20.5.2 Tool table tool.t.....	451
20.5.3 Turning tool table toolturn.trn (#50 / #4-03-1).....	461
20.5.4 Grinding tool table toolgrind.grd (#156 / #4-04-1).....	466
20.5.5 Dressing tool table tooldress.drs (#156 / #4-04-1).....	475
20.5.6 Touch probe table tchprobe.tp.....	478
20.5.7 Creating a tool table in inches.....	482
<b>20.6 Pocket table tool_p.tch.....</b>	<b>482</b>
<b>20.7 Tool usage file.....</b>	<b>485</b>
<b>20.8 T usage order (#93 / #2-03-1).....</b>	<b>487</b>
<b>20.9 Tooling list (#93 / #2-03-1).....</b>	<b>489</b>
<b>20.10 Preset table *.pr.....</b>	<b>490</b>
20.10.1 actual position capture in the preset table.....	495
20.10.2 Activating write protection.....	496
20.10.3 Removing write protection.....	496
20.10.4 Creating a preset table in inches.....	498
<b>20.11 Tables for AFC (#45 / #2-31-1).....</b>	<b>500</b>
20.11.1 Basic AFC settings in AFC.tab.....	500
20.11.2 AFC.DEP settings file for teach-in cuts.....	503
20.11.3 Log file AFC2.DEP.....	504
20.11.4 Editing the tables for AFC.....	506

<b>21 Electronic Handwheel.....</b>	<b>507</b>
<b>21.1 Fundamentals.....</b>	<b>508</b>
21.1.1 Entering spindle speed S.....	513
21.1.2 Entering the feed rate F.....	513
21.1.3 Entering miscellaneous functions M.....	513
21.1.4 Creating a positioning block.....	514
21.1.5 Incremental jog positioning.....	514
<b>21.2 HR 550FS wireless handwheel.....</b>	<b>516</b>
<b>21.3 The Configuration of wireless handwheel window.....</b>	<b>517</b>
21.3.1 Assigning a handwheel to a handwheel holder.....	519
21.3.2 Selecting the transmission power.....	519
21.3.3 Setting the radio channel.....	520
21.3.4 Reactivating the handwheel.....	520

<b>22</b>	<b>Override Controller.....</b>	<b>521</b>
-----------	---------------------------------	------------

<b>23</b>	<b>Embedded Workspace and Extended Workspace.....</b>	<b>529</b>
23.1	Embedded Workspace (#133 / #3-01-1).....	530
23.2	Extended Workspace.....	532



<b>24 Integrated Functional Safety (FS).....</b>	<b>533</b>
24.1 Checking axis positions manually.....	539

<b>25 The Settings Application.....</b>	<b>541</b>
25.1 Overview.....	542
25.2 Code numbers.....	545
25.3 The Machine Settings menu item.....	545
25.4 The General Information menu item.....	548
25.5 The SIK menu item.....	549
25.5.1 Viewing of software options.....	550
25.6 The Machine Times menu item.....	552
25.7 The Adjust system time window.....	553
25.8 Conversational language of the control.....	554
25.8.1 Changing the language.....	555
25.9 SELinux security software.....	555
25.10 Network drives on the control.....	556
25.11 Ethernet interface.....	559
25.11.1 The Network settings window.....	561
25.12 PKI Admin.....	566
25.13 OPC UA NC Server (#56-61 / #3-02-1*).....	568
25.13.1 Fundamentals.....	568
25.13.2 The OPC UA (#56-61 / #3-02-1*) menu item.....	571
25.13.3 The OPC UA connection assistant function (#56-61 / #3-02-1*).....	572
25.13.4 The OPC UA license settings function (#56-61 / #3-02-1*).....	573
25.14 The DNC menu item.....	574
25.15 Printers.....	576
25.15.1 Creating a printer.....	579
25.16 The VNC menu item.....	579
25.17 The Remote Desktop Manager window (#133 / #3-01-1).....	583
25.17.1 Configuring an external computer for Windows Terminal Service (RemoteFX).....	587
25.17.2 Establishing and starting a connection.....	587
25.17.3 Exporting and importing connections.....	588

<b>25.18 Firewall.....</b>	<b>589</b>
<b>25.19 Portscan.....</b>	<b>593</b>
<b>25.20 Backup and restore.....</b>	<b>593</b>
25.20.1 Backing up data.....	594
25.20.2 Restoring data.....	595
<b>25.21 TNCdiag.....</b>	<b>596</b>
<b>25.22 Update the documentation.....</b>	<b>596</b>
25.22.1 Transferring TNCguide.....	597
<b>25.23 Machine parameters.....</b>	<b>597</b>
25.23.1 Note.....	602
<b>25.24 Configuring the control's user interface.....</b>	<b>602</b>
25.24.1 Exporting and importing configurations.....	604

<b>26 User Administration.....</b>	<b>605</b>
<b>26.1 Fundamentals.....</b>	<b>606</b>
26.1.1 Configuring user administration.....	610
26.1.2 Deactivating user administration.....	613
<b>26.2 The User administration window.....</b>	<b>614</b>
<b>26.3 The Active user window.....</b>	<b>614</b>
<b>26.4 Saving user data.....</b>	<b>615</b>
26.4.1 Overview.....	615
26.4.2 Local LDAP database.....	616
26.4.3 LDAP database on a remote computer.....	617
26.4.4 Connection to Windows domain.....	618
<b>26.5 Autologin in user administration.....</b>	<b>624</b>
<b>26.6 Logging on with user administration.....</b>	<b>624</b>
26.6.1 Logging on a user with password.....	625
26.6.2 Assigning a smartcard to a user.....	626
<b>26.7 Window for requesting additional rights.....</b>	<b>626</b>
<b>26.8 SSH-secured DNC connection.....</b>	<b>627</b>
26.8.1 Setting up SSH-secured DNC connections.....	629
26.8.2 Removing a secure connection.....	630

<b>27 HEROS Operating System.....</b>	<b>631</b>
<b>27.1 Fundamentals.....</b>	<b>632</b>
<b>27.2 HEROS menu.....</b>	<b>632</b>
<b>27.3 Serial data transfer.....</b>	<b>637</b>
<b>27.4 PC software for data transfer.....</b>	<b>639</b>
<b>27.5 File transfer with SFTP (SSH File Transfer Protocol).....</b>	<b>641</b>
27.5.1 Setting up an SFTP connection with CreateConnections.....	642
<b>27.6 Secure Remote Access.....</b>	<b>643</b>
<b>27.7 Data backup.....</b>	<b>645</b>
<b>27.8 Opening files with additional software.....</b>	<b>645</b>
27.8.1 Opening tools.....	646
<b>27.9 Network configuration with Advanced Network Configuration.....</b>	<b>647</b>
27.9.1 The Editing network connection window.....	648

<b>28</b>	<b>Overviews.....</b>	<b>653</b>
<b>28.1</b>	<b>Pin layout and cables for data interfaces.....</b>	<b>654</b>
28.1.1	V.24/RS-232-C interface for HEIDENHAIN devices.....	654
28.1.2	Ethernet interface RJ45 socket.....	654
<b>28.2</b>	<b>Machine parameters.....</b>	<b>654</b>
28.2.1	List of user parameters.....	655
<b>28.3</b>	<b>User administration roles and rights.....</b>	<b>666</b>
28.3.1	List of roles.....	666
28.3.2	List of rights.....	669
<b>28.4</b>	<b>Special functions defining the machine behavior.....</b>	<b>671</b>
<b>28.5</b>	<b>Keycaps for keyboard units and machine operating panels.....</b>	<b>671</b>

# 1

**New and Modified  
Functions**

## Available additional documentation



### Overview of new and modified software functions

Further information about the previous software versions is presented in the **Overview of New and Modified Software Functions** documentation. Please contact HEIDENHAIN if you need this documentation.

ID: 1373081-xx

## 1.1 New functions

### 1.1.1 User's Manual as integrated product aid: TNCguide

Topic	Description
TNCguide	<p>You can open <b>TNCguide</b> for the current context. Context-sensitive help means that the relevant information is displayed directly (e.g., for the selected item or the current NC function).</p> <p>Using the <b>Help</b> icon, you can select an item for which to display information. When you press the <b>HELP</b> key, the control will display information on the selected NC function.</p> <p><b>Further information:</b> "Context-sensitive help", Page 63</p>

### 1.1.2 Operation

Topic	Description
Hardware requirements	To install or update software version 18, a control with a hard disk size of at least 30 GB is required.
Announcement: <b>SIK2</b> plug-in board	<p>Software version 18 SP1 introduces the <b>SIK2</b> plug-in board. For controls with <b>SIK2</b>, the software options are identified by new four-digit numbers.</p> <p>As long as both <b>SIK1</b> and <b>SIK2</b> are available, both software option numbers will be indicated in the User's Manual, for example (#18 / #3-03-1).</p> <p><b>Further information:</b> "Software options", Page 73</p>

### 1.1.3 Status displays

Topic	Description
The <b>Status</b> workspace	<p>Using the <b>Configure the layout</b> icon in the <b>Status</b> workspace, you can add or remove columns and arrange the areas in columns.</p> <p><b>Further information:</b> "Adding a column in the workspace", Page 450</p>



### 1.1.4 Manual operation

Topic	Description
Unbalance functions (#50 / #4-03-1)	<p>The control provides manual cycles that allow you to determine the unbalance in the current fixture. The control suggests the mass and position of the compensation weight.</p> <p><b>Further information:</b> "Unbalance functions (#50 / #4-03-1)", Page 166</p>

### Programming fundamentals

Topic	Description
The <b>Text editor</b> workspace	<p>The <b>Text editor</b> workspace is available in the <b>Editor</b> operating mode. In the <b>Text editor</b> you can create and edit data of the following types:</p> <ul style="list-style-type: none"> <li>■ Text files, such as *.txt</li> <li>■ Format files, such as *.a</li> </ul>
Settings in the <b>Program</b> workspace	<p>You can deactivate the auto-complete function in Text editor mode.</p> <p>You can select whether the control is to display help graphics as pop-up windows or in the <b>Help</b> workspace only.</p> <p>You can select whether the control is to add an informational comment to an NC sequence, such as the name of the NC sequence.</p> <p>You can select whether the control will dim unavailable NC functions in the <b>Insert NC function</b> window or hide them (e.g., for software options that are not enabled).</p> <p>You can select whether the control will enclose path information in quotation marks by default for the following NC functions:</p> <ul style="list-style-type: none"> <li>■ <b>CALL PGM</b> (ISO: %)</li> <li>■ Cycle <b>12 PGM CALL</b> (ISO: <b>G39</b>)</li> <li>■ <b>FN 16: F-PRINT</b> (ISO: <b>D16</b>)</li> <li>■ <b>FN 26: TABOPEN</b> (ISO: <b>D26</b>)</li> </ul> <p>If a touchscreen is used, the control will display a context-sensitive virtual keyboard. A selection menu allows you to select the position of the virtual keyboard in the workspace or to hide the virtual keyboard.</p>
Display of the NC program	<p>In the machine parameter <b>lineBreak</b> (no. 105404), you define whether the control will display multi-line NC functions without or with line breaks.</p>

### 1.1.5 Tools

Topic	Description
Tool type	<p>The tool type <b>Side milling cutter (MILL_SIDE)</b> has been added.</p> <p><b>Further information:</b> "Tool types", Page 188</p>
Tool model (#140 / #5-03-2)	<p>You can add 3D models for drilling or milling tools as well as workpiece touch probes. The control can display tool models in simulation and take them into account in calculations, for example when performing Dynamic Collision Monitoring (DCM (#40 / #5-03-1)).</p> <p><b>Further information:</b> "Tool model (#140 / #5-03-2)", Page 213</p>

### 1.1.6 Milling Cycles

Topic	Description
Cycle <b>1274 OCM CIRCULAR SLOT</b> (ISO: <b>G1274</b> ) (#167 / #1-02-1)	This cycle allows you to define a circular slot that is then used as a pocket or boundary for face milling in conjunction with other OCM cycles.

### 1.1.7 Coordinate transformation

Topic	Description
<b>TRANS RESET</b>	Use the NC function <b>TRANS RESET</b> to reset all simple coordinate transformations simultaneously.

### 1.1.8 Files

Topic	Description
The <b>Files</b> operating mode	With the settings of the <b>Files</b> operating mode, you can define whether the control will display hidden and dependent files, such as the tool-usage file <b>*.t.dep</b> .

### 1.1.9 Collision monitoring

Topic	Description
Combining fixtures	<p>The <b>New Fixture</b> window allows combining several fixtures and saving them as a new fixture. This enables realizing and monitoring complex clamping situations.</p> <p><b>Further information:</b> "Combining fixtures in the New Fixture window", Page 275</p>
<b>FUNCTION DCM DIST</b> (#140 / #5-03-2)	With the <b>FUNCTION DCM DIST</b> NC function, you can reduce the minimum distance between the tool and the fixture for Dynamic Collision Monitoring (DCM (#40 / #5-03-1)).

### 1.1.10 Variable programming

Topic	Description
<b>FN 18: SYSREAD (ISO: D18)</b>	<p>The <b>FN 18: SYSREAD (ISO: D18)</b> functions have been extended:</p> <ul style="list-style-type: none"> <li>■ <b>FN 18: SYSREAD (D18) ID10 NR10</b>: Counts the number of executions of the current program section</li> <li>■ <b>FN 18: SYSREAD (D18) ID245 NR1</b>: Current nominal position of an axis (<b>IDX</b>) in the REF system</li> <li>■ <b>FN 18: SYSREAD (D18) ID370 NR7</b>: Reaction of the control if a probing point is not reached during a programmable touch-probe cycle <b>14xx</b></li> <li>■ <b>FN 18: SYSREAD (D18) ID610</b>: Values of various machine parameters for <b>M120</b> <ul style="list-style-type: none"> <li>■ <b>NR53</b>: Radial jerk at normal feed rate</li> <li>■ <b>NR54</b>: Radial jerk at high feed rate</li> </ul> </li> <li>■ <b>FN 18: SYSREAD (D18) ID630</b>: SIK information of the control <ul style="list-style-type: none"> <li>■ <b>NR3</b>: SIK generation <b>SIK1</b> or <b>SIK2</b></li> <li>■ <b>NR4</b>: Specifies whether and how often a software option (<b>IDX</b>) has been enabled on controls with <b>SIK2</b></li> </ul> </li> <li>■ <b>FN 18: SYSREAD (D18) ID990 NR28</b>: Current tool spindle angle</li> <li>■ <b>FN 18: SYSREAD (D18) ID10950 NR6</b>: Selected file in the <b>TSHAPE</b> column of the tool table for the current tool (#140 / #5-03-2)</li> </ul>

### 1.1.11 Graphical programming

Topic	Description
Importing contours into graphical programming	It is possible to import NC blocks that contain NC functions for coordinate transformation into the graphical programming environment.

### 1.1.12 ISO

Topic	Description
The <b>Insert NC function</b> window	<p>The <b>Insert NC function</b> window allows you add ISO syntax, too.</p> <p>Using the NC function keys, you can insert the corresponding ISO syntax (e.g., by pressing the <b>L</b> key for <b>G01</b>).</p>

### 1.1.13 User aids

Topic	Description
Context menu	The <b>Insert NC function</b> window features a context menu.

### 1.1.14 The Simulation workspace

Topic	Description
The <b>Simulation settings</b> window	The <b>Optimized saving of STL</b> (#152 / #1-04-1) toggle switch allows you to output a simplified STL file. These STL files have been adapted to the <b>BLK FORM FILE</b> function; for example, they contain a maximum of 20,000 triangles.

### 1.1.15 Touch Probe Functions in the Manual Operating Mode

Topic	Description
The <b>Change the preset</b> window	<p>In the <b>Change the preset</b> window, you can discard the previous probing position and activate a new preset with the <b>Apply changes and delete existing probe objects</b> button.</p> <p><b>Further information:</b> "The Change the preset window", Page 383</p>

### 1.1.16 Program run

Topic	Description
Retracting the tap	<p>If the NC program stops during tapping, the control will display the <b>Tool Retract</b> button.</p> <p>When you select that button and press the <b>NC Start</b> key, the control will automatically retract the tool.</p>

### 1.1.17 Tables

Topic	Description
The <b>Form</b> workspace	<p>Using the <b>Configure the layout</b> icon in the <b>Form</b> workspace, you can add or remove columns and arrange the areas in columns.</p> <p><b>Further information:</b> "Adding a column in the workspace", Page 450</p>
Tool table	<p>You can use the <b>TSHAPE</b> column of the tool table to select a 3D file as the tool model (#140 / #5-03-2). This allows the control to display complex tools in simulation and take them into account for Dynamic Collision Monitoring (DCM (#40 / #5-03-1)).</p> <p><b>Further information:</b> "Tool management ", Page 205</p>
Freely definable tables	<p>The <b>Edit table characteristics</b> icon allows you to, for example, insert new columns into freely definable tables.</p>
Machine manufacturer settings	<p>The machine manufacturer uses the machine parameter <b>CfgTableCellLock</b> (no. 135600) to define whether and in which cases individual table cells are locked or write-protected. On some machines, you cannot change the tool type once a tool has been inserted into the machine.</p> <p>Using the optional machine parameter <b>CfgTableCellCheck</b> (no. 141300), the machine manufacturer can define rules for table columns. This machine parameter allows to define columns as required fields or to reset them automatically to a default value. If a rule is violated, the control displays a note icon.</p>

### 1.1.18 Override Controller

Topic	Description
Override controller	<p>With the hardware extension Override Controller OC 310, the control allows the following:</p> <ul style="list-style-type: none"> <li>■ Use the dial to manipulate the feed rate and/or rapid traverse</li> <li>■ Start NC programs with the integrated <b>NC Start</b> button</li> <li>■ Receive tactile responses through vibrations</li> <li>■ Use breakpoints to define conditional stops</li> <li>■ Resume the NC program by increasing the override</li> </ul> <p><b>Further information:</b> "Override Controller", Page 521</p>

### 1.1.19 Integrated functional safety (FS)

Topic	Description
SLP safety function (safely limited position)	<p>In machine parameter <b>safeAbsPosition</b> (no. 403130), the machine manufacturer defines whether the <b>SLP</b> safety function is activated for an axis.</p> <p>If the <b>SLP</b> safety function is inactive, the axis is monitored by functional safety (FS) without a check after startup. The axis is identified by means of a gray warning triangle.</p> <p><b>Further information:</b> "Test status of the axes", Page 538</p>

### 1.1.20 HEROS operating system

Topic	Description
HEROS menu	<p>In the HEROS settings, you can adjust the screen brightness of the control.</p> <p>In the <b>Screenshot settings</b> window, you can define under which path and file name the control saves screenshots. The file name can contain a placeholder (e.g., %N for sequential numbering).</p> <p>The HEROS tool <b>Diffuse</b> has been added. You can compare and merge text files.</p> <p>This tool is provided as an addition to the <b>program comparison</b> function for NC programs.</p> <p><b>Further information:</b> "HEROS menu", Page 632</p>

## 1.2 Modified or extended functions

### 1.2.1 Operation

Topic	Description
Dark Mode	<p>In the machine parameter <b>darkModeEnable</b> (no. 135501), the machine manufacturer defines whether <b>Dark Mode</b> is available for selection.</p> <p><b>Further information:</b> "Areas of the control's user interface", Page 88</p>
Title bar of the workspaces	<p>The control groups the icons of the title bar depending on the size of the workspace in a selection menu.</p>

## 1.2.2 Status displays

Topic	Description
The <b>Positions</b> workspace	<p>If the handwheel is active, the control shows a symbol next to the selected axis in the <b>Positions</b> workspace. The symbol indicates whether you can move the axis with the handwheel.</p> <p><b>Further information:</b> "The Positions workspace", Page 121</p> <p>When you move the axes while <b>M136</b> is active, the control will display the feed rate in mm/rev in the <b>Positions</b> workspace and on the <b>POS</b> tab of the <b>Status</b> workspace.</p> <p>When a pallet preset is active, the control displays an icon with the number of the active pallet preset in the <b>Positions</b> workspace.</p>
Status overview on the TNC bar	<p>You can select the position display mode in the status overview on the TNC bar independently of the <b>Positions</b> workspace (e.g., <b>Actual pos. (ACT)</b>).</p> <p><b>Further information:</b> "Status overview on the TNC bar", Page 127</p>
The <b>Status</b> workspace	<p>On the <b>FN 16</b> tab of the <b>Status</b> workspace, you can select the <b>Clear</b> button to clear the <b>Output</b> area.</p> <p><b>Further information:</b> "The FN 16 tab", Page 132</p> <p>The <b>QPARA</b> tab can show 22 instead of 10 variables for each area.</p> <p><b>Further information:</b> "QPARA tab", Page 139</p> <p>On the <b>MON</b> tab of the <b>Status</b> workspace, the histogram shows the entire signal range, using the colors of the relative display (#155 / #5-02-1).</p> <p><b>Further information:</b> "The MON tab (#155 / #5-02-1)", Page 135</p> <p>If the optional columns <b>WPL-DX-DIAM</b> and <b>WPL-DZL</b> of the turning-tool table exist, the control shows the values of these columns on the <b>Tool</b> tab of the <b>Status</b> workspace (#50 / #4-03-1).</p> <p><b>Further information:</b> "The Tool tab", Page 143</p>

## 1.2.3 Manual operation

Topic	Description
Handwheel	<p>If you select <b>Manual</b> operating mode, the control deactivates the handwheel.</p> <p><b>Further information:</b> "The Manual operation application", Page 162</p>

## 1.2.4 Programming fundamentals

Topic	Description
The <b>Editor</b> operating mode	You can change the tab order in the <b>Editor</b> operating mode.
The <b>Program</b> workspace	<p>On the title bar of the <b>Program</b> workspace, the control shows icons for the <b>Cut</b>, <b>Copy</b> and <b>Paste</b> functions.</p> <p>While editing an NC block, you can undo individual changes made to syntax elements by selecting <b>Undo</b>.</p>
The <b>Insert NC function</b> window	During searches, the control also displays search results in the <b>Insert NC function</b> window that contain the search term, and replacement functions as well as related or equivalent functions.
Help graphic	<p>When you are editing an NC block, the control shows for some NC functions a help graphic in a pop-up window that illustrates the current syntax element.</p> <p>From this pop-up window, you can open the <b>Help</b> workspace or TNCguide.</p>
Text editor mode	<p>When you enter any character in Text editor mode, the control will insert a new line.</p> <p>When you program a cycle using the active auto-complete function, you can select the <b>Only downwardly-compatible cycle parameters</b> or <b>With optional cycle parameters</b> option. Optional cycle parameters can also be added later.</p> <p>In the selection menu of the Text editor mode, the control displays possible values in addition to the available syntax element (e.g., for the letter <b>M</b>).</p> <p>The control displays a help graphic in Text editor mode, too.</p> <p>In Text editor mode, you can insert line breaks.</p>

## 1.2.5 Tools

Topic	Description
Tool data	<p>The <b>thread-turning tool</b> turning tool type includes the parameter <b>SPB-Insert</b> (#50 / #4-03-1).</p> <p><b>Further information:</b> "Tool data for turning tools (#50 / #4-03-1)", Page 194</p>
Indexed tools	<p>In the <b>Insert tool</b> window, the <b>Index</b> checkbox was added. When you enable this checkbox, the control will add the next free index number.</p> <p>When you create an indexed tool, the control will copy the tool data from the previous table row. The previous table row may be the main tool or an existing indexed tool.</p> <p>If you delete a main tool, the control will delete all associated indexed tools as well.</p> <p><b>Further information:</b> "Indexed tool", Page 182</p>
Tool-usage test	<p>The control displays the <b>Refresh</b> icon in the <b>Tool usage</b> and <b>Tool check</b> areas of the <b>Tool check</b> column. You can create a tool-usage file and run a tool-usage test.</p> <p><b>Further information:</b> "The Tool check column in the Program workspace", Page 217</p>

## 1.2.6 Programming techniques

Topic	Description
NC sequences	You can activate or deactivate write protection for NC sequences.

## 1.2.7 Contour and Point Definitions

Topic	Description
<b>SEL CONTOUR</b>	You can also define subcontours as <b>LBL</b> subprograms within the complex <b>SEL CONTOUR</b> contour formula.
<b>PATTERN DEF</b>	The <b>Insert NC function</b> window shows every pattern definition of the <b>PATTERN DEF</b> function separately.
Cycle <b>220 POLAR PATTERN</b> (ISO: <b>G220</b> ) and Cycle <b>221 CARTESIAN PATTERN</b> (ISO: <b>G221</b> )	The machine manufacturer can hide the cycles <b>220 POLAR PATTERN</b> (ISO: <b>G220</b> ) and <b>221 CARTESIAN PATTERN</b> (ISO: <b>G221</b> ). We recommend using the <b>PATTERN DEF</b> function.

## 1.2.8 Milling Cycles

Topic	Description
Cycle <b>225 ENGRAVING</b> (ISO: <b>G225</b> )	The input value <b>1</b> has been added to parameter <b>Q515 FONT</b> in Cycle <b>225 ENGRAVING</b> (ISO: <b>G225</b> ). Use this input value to select the <b>LiberationSans-Regular</b> font.
Cycle <b>208 BORE MILLING</b> (ISO: <b>G208</b> ) and Cycles <b>127x</b> OCM standard figure cycles (#167 / #1-02-1)	You can enter symmetric tolerances for nominal dimensions, such as <b>10+-0.5</b> .
Cycle <b>287 GEAR SKIVING</b> (ISO: <b>G287</b> ) (#157 / #4-05-1)	Cycle <b>287 GEAR SKIVING</b> (ISO: <b>G287</b> ) (#157 / #4-05-1) has been extended: <ul style="list-style-type: none"> <li>■ When you program the optional parameter <b>Q466 OVERRUN PATH</b>, the control will optimize the approach and idle travel paths automatically. This will reduce machining times.</li> <li>■ Two columns have been added to the prototype of the technology table: <ul style="list-style-type: none"> <li>■ <b>dK</b>: Angular offset of the workpiece in order to machine one side of the tooth flank only. This can be used to increase the surface quality.</li> <li>■ <b>PGM</b>: Profile program for a custom tooth flank line, for example to realize crowning of the tooth flank.</li> </ul> </li> <li>■ After each step, the control displays the number of the current cut and the number of remaining cuts in a pop-up window.</li> </ul>
Cycle <b>286 GEAR HOBGING</b> (ISO: <b>G286</b> ) (#157 / #4-05-1) and Cycle <b>287 GEAR SKIVING</b> (ISO: <b>G287</b> ) (#157 / #4-05-1)	The machine manufacturer can configure a deviating automatic <b>LIFTOFF</b> for Cycles <b>286 GEAR HOBGING</b> (ISO: <b>G286</b> ) (#157 / #4-05-1) and <b>287 GEAR SKIVING</b> (ISO: <b>G287</b> ) (#157 / #4-05-1).



## 1.2.9 Mill-Turning Cycles (#50 / #4-03-1)

Topic	Description
Cycle <b>800 ADJUST XZ SYSTEM</b> (ISO: <b>G800</b> ) (#50 / #4-03-1)	<p>Cycle <b>800 ADJUST XZ SYSTEM</b> (ISO: <b>G800</b>) (#50 / #4-03-1) has been extended:</p> <ul style="list-style-type: none"> <li>■ The input range of the parameter <b>Q497 PRECESSION ANGLE</b> has been extended from four to five decimal places.</li> <li>■ The input range of the parameter <b>Q531 ANGLE OF INCIDENCE</b> has been extended from three to five decimal places.</li> </ul>

## 1.2.10 Files

Topic	Description
File functions	<p>If file functions are available for a selected folder or file, the control will display three dots below the icon.</p> <p>If you copy a file and then paste it to the same folder, the control adds the suffix <b>_1</b> to the file name. The control increments the number sequentially for each consecutive copy.</p>
File preview	The control indicates by means of symbols in the file preview whether the entire file or only a part of it is displayed.
The <b>Document</b> workspace	<p>The <b>Document</b> workspace includes a file information bar where the file path is shown.</p> <p>For PDF files, additional functions, such as searching or scaling, are available in the <b>Document</b> workspace.</p> <p>In the <b>Internet</b> window, you can mark URLs as bookmarks.</p>
<b>Quick selection</b> workspaces	<p>The <b>Quick selection</b> workspace in the <b>Editor</b> operating mode is subdivided into the following areas:</p> <ul style="list-style-type: none"> <li>■ <b>NC programs</b></li> <li>■ <b>New graphical programming</b></li> <li>■ <b>New text file</b></li> <li>■ <b>Jobs</b></li> </ul> <p>The <b>Create new table</b> function of the <b>Quick selection new table</b> workspace was revised. Now, you can, for example, search for table types and add favorites.</p> <p><b>Further information:</b> "The Create new table window", Page 440</p>

### 1.2.11 Monitoring

Topic	Description
Component monitoring (#155 / #5-02-1)	If a component has not been configured or cannot be monitored, the control displays the corresponding machining operation in gray in the heatmap.
Process monitoring	<p>The predefined HEIDENHAIN monitoring tasks have been updated and extended, for example by signals and processes.</p> <p>The machine manufacturer can configure additional monitoring tasks.</p> <p>It is no longer necessary to select reference machining explicitly. You can classify recordings as good or bad parts. The control will automatically use the first ten "good" recordings as reference machining.</p> <p>Recordings of machining operations can be exported manually or automatically to a log file.</p> <p>Recordings and settings of prior software versions are not compatible with software version 18.</p> <p><b>Further information:</b> "Process monitoring (#168 / #5-01-1)", Page 304</p>

### 1.2.12 Miscellaneous functions

Topic	Description
Miscellaneous functions for the spindle	<p>In turning mode, miscellaneous functions for the turning spindle must be programmed using different numbers (e.g., <b>M303</b> instead of <b>M3</b> (#50 / #4-03-1)). The machine manufacturer defines the numbers to be used.</p> <p>Using the optional machine parameter <b>CfgSpindleDisplay</b> (no. 139700), the machine manufacturer defines the miscellaneous function numbers to be displayed in the status display.</p>
The <b>Manual operation</b> application	<p>The machine manufacturer uses the optional machine parameter <b>forbidManual</b> (no. 103917) to define which miscellaneous functions are allowed in the <b>Manual operation</b> application and are available in the selection menu.</p> <p><b>Further information:</b> "The Manual operation application", Page 162</p>

### 1.2.13 Variable programming

Topic	Description
Formulas	<p>If you press the spacebar while using the <b>Formula</b>, <b>String formula</b> and <b>Contour formula</b> NC functions, the control displays all currently usable syntax elements in the action bar.</p> <p>Press the <b>-/+</b> key to change the algebraic sign in formulas.</p>

### 1.2.14 Graphical programming

Topic	Description
The <b>Contour settings</b> window	<p>The control will save the settings made in the <b>Contour settings</b> window permanently.</p> <p>Only the <b>Plane</b> and <b>Diameter programming</b> settings are not saved.</p>

### 1.2.15 CAD Viewer

Topic	Description
CAD Import (#42 / #1-03-1)	<p>When you select contours and positions in <b>CAD Viewer</b>, you can rotate the workpiece using touch gestures. While you are using touch gestures, the control will not display any element information.</p> <p><b>Further information:</b> "Loading contours and positions to NC programs with CAD Import (#42 / #1-03-1)", Page 344</p> <hr/> <p>CAD Import (#42 / #1-03-1) subdivides contours that are not located in the working plane, into individual sections. <b>CAD Viewer</b> creates straight lines <b>L</b> and circular arcs that are as long as possible.</p> <p>The resulting NC programs are often much shorter and clearer than NC programs generated by CAM. Thus, the contours are better suited for cycles, such as the OCM cycles (#167 / #1-02-1).</p> <hr/> <p>CAD Import outputs the radii of the circular arcs as comments. At the end of the generated NC blocks, CAD Import displays the smallest radius to help you select the most suitable tool.</p> <hr/> <p>In the <b>Find circle centers by diameter range</b> window, you can filter the data by position depth values.</p> <p><b>Further information:</b> "Loading contours and positions to NC programs with CAD Import (#42 / #1-03-1)", Page 344</p>

### 1.2.16 ISO

Topic	Description
ISO programming	<p>In connection with ISO programming, the control provides the following functions:</p> <ul style="list-style-type: none"> <li>■ Auto-complete</li> <li>■ Color highlighting of syntax elements</li> <li>■ Structure</li> </ul>

### 1.2.17 User aids

Topic	Description
Comments and structuring items	You can insert line breaks within comments or structuring items.
The <b>Structure</b> column	You can use the context menu to mark structuring items in the <b>Structure</b> column. The control will also mark all corresponding NC blocks.
<b>Search</b> column in the <b>Program</b> workspace	<p>If you use <b>Search and replace</b> while NC programs are open, the control will close them.</p> <p>The limit of the <b>Replace all</b> function was extended from 10,000 to 100,000.</p>
Calculator	<p>You can use the calculator to convert mm values to inch values and vice versa.</p> <p>The calculator features separate buttons for the arcsin, arccos and arctan trigonometric functions.</p>
Message menu	<p>In the message menu, you can use the <b>Setting for autosave</b> button to specify up to five error numbers. The control will automatically create a service file if one of these errors occurs.</p> <p><b>Further information:</b> "Creating a service file automatically", Page 363</p> <p>Using a toggle switch, you can define whether the control will save data from process monitoring (#168 / #5-01-1) for the current NC program in the service file.</p> <p><b>Further information:</b> "Creating a service file manually", Page 362</p>

### 1.2.18 The Simulation workspace

Topic	Description
The <b>Simulation settings</b> window	In the <b>Editor</b> operating mode, the <b>Simulation</b> workspace can be open for only one NC program at a time. If you want to open the workspace on a different tab, the control prompts you for confirmation. The query depends on the simulation settings and the status of the active simulation.
Preset	Before acknowledging a power interruption, you can select a preset for the <b>Simulation</b> workspace.
<b>Advanced checks</b>	<p>Within the <b>Advanced checks</b> function, you can activate the following checks individually:</p> <ul style="list-style-type: none"> <li>■ Material removal at rapid traverse</li> <li>■ Collisions between the tool carrier or tool shank and the workpiece</li> <li>■ Collisions between the tool and the fixture</li> </ul>

### 1.2.19 Touch Probe Functions in the Manual Operating Mode

Topic	Description
Probe process	<p>When you select a manual touch-probe function, the control automatically suggests the probing direction last used for this function.</p> <p><b>Further information:</b> "Touch Probe Functions in the Manual Operating Mode", Page 375</p> <hr/> <p>After probing, the control will always display the axis probed in the <b>Measuring</b> area.</p> <hr/> <p>If a probing point could not be reached, you can continue probing by pressing the <b>NC Start</b> key.</p> <p><b>Further information:</b> "Setting a preset in a linear axis", Page 384</p>
Automatic probing method	<p>When you select automatic probing within a touch-probe function, the control will use the sum of the value in the <b>SET_UP</b> column and the stylus tip radius as the set-up clearance. The set-up clearance cannot be less than the value in the <b>SET_UP</b> column of the touch-probe table.</p> <p><b>Further information:</b> "Determining the circle center point of a stud using the automatic probing method ", Page 386</p>
<b>Plane over cylinder (PLC)</b> touch-probe function	<p>For the <b>Plane over cylinder (PLC)</b> touch-probe function, the second measurement is by default in the inverse direction of the first measurement. Thus, pre-positioning in the probing plane is not necessary because the control will use the current angle as the start angle.</p> <p><b>Further information:</b> "Touch Probe Functions in the Manual Operating Mode", Page 375</p>
Calibrating the touch probe	<p>If you have used a calibration sphere to calibrate the radius of a touch probe, the control will automatically select the 3D Calibration function (#92 / #2-02-1).</p> <p><b>Further information:</b> "3D calibration (#92 / #2-02-1)", Page 392</p>
The <b>Change the preset</b> window	<p>In the <b>Change the preset</b> window, you can enter a different preset.</p> <p><b>Further information:</b> "The Change the preset window", Page 383</p>

### 1.2.20 Touch-Probe Cycles for Workpieces

Topic	Description
Touch-probe cycles <b>14xx</b> for determining a workpiece misalignment and for acquiring the preset	You can enter symmetric tolerances for nominal dimensions, such as <b>10+-0.5</b> .
Cycle <b>441 FAST PROBING</b> (ISO: <b>G441</b> )	<p>Cycle <b>441 FAST PROBING</b> (ISO: <b>G441</b>) now features the parameter <b>Q371 TOUCH POINT REACTION</b>. This parameter defines the reaction of the control in cases where the stylus is not deflected.</p> <p>Using the parameter <b>Q400 INTERRUPTION</b> in Cycle <b>441 FAST PROBING</b> (ISO: <b>G441</b>), you can define whether the control will interrupt program run and display a measuring log. The parameter is effective in conjunction with the following cycles:</p> <ul style="list-style-type: none"> <li>■ Cycle <b>444 PROBING IN 3-D</b> (ISO: <b>G444</b>)</li> <li>■ Touch-probe cycles <b>45x</b> for kinematics measuring</li> <li>■ Touch-probe cycles <b>46x</b> for calibrating the workpiece touch probe</li> <li>■ Touch-probe cycles <b>14xx</b> for determining a workpiece misalignment and for acquiring the preset</li> </ul>

### 1.2.21 Touch-Probe Cycles for Tools

Topic	Description
Tool measurement cycles <b>48x</b>	<p>Using the optional machine parameter <b>maxToolLengthTT</b> (no. 122607), the machine manufacturer defines a maximum tool length for tool touch probe cycles.</p> <p>If a tool has been defined in the tool table with a length of <b>L = 0</b>, the control will use the value of the machine parameter as the starting point for a rough length measurement. Then, a fine measurement will be performed.</p> <p>Using the optional machine parameter <b>calPosType</b> (no. 122606), the machine manufacturer defines whether the position of parallel axes and changes in the kinematics should be considered for calibration and measuring. A change in kinematics might for example be a head change.</p>

### 1.2.22 Touch-Probe Cycles for Kinematics Measuring

Topic	Description
Cycle <b>451 MEASURE KINEMATICS</b> (ISO: <b>G451</b> ) (#48 / #2-01-1) and <b>452 PRESET COMPENSATION</b> (ISO: <b>452</b> ) (#48 / #2-01-1)	Cycles <b>451 MEASURE KINEMATICS</b> (ISO: <b>G451</b> ) (#48 / #2-01-1) and <b>452 PRESET COMPENSATION</b> (ISO: <b>452</b> ) (#48 / #2-01-1) save the measured position errors of the rotary axes in the QS parameters <b>QS144</b> to <b>QS146</b> .

### 1.2.23 Program Run

Topic	Description
Feed-rate limitation	<p>The button for feed-rate limitation and the associated functions (previously <b>FMAX</b>) were renamed to <b>F LIMIT</b>.</p> <p><b>Further information:</b> "Feed rate limit F LIMIT", Page 416</p>
Execution cursor	<p>The execution cursor is always displayed in the foreground. The execution cursor may cover or hide other icons.</p> <p><b>Further information:</b> "The Program Run operating mode", Page 412</p>
Presets	<p>When running an NC program in <b>Single Block</b> mode, you can edit the preset table. Before editing, the control displays a prompt where you must confirm that you want to abort program run.</p>

### 1.2.24 Tables

Topic	Description
Creating a new table	<p>When you create a new table in the file manager, the table does not contain information on the required columns yet. When you open the table for the first time, the <b>Incomplete table layout</b> window will open in the <b>Tables</b> operating mode.</p> <p>In the <b>Incomplete table layout</b> window, a selection menu allows you to select a table template. The control shows which table columns are added or removed, if applicable.</p> <p><b>Further information:</b> "The Tables operating mode", Page 438</p>
Editing a table	<p>To edit the contents of a table, you can also double-tap or double-click the table cell. The control displays the <b>Editing disabled. Enable?</b> window. You can enable the values for editing or abort the process.</p> <p><b>Further information:</b> "Editing the contents of tables", Page 440</p> <p>If you copy or cut a table row in the <b>Tables</b> operating mode, the control provides the <b>Overwrite</b> or <b>Append</b> function for pasting.</p> <p>If you select the contents of a cell in a selection window, the control displays the <b>Delete entry</b> button.</p>
The <b>Table</b> workspace	<p>The <b>Change column width</b> function remains active if you select a different column.</p> <p><b>Further information:</b> "The Table workspace", Page 442</p>
The <b>Form</b> workspace	<p>In the <b>Form</b> workspace for tables, the control displays help graphics that show the effect of the selected grinding tool parameters.</p> <p><b>Further information:</b> "The Form workspace for tables", Page 448</p>
Accessing table values	<p>In the <b>TABDATA WRITE</b>, <b>TABDATA ADD</b> and <b>FN 27: TABWRITE</b> (ISO: <b>D27</b>) NC functions, you can enter values directly.</p>
Tool management	<p>You cannot delete any tools that have been entered into the pocket table. The button is dimmed.</p> <p><b>Further information:</b> "Buttons", Page 439</p> <p>The selection window for 3D files includes a search function.</p> <p>If you insert a new table row in tool management using the <b>Insert tool</b> button, the control will suggest the next free row number.</p> <p><b>Further information:</b> "Tool management ", Page 205</p> <p>The control displays icons for the <b>TO</b> orientations of the dressing tools (#156 / #4-04-1).</p> <p><b>Further information:</b> "Dressing tool table tooldress.drs (#156 / #4-04-1)", Page 475</p> <p>In some operating modes and applications, you can use the <b>Tools</b> button to switch to <b>Tool management</b>.</p>



### 1.2.25 The The Settings Application

Topic	Description
<b>OPC UA NC Server</b> (#56-61 / #3-02-1*)	<p>Within the <b>OPC UA</b> menu item, a button is available to manually start or restart the <b>OPC UA NC Server</b>.</p> <p>The <b>OPC UA NC Server</b> allows you to create service files.</p> <p>You can validate 3D models for tools or tool carriers (#140 / #5-03-2).</p> <p>The <b>OPC UA NC Server</b> supports the <b>Aes128Sha256RsaOaep</b> and <b>Aes256Sha256RsaPss</b> security policies.</p>
<b>PKI Admin</b>	<p>If an attempt to connect to the <b>OPC UA NC Server</b> (#56-61 / #3-02-1*) fails, the control will store the client certificate on the <b>Rejected</b> tab. You can transfer the certificate directly to the <b>Trusted</b> tab without the need to transfer the certificates manually to the control.</p> <p>You can open <b>PKI Admin</b> from the <b>OPC UA</b> menu item.</p> <p><b>PKI Admin</b> now includes the <b>Advanced settings</b> tab.</p> <p>You can define whether the server certificate should contain static IP addresses and allow connections without an associated CRL file.</p>
Secure connections	<p>The control uses an icon to indicate whether a connection configuration is secure or non-secure.</p> <p>In future software versions, the control will no longer support LSV2 protocols.</p>
Configuration of the control's user interface	<p>The following buttons have been added to the <b>Configurations</b> menu item:</p> <ul style="list-style-type: none"> <li>■ <b>Save current settings</b></li> <li>■ <b>Restore last configuration</b></li> </ul>

### 1.2.26 User Administration

Topic	Description
Login as a function user	<p>Your IT administrator can set up a function user to facilitate connectivity to the Windows domain.</p> <p><b>Further information:</b> "Joining a Windows domain with a function user", Page 622</p>
Connecting to a Windows domain	<p>If you have connected the control to the Windows domain, you can export the required configurations for other controls.</p> <p><b>Further information:</b> "Exporting and importing a Windows configuration file", Page 623</p>

### 1.2.27 Machine parameters

Topic	Description
Display of the machine parameters	<p>In the <b>List</b> workspace, you can toggle between a structure and a table view of the configuration editor.</p> <p><b>Further information:</b> "Machine parameters", Page 597</p>
StretchFilter	Machine parameter <b>CfgStretchFilter</b> (no. 201100) has been removed.



# 2

**About the  
User's Manual**

## 2.1 Target group: Users

A user is anyone who uses the control to perform at least one of the following tasks:

- Operating the machine
  - Setting up tools
  - Setting up workpieces
  - Machining workpieces
  - Eliminating possible errors during program run
- Creating and testing NC programs
  - Creating NC programs at the control or externally using a CAM system
  - Using the Simulation mode to test the NC programs
  - Eliminating possible errors during program test

The depth of information in the User's Manual results in the following qualification requirements on the user:

- Basic technical understanding (e.g., spatial imagination and the ability to read technical drawings)
- Basic knowledge in the field of metal cutting (e.g., understanding the meaning of material-specific parameters)
- Safety instructions (e.g., understanding possible dangers and how to avoid them)
- Training on the machine (e.g., comprehending axis directions and the machine configuration)



HEIDENHAIN offers separate information products for other target groups:

- Leaflets and overview of the product portfolio for potential buyers
- Service Manual for service technicians
- Technical Manual for machine manufacturers

Additionally, HEIDENHAIN provides users and lateral entrants with a wide range of training opportunities in the field of NC programming.

**HEIDENHAIN training portal**

In line with the target group, this User's Manual only contains information on the operation and use of the control. The information products for other target groups contain information on further product life phases.

## 2.2 Available user documentation

### User's Manual

HEIDENHAIN refers to this information product as User's Manual, regardless of the output or transport medium. Well-known designations with the same meaning include operator's manual and operating instructions.

The User's Manual for the control is available in the variants below:

- As a printed version, sub-divided into the modules below:
  - The **Setup and Program Run** User's Manual contains all information needed for setting up the machine and for running NC programs.  
ID: 1358774-xx
  - The **Programming and Testing** User's Manual contains all information needed for creating and testing NC programs. Touch probe and machining cycles are not included.  
ID for Klartext programming: 1358773-xx
  - The **Machining Cycles** User's Manual contains all functions of the machining cycles.  
ID: 1358775-xx
  - The **Measuring Cycles for Workpieces and Tools** User's Manual contains all functions of the touch probe cycles.  
ID: 1358777-xx
- As PDF files, sub-divided according to the printed versions or as a **Complete edition** User's Manual, containing all modules  
ID: 1369999-xx

### TNCguide

- As an HTML file used as the **TNCguide** product aid integrated directly into the control.

### TNCguide

The User's Manual supports you in the safe handling of the control according to its intended use.

**Further information:** "Proper and intended use", Page 67

### Further information products for users

The following information products are available to you:

- **Overview of new and modified software functions** informs you about the innovations of specific software versions.  
**TNCguide**
- **HEIDENHAIN brochures** inform you about products and services by HEIDENHAIN (e.g., software options of the control).  
**HEIDENHAIN brochures**
- The **NC solutions** database offers solutions for frequently occurring tasks.  
**HEIDENHAIN NC solutions**

## 2.3 Types of notes used

### Safety precautions

Comply with all safety precautions indicated in this document and in your machine manufacturer's documentation!

Precautionary statements warn of hazards in handling software and devices and provide information on their prevention. They are classified by hazard severity and divided into the following groups:

<b>⚠ DANGER</b>
<b>Danger</b> indicates hazards for persons. If you do not follow the avoidance instructions, the hazard <b>will result in death or severe injury</b> .
<b>⚠ WARNING</b>
<b>Warning</b> indicates hazards for persons. If you do not follow the avoidance instructions, the hazard <b>could result in death or serious injury</b> .
<b>⚠ CAUTION</b>
<b>Caution</b> indicates hazards for persons. If you do not follow the avoidance instructions, the hazard <b>could result in minor or moderate injury</b> .
<b>NOTICE</b>
<b>Notice</b> indicates danger to material or data. If you do not follow the avoidance instructions, the hazard <b>could result in property damage</b> .

### Sequence of information in precautionary statements

All precautionary statements comprise the following four sections:

- Signal word indicating the hazard severity
- Type and source of hazard
- Consequences of ignoring the hazard, e.g.: "There is danger of collision during subsequent machining operations"
- Escape – Hazard prevention measures

**Informational notes**

Observe the informational notes provided in these instructions to ensure reliable and efficient operation of the software.

In these instructions, you will find the following informational notes:



The information symbol indicates a **tip**.  
A tip provides important additional or supplementary information.



This symbol prompts you to follow the safety precautions of your machine manufacturer. This symbol also indicates machine-dependent functions. Possible hazards for the operator and the machine are described in the machine manual.



The book symbol indicates a **cross reference**.  
A cross reference leads to external documentation for example the documentation of your machine manufacturer or other supplier.

## 2.4 Notes on using NC programs

NC programs contained in this User's Manual are suggestions for solutions. The NC programs or individual NC blocks must be adapted before being used on a machine.

Change the following contents as needed:

- Tools
- Cutting parameters
- Feed rates
- Clearance height or safe position
- Machine-specific positions, positions (e.g., with **M91**)
- Paths of program calls

Some NC programs depend on the machine kinematics. Adapt these NC programs to your machine kinematics before the first test run.

In addition, test the NC programs using the simulation before the actual program run.



With a program test you determine whether the NC program can be used with the available software options, the active machine kinematics and the current machine configuration.

## 2.5 User's Manual as integrated product aid: TNCguide

### Application

The integrated product aid **TNCguide** offers the full content of all User's Manuals.

**Further information:** "Available user documentation", Page 57

The User's Manual supports you in the safe handling of the control according to its intended use.

**Further information:** "Proper and intended use", Page 67

### Related topics

- The **Help** workspace

**Further information:** User's Manual for Programming and Testing

### Requirement

In the factory default setting, the control offers the integrated product aid **TNCguide** in German and English language versions.

If the control cannot find a **TNCguide** language version matching the selected dialog language, it opens **TNCguide** in English.

If the control cannot find a **TNCguide** language version, it opens an information page with instructions. With the link available there and the steps provided, you can supplement the files missing in the control.



You can also open the information page manually by selecting the **index.html** file (for example, at **TNC:\tncguide\en\readme**). The path depends on the desired language version (e.g., **en** for English).

With the steps provided you can also update the **TNCguide** version. Updating may be required (e.g., after a software update).

### Description of function

The integrated product aid **TNCguide** can be selected within the **Help** application or in the **Help** workspace.

**Further information:** "The Help application", Page 61


**Further information:** User's Manual for Programming and Testing

Operation of **TNCguide** is identical in both cases.

**Further information:** "Icons", Page 62



The Help application

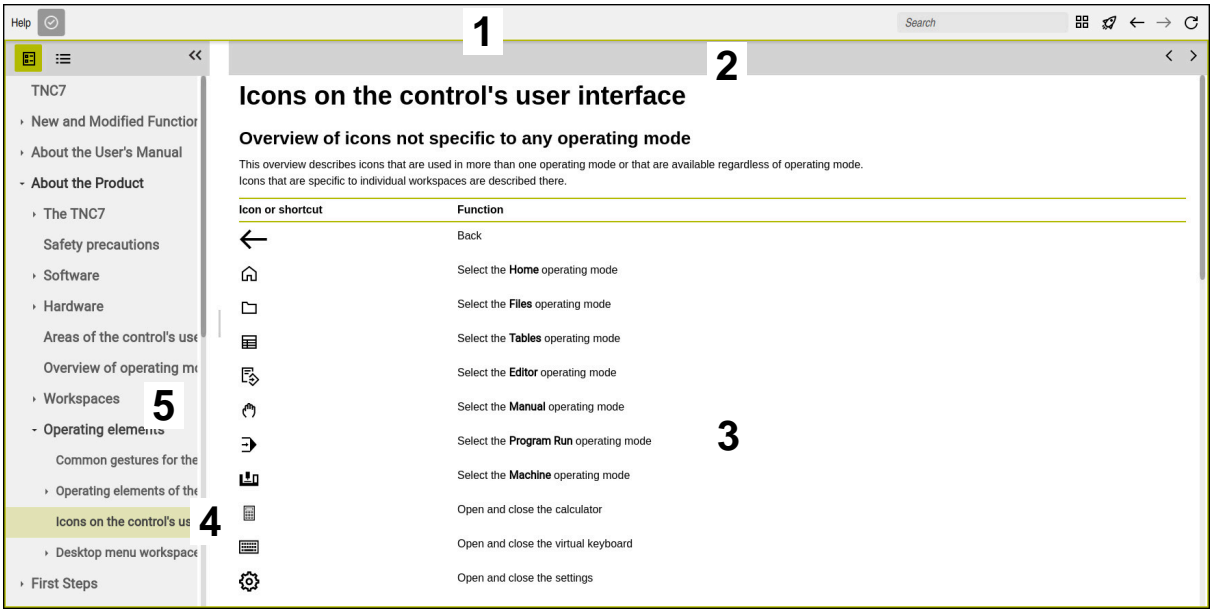

Open **TNCguide** in the **Help** workspace




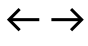

**TNCguide** includes the following areas:

- 1 Title bar of the **Help** workspace  
**Further information:** "The Help workspace", Page 62
- 2 Title bar of the integrated product aid **TNCguide**  
**Further information:** "TNCguide ", Page 62
- 3 Content column of **TNCguide**
- 4 Separator between the columns of **TNCguide**  
Adjust the column width by means of the separator.
- 5 Navigation column of **TNCguide**

## Icons






### The Help workspace

The **Help** workspace within the **Help** application includes the following icons:

Icon	Meaning
	Open or close the <b>Search results</b> column <b>Further information:</b> "Search in TNCguide", Page 63
	<b>Open Home page</b> The start page displays all available documentation. Select the desired documentation using navigation tiles (e.g., <b>TNCguide</b> ). If only one piece of documentation is available, the control opens the content directly. When a documentation is open, you can use the search function.
	<b>Open Tutorials</b>
	<b>Navigate</b> Navigate between the contents opened recently
	<b>Refresh</b>

### TNCguide



The integrated **TNCguide** product aid includes the following icons:

Icon	Meaning
	<b>Open Structure</b> The structure consists of the content headings. The structure serves for main navigation within the documentation.
	<b>Open Index</b> The index consists of important keywords. The index serves as an alternative navigation within the documentation.
	<b>Navigate</b> Display previous or next page within the documentation
	<b>Open or close</b> Display or hide the navigation
	<b>Copy</b> Copy NC examples to the clipboard <b>Further information:</b> "Copying NC examples to clipboard", Page 64

## Context-sensitive help

You can open **TNCguide** for the current context. Context-sensitive help means that the relevant information is displayed directly (e.g., for the selected item or the current NC function).

To call context-sensitive help, the following elements are available:

Icon or key	Meaning
	<b>Help</b> icon If you select the icon and then one of the items in the user interface, the control will open the associated information in <b>TNCguide</b> .
	<b>HELP</b> key If you press the <b>HELP</b> key while editing an NC block, the control will display the associated information in <b>TNCguide</b> .

If you call TNCguide in a certain context, the control opens the contents in a pop-up window. If you select the **Show more** button, the control will open **TNCguide** in the **Help** application.

**Further information:** "The Help application", Page 61

If the **Help** workspace is already open, the control displays **TNCguide** there and will not open a pop-up window.

**Further information:** User's Manual for Programming and Testing

### 2.5.1 Search in TNCguide

Using the search function, you can search for the entered search terms within the open documentation.

Use the search function as follows:

- ▶ Enter a character string



The entry field is located in the title bar, to the left of the Home symbol that you use for navigating to the start page.

The search starts automatically after you enter a character.

If you wish to delete the entry, use the X symbol within the entry field.

- > The control opens the column containing the search results.
- > The control marks references also within open content pages.
- ▶ Select the reference
- > The control opens the selected content.
- > The control continues displaying the results of the last search.
- ▶ Select an alternative reference if necessary
- ▶ Enter a new character string if required

### 2.5.2 Copying NC examples to clipboard

Use the copy function to copy NC examples from the documentation to the NC editor.

To use the copy function:

- ▶ Navigate to the desired NC example
- ▶ Expand **Notes on using NC programs**
- ▶ Read and follow **Notes on using NC programs**

**Further information:** "Notes on using NC programs", Page 59



- ▶ Copy NC example to clipboard



- > The button switches colors while copying.
- > The clipboard contains the entire content of the copied NC example.
- ▶ Insert the NC example into the NC program
- ▶ Adapt the inserted content according to the **Notes on using NC programs**
- ▶ Use the Simulation mode to test the NC program

**Further information:** User's Manual for Programming and Testing

## 2.6 Contacting the editorial staff

### Have you found any errors or would you like to suggest changes?

We are continuously striving to improve our documentation for you. Please help us by sending your suggestions to the following e-mail address:

**tnc-userdoc@heidenhain.de**

# 3

**About the Product**

## 3.1 The TNC7

Every HEIDENHAIN control supports you with dialog-guided programming and finely detailed simulation. The TNC7 additionally offers you graphical or form-based programming so that you can attain the desired results with speed and reliability.

Software options and optional hardware extensions can be used for flexibly increasing the range of functions and ease of use.

Functionality enhancements make it possible to go beyond milling and drilling in order to perform turning and grinding operations, for example,

**Further information:** User's Manual for Programming and Testing

Operation is made easier, for example, by using touch probes, handwheels or a 3D mouse.

**Further information:** "Hardware enhancements", Page 86

### Definitions

Abbreviation	Definition
TNC	<b>TNC</b> is derived from the acronym <b>CNC</b> (computerized numerical control). The <b>T</b> (tip or touch) stands for the capability of entering NC programs directly at the control or to program them graphically using gestures.
7	The product number indicates the control generation. The range of functions depends on the enabled software options.

### 3.1.1 Proper and intended use

The information about proper and intended use supports you in safely handling a product such as a machine tool.

The control is a machine component but not a complete machine. This User's Manual describes the use of the control. Before using the machine including the control, take the OEM documentation to inform yourself about the safety-related aspects, the necessary safety equipment as well as the requirements on the qualified personnel.



HEIDENHAIN sells controls designed for milling and turning machines as well as for machining centers with up to 24 axes. If you as a user face a different constellation, then contact the owner immediately.

HEIDENHAIN contributes additionally to enhancing your safety and that of your products, notably by taking into consideration the customer feedback. This results, for example, in function adaptations of the controls and safety precautions in the information products.



Contribute actively to increasing the safety by reporting any missing or misleading information.

**Further information:** "Contacting the editorial staff", Page 64

### 3.1.2 Intended place of operation

In accordance with the DIN EN 50370-1 standard for electromagnetic compatibility (EMC), the control is approved for use in industrial environments.

#### Definitions

Guideline	Definition
<b>DIN EN 50370-1:2006-02</b>	This standard deals, among other things, with interference emissions and immunity to interference of machine tools.

## 3.2 Safety precautions

Comply with all safety precautions indicated in this document and in your machine manufacturer's documentation!

The following safety precautions refer exclusively to the control as an individual component but not to the specific complete product, i.e. the machine tool.



Refer to your machine manual.

Before using the machine including the control, take the OEM documentation to inform yourself about the safety-related aspects, the necessary safety equipment as well as the requirements on the qualified personnel.

The following overview contains exclusively the generally valid safety precautions. Pay attention to additional safety precautions that may vary with the configuration and are given in the following chapters.



For ensuring maximum safety, all safety precautions are repeated at the relevant places within the chapters.

### DANGER

#### **Caution: hazard to the user!**

Unsecured connections, defective cables, and improper use are always sources of electrical dangers. The hazard starts when the machine is powered up!

- ▶ Devices should be connected or removed only by authorized service technicians
- ▶ Only switch on the machine via a connected handwheel or a secured connection

### DANGER

#### **Caution: hazard to the user!**

Machines and machine components always pose mechanical hazards. Electric, magnetic, or electromagnetic fields are particularly hazardous for persons with cardiac pacemakers or implants. The hazard starts when the machine is powered up!

- ▶ Read and follow the machine manual
- ▶ Read and follow the safety precautions and safety symbols
- ▶ Use the safety devices

### WARNING

#### **Caution: hazard to the user!**

Manipulated data records or software can lead to an unexpected behavior of the machine. Malicious software (viruses, Trojans, malware, or worms) can cause changes to data records and software.

- ▶ Check any removable memory media for malicious software before using them
- ▶ Start the internal web browser only from within the sandbox



**NOTICE****Danger of collision!**

Failure to notice deviations between the actual axis positions and those expected by the control (saved at shutdown) can lead to undesirable and unexpected axis movements. There is risk of collision during the reference run of further axes and all subsequent movements!

- ▶ Check the axis positions
- ▶ Only confirm the pop-up window with **YES** if the axis positions match
- ▶ Despite confirmation, at first only move the axis carefully
- ▶ If there are discrepancies or you have any doubts, contact your machine manufacturer

**NOTICE****Caution: Danger to the tool and workpiece!**

A power failure during the machining operation can cause uncontrolled "coasting" or braking of the axes. In addition, if the tool was in effect prior to the power failure, then the axes cannot be referenced after the control has been restarted. For non-referenced axes, the control takes over the last saved axis values as the current position, which can deviate from the actual position. Thus, subsequent traverse movements do not correspond to the movements prior to the power failure. If the tool is still in effect during the traverse movements, then the tool and the workpiece can sustain damage through tension!

- ▶ Use a low feed rate
- ▶ Please keep in mind that the traverse range monitoring is not available for non-referenced axes

**NOTICE****Danger of collision!**

The control does not automatically check whether collisions can occur between the tool and the workpiece. Incorrect pre-positioning or insufficient spacing between components can lead to a risk of collision when referencing the axes.

- ▶ Pay attention to the information on the screen
- ▶ If necessary, move to a safe position before referencing the axes
- ▶ Watch out for possible collisions

**NOTICE****Danger of collision!**

The control uses the defined tool length from the tool table for compensating for the tool length. Incorrect tool lengths will result in an incorrect tool length compensation. The control does not perform tool length compensation or a collision check for tools with a length of **0** and after a **TOOL CALL 0**. There is a risk of collision during subsequent tool positioning movements!

- ▶ Always define the actual tool length of a tool (not just the difference)
- ▶ Use **TOOL CALL 0** only to empty the spindle

**NOTICE****Caution: Significant property damage!**

Undefined fields in the preset table behave differently from fields defined with the value **0**: Fields defined with the value **0** overwrite the previous value when activated, whereas with undefined fields the previous value is kept. If the previous value is kept, there is a danger of collision!

- ▶ Before activating a preset, check whether all columns contain values.
- ▶ For undefined columns, enter values (e.g., **0**)
- ▶ As an alternative, have the machine manufacturer define **0** as the default value for the columns

**NOTICE****Danger of collision!**

NC programs that were created on older controls can lead to unexpected axis movements or error messages on current control models. Danger of collision during machining!

- ▶ Check the NC program or program section using the graphic simulation
- ▶ Carefully test the NC program or program section in the **Program run, single block** operating mode

**NOTICE****Caution: Data may be lost!**

If you do not properly remove a connected USB device during a data transfer, then data may be damaged or deleted!

- ▶ Use the USB port only for transferring or backing up data do not use it for editing and executing NC programs
- ▶ Use the **Eject** soft key to remove a USB device when data the transfer is complete

**NOTICE****Caution: Data may be lost!**

The control must be shut down so that running processes can be concluded and data can be saved. Immediate switch-off of the control by turning off the main switch can lead to data loss regardless of the control's status!

- ▶ Always shut down the control
- ▶ Only operate the main switch after being prompted on the screen

**NOTICE****Danger of collision!**

If you select an NC block in program run using the **GOTO** function and then execute the NC program, the control ignores all previously programmed NC functions (e.g., transformations). This means that there is a risk of collision during subsequent traversing movements!

- ▶ Use **GOTO** only when programming and testing NC programs
- ▶ Only use **Block scan** when executing NC programs

### 3.3 Software

This User's Manual describes the functions for setting up the machine as well as for programming and running your NC programs. These functions are available for a control featuring the full range of functions.



The actual range of functions depends, among other things, on the enabled software options.

**Further information:** "Software options", Page 73

The table shows the NC software numbers described in this User's Manual.



HEIDENHAIN has simplified the version schema, starting with NC software version 16:

- The publication period determines the version number.
- All control models of a publication period have the same version number.
- The version number of the programming stations corresponds to the version number of the NC software.

NC software number	Product
817620-18	TNC7
817621-18	TNC7 E
817625-18	TNC7 Programming Station



Refer to your machine manual.

This User's Manual describes the basic functions of the control. The machine manufacturer can adapt, enhance or restrict the control functions to the machine.

Check, on the basis of the machine tool manual, whether the machine manufacturer has adapted the functions of the control.

If later customization of the machine configuration by the machine manufacturer is intended, the machine operator might incur additional costs.

**Definition**

Abbreviation	Definition
E	The suffix E indicates the export version of the control. In this version, Advanced Function Set 2 (software option 9) is restricted to 4-axis interpolation.

### 3.3.1 Software options

Software options define the range of functions of the control. The optional functions are either machine- or application-specific. The software options give you the possibility of adapting the control to your individual needs.

You can check which software options are enabled on your machine.

**Further information:** "Viewing of software options", Page 550

The TNC7 features various software options that the machine manufacturer may enable separately, even at a later point in time. The following overview includes only those software options that are relevant for you.

The software options are saved on the **SIK** (System Identification Key) plug-in board. The TNC7 can be equipped with a **SIK1** or **SIK2** plug-in board. Depending on which one is used, the numbers of the software options differ.



The option numbers in parentheses given in the User's Manual show you that a function is not included in the standard range of available functions. The parentheses enclose the **SIK1** and **SIK2** option numbers, separated by a slash, for example: (#18 / #3-03-1). The Technical Manual informs about additional software options that are relevant to the machine manufacturer.

#### SIK2 definitions

**SIK2** option numbers are structured by <class>-<option>-<version>:

Class	The function is effective for the following areas: <ul style="list-style-type: none"> <li>■ 1: Programming, simulation, and process setup</li> <li>■ 2: Part quality and productivity</li> <li>■ 3: Interfaces</li> <li>■ 4: Technology functions and quality assessment</li> <li>■ 5: Process stability and monitoring</li> <li>■ 6: Machine configuration</li> <li>■ 7: Developer tools</li> </ul>
Option	Sequential number within each class
Version	New versions of software options are released if, for example, its features have been changed.

You can order some software options with **SIK2** more than once in order to obtain multiple variants of the same function (e.g., if you need to enable multiple control loops for the axes). In the User's Manual, these software option numbers are identified by an asterisk (\*).

The control indicates in the **SIK** menu item of the **Settings** application whether a software option has been enabled, and if so, how often.

**Further information:** "The SIK menu item", Page 549

#### Overview



Keep in mind that particular software options also require hardware extensions.

**Further information:** "Hardware", Page 81

Software option	Definition and application
<b>Control Loop Qty.</b> (#0-7 / #6-01-1*)	<p><b>Additional control loop</b></p> <p>A control loop is required for each axis or spindle moved to a programmed nominal value by the control.</p> <p>Additional control loops are required, for example, for detachable and motor-driven tilting tables.</p> <p>If your control features a <b>SIK2</b>, you can order this software option multiple times and enable up to 24 control loops.</p>
<b>Adv. Function Set 1</b> (#8 / #1-01-1)	<p><b>Advanced functions (set 1)</b></p> <p>On machines with rotary axes this software option enables the machining of multiple workpiece sides in a single setup.</p> <p>The software option includes the following functions:</p> <ul style="list-style-type: none"> <li>■ Tilting the working plane (e.g., with <b>PLANE SPATIAL</b>) <b>Further information:</b> User's Manual for Programming and Testing</li> <li>■ Programming of contours on a developed cylindrical surface (e.g., with Cycle <b>27 CYLINDER SURFACE</b>) <b>Further information:</b> User's Manual for Machining Cycles</li> <li>■ Programming the rotary axis feed rate in mm/min with <b>M116</b> <b>Further information:</b> User's Manual for Programming and Testing</li> <li>■ 3-axis circular interpolation with a tilted working plane</li> </ul> <p>The advanced functions (set 1) reduce the setup effort and increase the workpiece accuracy.</p>
<b>Adv. Function Set 2</b> (#9 / #4-01-1)	<p><b>Advanced functions (set 2)</b></p> <p>On machines with rotary axes this software option enables the simultaneous 5-axis machining of workpieces.</p> <p>The software option includes the following functions:</p> <ul style="list-style-type: none"> <li>■ <b>TCPM</b> (tool center point management): Automatic tracking of linear axes during rotary axis positioning <b>Further information:</b> User's Manual for Programming and Testing</li> <li>■ Running of NC programs with vectors, including optional 3D tool compensation <b>Further information:</b> User's Manual for Programming and Testing</li> <li>■ Manual moving of axes in the active tool coordinate system <b>T-CS</b></li> <li>■ Linear interpolation in more than four axes (max. four axes in case of an export version)</li> </ul> <p>The advanced functions (set 2) can be used to produce free-form surfaces.</p>
<b>HEIDENHAIN DNC</b> (#18 / #3-03-1)	<p><b>HEIDENHAIN DNC</b></p> <p>This software option enables external Windows applications to access data of the control via the TCP/IP protocol.</p> <p>Potential fields of application include:</p> <ul style="list-style-type: none"> <li>■ Connection to higher-level ERP or MES systems</li> <li>■ Capture of machine and operating data</li> </ul> <p>HEIDENHAIN DNC is required in conjunction with external Windows applications.</p>

Software option	Definition and application
<b>Collision Monitoring</b> (#40 / #5-03-1)	<p><b>Dynamic Collision Monitoring (DCM)</b></p> <p>The machine manufacturer can use this software option to define machine components as collision objects. The control monitors the defined collision objects during all machine movements.</p> <p>The software option includes the following functions:</p> <ul style="list-style-type: none"> <li>■ Automatic interruption of program run whenever a collision is imminent</li> <li>■ Warnings in case of manual axis movements</li> <li>■ Collision monitoring in Test Run mode</li> </ul> <p>With DCM you can prevent collisions and thus avoid additional costs resulting from material damage or machine downtime.</p> <p><b>Further information:</b> "Dynamic Collision Monitoring (DCM) (#40 / #5-03-1)", Page 250</p>
<b>CAD Import</b> (#42 / #1-03-1)	<p><b>CAD Import</b></p> <p>This software option is used to select positions and contours from CAD files and to transfer them into an NC program.</p> <p>With the CAD Import option you reduce the programming effort and prevent typical errors such as the incorrect entry of values. In addition, CAD Import contributes to paperless manufacturing.</p> <p><b>Further information:</b> "Loading contours and positions to NC programs with CAD Import (#42 / #1-03-1)", Page 344</p>
<b>Global PGM Settings</b> (#44 / #1-06-1)	<p><b>Global Program Settings (GPS)</b></p> <p>This software option can be used for superimposed coordinate transformations and handwheel movements during program run without adapting the NC program.</p> <p>With GPS you can adapt externally created NC programs to the machine and increase flexibility during program run.</p> <p><b>Further information:</b> "Global program settings (GPS) (#44 / #1-06-1)", Page 291</p>
<b>Adaptive Feed Contr.</b> (#45 / #2-31-1)	<p><b>Adaptive Feed Control (AFC)</b></p> <p>This software option enables an automatic feed control that depends on the current spindle load. The control increases the feed rate as the load decreases and reduces the feed rate as the load increases.</p> <p>With AFC you can shorten machining times without adapting the NC program, while at the same time preventing machine damage from overload.</p> <p><b>Further information:</b> "Adaptive feed control (AFC) (#45 / #2-31-1)", Page 280</p>
<b>KinematicsOpt</b> (#48 / #2-01-1)	<p><b>KinematicsOpt</b></p> <p>This software option uses automatic probing processes to check and optimize the active kinematics.</p> <p>With KinematicsOpt the control can correct position errors on rotary axes and thus increase the accuracy of machining operations in the tilted working plane and of simultaneous machining operations. In part, the control can compensate for temperature-induced deviations through repeated measurements and corrections.</p> <p><b>Further information:</b> User's Manual for Measuring Cycles for Workpieces and Tools</p>

Software option	Definition and application
<b>Turning</b> (#50 / #4-03-1)	<b>Mill-turning</b> This software option offers a comprehensive milling-specific function package for milling machines with rotary tables. The software option includes the following functions: <ul style="list-style-type: none"> <li>■ Turning-specific tools</li> <li>■ Turning-specific cycles and contour elements such as undercuts</li> <li>■ Automatic tool-tip radius compensation</li> </ul> Mill-turning enables mill-turning machining operations on only one machine, thus reducing, for example, the setup work effort considerably. <b>Further information:</b> User's Manual for Programming and Testing
<b>KinematicsComp</b> (#52 / #2-04-1)	<b>KinematicsComp</b> This software option uses automatic probing processes to check and optimize the active kinematics. With KinematicsComp, the control can correct position and component errors in three dimensions. This means it can spatially compensate the errors of rotary and linear axes. Compared to KinematicsOpt (#48 / #2-01-1), the compensations are even far more comprehensive. <b>Further information:</b> User's Manual for Measuring Cycles for Workpieces and Tools
<b>OPC UA NC Server Qty.</b> (#56-61 / #3-02-1*)	<b>OPC UA NC Server</b> These software options include OPC UA, a standardized interface for remote access to the control's data and functions. Potential fields of application include: <ul style="list-style-type: none"> <li>■ Connection to higher-level ERP or MES systems</li> <li>■ Capture of machine and operating data</li> </ul> Each software option enables one client connection. If more than one parallel connection is required, you need to enable multiple of these software options. If your control features a <b>SIK2</b> , you can order this software option multiple times and enable up to six connections. <b>Further information:</b> "OPC UA NC Server (#56-61 / #3-02-1*)", Page 568
<b>4 Additional Axes</b> (#77 / #6-01-1*)	<b>Four additional control loops</b> <b>Further information:</b> "Control Loop Qty. (#0-7 / #6-01-1*)", Page 74
<b>8 Additional Axes</b> (#78 / #6-01-1*)	<b>Eight additional control loops</b> <b>Further information:</b> "Control Loop Qty. (#0-7 / #6-01-1*)", Page 74
<b>3D-ToolComp</b> (#92 / #2-02-1)	<b>3D-ToolComp</b> only in connection with Advanced Function Set 2 (#9 / #4-01-1) With this software option, shape deviations on ball cutters and workpiece probes can be automatically compensated for using a correction value table. 3D-ToolComp enables increasing the workpiece accuracy in conjunction with free-form surfaces, for example. <b>Further information:</b> User's Manual for Programming and Testing



Software option	Definition and application
<b>Ext. Tool Management</b> (#93 / #2-03-1)	<b>Extended tool management</b> This software option extends tool management by the two tables <b>Tooling list</b> and <b>T usage order</b> . The tables show the following contents: <ul style="list-style-type: none"> <li>■ The <b>Tooling list</b> shows the tool requirements of the NC program or pallet to be run  <b>Further information:</b> "Tooling list (#93 / #2-03-1)", Page 489</li> <li>■ The <b>T usage order</b> shows the tool order of the NC program or pallet to be run  <b>Further information:</b> "T usage order (#93 / #2-03-1)", Page 487</li> </ul> Extended tool management enables you to detect the tool requirements in time and thus prevent interruptions during program run.
<b>Adv.Spindle Interpol.</b> (#96 / #7-04-1)	<b>Interpolating spindle</b> This software option enables interpolation turning, as the control couples the tool spindle with the linear axes. The software option includes the following cycles: <ul style="list-style-type: none"> <li>■ Cycle <b>291 COUPLG.TURNG.INTERP.</b> for simple turning operations without contour subprograms</li> <li>■ Cycle <b>292 CONTOUR.TURNG.INTRP.</b> for finishing rotationally symmetrical contours</li> </ul> The interpolating spindle enables you to execute a turning operation also on machines without rotary table. <b>Further information:</b> User's Manual for Machining Cycles
<b>Spindle Synchronism</b> (#131 / #7-02-1)	<b>Spindle synchronism</b> This software option synchronizes two or more spindles and thus enables, for example, the manufacture of gears by hobbing. The software option includes the following functions: <ul style="list-style-type: none"> <li>■ Spindle synchronism for special machining operations (e.g., polygonal turning)</li> <li>■ Cycle <b>880 GEAR HOBGING</b> only in connection with mill-turning (#50 / #4-03-1)</li> </ul> <b>Further information:</b> User's Manual for Machining Cycles
<b>Remote Desktop Manager</b> (#133 / #3-01-1)	<b>Remote Desktop Manager</b> This software option is used to display and operate externally linked computer units. With Remote Desktop Manager you reduce the distances covered between several workplaces and as a result increase the efficiency. <b>Further information:</b> "The Remote Desktop Manager window (#133 / #3-01-1)", Page 583
<b>Collision Monitoring</b> (#140 / #5-03-2)	<b>Dynamic Collision Monitoring DCM version 2</b> This software option includes all functions of the Dynamic Collision Monitoring DCM (#40 / #5-03-1) software option. In addition, this software option provides the following features: <ul style="list-style-type: none"> <li>■ Collision monitoring of fixtures  <b>Further information:</b> "Integrating fixtures into collision monitoring (#140 / #5-03-2)", Page 260</li> <li>■ Define reduced minimum distance between fixture and tool</li> </ul>

Software option	Definition and application
<b>Cross Talk Comp.</b> (#141 / #2-20-1)	<b>Compensation of axis couplings (CTC)</b> Using this software option, the machine manufacturer can, for example, compensate for acceleration-induced deviations at the tool and thus increase accuracy and dynamic performance.
<b>Position Adapt. Contr.</b> (#142 / #2-21-1)	<b>Position Adaptive Control (PAC)</b> Using this software option, the machine manufacturer can, for example, compensate for position-induced deviations at the tool and thus increase accuracy and dynamic performance.
<b>Load Adapt. Contr.</b> (#143 / #2-22-1)	<b>Load Adaptive Control (LAC)</b> Using this software option, the machine manufacturer can, for example, compensate for load-induced deviations at the tool and thus increase accuracy and dynamic performance.
<b>Motion Adapt. Contr.</b> (#144 / #2-23-1)	<b>Motion Adaptive Control (MAC)</b> Using this software option, the machine manufacturer can, for example, change speed-dependent machine settings and thus increase the dynamic performance.
<b>Active Chatter Contr.</b> (#145 / #2-30-1)	<b>Active Chatter Control (ACC)</b> With this software option the chatter tendency of a machine used for heavy machining can be reduced. The control can use ACC to improve the surface quality of the workpiece, increase the tool life and reduce the machine load. Depending on the type of machine, the metal-removal rate can be increased by more than 25%. <b>Further information:</b> "Active Chatter Control (ACC) (#145 / #2-30-1)", Page 290
<b>Machine Vibr. Contr.</b> (#146 / #2-24-1)	<b>Vibration damping for machines (MVC)</b> Damping of machine oscillations for improving the workpiece surface quality through the following functions: <ul style="list-style-type: none"> <li>■ AVD <b>Active Vibration Damping</b></li> <li>■ FSC <b>Frequency Shaping Control</b></li> </ul>
<b>CAD Model Optimizer</b> (#152 / #1-04-1)	<b>Optimization of CAD models</b> This software option can be used, for example, to repair faulty files of fixtures and tool holders or to position STL files generated from the simulation for a different machining operation. <b>Further information:</b> "Generating STL files with 3D mesh (#152 / #1-04-1)", Page 351
<b>Batch Process Mngr.</b> (#154 / #2-05-1)	<b>Batch Process Manager (BPM)</b> This software option makes it easy to plan and execute multiple production jobs. By extending and combining the pallet management and extended tool management functions (#93 / #2-03-1), the BPM offers the following additional data, for example: <ul style="list-style-type: none"> <li>■ Machining time</li> <li>■ Availability of necessary tools</li> <li>■ Manual interventions to be made</li> <li>■ Program test results of assigned NC programs</li> </ul> <b>Further information:</b> User's Manual for Programming and Testing

Software option	Definition and application
<b>Component Monitoring</b> (#155 / #5-02-1)	<p><b>Component monitoring</b></p> <p>This software option enables the automatic monitoring of machine components configured by the machine manufacturer.</p> <p>Component monitoring assists the control in preventing machine damage due to overload by way of hazard warnings and error messages.</p>
<b>Grinding</b> (#156 / #4-04-1)	<p><b>Jig grinding</b></p> <p>This software option offers a comprehensive grinding-specific function package for milling machines.</p> <p>The software option includes the following functions:</p> <ul style="list-style-type: none"> <li>■ Grinding-specific tools including dressing tools</li> <li>■ Cycles for reciprocating stroke and dressing</li> </ul> <p>Jig-turning enables complete machining operations on just one machine, thus considerably reducing setup work, for example.</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p>
<b>Gear Cutting</b> (#157 / #4-05-1)	<p><b>Gear manufacturing</b></p> <p>This software option enables the manufacture of cylindrical gears or helical gears of any angle.</p> <p>The software option includes the following cycles:</p> <ul style="list-style-type: none"> <li>■ Cycle <b>285 DEFINE GEAR</b> to define the gear geometry</li> <li>■ Cycle <b>286 GEAR HOBGING</b></li> <li>■ Cycle <b>287 GEAR SKIVING</b></li> </ul> <p>Gear manufacturing expands the scope of functionality of milling machines with rotary tables even without mill-turning (#50 / #4-03-1).</p> <p><b>Further information:</b> User's Manual for Machining Cycles</p>
<b>Turning v2</b> (#158 / #4-03-2)	<p><b>Mill-turning version 2</b></p> <p>This software option includes all functions of the Mill-turning (#50 / #4-03-1) software option.</p> <p>In addition, this software option offers the following advanced turning functions:</p> <ul style="list-style-type: none"> <li>■ Cycle <b>882 SIMULTANEOUS ROUGHING FOR TURNING</b></li> <li>■ Cycle <b>883 TURNING SIMULTANEOUS FINISHING</b></li> </ul> <p>The advanced turning functions not only enable you to manufacture undercut workpieces but also to use a larger area of the indexable insert during the machining operation.</p> <p><b>Further information:</b> User's Manual for Machining Cycles</p>
<b>Model Aided Setup</b> (#159 / #1-07-1)	<p><b>Graphically supported setup</b></p> <p>This software option is used to determine the position and misalignment of a workpiece with only one touch-probe function. You can probe complex workpieces with, for example, free-form surfaces or undercuts, which is not possible with all of the other touch-probe functions.</p> <p>The control supports you additionally by showing the setup situation and possible touch points in the <b>Simulation</b> workspace by means of a 3D model.</p>

Software option	Definition and application
<b>Opt. Contour Milling</b> (#167 / #1-02-1)	<p><b>Optimized contour machining (OCM)</b></p> <p>This software option enables trochoidal milling of closed or open pockets and islands of any shape. During trochoidal milling, the full cutting edge is used under constant cutting conditions.</p> <p>The software option includes the following cycles:</p> <ul style="list-style-type: none"> <li>■ Cycle <b>271 OCM CONTOUR DATA</b></li> <li>■ Cycle <b>272 OCM ROUGHING</b></li> <li>■ Cycle <b>273 OCM FINISHING FLOOR</b> and Cycle <b>274 OCM FINISHING SIDE</b></li> <li>■ Cycle <b>277 OCM CHAMFERING</b></li> <li>■ In addition, the control offers <b>OCM STANDARD FIGURES</b> for frequently needed contours</li> </ul> <p>With OCM you can shorten machining times while at the same time reducing tool wear.</p> <p><b>Further information:</b> User's Manual for Machining Cycles</p>
<b>Process Monitoring</b> (#168 / #5-01-1)	<p><b>Process monitoring</b></p> <p>Reference-based monitoring of the machining process</p> <p>The control uses this software option to monitor defined machining sections during program run. The control compares changes in conjunction with the tool spindle or the tool with the values of a reference machining operation.</p> <p><b>Further information:</b> "Process monitoring (#168 / #5-01-1)", Page 304</p>

### 3.3.2 Information on licensing and use

#### Open-source software

The control software contains open-source software whose use is subject to explicit licensing terms. These special terms of use have priority.

To get to the licensing terms on the control:



- ▶ Select the **Home** operating mode

- ▶ Select the **Settings** application
- ▶ Select the **Operating system** tab



- ▶ Double-tap or double-click **About HeROS**
- > The control opens the **HEROS Licence Viewer** window.

#### OPC UA

The control software contains binary libraries, to which the terms of use agreed between HEIDENHAIN and Softing Industrial Automation GmbH additionally and preferentially apply.

The control's behavior can be influenced by means of the OPC UA NC Server (#56-61 / #3-02-1\*) and HEIDENHAIN DNC (#18 / #3-03-1). Before using these interfaces for productive purposes, system tests must be performed to exclude the occurrence of any malfunctions or performance failures of the control. The manufacturer of the software product that uses these communication interfaces is responsible for performing these tests.

**Further information:** "OPC UA NC Server (#56-61 / #3-02-1\*)", Page 568


## 3.4 Hardware

This User's Manual describes functions for setting up and operating the machine. These functions primarily depend on the installed software.

**Further information:** "Software", Page 71

The actual range of functions also depends on hardware enhancements and the enabled software options.

### 3.4.1 Touchscreen and keyboard unit

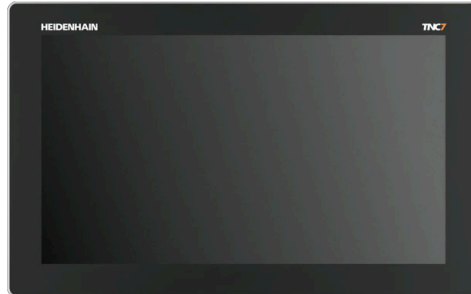

24" MC 366 with TE 361 (FS)

19" MC 356 with TE 350 (FS)

The TNC7 is available with various touchscreen sizes. Variants with 24" or 19" layout are available.

The control is operated by means of touchscreen gestures and with the controls of the keyboard unit.

**Further information:** "Common gestures for the touchscreen", Page 95

**Further information:** "Operating elements of the keyboard unit", Page 95

The machine operating panel is machine-dependent.



MB 350 (FS)

## Operating and cleaning the touchscreen

Touchscreens can even be operated with dirty hands, as long as the touch sensors are able to detect the skin resistance. Small amounts of liquid do not affect the function of the touchscreen, but large amounts may cause incorrect input.

Switch off the control before cleaning the touchscreen. As an alternative, you can use the touchscreen cleaning mode.

**Further information:** "The Settings Application", Page 541

Do not apply the cleaning agent directly to the screen, but slightly dampen a clean, lint-free cleaning cloth with it.

The following cleaning agents are permitted for the screen:

- Glass cleaner
- Foaming screen cleaners
- Mild detergents

The following cleaning agents are prohibited for the screen:

- Aggressive solvents
- Abrasives
- Compressed air
- Steam cleaners



- Touchscreens are sensitive to electrostatic charges from the user. Dissipate the static charge by touching metallic, grounded objects or wear ESD clothing.
- Wear operating gloves to prevent the screen from getting dirty.
- You can operate the touchscreen with special touchscreen operating gloves.

## Cleaning the keyboard unit

Switch the control off before cleaning the keyboard unit.

### NOTICE

#### Caution: danger of property damage

Incorrect cleaning agents and incorrect cleaning procedures can damage the keyboard unit or parts of it.

- ▶ Use permitted cleaning agents only
- ▶ Use a clean, lint-free cleaning cloth to apply the cleaning agent

The following cleaners are permitted for the keyboard unit:

- Cleaning agents containing anionic surfactants
- Cleaning agents containing nonionic surfactants

The following cleaning agents are prohibited for the keyboard unit:

- Cleaning agents for machines
- Acetone
- Aggressive solvents
- Abrasives
- Compressed air
- Steam cleaners



Wear work gloves to prevent the keyboard unit from getting dirty.

If a trackball is embedded in the keyboard, you need to clean it only if it no longer works properly.

To clean a trackball (if needed):

- ▶ Shut down the control
- ▶ Turn the pull-off ring by 100° in counterclockwise direction
- > Turning the removable pull-off ring moves it upwards out of the keyboard unit.
- ▶ Remove the pull-off ring
- ▶ Take out the ball
- ▶ Carefully remove sand, chips, or dust from the shell area



Scratches in the shell area may impair the functionality or prevent proper functioning.

- ▶ Apply a small amount of the cleaning agent onto a cleaning cloth
- ▶ Carefully wipe the shell area clean with the cloth until all smears or stains have been removed



### Exchanging keycaps


If you need replacements for the keycaps of the keyboard unit, contact HEIDENHAIN or the machine manufacturer.

**Further information:** "Keycaps for keyboard units and machine operating panels", Page 671



IP54 protection cannot be guaranteed if the keyboard is missing any keys.


To exchange the keycaps:

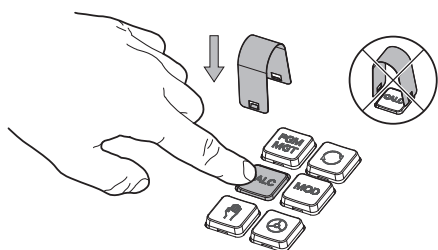


- Slide the keycap puller (ID 1325134-01) over the keycap until the grippers engage



Pressing the key will make it easier to apply the keycap puller.

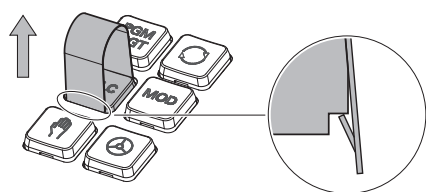

- Pull off the keycap

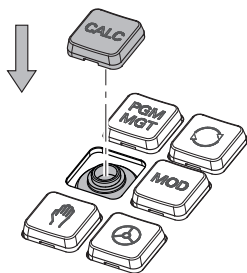

- Place the keycap onto the seal and push it down



The seal must not be damaged; otherwise IP54 protection cannot be guaranteed.

- Verify proper seating and correct functionality

### 3.4.2 Hardware enhancements

The hardware enhancements give you the possibility of adapting the machine tool to your individual needs.



The TNC7 features various hardware extensions that the machine manufacturer may add separately, even at a later point in time. The following overview includes only those extensions that are relevant to you.




Keep in mind that particular hardware enhancements require additional software options.

**Further information:** "Software options", Page 73

Hardware enhancements	Definition and application
Electronic handwheels	<p>You use this enhancement for exact manual positioning of machine axes. The wireless portable variants improve ergonomics and increase versatility. The handwheels have the following differing features:</p> <ul style="list-style-type: none"> <li>■ Portable or installed in the machine operating panel</li> <li>■ With or without display</li> <li>■ With or without functional safety</li> </ul> <p>Electronic handwheels, for example, greatly simplify workpiece setup.</p> <p><b>Further information:</b> "Electronic Handwheel", Page 507</p>
Workpiece touch probes	<p>With this extension, the control can determine locations on the workpiece and misalignments automatically and precisely. The workpiece touch probes have the following differing features:</p> <ul style="list-style-type: none"> <li>■ With radio or infrared transmission</li> <li>■ With or without cable</li> </ul> <p>Workpiece touch probes, for example, are useful for quick workpiece setup and for automatic correction of dimensions during program run.</p> <p><b>Further information:</b> "Touch Probe Functions in the Manual Operating Mode", Page 375</p>
Tool touch probes	<p>With this extension, the control can measure tools automatically and precisely, directly in the machine. Tool touch probes have the following differing features:</p> <ul style="list-style-type: none"> <li>■ Contact-free or tactile measurement</li> <li>■ With radio or infrared transmission</li> <li>■ With or without cable</li> </ul> <p>Tool touch probes, for example, are useful for quick workpiece setup and for automatic correction of dimensions and breakage control during program run.</p> <p><b>Further information:</b> User's Manual for Measuring Cycles for Workpieces and Tools</p>

Hardware enhancements	Definition and application
Vision systems	<p>Use this enhancement to inspect the tools used.</p> <p>With the VT 121 vision system, you can visually inspect the cutting edges during program run without removing the tool.</p> <p>The vision systems help to avoid damage during program run, thus preventing unnecessary costs.</p> <div data-bbox="549 591 1461 799" style="border: 1px solid black; padding: 10px; margin-top: 10px;">  <b>VTC User's Manual</b>  All functions of the software for the VT 121 vision system are described in the <b>VTC User's Manual</b>. Please contact HEIDENHAIN if you require a copy of this User's Manual.  ID: 1322445-xx </div>
Additional operating stations	<p>This enhancement adds a second screen, to facilitate operation of the control. The additional ITC (industrial thin client) operating stations are differentiated by their intended use:</p> <ul style="list-style-type: none"> <li>■ The ITC 755 is a compact, additional operating station that mirrors the control's main screen, making it possible to operate the control.</li> <li>■ The ITC 860 is an auxiliary screen that increases the area of the main screen. This allows multiple applications to be viewed simultaneously.</li> </ul> <div data-bbox="576 1066 1461 1167" style="border: 1px solid black; padding: 10px; margin-top: 10px;">  By adding a keyboard unit, the ITC 860 can be used as a full-fledged additional operating station. </div> <p>The additional operating stations increase operator comfort, especially on large machining centers.</p>
Industrial PC	<p>You use this enhancement to install and run Windows-based applications. With Remote Desktop Manager (#133 / #3-01-1), you can display applications on the control screen.</p> <p><b>Further information:</b> "The Remote Desktop Manager window (#133 / #3-01-1)", Page 583</p> <p>The industrial PC is a secure and powerful alternative to external PCs.</p>
Override controller	<p>This extension allows you to define breakpoints at which the control stops during program run (e.g., before a tilting function). The override controller enables the feed rate or rapid traverse value to be changed as well as starting or continuing the NC program.</p> <p><b>Further information:</b> "Override Controller", Page 521</p>

### 3.5 Areas of the control's user interface

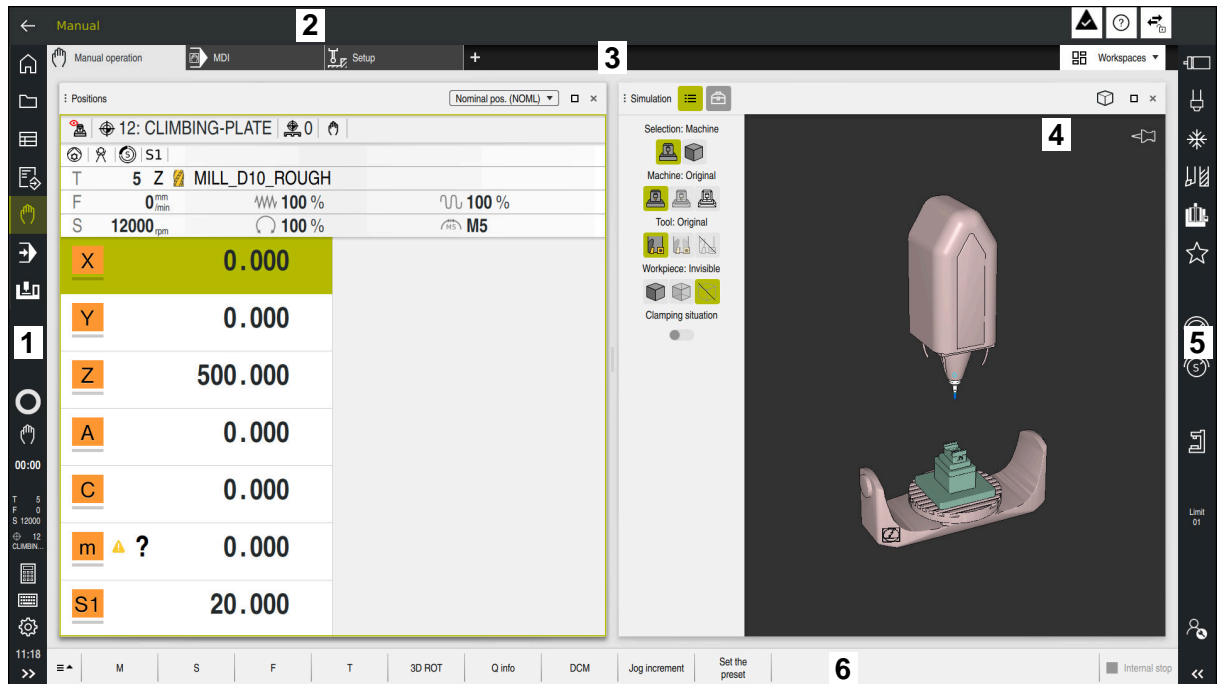

User interface of the control in the **Manual operation** application

The control's user interface shows the following areas:

- 1 TNC bar
  - Back  
Use this function to go backwards in the application history since booting the control.
  - Operating modes  
**Further information:** "Overview of the operating modes", Page 89
  - Status overview  
**Further information:** "Status overview on the TNC bar", Page 127
  - Calculator  
**Further information:** User's Manual for Programming and Testing
  - Screen keyboard  
**Further information:** "Virtual keyboard of the control bar", Page 356
  - Settings  
The Settings menu enables you to change the control interface:
    - **Left-hand mode**  
The control swaps the positions of the TNC bar and the machine manufacturer bar.
    - **Dark Mode**  
In the machine parameter **darkModeEnable** (no. 135501), the machine manufacturer defines whether **Dark Mode** is available for selection.
    - **Font size**
  - Date and time

- 2 Information bar
  - Active operating mode
  - Message menu
 

**Further information:** "Message menu on the information bar", Page 360
  - **Help** icon for context-sensitive help
 

**Further information:** "Context-sensitive help", Page 63
  - Symbols
- 3 Application bar
  - Tabs of opened applications
 

The maximum number of simultaneously opened applications is limited to ten tabs. If you try to open an eleventh tab, the control shows a message.
  - Selection menu for workspaces
 

With the selection menu you define which workspaces are open in the active application.
- 4 Workspaces
 

**Further information:** "Workspaces", Page 91
- 5 Machine manufacturer bar
 




The machine manufacturer configures the machine manufacturer bar.
- 6 Function bar
  - Selection menu for buttons
 






With the selection menu you define which buttons the control displays in the function bar.
  - Button
 

With the buttons you activate individual functions of the control.

## 3.6 Overview of the operating modes


The control provides the following operating modes:

Icon	Operating modes	Further information
	<p>The <b>Home</b> operating mode contains the following applications:</p> <ul style="list-style-type: none"> <li>■ The <b>Start/Login</b> application               <p>During the startup process, the control is in the <b>Start/Login</b> application.</p> </li> <li>■ The <b>Settings</b> application</li> <li>■ The <b>Help</b> application</li> <li>■ Applications for machine parameters</li> </ul>	<p>Page 541</p> <p>See the User's Manual for Programming and Testing</p> <p>Page 597</p>
	In the <b>Files</b> operating mode the control displays drives, folders and files. You can, for example, create or delete folders or files and can also connect drives.	See the User's Manual for Programming and Testing
	In the <b>Tables</b> operating mode you can open various tables and edit them as necessary.	Page 438

Icon	Operating modes	Further information
	<p>In the <b>Editor</b> operating mode you can do the following:</p> <ul style="list-style-type: none"> <li>■ Create, edit and simulate NC programs</li> <li>■ Create and edit contours</li> <li>■ Create and edit pallet tables</li> </ul>	See the User's Manual for Programming and Testing
	<p>The <b>Manual</b> operating mode contains the following applications:</p> <ul style="list-style-type: none"> <li>■ The <b>Manual operation</b> application</li> <li>■ The <b>MDI</b> Application</li> <li>■ The <b>Setup</b> application</li> <li>■ The <b>Move to ref. point</b> application</li> <li>■ The <b>Retract</b> application</li> </ul> <p>You can move the tool away from the workpiece, for example after a power failure.</p>	<p>Page 162</p> <p>Page 365</p> <p>Page 375</p> <p>Page 157</p> <p>Page 434</p>
	<p>In the <b>Program Run</b> operating mode you produce workpieces by having the control execute NC programs either one block at a time or in full sequence.</p> <p>You also execute pallet tables in this operating mode.</p>	Page 412
	<p>If the machine manufacturer has defined an embedded workspace, then you can open full-screen mode with this operating mode. The machine manufacturer defines the name of the operating mode.</p> <p>Refer to your machine manual.</p>	Page 529
	<p>In the <b>Machine</b> operating mode the machine manufacturer defines his own functions, such as diagnostic functions for spindle and axes, or other applications.</p> <p>Refer to your machine manual.</p>	

## 3.7 Workspaces

### 3.7.1 Operating elements within the workspaces

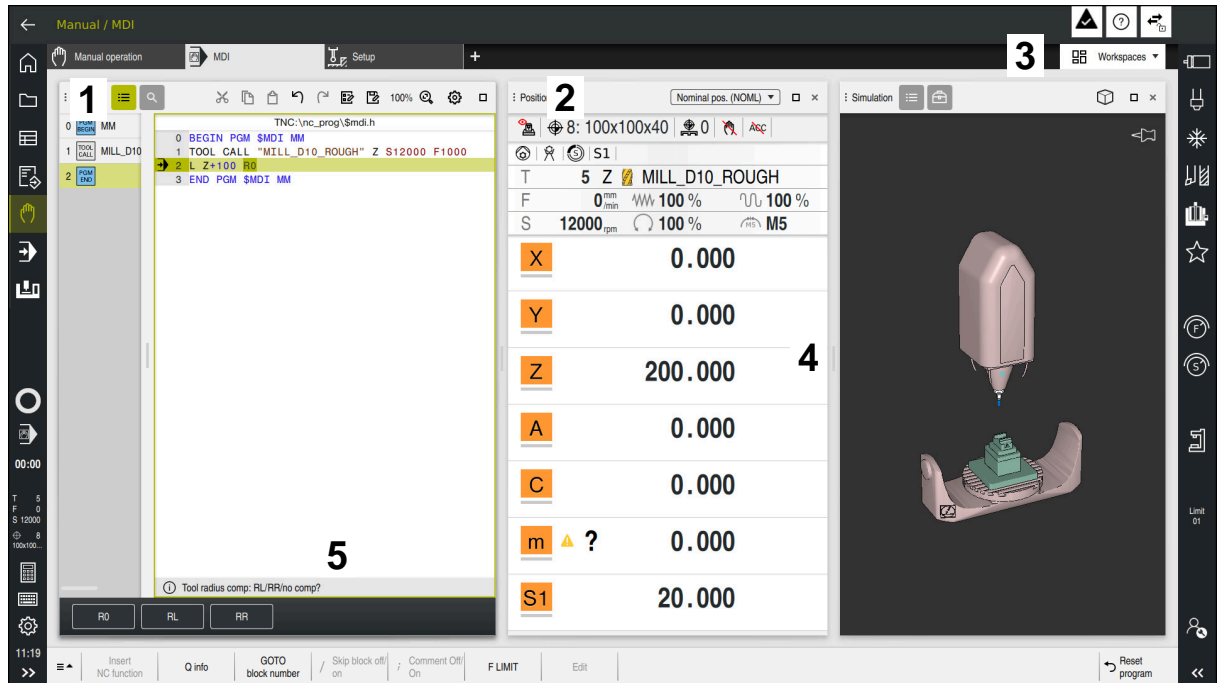




The control in the **MDI** application with three open workspaces

The control displays the following operating elements:

- 1 Gripper  
Use the gripper in the title bar to change positions of the workspaces. You can also align two workspaces vertically above each other.
- 2 Title bar  
In the title bar the control shows the title of the workspace, and different symbols or settings, depending on the workspace.
- 3 Selection menu for workspaces  
Use the selection menu for workspaces in the application bar to open individual workspaces. The available workspaces depend on the active application.
- 4 Separator  
You use the separator between two workspaces to change the scaling of the workspaces.
- 5 Action bar  
In the action bar the control shows selection possibilities for the current dialog; for example, an NC function.

### 3.7.2 Symbols within the workspaces

If more than one workspace is open, the title bar contains the following symbols:

Symbol	Function
	Maximize workspace
	Reduce workspace
	Close workspace

If you maximize a workspace, the control shows the workspace over the application's entire area. If you reduce the workspace, then all other workspaces return to their previous position.

### 3.7.3 Overview of workspaces

The control offers the following workspaces:

Workspace	Further information
<b>Probing function</b> In the <b>Probing function</b> workspace you set presets on the workpiece and determine and compensate for workpiece misalignment and rotations. You can also calibrate the touch probe, measure tools, and set up fixtures.	Page 375
<b>Job list</b> In the <b>Job list</b> workspace, you edit and execute pallet tables.	See the User's Manual for Programming and Testing
<b>Open File</b> In the <b>Open File</b> workspace you select or create files, for example.	See the User's Manual for Programming and Testing
<b>Files</b> In the file management, the control displays drives, folders, and files. You can, for example, create or delete folders or files and can also connect drives. The <b>Files</b> workspace is part of the <b>Files</b> operating mode.	See the User's Manual for Programming and Testing
<b>Details</b> In the <b>Details</b> workspace, the control displays information on the selected machine parameter or the last change you made.	Page 602
<b>Document</b> You can open files for viewing in the <b>Document</b> workspace, for example a technical drawing.	See the User's Manual for Programming and Testing
<b>Settings</b> In the <b>Settings</b> workspace, you can display and edit, if required, various settings of the control (e.g., set up the traverse limits). The <b>Settings</b> workspace is part of the <b>Settings</b> application.	Page 541
The <b>Form</b> for tables In the <b>Form</b> workspace, the control shows all contents of a selected table row. Depending on the table, you can edit the values in the form.	Page 448
The <b>Form</b> for pallets In the <b>Form</b> workspace the control shows the contents of the pallet table for the selected row.	See the User's Manual for Programming and Testing



Workspace	Further information
<b>Retract</b> In the <b>Retract</b> workspace, you can disengage the tool after a power interruption.	Page 434
<b>GPS (#44 / #1-06-1)</b> In the <b>GS</b> workspace you define selected transformations and settings without modifying the NC program.	Page 291
<b>Desktop menu</b> In the <b>Desktop menu</b> workspace, the control displays selected control and HEROS functions.	Page 105
<b>Help</b> In the <b>Help</b> workspace, the control displays a help graphic for the current syntax element of an NC function or the integrated product aid <b>TNCguide</b> .	See the User's Manual for Programming and Testing
<b>Contour graphics</b> In the <b>Contour graphics</b> workspace, you can use lines and arcs to draw a 2D sketch and then generate a Klartext contour from it. You can also import program sections with contours from an NC program to the <b>Contour graphics</b> workspace for graphical editing.	See the User's Manual for Programming and Testing
<b>List</b> In the <b>List</b> workspace, the control shows the machine parameter structure; you might be able to edit some of the parameters.	Page 599
<b>Positions</b> In the <b>Positions</b> workspace, the control displays information about the status of various functions of the control and about current axis positions.	Page 121
<b>Program</b> The control displays the NC program in the <b>Program</b> workspace.	See the User's Manual for Programming and Testing
<b>Process Monitoring (#168 / #5-01-1)</b> In the <b>Process Monitoring</b> workspace the control visualizes the machining process during program run. Up to four monitoring tasks can be activated at the same time to suit the monitoring section. If required, monitoring tasks can be parameterized, replaced or removed.	Page 309
<b>Referencing</b> On machines with incremental linear and angle encoders, the control shows in the <b>Referencing</b> workspace which axes need to be referenced.	Page 157
<b>Remote Desktop Manager (#133 / #3-01-1)</b> If the machine manufacturer has defined an embedded workspace, you can see and operate the screen of an external computer on the control.  The machine manufacturer can change the name of the workspace. Refer to your machine manual.	Page 529
<b>Quick selection</b> In the <b>Quick selection new table</b> and <b>Quick selection new file</b> workspaces, you can create files or open existing files, depending on the active operating mode.	See the User's Manual for Programming and Testing









Workspace	Further information
<b>Simulation</b> In the <b>Simulation</b> workspace, the control shows the simulated or current movements, depending on the operating mode.	See the User's Manual for Programming and Testing
<b>Simulation status</b> In the <b>Simulation status</b> workspace the control shows data based on the simulation of the NC program.	Page 146
<b>Start/Login</b> In the <b>Start/Login</b> workspace, the control shows the steps that are performed during startup.	Page 108
<b>Status</b> In the <b>Status</b> workspace, the control shows the status and values of individual functions.	Page 129
<b>Table</b> In the <b>Table</b> workspace, the control shows the contents of a table. The control displays a column with filters and a search function on the left side of some tables.	Page 442
The <b>Table</b> for machine parameters In the <b>Table</b> workspace the control shows the machine parameters; you might be able to edit some of them.	Page 599
<b>Keyboard</b> In the <b>Keyboard</b> workspace, you can enter NC functions, letters and numbers, and also navigate.	Page 356
<b>Overview</b> In the <b>Overview</b> workspace, the control displays information on the status of individual functional safety (FS) safety functions.	Page 536

## 3.8 Operating elements

### 3.8.1 Common gestures for the touchscreen

The screen of the control is multi-touch capable. That means the control can distinguish various gestures, even with two or more fingers at once.

You can use the following gestures:

Symbol	Gesture	Meaning
	Tap	A brief touch by a finger on the screen
	Double tap	Two brief touches on the screen
	Long press	Continuous contact of finger tip on the screen <div data-bbox="659 925 1211 1115"> <p><b>i</b> If you do not stop holding, the control will automatically cancel the holding gesture after approximately ten seconds. Permanent actuation is thus not possible.</p> </div>
	Swipe	Flowing motion over the screen
	Drag	A combination of long-press and then swipe, moving a finger over the screen when the starting point is clearly defined
	Two-finger drag	A combination of long-press and then swipe, moving two fingers in parallel over the screen when the starting point is clearly defined
	Spread	Two fingers long-press and move away from each other
	Pinch	Two fingers move toward each other

### 3.8.2 Operating elements of the keyboard unit

#### Application

You operate the TNC7 primarily through the touchscreen, meaning with gestures.

**Further information:** "Common gestures for the touchscreen", Page 95

In addition, the control's keyboard unit offers keys and other elements for alternative operating sequences.

### Description of function






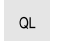
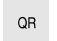

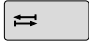
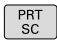

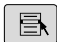
The tables below describe the keyboard unit's operating elements.









If there are deviations from the virtual keyboard, the table also indicates the corresponding keys on the virtual keyboard.

**Further information:** "Virtual keyboard of the control bar", Page 356
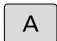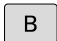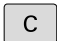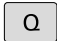
### Keycaps for alphabetic keyboard

Key	Meaning
  	Enter texts (e.g., file names)
	<b>Q</b>
  	With an open NC program, enter a Q parameter formula in the <b>Editor</b> operating mode, or in the <b>Manual</b> operating mode open the <b>Q parameter list</b> window <b>Further information:</b> User's Manual for Programming and Testing By selecting the <b>Q</b> key multiple times, you can switch between <b>Q</b> , <b>QL</b> , and <b>QR</b> .
	Close windows and context menus
	Select the next element; for example, an input field, button, or selection option
<b>SHIFT</b> + <b>TAB</b>	Select the previous element
	Create screenshot
	The <b>DIADUR</b> keys provide the following functions: <ul style="list-style-type: none"> <li>■ Left <b>DIADUR</b> key Open the <b>HEROS</b> menu</li> <li>■ Right <b>DIADUR</b> key Open the <b>Remote Desktop Manager</b> connection in the defined desktop</li> </ul> <b>Further information:</b> "Connection settings", Page 585
	Open the context menu in the <b>Klartext editor</b> or in the text editor

## Keycaps for operating aids

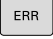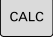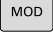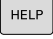Key	Meaning
	Open the <b>Open File</b> workspace in the <b>Editor</b> and <b>Program Run</b> operating modes <b>Further information:</b> User's Manual for Programming and Testing
	Currently no function
	Open and close the message menu <b>Further information:</b> "Message menu on the information bar", Page 360
	Open and close the calculator <b>Further information:</b> User's Manual for Programming and Testing
	Open the <b>Settings</b> application <b>Further information:</b> "The Settings Application", Page 541
	Open the online help <b>Further information:</b> "User's Manual as integrated product aid: TNCguide", Page 60

## Operating modes



On the TNC7 the operating modes of the control are allocated differently than on the TNC 640. For reasons of compatibility and to facilitate ease of operation, the keys on the keyboard unit remain the same. Keep in mind that particular keys no longer activate a change of operating modes but, for example, instead activate a toggle switch.

Key	Meaning
	Open the <b>Manual operation</b> application in the <b>Manual</b> operating mode <b>Further information:</b> "The Manual operation application", Page 162
	Activate and deactivate the electronic handwheel in the <b>Manual</b> operating mode <b>Further information:</b> "Electronic Handwheel", Page 507
	Open the <b>Tool Management</b> tab in the <b>Tables</b> operating mode <b>Further information:</b> "Tool management ", Page 205
	Open the <b>MDI</b> application in the <b>Manual</b> operating mode <b>Further information:</b> "The MDI Application ", Page 365
	Open the <b>Program Run</b> operating mode in <b>Single Block</b> mode <b>Further information:</b> "The Program Run operating mode", Page 412
	Open the <b>Program Run</b> operating mode <b>Further information:</b> "The Program Run operating mode", Page 412
	Open the <b>Editor</b> operating mode <b>Further information:</b> User's Manual for Programming and Testing
	While the NC program is running, open the <b>Simulation</b> workspace in the <b>Editor</b> operating mode <b>Further information:</b> User's Manual for Programming and Testing

## Keycaps for NC dialog




















The following functions are valid for the **Editor** operating mode and the **MDI** application.

Key	Meaning
	In the <b>Insert NC function</b> window, open the <b>Path contour</b> folder in order to select an approach or departure function
	Open the <b>Contour</b> workspace (e.g., to draw a milling contour) Only in the <b>Editor</b> operating mode
	Program a chamfer
	Program a straight line segment
	Program a circular arc with radius entry
	Program a rounding arc
	Program a circular arc with tangential connection to the preceding contour element
	Program a circle center or pole
	Program a circular arc with reference to the circle center
	In the <b>Insert NC function</b> window, open the <b>Setup</b> folder in order to select a touch probe cycle <b>Further information:</b> User's Manual for Measuring Cycles for Workpieces and Tools
	In the <b>Insert NC function</b> window, open the <b>Fixed cycles</b> folder in order to select a cycle <b>Further information:</b> User's Manual for Machining Cycles
	In the <b>Insert NC function</b> window, open the <b>Cycle call</b> folder in order to select a machining cycle <b>Further information:</b> User's Manual for Machining Cycles
	Program a jump label
	Program a subprogram or a program section repeat
	Program an intentional stop
	Pre-select a tool in the NC program
	Call the tool data in the NC program
	In the <b>Insert NC function</b> window, open the <b>Special functions</b> folder (e.g., for later programming of a workpiece blank)
	In the <b>Insert NC function</b> window, open the <b>Selection</b> folder (e.g., to call an external NC program)













**Further information:** User's Manual for Programming and Testing

## Keycaps for axis input and value input



Key	Meaning
 ... 	Select axes in the <b>Manual</b> operating mode, or enter them in the <b>Editor</b> operating mode
 ... 	Enter numbers (e.g., coordinate values)
	Insert a decimal separator during entry
	Invert algebraic sign of entered value
	Delete values during entry
	Open position display of the status overview to copy axis values <b>Further information:</b> "Status overview on the TNC bar", Page 127 In the <b>Editor</b> operating mode and the <b>MDI</b> application, program a straight line <b>L</b> with the actual positions of all axes
	In the <b>Editor</b> operating mode, open the <b>FN</b> folder in the <b>Insert NC function</b> window
	
	Clear entries or delete messages
	Delete NC block or cancel a dialog during programming
	Skip or remove optional syntax elements during programming
	Confirm entries and continue dialogs
	Conclude entry (e.g., finish an NC block)
	Switch between entry of polar and Cartesian coordinates
	Switch between entry of incremental and absolute coordinates

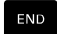

## Keycaps for navigation







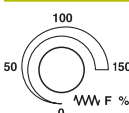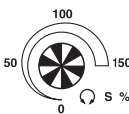

Key	Meaning
 	Position the cursor
 	
	<ul style="list-style-type: none"> <li>■ Position the cursor by using the block number of an NC block</li> <li>■ Open the selection menu while editing</li> </ul>
	Jump to first line of an NC program or first column of a table
	Jump to last line of an NC program or last column of a table
	Go one page up in an NC program or table
	Go one page down in an NC program or table
	Mark the active application in order to navigate between applications
 	Navigate between areas of an application

## Potentiometers

Poten-tiometer	Function
	Increase or reduce the feed rate <b>Further information:</b> User's Manual for Programming and Testing
	Increase or reduce the spindle speed <b>Further information:</b> User's Manual for Programming and Testing
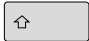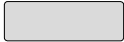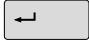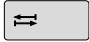
### 3.8.3 Keyboard shortcuts for operating the control

With a keyboard unit or a USB keyboard, you can use keyboard shortcuts in your control. In the User's Manual, the labels of the keys are used when indicating keyboard shortcuts. Keys without a label are indicated as follows:


















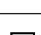


Key	Designation
	SHIFT
	SPACE
	RETURN
	TAB
	UP
	DOWN
	RIGHT
	LEFT














### 3.8.4 Icons on the control's user interface

#### Overview of icons not specific to any operating mode

This overview describes icons that are used in more than one operating mode or that are available regardless of operating mode.

Icons that are specific to individual workspaces are described there.

Icon or shortcut	Meaning
	<b>Back</b>
	Select the <b>Home</b> operating mode
	Select the <b>Files</b> operating mode
	Select the <b>Tables</b> operating mode
	Select the <b>Editor</b> operating mode
	Select the <b>Manual</b> operating mode
	Select the <b>Program Run</b> operating mode
	Select the <b>Machine</b> operating mode
	Open or close the <b>Calculator</b>
	Open or close the <b>Screen keyboard</b>
	Open or close the <b>Settings</b> selection menu
	<b>Open or close</b> <ul style="list-style-type: none"> <li>■ White: expand the TNC bar or machine manufacturer's bar</li> <li>■ Green: collapse the TNC bar or machine manufacturer's bar</li> <li>■ Gray: Confirm message</li> </ul>
	<b>Add</b>
	<b>Open</b>
	<b>Close</b>
	<b>Maximize</b>
	<b>Reduce</b>
	<b>Move</b> Change the position of workspaces or windows
	<b>Scale</b> Resize windows
	File functions are available

Icon or shortcut	Meaning
	<ul style="list-style-type: none"> <li>■ Black: <b>Add favorite</b></li> <li>■ Yellow: <b>Remove favorite</b></li> </ul>
 CTRL + S	<b>Save</b>
	<b>Save as</b>
 CTRL + F	<b>Find</b>
 CTRL+X	<b>Cut</b>
 CTRL + C	<b>Copy</b>
 CTRL + V	<b>Paste</b>
 CTRL + Z	<b>Undo</b>
 CTRL + Y	<b>Redo</b>
	Open or close the selection menu
<div>  The control groups the icons of the title bar depending on the size of the workspace in a selection menu. </div>	
	Open or close the <b>Workspaces</b> selection menu
	Show the <b>Message menu</b>

### 3.8.5 The Desktop menu workspace

#### Application

In the **Desktop menu** workspace, the control displays selected control and HEROS functions.


#### Description of function

The title bar of the **Desktop menu** workspace includes the following functions:

- The **Active Configuration** selection menu  
Using the selection menu, you can activate a configuration of the control interface.  
**Further information:** "Configuring the control's user interface", Page 602
- Full-text search  
Search for functions in the workspace with the full-text search.  
**Further information:** "Adding and removing favorites", Page 106

The **Desktop menu** workspace contains the following areas:

- **Control**  
In this area you can open operating modes or applications.  
**Further information:** "Overview of the operating modes", Page 89  
**Further information:** "Overview of workspaces", Page 92
- **Tools**  
In this area you can open some tools from the HEROS operating system.  
**Further information:** "HEROS Operating System", Page 631
- **Help**  
In this area you can open training videos or **TNCguide**.  
**Further information:** "User's Manual as integrated product aid: TNCguide", Page 60
- **Favorites**  
In this area you will find the favorites that you have chosen.  
**Further information:** "Adding and removing favorites", Page 106

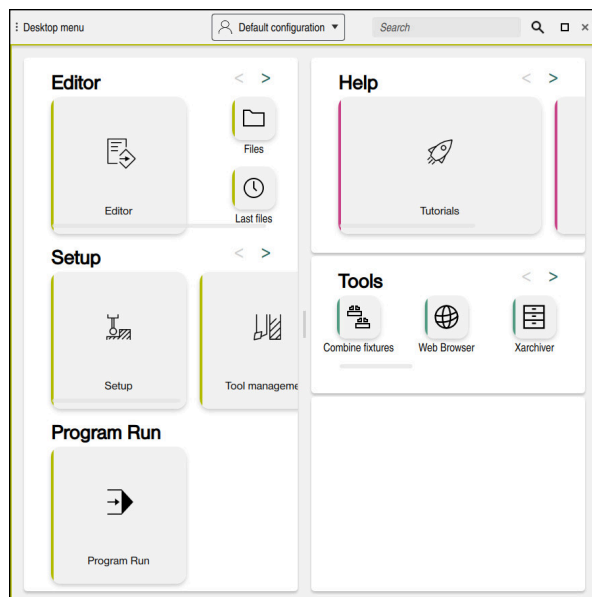

The **Desktop menu** workspace

The **Desktop menu** workspace is available in the **Start/Login** application.

## Showing or hiding an area

To show or hide an area in the **Desktop menu** workspace:

- ▶ Hold or right-click anywhere within the workspace
- > The control displays a plus sign or minus sign within each area.
- ▶ Select a plus sign
- > The controls shows that area.



Use the minus sign to hide an area.

## Adding and removing favorites

### Adding favorites

To add favorites in the **Desktop menu** workspace:

- ▶ Use the full-text search
- ▶ Hold or right-click the function's icon
- > The control displays the icon for **adding favorites**.



- ▶ Select **Add favorite**
- > The control adds the function to the **Favorites** area.

### Removing favorites

To remove favorites from the **Desktop menu** workspace:

- ▶ Hold or right-click the function's icon
- > The control displays the icon for **removing favorites**.



- ▶ Select **Remove favorite**
- > The control removes the function from the **Favorites** area.

# 4

**First Steps**


## 4.1 Chapter overview

This chapter uses an example workpiece to explain how to operate the control: from switching the machine on to the finished workpiece.

The chapter covers the following topics:

- Switching the machine on
- Setting up tools
- Setting up the workpiece
- Machining the workpiece
- Switching the machine off

## 4.2 Switching on the machine and the control

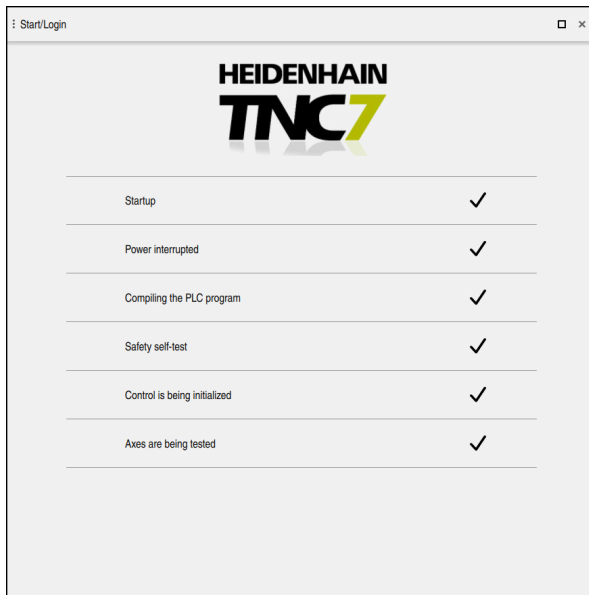

The **Start/Login** workspace

### DANGER

#### Caution: hazard to the user!

Machines and machine components always pose mechanical hazards. Electric, magnetic, or electromagnetic fields are particularly hazardous for persons with cardiac pacemakers or implants. The hazard starts when the machine is powered up!

- ▶ Read and follow the machine manual
- ▶ Read and follow the safety precautions and safety symbols
- ▶ Use the safety devices



Refer to your machine manual.

Switching on the machine and traversing the reference points can vary depending on the machine tool.



To switch the machine on:

- ▶ Switch the power supply of the control and of the machine on
- > The control is in start-up mode and shows the progress in the **Start/Login** workspace.
- > The control shows the **Power interrupted** dialog in the **Start/Login** workspace.



- ▶ Press **OK**
- > The control compiles the PLC program.
- ▶ Switch the machine control voltage on
- > The control checks the functioning of the emergency stop circuit.
- > If the machine is equipped with absolute linear and angle encoders, the control is now ready for operation.
- > If the machine is equipped with incremental linear and angle encoders, the control opens the **Move to ref. point** application.

**Further information:** "The Referencing workspace",  
Page 157



- ▶ Press the **NC Start** key
- > The control moves to all necessary reference points.
- > The control is ready for operation and the **Manual operation** application is open.

**Further information:** "The Manual operation application",  
Page 162

#### More detailed information

- Switching on and off
- Position encoders

**Further information:** "Position encoders and reference marks", Page 171

- Axis reference run

## 4.3 Configuring a tool

### 4.3.1 Selecting the Tables operating mode

You can configure tools in the **Tables** operating mode.

To select the **Tables** operating mode:



- ▶ Select the **Tables** operating mode
- > The control displays the **Tables** operating mode.

#### More detailed information

- The **Tables** operating mode

**Further information:** "The Tables operating mode", Page 438

### 4.3.2 Configuring the control's user interface

The **Form** workspace in the **Tables** operating mode

In the **Tables** operating mode you open and edit the various tables of the control either in the **Table** workspace or in the **Form** workspace.



The first steps describe the procedure with the **Form** workspace open.

To open the **Form** workspace:

- ▶ In the application bar, select **Workspaces**
- ▶ Select **Form**
- > The control opens the **Form** workspace.

#### More detailed information

- The **Form** workspace  
**Further information:** "The Form workspace for tables", Page 448
- The **Table** workspace  
**Further information:** "The Table workspace", Page 442

### 4.3.3 Preparing and measuring tools

To prepare tools:

- ▶ Clamp the required tools in their tool holders
- ▶ Measure the tools  
**Further information:** "Measuring the tool by scratching", Page 405
- ▶ Write down the length and the radius or transfer these directly to the control

### 4.3.4 Editing within tool management

T	MAGAZIN	P	NAME
0			NULLWERKZEUG
1	Main	1.1	MILL_D2_ROUGH
2	Main	1.2	MILL_D4_ROUGH
3	Main	1.3	MILL_D6_ROUGH
4	Main	1.4	MILL_D8_ROUGH
5	Main	1.5	MILL_D10_ROUGH
6	Spindle	0.0	MILL_D12_ROUGH
7	Main	1.7	MILL_D14_ROUGH
8	Main	1.8	MILL_D16_ROUGH
9	Main	1.9	MILL_D18_ROUGH
10	Main	1.10	MILL_D20_ROUGH
11	Main	1.11	MILL_D22_ROUGH
12	Main	1.12	MILL_D24_ROUGH
13	Main	1.13	MILL_D26_ROUGH
14	Main	1.14	MILL_D28_ROUGH

The **Tool management** application in the **Table** workspace

Tool management allows you to save tool data, such as the length and radius as well as other tool-specific information.

The control displays the tool data for all tool types in tool management. In the **Form** workspace the control displays only the relevant tool data for the current tool type.

To enter the tool data in tool management:

- ▶ Select **Tool management**
- > The control displays the **Tool management** application.
- ▶ Open the **Form** workspace

- ▶ Enable **Edit**
- ▶ Select the desired tool number (e.g., **16**)
- > The control displays the tool data of the selected tool in the form.
- ▶ Define the required tool data in the form; for example, the length **L** and the tool radius **R**

#### More detailed information

- The **Tables** operating mode  
**Further information:** "The Tables operating mode", Page 438
- The **Form** workspace  
**Further information:** "The Form workspace for tables", Page 448
- Tool management  
**Further information:** "Tool management ", Page 205
- Tool types  
**Further information:** "Tool types", Page 188

### 4.3.5 Editing the pocket table



Refer to your machine manual!

Access to the **tool\_p.tch** pocket table is machine-dependent.

P	T	NAME	TOOL_LIFE
1.1	1	MILL_D2_ROUGH	?
1.2	2	MILL_D4_ROUGH	?
1.3	3	MILL_D6_ROUGH	?
1.4	4	MILL_D8_ROUGH	?
1.5	5	MILL_D10_ROUGH	?
1.6	6	MILL_D12_ROUGH	?
1.7	7	MILL_D14_ROUGH	?
1.8	8	MILL_D16_ROUGH	?
1.9	9	MILL_D18_ROUGH	?
1.10	10	MILL_D20_ROUGH	?
1.11	11	MILL_D22_ROUGH	?
1.12	12	MILL_D24_ROUGH	?
1.13	13	MILL_D26_ROUGH	?
1.14	14	MILL_D28_ROUGH	?
1.15	15	MILL_D30_ROUGH	?

The **Pocket table** application in the **Table** workspace

The control assigns a pocket in the tool magazine to each tool that is in the tool table. This assignment, as well as the load situation of each tool, is shown in the pocket table.

There are various ways of accessing the pocket table:

- Functions of the machine manufacturer
- Third-party tool-management system
- Manual access to the control

To enter the data in the pocket table:

- ▶ Select **Pocket table**
- > The control displays the **Pocket table** application.
- ▶ Open the **Form** workspace



- ▶ Enable **Edit**
- ▶ Select the desired pocket number
- ▶ Define the tool number
- ▶ Define any additional tool data if necessary, such as whether the pocket is reserved

#### More detailed information

- Pocket table

**Further information:** "Pocket table tool\_p.tch", Page 482

## 4.4 Setting up a workpiece

### 4.4.1 Selecting an operating mode

You set up workpieces in the **Manual** operating mode.

To select the **Manual** operating mode:



- ▶ Select the **Manual** operating mode
- > The control displays the **Manual** operating mode.

#### More detailed information

- Operating mode: **Manual**

**Further information:** "Overview of the operating modes", Page 89

### 4.4.2 Clamping the workpiece

Mount the workpiece with a fixture on the machine table.

### 4.4.3 Workpiece presetting with a touch probe

#### Inserting a workpiece touch probe

Use a workpiece touch probe to set up the workpiece with the aid of the control and set the workpiece preset.

To insert a workpiece touch probe:



- ▶ Select **T**
- ▶ Enter the tool number of the workpiece touch probe (e.g., **600**)
- ▶ Press the **NC Start** key
- > The controls inserts the workpiece touch probe.



### Setting a workpiece preset

To set a workpiece preset at a corner:

- ▶ Select the **Setup** application



- ▶ Select **Intersection point (P)**

- > The control opens the probing cycle.

- ▶ Manually position the touch probe near the first touch point of the first workpiece edge



- ▶ In the **Choose the probing direction** area, select the direction of probing (e.g., **Y+**)



- ▶ Press the **NC Start** key

- > The control moves the touch probe in the probing direction to the workpiece edge and then back to the starting point.

- ▶ Manually position the touch probe near the second touch point of the first workpiece edge



- ▶ Press the **NC Start** key

- > The control moves the touch probe in the probing direction to the workpiece edge and then back to the starting point.

- ▶ Manually position the touch probe near the first touch point of the second workpiece edge



- ▶ In the **Choose the probing direction** area, select the direction of probing (e.g., **X+**)



- ▶ Press the **NC Start** key

- > The control moves the touch probe in the probing direction to the workpiece edge and then back to the starting point.

- ▶ Manually position the touch probe near the second touch point of the second workpiece edge



- ▶ Press the **NC Start** key

- > The control moves the touch probe in the probing direction to the workpiece edge and then back to the starting point.

- > The control then displays the coordinates of the determined corner point in the **Measuring result** area.


- ▶ Select **Compensate the active preset**

- > The control applies the calculated results to the workpiece preset.

- > The control highlights the line with a preset symbol.

- ▶ Select **Exit probing**

- > The control closes the probing cycle.

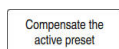



The **Probing function** workspace with an open manual probing function

### More detailed information

- The **Probing function** workspace  
**Further information:** "Touch Probe Functions in the Manual Operating Mode", Page 375
- Reference points in the machine  
**Further information:** "Presets in the machine", Page 172
- Tool change in the **Manual operation** application  
**Further information:** "The Manual operation application", Page 162

## 4.5 Machining a workpiece

### 4.5.1 Selecting an operating mode

You can machine workpieces in the **Program Run** operating mode.

To select the **Program Run** operating mode:



- ▶ Select the **Program Run** operating mode
- > The control displays the **Program Run** operating mode and the most recently executed NC program.

#### More detailed information

- The **Program Run** operating mode

**Further information:** "The Program Run operating mode", Page 412

### 4.5.2 Opening an NC program


To open an NC program:



- ▶ Select **Open File**
- > The control displays the **Open File** workspace.



- ▶ Select an NC program



- ▶ Select **Open**
- > The control opens the NC program.

#### More detailed information

- The **Open File** workspace

**Further information:** User's Manual for Programming and Testing

### 4.5.3 Starting an NC program

To start an NC program:



- ▶ Press the **NC Start** key
- > The control runs the active NC program.



## 4.6 Switching the machine off



Refer to your machine manual.  
Switching off is a machine-dependent function.

### NOTICE

#### Caution: Data may be lost!

The control must be shut down so that running processes can be concluded and data can be saved. Immediate switch-off of the control by turning off the main switch can lead to data loss regardless of the control's status!

- ▶ Always shut down the control
- ▶ Only operate the main switch after being prompted on the screen

To power-off the machine:



- ▶ Select the **Home** operating mode



- ▶ Select **Shut down**
- The control opens the **Shut down** window.



- ▶ Select **Shut down**
- If NC programs or contours contain any unsaved changes, the control displays the **Close file** window.
- ▶ If necessary, save unsaved NC programs with **Save** or **Save as**
- The control shuts down.
- After completion of the shutdown process, the control displays the text **Now you can switch off.**
- ▶ Switch off the main power switch of the machine



# 5

## Status Displays

## 5.1 Overview

The control shows the status or values of individual functions in the status displays.

The control offer the following status displays:


- General status display and position display in the **Positions** workspace  
**Further information:** "The Positions workspace", Page 121
- Status overview on the TNC bar  
**Further information:** "Status overview on the TNC bar", Page 127
- Additional status displays for specific areas in the **Status** workspace  
**Further information:** "The Status workspace", Page 129
- Additional status displays in the **Editor** operating mode in the **Simulation status** workspace, based on the machining status of the simulated workpiece  
**Further information:** "The Simulation status workspace", Page 146

## 5.2 The Positions workspace

### Application

The general status display in the **Positions** workspace provides information about the status of various functions of the control and about current axis positions.

### Description of function

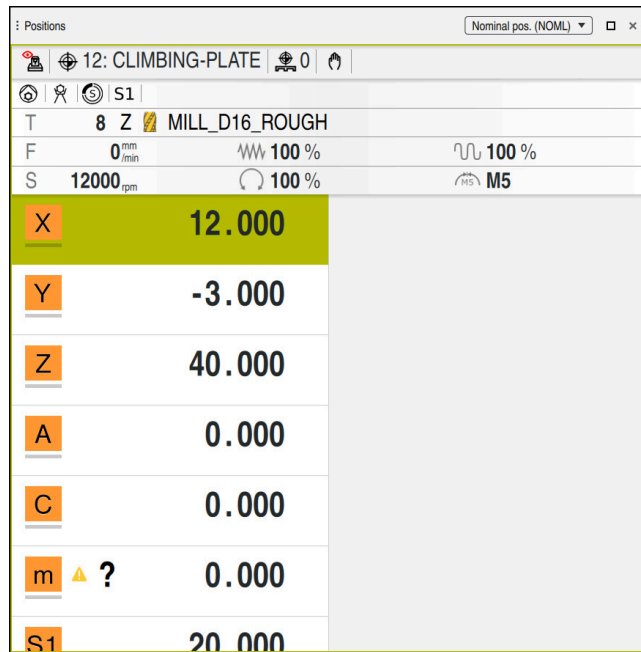

The **Positions** workspace with general status display

You can open the **Positions** workspace in the following operating modes:

- **Manual**
- **Program Run**

**Further information:** "Overview of the operating modes", Page 89

The **Positions** workspace provides the following information:

- Icons of active and inactive functions (e.g., Dynamic Collision Monitoring DCM (#40 / #5-03-1))
- Active tool
- Technology values
- Settings of the spindle and feed-rate potentiometers
- Active miscellaneous functions for the spindle
- Axis values and statuses, such as "Axis not referenced"

**Further information:** "Test status of the axes", Page 538



Refer to your machine manual.

In turning mode, miscellaneous functions for the turning spindle must be programmed using different numbers (e.g., **M303** instead of **M3** (#50 / #4-03-1)). The machine manufacturer defines the numbers to be used.










Using the optional machine parameter **CfgSpindleDisplay** (no. 139700), the machine manufacturer defines the miscellaneous function numbers to be displayed in the status display.

## Axis display and position display





Refer to your machine manual.











In the machine parameter **axisDisplay** (no. 100810) you define the quantity and sequence of the displayed axes.

Icon	Meaning
IST	Position display mode (e.g., actual or nominal coordinates of the current tool position) You can select the mode in the title bar of the workspace. <b>Further information:</b> "Position displays", Page 148
	Axes The X axis is selected. You can move the selected axis.
	The auxiliary axis <b>m</b> is not selected. The control displays auxiliary axes, such as the tool magazine, as lowercase letters. <b>Further information:</b> "Definition", Page 126
?	The axis is not referenced.
	The axis is not in safe mode. <b>Further information:</b> "Checking axis positions manually", Page 539
$\Delta$	The axis is moving the distance-to-go shown next to the symbol.
	The axis is clamped.
	You can move the axis with the handwheel.
	You cannot move the axis with the handwheel.
<div>  <p>Refer to your machine manual. The machine manufacturer defines which axes you can move with the handwheel.</p> </div>	
	Feed status when stopped <b>Further information:</b> "Functional safety FS in the Positions workspace", Page 536
	Spindle status when stopped <b>Further information:</b> "Functional safety FS in the Positions workspace", Page 536




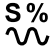

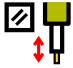





## Presets and technology values





Icon	Meaning
	<p>Number and comment of the active workpiece preset</p> <p>The number corresponds to the active row number of the preset table. The comment corresponds to the content of the <b>DOC</b> column.</p> <p><b>Further information:</b> "Preset management", Page 238</p>
	<p>Number of the active pallet preset</p> <p>The number corresponds to the active row number in the pallet preset table.</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p>
<b>T</b>	<p>In the <b>T</b> area, the control shows the following information:</p> <ul style="list-style-type: none"> <li>■ Number of the active tool</li> <li>■ Tool axis of the active tool</li> <li>■ Symbol of the defined tool type</li> <li>■ Name of the active tool</li> </ul>
<b>F</b>	<p>In the <b>F</b> area, the control shows the following information:</p> <ul style="list-style-type: none"> <li>■ Active feed rate in mm/min</li> </ul> <p>You can program the feed rate in various units of measurement. The control always converts the programmed feed rate in this display to mm/min.</p> <ul style="list-style-type: none"> <li>■ If <b>M136</b> is active: active feed rate in mm/rev</li> </ul> <p><b>Further information:</b> User's Manual for Programming and Testing</p> <ul style="list-style-type: none"> <li>■ Setting of the rapid-traverse potentiometer in percent</li> <li>■ Setting of the feed-rate potentiometer in percent</li> </ul> <p><b>Further information:</b> "Potentiometers", Page 101</p> <p>If a feed-rate limitation has been activated with the <b>F LIMIT</b> button, the area is labeled <b>F LIMIT</b> instead of <b>F</b>. The control displays the text <b>F LIMIT</b> and the feed-rate value in orange.</p> <p><b>Further information:</b> "Feed rate limit F LIMIT", Page 416</p>
<b>S</b>	<p>In the <b>S</b> area, the control shows the following information:</p> <ul style="list-style-type: none"> <li>■ Active shaft speed in rpm</li> </ul> <p>If you have programmed a cutting speed instead of a rotational speed, the control automatically converts this value to a rotational speed.</p> <ul style="list-style-type: none"> <li>■ Setting of the spindle potentiometer in percent</li> <li>■ Active miscellaneous function for the spindle</li> </ul>

## Active functions

Icon	Meaning
	The <b>Manual traverse</b> function is active.
	The <b>Manual traverse</b> function is not active. <b>Further information:</b> "The Program Run operating mode", Page 412
	<b>RL</b> tool radius compensation is active. <b>Further information:</b> User's Manual for Programming and Testing
	<b>RR</b> tool radius compensation is active. <b>Further information:</b> User's Manual for Programming and Testing
	These symbols are transparent while the <b>Block scan</b> function of the control is active. <b>Further information:</b> "Block scan for mid-program startup", Page 423
	<b>R+</b> tool radius compensation is active. <b>Further information:</b> User's Manual for Programming and Testing
	<b>R-</b> tool radius compensation is active. <b>Further information:</b> User's Manual for Programming and Testing
	These symbols are transparent while the <b>Block scan</b> function of the control is active. <b>Further information:</b> "Block scan for mid-program startup", Page 423
	3D tool compensation is active (#9 / #4-01-1). <b>Further information:</b> User's Manual for Programming and Testing
	This symbol is transparent while the <b>Block scan</b> function of the control is active. <b>Further information:</b> "Block scan for mid-program startup", Page 423
	A basic rotation is defined in the active preset. <b>Further information:</b> "Basic rotation and 3D basic rotation", Page 240
	The basic rotation will be taken into account while moving the axes. <b>Further information:</b> "Selection item Basic rotation", Page 247
	A 3D basic rotation is defined in the active preset. <b>Further information:</b> "Basic rotation and 3D basic rotation", Page 240



Icon	Meaning
	<p>The tilted working plane will be taken into account while moving the axes.</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p> <p><b>Further information:</b> "The 3D ROT selection item", Page 248</p>
	<p>The <b>Tool axis</b> function is active.</p> <p><b>Further information:</b> "The Tool axis selection item", Page 248</p>
	<p>Either the <b>TRANS MIRROR</b> function or Cycle <b>8 MIRRORING</b> is active. The axes programmed in the function or cycle are mirrored and moved.</p> <p><b>Further information:</b> User's Manual for Machining Cycles</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p>
	<p>The pulsing spindle speed function <b>S-PULSE</b> is active.</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p>
	<p>The <b>PARAXCOMP DISPLAY</b> function is active.</p>
	<p>The <b>PARAXCOMP MOVE</b> function is active.</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p>
	<p>The <b>PARAXMODE</b> function is active.</p> <p>This icon might be superimposed on the icons for <b>PARAXCOMP DISPLAY</b> and <b>PARAXCOMP MOVE</b>.</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p>
<b>TCPM</b>	<p>The function <b>M128</b> or <b>FUNCTION TCPM</b> is active (#9 / #4-01-1).</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p>
	<p>Turning mode <b>FUNCTION MODE TURN</b> is active (#50 / #4-03-1).</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p>
	<p>Dressing mode is active (#156 / #4-04-1).</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p>
	<p>The Dynamic Collision Monitoring function (DCM) is active (#40 / #5-03-1).</p>
	<p>The Dynamic Collision Monitoring function (DCM) is not active (#40 / #5-03-1).</p> <p><b>Further information:</b> "Dynamic Collision Monitoring (DCM) (#40 / #5-03-1)", Page 250</p>

Icon	Meaning
	<p>The Dynamic Collision Monitoring function (DCM) is active with a reduced minimum distance (#140 / #5-03-2).</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p>
AFC 	<p>The Adaptive Feed Control function (AFC) is active in teach-in cut mode (#45 / #2-31-1).</p>
AFC	<p>The Adaptive Feed Control function (AFC) is active in closed-loop mode (#45 / #2-31-1).</p> <p><b>Further information:</b> "Adaptive feed control (AFC) (#45 / #2-31-1)", Page 280</p>
ACC	<p>The Active Chatter Control function (ACC) is active (#145 / #2-30-1).</p> <p><b>Further information:</b> "Active Chatter Control (ACC) (#145 / #2-30-1)", Page 290</p>
	<p>The Global program settings function (GPS) function is active (#44 / #1-06-1).</p> <p><b>Further information:</b> "Global program settings (GPS) (#44 / #1-06-1)", Page 291</p>
	<p>The Process monitoring function is active (#168 / #5-01-1).</p> <p><b>Further information:</b> "Process monitoring (#168 / #5-01-1)", Page 304</p>



In the optional machine parameter **iconPrioList** (no. 100813), you can change the sequence in which the control displays these symbols. The symbol for Dynamic Collision Monitoring (DCM) (#40 / #5-03-1) is always visible and cannot be configured.

## Definition

### Auxiliary axes

Auxiliary axes are controlled by the PLC and are not included in the kinematics description. Auxiliary axes are driven, for example, hydraulically, electrically, or by an external motor. The machine manufacturer can define the tool magazine, for example, as an auxiliary axis.


## 5.3 Status overview on the TNC bar

### Application

On the TNC bar, the control shows a status overview with the execution status, the current technology values, and the axis positions.

### Description of function

#### General information

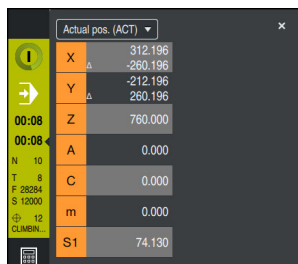

Status overview of the TNC bar with open position display

While an NC program or individual NC blocks are being executed, the control displays the following information in the status overview:

- **Control-in-operation:** current machining status

**Further information:** "Definition", Page 128

- Symbol of the application used for machining
- Remaining run time of the NC program
- Program run time

The control displays the run times of the NC program in mm:ss format. As soon as an NC program run time exceeds 59:59, the control changes the format to hh:mm.



The control displays the same value for the program run time as on the **PGM** tab of the **Status** workspace.

In the **Status** workspace the control shows the program run time in hh:mm:ss format.

**Further information:** "Display of the program run time", Page 147

- Active tool
- Active feed rate
- Current spindle speed
- Number and comment of the active workpiece preset
- Position display

### Position display

If you select the status overview area, the control opens or closes the position display with the current axis positions. The position display mode can be selected independently of the **Positions** workspace (e.g., **Actual pos. (ACT)**).

**Further information:** "The Positions workspace", Page 121

If you select an axis line, the control copies the current value of this line to the clipboard.

Press the **actual position capture** key to open the position display. The control prompts you to select the value to be copied to the clipboard. During programming, you can thus transfer the values directly into a programming dialog.

## Definition

### Control-in-operation:

The control uses the **Control-in-operation** symbol to show the machining status of the NC program or NC block:

- White: no movement command
- Green: active machining, axes are moving
- Orange: NC program interrupted
- Red: NC program stopped

**Further information:** "Interrupting, stopping or canceling program run", Page 417

When the control bar is expanded, the control shows additional information about the current status, such as **Active, feed rate at zero**.

## 5.4 The Status workspace

### Application

In the **Status** workspace the control shows the additional status display. The additional status display shows the current status of various functions on specific tabs. You can use the additional status display to better monitor the running of an NC program by receiving real-time information about active functions and accesses.

### Description of function






You can open the **Status** workspace in the following operating modes:

- **Manual**
- **Program Run**

**Further information:** "Overview of the operating modes", Page 89


### Icons

The following icons are shown in the **Status** workspace:

Icon	Meaning
	<b>Configure the layout</b> You can make the following layout adaptations: <ul style="list-style-type: none"> <li>■ Add or remove areas to the <b>Favorites</b> view</li> <li>■ Rearrange areas using the gripper</li> <li>■ Add or remove columns</li> </ul>
	<b>Settings</b> Some areas have their own settings. Use this icon to customize the contents of the area (e.g., by defining the variable range to be displayed).
	<b>Favorite</b> <b>Further information:</b> "The Favorites tab", Page 130
	<b>Add</b> The control only shows this icon when you are adapting the layout. With this icon you can add the following elements: <ul style="list-style-type: none"> <li>■ Column You can divide the workspace into several columns. <b>Further information:</b> "Adding a column in the workspace", Page 450</li> <li>■ Area In the <b>Favorites</b> view you can add another area.</li> </ul>
	<b>Remove</b> The control only shows this icon when you are adapting the layout. You can delete an empty column with this icon.

## The Favorites tab

On the **Favorites** tab, you can arrange your own status display with contents from the other tabs.

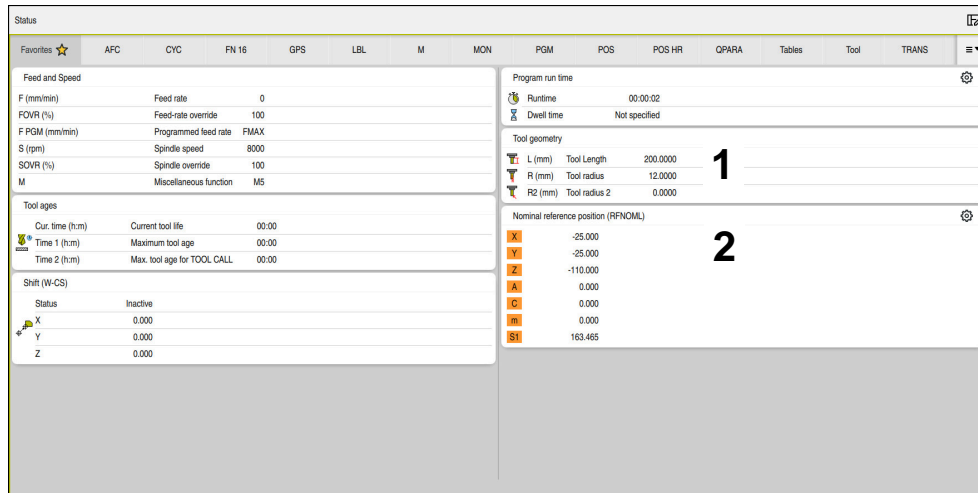

The **Favorites** tab


- 1 Area
- 2 Contents

Each area of the status display has its own **Favorites** icon. If you select the icon, the control adds that area to the **Favorites** tab.

The AFC tab (#45 / #2-31-1)

The control displays information on the Adaptive Feed Control function (AFC) (#45 / #2-31-1) on the **AFC** tab.

**Further information:** "Adaptive feed control (AFC) (#45 / #2-31-1)", Page 280

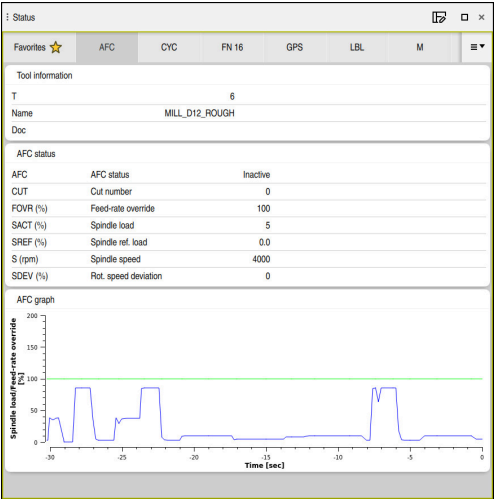

AFC tab

Area	Contents
Tool information	<ul style="list-style-type: none"><li>■ <b>T</b> Tool number</li><li>■ <b>Name</b> Tool name</li><li>■ <b>Doc</b> Comment about the tool from the tool management</li></ul>
AFC status	<ul style="list-style-type: none"><li>■ <b>AFC</b> If AFC is being used to control the feed rate, then <b>Control</b> is displayed in this area. If the control is not controlling the feed rate, then <b>Inactive</b> is displayed in this area.</li><li>■ <b>CUT</b> Counts the quantity of cuts that have been performed with <b>FUNCTION AFC CUT BEGIN</b>, starting from zero.</li><li>■ <b>FOVR (%)</b> Active factor of the feed-rate potentiometer in percent</li><li>■ <b>SACT (%)</b> Current spindle load in percent</li><li>■ <b>SREF (%)</b> Reference load of the spindle in percent Define the reference load of the spindle in the syntax element <b>LOAD</b> of the <b>FUNCTION AFC CUT BEGIN</b> function. <b>Further information:</b> "NC functions for AFC (#45 / #2-31-1)", Page 283</li><li>■ <b>S (rpm)</b> Spindle shaft speed in rpm</li><li>■ <b>SDEV (%)</b> Current deviation of the speed in percent</li></ul>

Area	Contents
<b>AFC graph</b>	<p>The <b>AFC graph</b> visualizes the relationship between the elapsed <b>Time [sec]</b> and the <b>Spindle load/Feed-rate override [%]</b>.</p> <p>The green line in the graph shows the feed-rate override and the blue line shows the spindle load.</p>

## CYC tab

On the **CYC** tab the control shows information about machining cycles.

Area	Contents
<b>Active cycle definition</b>	When you use the <b>CYCL DEF</b> function to define a cycle, the control shows the cycle number in this area.
<b>Cycle 32 TOLERANCE</b>	<ul style="list-style-type: none"> <li>■ <b>Status</b> Shows whether Cycle <b>32 TOLERANCE</b> is active or inactive</li> <li>■ Values of Cycle <b>32 TOLERANCE</b></li> <li>■ Values from the machine manufacturer for path and angle tolerance, such as predefined machine-specific roughing or finishing filters</li> <li>■ Values of Cycle <b>32</b> limited by Dynamic Collision Monitoring (DCM) <b>TOLERANCE</b> (#40 / #5-03-1)</li> </ul>



The machine manufacturer defines the tolerance limits using Dynamic Collision Monitoring (DCM) (#40 / #5-03-1).

In the optional machine parameter **maxLinearTolerance** (no. 205305) the machine manufacturer defines the maximum permissible linear tolerance. In the optional machine parameter **maxAngleTolerance** (no. 205303) the machine manufacturer defines the maximum permissible angle tolerance. If DCM is active, the control restricts the tolerance defined in **32 TOLERANCE** to these values.

If the tolerance is restricted by DCM, the control displays a gray warning triangle as well as the restricted values.

## The FN 16 tab

On the **FN 16** tab, the control displays the contents of a file output to the screen with **FN 16: F-PRINT**.

**Further information:** User's Manual for Programming and Testing

Area	Contents
<b>Output</b>	<p>Contents of an output file that was output with <b>FN 16: F-PRINT</b>, such as measured values or texts.</p> <p>To stop the output:</p> <ul style="list-style-type: none"> <li>■ Defining the <b>SCLR</b>: output path (Screen Clear)</li> <li>■ Select the <b>Clear</b> button</li> <li>■ Select the <b>Reset program</b> button</li> <li>■ Select a new NC program</li> </ul>



## The GPS tab (#44 / #1-06-1)

The control displays information on the Global Program Settings (GPS) (#44 / #1-06-1) on the **GPS** tab.

**Further information:** "Global program settings (GPS) (#44 / #1-06-1)", Page 291

Area	Contents
<b>Additive offset (M-CS)</b>	<ul style="list-style-type: none"> <li>■ <b>Status</b> The <b>Status</b> shows whether a function is active or inactive. A function can be active even if its values are zero.</li> <li>■ <b>A (°)</b> <b>Additive offset (M-CS)</b> in the A axis The <b>Additive offset (M-CS)</b> function is also available for the other rotary axes <b>B (°)</b> and <b>C (°)</b>.</li> </ul>
<b>Additive basic rotat. (W-CS)</b>	<ul style="list-style-type: none"> <li>■ <b>Status</b></li> <li>■ <b>(°)</b> The <b>Additive basic rotat. (W-CS)</b> function is active in the workpiece coordinate system <b>W-CS</b>. Entries are in degrees. <b>Further information:</b> "Workpiece coordinate system W-CS", Page 229</li> </ul>
<b>Shift (W-CS)</b>	<ul style="list-style-type: none"> <li>■ <b>Status</b></li> <li>■ <b>X</b> <b>Shift (W-CS)</b> in the X axis The <b>Shift (W-CS)</b> function is also available for the other linear axes <b>Y</b> and <b>Z</b>.</li> </ul>
<b>Mirroring (W-CS)</b>	<ul style="list-style-type: none"> <li>■ <b>Status</b></li> <li>■ <b>X</b> <b>Mirroring (W-CS)</b> in the X axis The <b>Mirroring (W-CS)</b> function is also available for the other linear axes <b>Y</b> and <b>Z</b>, as well as for the rotary axes available in the respective machine kinematics.</li> </ul>
<b>Rotation (WPL-CS)</b>	<ul style="list-style-type: none"> <li>■ <b>Status</b></li> <li>■ <b>(°)</b> <b>Rotation (WPL-CS)</b> in degrees The <b>Rotation (WPL-CS)</b> function is active in the working plane coordinate system <b>WPL-CS</b>. Entries are in degrees. <b>Further information:</b> "Working plane coordinate system WPL-CS", Page 231</li> </ul>
<b>Shift (mW-CS)</b>	<ul style="list-style-type: none"> <li>■ <b>Status</b></li> <li>■ <b>X</b> <b>Shift (mW-CS)</b> in the X axis The <b>Shift (mW-CS)</b> function is also available for the other linear axes <b>Y</b> and <b>Z</b>, as well as for the rotary axes available in the respective machine kinematics.</li> </ul>
<b>Handwheel superimp.</b>	<ul style="list-style-type: none"> <li>■ <b>Status</b></li> <li>■ <b>Coordinate system</b> This area contains the selected coordinate system for <b>Handwheel superimp.</b>, such as the machine coordinate system <b>M-CS</b>.</li> <li>■ <b>X</b></li> </ul>

Area	Contents
	<ul style="list-style-type: none"> <li>■ Y</li> <li>■ Z</li> <li>■ A (°)</li> <li>■ B (°)</li> <li>■ C (°)</li> <li>■ VT</li> </ul>
<b>Feed rate factor</b>	<p>If the <b>Feed rate factor</b> function is active, the control displays the defined percentage in this field.</p> <p>If the <b>Feed rate factor</b> function is not active, the control displays <b>100.00 %.</b> in this field.</p>

### LBL tab

On the **LBL** tab the control shows information about program section repeats and subprograms.


**Further information:** User's Manual for Programming and Testing

Area	Contents
<b>Subprogram calls</b>	<ul style="list-style-type: none"> <li>■ <b>Blk. no.</b> Block number of the call</li> <li>■ <b>LBL no./Name</b> Called label</li> </ul>
<b>Repetitions</b>	<ul style="list-style-type: none"> <li>■ <b>Blk. no.</b></li> <li>■ <b>LBL no./Name</b></li> <li>■ <b>Program-section repeat</b> Number of repetitions still to be performed (e.g., 4/5)</li> </ul>

### M tab

On the **M** tab the control shows information about active miscellaneous functions.


**Further information:** User's Manual for Programming and Testing

Area	Contents
<b>Active M functions</b>	<ul style="list-style-type: none"> <li>■ <b>Function</b> Active miscellaneous functions, such as <b>M3</b></li> <li>■ <b>Description</b> Descriptive text about the respective miscellaneous function.</li> </ul> <div style="border: 1px solid black; padding: 10px; margin-top: 10px;">  Refer to your machine manual. Only the machine manufacturer can create a descriptive text for machine-specific miscellaneous functions.         </div>

The MON tab (#155 / #5-02-1)


On the **MON** tab, the control displays information on monitoring of defined machine components using the Component monitoring function (#155 / #5-02-1).

**Further information:** User's Manual for Programming and Testing



Refer to your machine manual.

The machine manufacturer specifies which machine components are monitored, and to what extent.

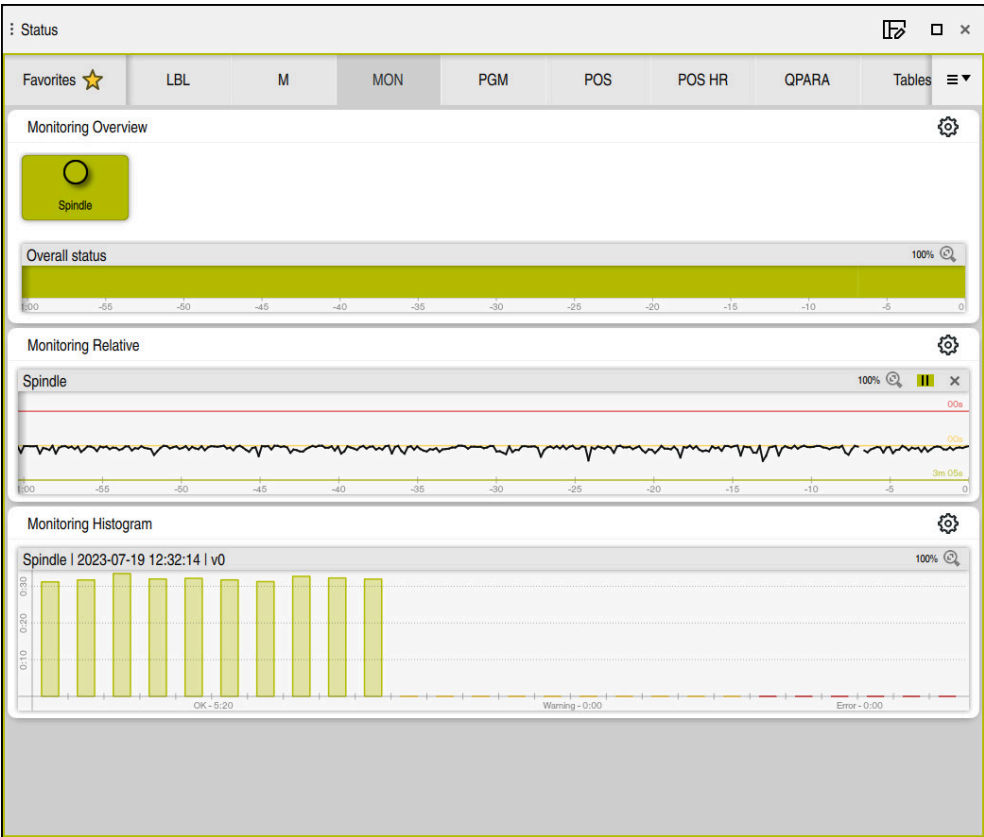

The **MON** tab with configured spindle speed monitoring

Area	Contents
Monitoring Overview	<p>The control displays the machine components defined for monitoring. By selecting a component, you hide or show whether it is being monitored.</p> <p>If a component cannot be monitored, the control displays a gray icon. A component cannot be monitored, for example, if its configuration is missing or is wrong.</p>
Monitoring Relative	<p>The control displays the monitoring information for the components being shown in the <b>Monitoring Overview</b> area.</p> <ul style="list-style-type: none"><li>■ Green: component works under conditions defined as safe</li><li>■ Yellow: component works under warning zone conditions</li><li>■ Red: component is overloaded</li></ul> <p>In the <b>Display settings</b> window, you can select which component will be shown by the control.</p>
Monitoring Histogram	<p>The control shows a graphical evaluation of previous monitoring sessions.</p>

Use the **Settings** symbol to open the **Display settings** window. You can define the height of the graphical representation for each area.


## PGM tab

On the **PGM** tab the control shows information about the program run.

Area	Contents
Parts counter	<ul style="list-style-type: none"> <li>■ <b>Quantity</b> Actual value and nominal value of the parts counter defined with the <b>FUNCTION COUNT</b> function <b>Further information:</b> User's Manual for Programming and Testing</li> </ul>
Program run time	<ul style="list-style-type: none"> <li>■ <b>Runtime</b> Run time of the NC program in hh:mm:ss format</li> <li>■ <b>Dwell time</b> Countdown of the waiting time in seconds from the following functions: <ul style="list-style-type: none"> <li>■ <b>FUNCTION DWELL</b></li> <li>■ Cycle <b>9 DWELL TIME</b></li> <li>■ Parameter <b>Q210 DWELL TIME AT TOP</b></li> <li>■ Parameter <b>Q211 DWELL TIME AT DEPTH</b></li> <li>■ Parameter <b>Q255 DWELL TIME</b></li> </ul> <b>Further information:</b> "Display of the program run time", Page 147 </li> </ul>
Programs called	Path of the main program as well as called NC programs including the path
Pole/circle center	Programmed axes and values of the circle center point <b>CC</b>
Radius compensation	Programmed tool radius compensation
Program run options	Active breakpoints in connection with the override controller <b>Further information:</b> "Override Controller", Page 521

## POS tab


On the **POS** tab the control shows information about positions and coordinates.

Area	Contents
Position display, for example <b>Actual reference position (RFACTL)</b>	<p>In this area the control shows the current position of all axes that are present.</p> <p>You can choose between the following views in the position display:</p> <ul style="list-style-type: none"> <li>■ <b>Nominal pos. (NOML)</b></li> <li>■ <b>Actual pos. (ACT)</b></li> <li>■ <b>Nominal reference position (RFNOML)</b></li> <li>■ <b>Actual reference position (RFACTL)</b></li> <li>■ <b>Servo lag (LAG)</b></li> <li>■ <b>Handwheel superimposed (M118)</b></li> </ul> <p><b>Further information:</b> "Position displays", Page 148</p>
<b>Feed and Speed</b>	<ul style="list-style-type: none"> <li>■ Active <b>Feed</b> in mm/min If a feed rate limit is active, the control displays the line in orange. If the feed rate is limited using the <b>F LIMIT</b> button, the control displays <b>LIMIT</b> in square brackets. <b>Further information:</b> "Feed rate limit F LIMIT", Page 416 If the feed rate is limited using the <b>F limited</b> button, the control displays the active safety function in square brackets. <b>Further information:</b> "Safety functions", Page 535</li> <li>■ Active <b>Feed-rate override</b> in %</li> <li>■ Active <b>Rapid-traverse override</b> in %</li> <li>■ Active <b>Programmed feed rate</b> in mm/min If <b>M136</b> is active: active feed rate in mm/rev <b>Further information:</b> User's Manual for Programming and Testing</li> <li>■ Active <b>Spindle speed</b> in rpm</li> <li>■ Active <b>Spindle override</b> in %</li> <li>■ Active <b>Miscellaneous function</b> in reference to the spindle, such as <b>M3</b></li> </ul> <div style="border: 1px solid black; padding: 10px; margin-top: 10px;">  Refer to your machine manual. In turning mode, miscellaneous functions for the turning spindle must be programmed using different numbers (e.g., <b>M303</b> instead of <b>M3</b> (#50 / #4-03-1)). The machine manufacturer defines the numbers to be used. Using the optional machine parameter <b>CfgSpindleDisplay</b> (no. 139700), the machine manufacturer defines the miscellaneous function numbers to be displayed in the status display.         </div>

Area	Contents
<b>Orientation of the working plane</b>	<p>Spatial angles or axis angles for the active working plane</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p> <p>If axis angles are active, the control displays in this area only the values of the physically present axes.</p> <p>Defined values in the <b>3-D rotation</b> window</p> <p><b>Further information:</b> "The 3D ROT selection item", Page 248</p>
<b>OEM transformation</b>	<p>The machine manufacturer can define an OEM transformation for special turning kinematics.</p> <p><b>Further information:</b> "Definitions", Page 145</p>
<b>Basic transformations</b>	<p>In this area the control shows the values of the active workpiece preset and active transformations in linear and rotary axes, such as a transformation in the X axis with the function <b>TRANS DATUM</b>.</p> <p><b>Further information:</b> "Preset management", Page 238</p>
<b>Special turning transformations</b>	<p>Transformations relevant for turning operations (#50 / #4-03-1), such as the defined <b>precession angle</b> from the following sources:</p> <ul style="list-style-type: none"> <li>■ Defined by the machine manufacturer</li> <li>■ Cycle <b>800 ADJUST XZ SYSTEM</b></li> <li>■ Cycle <b>801 RESET ROTARY COORDINATE SYSTEM</b></li> <li>■ Cycle <b>880 GEAR HOBGING</b></li> </ul>
<b>Active traverse ranges</b>	<p>Active traverse range, such as Limit 1 for traverse range 1</p> <p>Traverse ranges are machine-specific. If no traverse range is active, then <b>Traverse range not defined</b> is displayed in this area.</p>
<b>Active kinemat.</b>	Name of the active machine kinematics

## POS HR tab

On the **POS HR** tab the control shows information about handwheel superimpositioning.

Area	Contents
Coordinate system	<ul style="list-style-type: none"> <li>■ <b>Machine (M-CS)</b> If you use <b>M118</b>, handwheel superimpositioning is always effective in the machine coordinate system <b>M-CS</b>. <b>Further information:</b> User's Manual for Programming and Testing</li> </ul> <div style="border: 1px solid black; padding: 10px; margin-top: 10px;"> <p> With the Global Program Settings (GPS) (#44 / #1-06-1), the coordinate system can be selected. <b>Further information:</b> "Global program settings (GPS) (#44 / #1-06-1)", Page 291</p> </div>
Handwheel superimp.	<ul style="list-style-type: none"> <li>■ <b>Max. val.</b> Maximum value of the individual axes, programmed in <b>M118</b> or in the <b>GPS</b> workspace (#44 / #1-06-1)</li> <li>■ <b>Actl.val.</b> Current superimpositioning</li> </ul>

## QPARA tab

On the **QPARA** tab the control shows information about the defined variables.

**Further information:** User's Manual for Programming and Testing

You can use the **Parameter list** window to define which variables the control shows in the individual areas. Up to 22 variables can be displayed in each area.

**Further information:** "Defining the contents of the QPARA tab", Page 151

Area	Contents
Q parameter	Shows the values of the selected Q parameters
QL parameter	Shows the values of the selected QL parameters
QR parameter	Shows the values of the selected QR parameters
QS parameter	Shows the contents of the selected QS parameters

## The Tables tab

On the **Tables** tab, the control shows information about the active tables for program run or the simulation.

Area	Contents
<b>Active tables</b>	<p>In this area the control shows the path for the following active tables:</p> <ul style="list-style-type: none"> <li>■ Tool table</li> <li>■ Turning-tool table (#50 / #4-03-1)</li> <li>■ Preset table</li> <li>■ Datum table</li> <li>■ Pocket table</li> <li>■ Touch-probe table</li> <li>■ Grinding tool table (#156 / #4-04-1)</li> <li>■ Dressing tool table (#156 / #4-04-1)</li> </ul>

## TRANS tab

On the **TRANS** tab the control shows information about active transformations in the NC program.

Area	Contents
<b>Active datum</b>	<ul style="list-style-type: none"> <li>■ Path of the selected datum table</li> <li>■ Row number of the selected datum table</li> <li>■ <b>DOC</b> Contents of the <b>DOC</b> column of the datum table</li> </ul>
<b>Active datum shift</b>	<p>Datum shift that was defined with the <b>TRANS DATUM</b> function  <b>Further information:</b> User's Manual for Programming and Testing</p>
<b>Mirrored axes</b>	<p>Axes mirrored with either the <b>TRANS MIRROR</b> function or Cycle <b>8 MIRRORING</b>  <b>Further information:</b> User's Manual for Programming and Testing  <b>Further information:</b> User's Manual for Machining Cycles</p>
<b>Active angle of rotation</b>	<p>Rotation angle defined with either the <b>TRANS ROTATION</b> function or Cycle <b>10 ROTATION</b>  <b>Further information:</b> User's Manual for Programming and Testing  <b>Further information:</b> User's Manual for Machining Cycles</p>
<b>Orientation of the working plane</b>	<p>Spatial angles or axis angles for the active working plane  <b>Further information:</b> User's Manual for Programming and Testing</p>
<b>Center of scaling</b>	<p>Center of scaling that was defined with Cycle <b>26 AXIS-SPECIFIC SCALING</b>  <b>Further information:</b> User's Manual for Machining Cycles</p>




Area	Contents
<b>Active scaling factors</b>	<p>Scaling factors that were defined for the individual linear axes with the <b>TRANS SCALE</b> function, Cycle <b>11 SCALING FACTOR</b> or Cycle <b>26 AXIS-SPECIFIC SCALING</b></p> <p><b>Further information:</b> User's Manual for Programming and Testing</p> <p><b>Further information:</b> User's Manual for Machining Cycles</p>
<b>Shift (WPL-CS)</b>	<p>Active shift in the working plane coordinate system <b>WPL-CS</b> using the following function:</p> <ul style="list-style-type: none"> <li>■ <b>FUNCTION CORRDATA</b></li> <li>■ <b>FUNCTION TURNDATA CORR</b> (#50 / #4-03-1)</li> </ul> <p><b>Further information:</b> User's Manual for Programming and Testing</p>
<b>Table</b>	<ul style="list-style-type: none"> <li>■ Path of the selected compensation table <b>*.wco</b></li> <li>■ Row number of the selected compensation table <b>*.wco</b></li> <li>■ Content of the <b>DOC</b> column of the active row</li> </ul> <p><b>Further information:</b> User's Manual for Programming and Testing</p>

## TT tab

On the **TT** tab the control shows information about measurements performed with a TT tool touch probe.

**Further information:** "Hardware enhancements", Page 86

Area	Contents
<b>TT: tool measurement</b>	<ul style="list-style-type: none"> <li>■ <b>T</b> Tool number</li> <li>■ <b>Name</b> Tool name</li> <li>■ <b>Measuring method</b> Selected measurement method for tool measurement (e.g., <b>Length</b>)</li> <li>■ <b>Min (mm)</b> When measuring milling cutters, in this area the control shows the smallest measured value of a cutting edge. When measuring turning tools (#50 / #4-03-1), the control shows the smallest measured tilt angle in this area. The value of the angle can be negative. <b>Further information:</b> "Definitions", Page 145</li> <li>■ <b>Max (mm)</b> When measuring milling cutters, in this area the control shows the greatest measured value of a cutting edge. When measuring turning tools, in this area the control shows the greatest measured tipping angle. The value of the angle can also be negative.</li> <li>■ <b>DYN Rotation (mm)</b> When measuring milling cutters with a rotating spindle, the control shows values in this area. When measuring turning tools, the value <b>DYN ROTATION</b> describes the tolerance for the tipping angle. If the tolerance for the tipping angle is exceeded during calibration, the control marks the affected value in the <b>MIN</b> or <b>MAX</b> fields with an *.</li> </ul> <div style="border: 1px solid black; padding: 10px; margin-top: 10px;"> <p> In the optional machine parameter <b>tippingTolerance</b> (no. 114206) you define the tipping angle tolerance. The control will determine the tipping angle automatically only if a tolerance is defined.</p> </div>
<b>TT: measurement of individual teeth</b>	<p><b>Number</b></p> <p>List of the measurements performed and the measured values of the individual cutting edges</p>

## The Tool tab

On the **Tool** tab, the control shows information about the active tool, depending on the tool type.

**Further information:** "Tool types", Page 188

### Contents for dressing, milling, and grinding tools (#156 / #4-04-1)

Area	Contents
Tool information	<ul style="list-style-type: none"> <li>■ <b>T</b> Tool number</li> <li>■ <b>Name</b> Tool name</li> <li>■ <b>Doc</b> Note on the tool</li> </ul>
Tool geometry	<ul style="list-style-type: none"> <li>■ <b>L</b> Tool length</li> <li>■ <b>R</b> Tool radius</li> <li>■ <b>R2</b> Corner radius of the tool</li> </ul>
Tool allowances	<ul style="list-style-type: none"> <li>■ <b>DL</b> Delta value for the tool length</li> <li>■ <b>DR</b> Delta value for the tool radius</li> <li>■ <b>DR2</b> Delta value for the corner radius of the tool</li> </ul> <p>With <b>Program</b>, the control displays the values from a tool call with <b>TOOL CALL</b> or from a tool compensation with a compensation table <b>*.tcs</b>.</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p> <p>With <b>Table</b>, the control displays the values from the tool management.</p> <p><b>Further information:</b> "Tool management ", Page 205</p>
Tool ages	<ul style="list-style-type: none"> <li>■ <b>Cur. time (h:m)</b> Time in hours and minutes the tool has been engaged</li> <li>■ <b>Time 1 (h:m)</b> Service life of the tool</li> <li>■ <b>Time 2 (h:m)</b> Maximum service life at tool call</li> </ul>
Replacement tool	<ul style="list-style-type: none"> <li>■ <b>RT</b> Tool number of the replacement tool</li> <li>■ <b>Name</b> Tool name of the replacement tool</li> </ul>
Tool type	<ul style="list-style-type: none"> <li>■ <b>Tool Axis</b> Tool axis programmed in the tool call (e.g., <b>Z</b>)</li> <li>■ <b>Type</b> Tool type of the active tool (e.g., <b>DRILL</b>)</li> </ul>

### Deviating contents for turning tools (#50 / #4-03-1)

Area	Contents
Tool geometry	<ul style="list-style-type: none"> <li>■ <b>ZL (mm)</b> Tool length in Z direction</li> <li>■ <b>XL (mm)</b> Tool length in X direction</li> <li>■ <b>RS (mm)</b> Cutter radius</li> <li>■ <b>YL (mm)</b> Tool length in Y direction</li> </ul>
Tool allowances	<ul style="list-style-type: none"> <li>■ <b>DZL (mm)</b> Delta value in Z direction</li> <li>■ <b>DXL (mm)</b> Delta value in X direction</li> <li>■ <b>DRS (mm)</b> Delta value for the cutter radius</li> <li>■ <b>DCW (mm)</b> Delta value for the width of the recessing tool</li> <li>■ <b>WPL-DX-DIAM (mm)</b> Delta value for the workpiece diameter with respect to the working plane coordinate system <b>WPL-CS</b> Only if the <b>WPL-DX-DIAM</b> column has been defined in the turning-tool table <b>Further information:</b> "Working plane coordinate system WPL-CS", Page 231</li> <li>■ <b>WPL-DZL (mm)</b> Delta value for the workpiece length with respect to the working plane coordinate system <b>WPL-CS</b> Only if the <b>WPL-DZL</b> column has been defined in the turning-tool table <b>Further information:</b> "Working plane coordinate system WPL-CS", Page 231</li> </ul>
Tool type	<ul style="list-style-type: none"> <li>■ <b>Tool Axis</b></li> <li>■ <b>TO</b> Tool orientation</li> <li>■ <b>Type</b> Tool type (e.g., <b>TURN</b>)</li> </ul>

## Definitions

### **OEM transformations for special turning kinematics**

Machine manufacturers can define OEM transformations for special turning kinematics. Machine manufacturers need these transformations for milling-turning machines that have a different orientation than the tool coordinate system in the home position of their axes. An OEM transformation takes effect before the precession angle.

### **Tipping angle**

If a TT tool touch probe with a cuboid contact cannot be clamped to a machine table so that it is level, the angular offset must be compensated for. This offset is the tipping angle.

### **Angle of misalignment**

In order to exactly measure with TT tool touch probes with a cuboid contact, the misalignment on the machine table relative to the main axis must be compensated for. This offset is the angle of misalignment.

## 5.5 The Simulation status workspace

### Application

You can call additional status displays in the **Editor** operating mode in the **Simulation status** workspace. In the **Simulation status** workspace, the control shows data based on the simulation of the NC program.

### Description of function

The following tabs are available in the **Simulation status** workspace:

- **Favorites**  
**Further information:** "The Favorites tab", Page 130
- **CYC**  
**Further information:** "CYC tab", Page 132
- **FN 16**  
**Further information:** "The FN 16 tab", Page 132
- **LBL**  
**Further information:** "LBL tab", Page 134
- **M**  
**Further information:** "M tab", Page 134
- **PGM**  
**Further information:** "PGM tab", Page 136
- **POS**  
**Further information:** "POS tab", Page 137
- **QPARA**  
**Further information:** "QPARA tab", Page 139
- **Tables**  
**Further information:** "The Tables tab", Page 140
- **TRANS**  
**Further information:** "TRANS tab", Page 140
- **TT**  
**Further information:** "TT tab", Page 142
- **Tool**  
**Further information:** "The Tool tab", Page 143

## 5.6 Display of the program run time

### Application

The control calculates the duration of all traverse movements and displays them together as the **Program run time**. The control takes traversing movements and dwell times into account.

In addition, the control calculates the remaining run time of the NC program.

### Description of function

The control displays the program run time in the following areas:

- **PGM** tab of the **Status** workspace
- Status overview on the control bar
- **PGM** tab of the **Simulation status** workspace
- The **Simulation** workspace in the **Editor** operating mode

Use the **Settings** button in the **Program run time** area to influence the calculated program run time.

**Further information:** "PGM tab", Page 136

The control opens a selection menu with the following functions:

Function	Meaning
<b>Save</b>	Save the current value under <b>Runtime</b>
<b>Addition</b>	Add the saved time to the value under <b>Runtime</b>
<b>Resetting</b>	Reset the saved time and the contents of the <b>Program run time</b> area to zero

The control counts the time during which the **Control-in-operation** symbol is green. The control adds the time from the **Program Run** operating mode and the **MDI** application.

The following functions reset the program run time:

- Selecting a new NC program for program run
- The **Reset program** button
- The **Resetting** function in the **Program run time** area

### Remaining run time of the NC program

If a tool usage file is available, the control calculates for the **Program Run** operating mode the duration of executing the active NC program. During program run, the control updates the remaining run time.

**Further information:** "Tool usage test", Page 215

The control shows the remaining run time in the status overview on the TNC bar.

The control does not take the feed-rate potentiometer setting into account, but calculates with a feed rate of 100%.

The following functions reset the remaining run time:

- Selecting a new NC program for program run
- **Internal stop** button
- Generate new tool usage file

## Notes

- In the machine parameter **operatingTimeReset** (no. 200801) the machine manufacturer defines whether the control resets the program run time when the program is started.
- The control cannot simulate the run time of machine-specific functions such as tool changing. That is why this function is only partially suitable for calculating the production time in the **Simulation** workspace.
- In the **Program Run** operating mode, the control displays the exact time of the NC program while taking all machine-specific actions into account.

## Definition

### Control-in-operation:

The control uses the **Control-in-operation** symbol to show the machining status of the NC program or NC block:

- White: no movement command
- Green: active machining, axes are moving
- Orange: NC program interrupted
- Red: NC program stopped

**Further information:** "Interrupting, stopping or canceling program run", Page 417

When the control bar is expanded, the control shows additional information about the current status, such as **Active, feed rate at zero**.

## 5.7 Position displays

### Application

The control offers various modes in the position display, for example values from different reference systems. You can choose one of the modes available based on the application.

### Description of function




The control has position displays in the following areas:

- The **Positions** workspace
- Status overview on the control bar
- The **POS** tab of the **Status** workspace
- The **POS** tab of the **Simulation status** workspace

On the **POS** tab of the **Simulation status** workspace the control always shows the **Nominal pos. (NOML)** mode. In the **Status** and **Positions** workspaces you can choose the mode of the position display.

The control offers the following modes for the position display:



Mode	Meaning
<b>Nominal pos. (NOML)</b>	<p>This mode shows the value of the currently calculated target position in the input coordinate system <b>I-CS</b>.</p> <p>When the machine moves the axes, the control compares the coordinates of the measured actual position with the calculated nominal position in predefined time intervals. The nominal position is the position at which the axes should be located at the time of comparison, based on the calculation.</p> <div>  The <b>Nominal pos. (NOML)</b> and <b>Actual pos. (ACT)</b> modes differ solely with regard to the servo lag. </div>
<b>Actual pos. (ACT)</b>	<p>This mode shows the currently measured tool position in the input coordinate system <b>I-CS</b>.</p> <p>The actual position is the measured position of the axes, as determined by encoders at the time of comparison.</p>
<b>Nominal reference position (RFNOML)</b>	<p>This mode shows the calculated target position in the machine coordinate system <b>M-CS</b>.</p> <div>  The <b>Nominal reference position (RFNOML)</b> and <b>Actual reference position (RFACTL)</b> modes differ solely with regard to the servo lag. </div>
<b>Actual reference position (RFACTL)</b>	<p>This mode shows the currently measured tool position in the machine coordinate system <b>M-CS</b>.</p>
<b>Servo lag (LAG)</b>	<p>This mode shows the difference between the calculated nominal position and the measured actual position. The control determines the difference in predefined time intervals.</p>
<b>Handwheel superimposed (M118)</b>	<p>This mode shows the values that you move using the <b>M118</b> miscellaneous function.</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p>
<div>  Refer to your machine manual.  In the machine parameter <b>progToolCallDL</b> (no. 124501), the machine manufacturer defines whether the position display takes the delta value <b>DL</b> from the tool call into account. The modes <b>NOML.</b> and <b>ACTL.</b> as well as <b>RFNOML</b> and <b>RFACTL</b> then differ from each other by the value <b>DL</b>. </div>	

### 5.7.1 Switching the position display mode

To switch the position display mode in the **Status** workspace:

- ▶ Select the **POS** tab



- ▶ Select **Settings** in the position display area
- ▶ Select the desired mode for the position display (e.g., **Actual pos. (ACT)**)
- The control displays the positions in the selected mode.

#### Notes

- The machine parameter **CfgPosDisplayPace** (no. 101000) defines the display accuracy by the number of decimal places.
- When the machine moves the axes, the control displays the distances-to-go of the individual axes with a symbol and the appropriate value next to the current position.


**Further information:** "Axis display and position display", Page 122

## 5.8 Defining the contents of the QPARA tab

On the **QPARA** tab of the **Status** and **Simulation status** workspaces, you can define which variables the control will show.

**Further information:** "QPARA tab", Page 139

To define the contents of the **QPARA** tab:

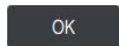

- ▶ Select the **QPARA** tab
- ▶ Select the **Settings** in the desired area, such as QL parameters
- > The control opens the **Parameter list** window.
- ▶ Enter numbers, such as **1,3,200-208**
- ▶ Press **OK**
- > The control displays the values of the defined variables.



- Use commas to separate single variables and connect sequential variables with a hyphen.
- The control always shows eight decimal places on the **QPARA** tab. For example, the control shows the result of **Q1 = COS 89.999** as 0.00001745. Very large and very small values are shown in exponential notation. The control shows the result of **Q1 = COS 89.999 \* 0.001** as +1.74532925e-08, with e-08 corresponding to the factor of  $10^{-8}$ .
- For variable texts in QS parameters the control shows the first 30 characters, i.e. the contents might be truncated.



# 6

**Powering On and  
Off**

## 6.1 Powering on

### Application

After using the main switch to power on the machine, the control's boot process begins. The following steps may differ depending on the machine; for example, whether absolute or incremental position encoders are used.



Refer to your machine manual.

Switching on the machine and traversing the reference points can vary depending on the machine tool.

### Related topics

- Absolute and incremental position encoders

**Further information:** "Position encoders and reference marks", Page 171

### Description of function

#### DANGER

##### Caution: hazard to the user!

Machines and machine components always pose mechanical hazards. Electric, magnetic, or electromagnetic fields are particularly hazardous for persons with cardiac pacemakers or implants. The hazard starts when the machine is powered up!

- ▶ Read and follow the machine manual
- ▶ Read and follow the safety precautions and safety symbols
- ▶ Use the safety devices

Power-on of the control begins with the power supply.

After booting, the controls checks the machine status, e.g.:

- Positions identical to before switching off the machine
- Safety features are ready, such as the emergency stop
- Functional safety

If the control registers an error during or after booting, it issues an error message.

The following step differs depending on position encoders on the machine:

- Absolute position encoders

If the machine has absolute position encoders, the control opens the **Start/Login** application after power-on.

- Incremental position encoders

If the machine has incremental position encoders, you must traverse the reference points in the **Move to ref. point** application. Once all axes have been referenced, the control is in the **Manual operation** application.


**Further information:** "The Referencing workspace", Page 157

**Further information:** "The Manual operation application", Page 162

### 6.1.1 Powering the machine and the control on

To switch the machine on:

- ▶ Switch the power supply of the control and of the machine on
- > The control is in start-up mode and shows the progress in the **Start/Login** workspace.
- > The control shows the **Power interrupted** dialog in the **Start/Login** workspace.

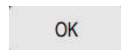

- ▶ Press **OK**
- > The control compiles the PLC program.
- ▶ Switch the machine control voltage on
- > The control checks the functioning of the emergency stop circuit.
- > If the machine is equipped with absolute linear and angle encoders, the control is now ready for operation.
- > If the machine is equipped with incremental linear and angle encoders, the control opens the **Move to ref. point** application.

**Further information:** "The Referencing workspace",  
Page 157



- ▶ Press the **NC Start** key
- > The control moves to all necessary reference points.
- > The control is ready for operation and the **Manual operation** application is open.

**Further information:** "The Manual operation application",  
Page 162



If startup is delayed by functional safety, the control displays the text **Functional safety requires input**. When you select the **FS** button, the control switches to the **Functional safety** application.

**Further information:** "The Functional safety application", Page 536

## Notes

### **NOTICE**

#### **Danger of collision!**

When the machine is switched on, the control tries to restore the switch-off status of the tilted plane. This is prevented under certain conditions. For example, this applies if axis angles are used for tilting while the machine is configured with spatial angles, or if you have changed the kinematics.

- ▶ If possible, reset tilting before shutting the system down
- ▶ Check the tilted condition when switching the machine back on

### **NOTICE**

#### **Danger of collision!**

Failure to notice deviations between the actual axis positions and those expected by the control (saved at shutdown) can lead to undesirable and unexpected axis movements. There is risk of collision during the reference run of further axes and all subsequent movements!

- ▶ Check the axis positions
- ▶ Only confirm the pop-up window with **YES** if the axis positions match
- ▶ Despite confirmation, at first only move the axis carefully
- ▶ If there are discrepancies or you have any doubts, contact your machine manufacturer




## 6.2 The Referencing workspace

### Application

On machines with incremental linear and angle encoders, the control shows in the **Referencing** workspace which axes need to be referenced.

### Description of function

The **Referencing** workspace is always open in the **Move to ref. point** application. If reference points are to be traversed when powering-on the machine, then the control opens this application automatically.

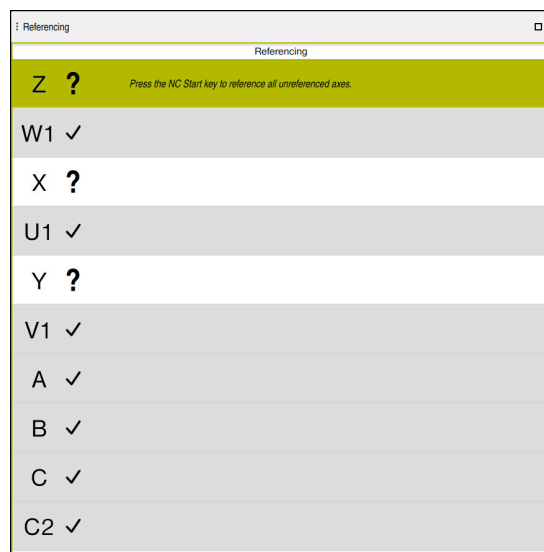

The **Referencing** workspace with axes to be referenced

The control displays a question mark behind all axes that need to be referenced.

Once all axes have been referenced, the control closes the **Move to ref. point** application and switches to the **Manual operation** application.

### 6.2.1 Axis reference run

To reference the axes in the prescribed sequence:



- ▶ Press the **NC start** key
- > The control moves to the reference points.
- > The control switches to the **Manual operation** application.

To reference the axes in any sequence:



- ▶ Press and hold the axis direction button for each axis until the reference point has been traversed
- > The control switches to the **Manual operation** application.

## Notes

### NOTICE

#### Danger of collision!

The control does not automatically check whether collisions can occur between the tool and the workpiece. Incorrect pre-positioning or insufficient spacing between components can lead to a risk of collision when referencing the axes.

- ▶ Pay attention to the information on the screen
- ▶ If necessary, move to a safe position before referencing the axes
- ▶ Watch out for possible collisions

- You cannot switch to the **Program Run** operating mode as long as reference points still need to be traversed.
- If you intend only to edit or simulate NC programs, you can switch to the **Editor** operating mode without referencing the axes. You can still traverse the reference points at a later time.

#### Notes about traversing reference points in a tilted working plane

If the **Tilt working plane** (#8 / #1-01-1) function was active before the control was shut down, then the control will automatically reactivate this function after the restart. This means that movements via the axis keys take place in the tilted working plane.

Before traversing the reference points, you must deactivate the **Tilt working plane** function; otherwise, the control will interrupt the process with a warning. You can also home axes that are not activated in the current kinematic model without needing to deactivate **Tilt working plane**, such as a tool magazine.

**Further information:** User's Manual for Programming and Testing

## 6.3 Powering off

### Application

To avoid losing data, shut down the control before powering-off the machine.

### Description of function

You can shut down the control in the **Start/Login** application of the **Home** operating mode.

If you select the **Shut down** button, the control opens the **Shut down** window. You choose whether to shut down the control or restart it.

If NC programs or contours contain any unsaved changes, the control displays the unsaved changes in the **Close file** window. You can save the changes, discard them, or cancel the shutdown.

### 6.3.1 Shutting down the control and powering-off the machine

To power-off the machine:



- ▶ Select the **Home** operating mode
- ▶ Select **Shut down**
  - > The control opens the **Shut down** window.
- ▶ Select **Shut down**
  - > If NC programs or contours contain any unsaved changes, the control displays the **Close file** window.
  - ▶ If necessary, save unsaved NC programs with **Save** or **Save as**
  - > The control shuts down.
  - > After completion of the shutdown process, the control displays the text **Now you can switch off.**
- ▶ Switch off the main power switch of the machine

#### Notes

#### NOTICE

##### Caution: Data may be lost!

The control must be shut down so that running processes can be concluded and data can be saved. Immediate switch-off of the control by turning off the main switch can lead to data loss regardless of the control's status!

- ▶ Always shut down the control
- ▶ Only operate the main switch after being prompted on the screen

- Different machines have different power-off procedures.  
Refer to your machine manual.
- Applications that are active on the control might delay the shutdown, such as a connection to **Remote Desktop Manager** (#133 / #3-01-1)

**Further information:** "The Remote Desktop Manager window (#133 / #3-01-1)", Page 583



# 7

## Manual Operation

## 7.1 The Manual operation application

### Application

In the **Manual operation** application you can manually move the axes and set up the machine.

### Related topics

- Moving the machine axes  
**Further information:** "Moving the machine axes", Page 163
- Incremental jog positioning of machine axes  
**Further information:** "Incremental jog positioning of axes", Page 165

### Description of function

The **Manual operation** application offers the following workspaces:

- Positions
- Simulation
- Status

The function bar in the **Manual operation** application contains the following buttons:

Button	Meaning
Handwheel	The control displays this toggle switch if a handwheel is configured for the control. If the handwheel is active, the operating mode's icon in the sidebar changes. <b>Further information:</b> "Electronic Handwheel", Page 507
M	Define a miscellaneous function <b>M</b> or use the selection menu to choose one and activate it with the <b>NC start</b> key. <b>Further information:</b> User's Manual for Programming and Testing The machine manufacturer uses the optional machine parameter <b>forbidManual</b> (no. 103917) to define which miscellaneous functions are allowed in the <b>Manual operation</b> application and are available in the selection menu.
S	Define the spindle speed <b>S</b> , activate it with the <b>NC start</b> key, and also switch on the spindle. <b>Further information:</b> User's Manual for Programming and Testing
F	Define the feed rate <b>F</b> and activate it with the <b>OK</b> button. <b>Further information:</b> User's Manual for Programming and Testing
T	Define a tool <b>T</b> or use the selection window to choose one and insert it with the <b>NC start</b> key. <b>Further information:</b> User's Manual for Programming and Testing
3D ROT	The control opens a window for the 3D rotation settings (#8 / #1-01-1). <b>Further information:</b> User's Manual for Programming and Testing
Q info	The control opens the <b>Q parameter list</b> window, where you can see and edit the current values and descriptions of the variables. <b>Further information:</b> User's Manual for Programming and Testing
DCM	The control opens the <b>Dyna. Coll. Monitoring (DCM)</b> window where you can activate or deactivate Dynamic Collision Monitoring (DCM (#40 / #5-03-1)). <b>Further information:</b> "Activating Dynamic Collision Monitoring (DCM) for the Manual and Program Run operating modes", Page 255

Button	Meaning
<b>Manual cycles</b>	<p>The machine manufacturer can define manual cycles that you can use by means of this button.</p> <p>The control makes the following manual cycles (#50 / #4-03-1) available:</p> <ul style="list-style-type: none"> <li>■ <b>Calibrate unbalance</b> Only for the machine manufacturer <b>Further information:</b> "Calibrate unbalance (#50 / #4-03-1)", Page 166</li> <li>■ <b>Measure unbalance</b> Detect the unbalance of current clamping for turning and calculate suggestions for balance weights <b>Further information:</b> "Measure unbalance (#50 / #4-03-1)", Page 167</li> </ul>
<b>F limited</b>	<p>Use this option to activate or deactivate the feed-rate limit for functional safety (FS).</p> <p>Only on machines with functional safety (FS).</p> <p><b>Further information:</b> "Feed-rate limiting with functional safety (FS)", Page 538</p>
<b>Jog increment</b>	<p>Define the jog increment</p> <p><b>Further information:</b> "Incremental jog positioning of axes", Page 165</p>
<b>Set the preset</b>	<p>Enter and set a preset</p> <p><b>Further information:</b> "Preset management", Page 238</p>
<b>Tools</b>	<p>The control opens the <b>Tool management</b> application in the <b>Tables</b> operating mode.</p> <p><b>Further information:</b> "Tool management ", Page 205</p>
<b>Internal stop</b>	<p>If an NC program is interrupted due to an error or a stop, the control activates this button.</p> <p>Use this button to abort program run.</p> <p><b>Further information:</b> "Tool management ", Page 205</p>

## 7.2 Moving the machine axes

### Application

You can use the control to move the machine axes manually, such as pre-positioning for a manual touch probe function.

**Further information:** "Touch Probe Functions in the Manual Operating Mode", Page 375

### Related topics

- Programming traverse movements  
**Further information:** User's Manual for Programming and Testing
- Executing traverse movements in the **MDI** application  
**Further information:** "The MDI Application ", Page 365

## Description of function

The control offers the following methods for moving axes manually:

- Axis-direction keys
- Incremental jog positioning with the **Jog increment** button
- Traversing with electronic handwheels

**Further information:** "Electronic Handwheel", Page 507

The control displays the current contouring feed rate in the status display while the machine axes are in motion.

**Further information:** "Status Displays", Page 119

You can change the contouring feed rate with the **F** button in the **Manual operation** application and with the feed-rate potentiometer.

A traverse job is active on the control as soon as an axis moves. The control shows the status of the traverse job with the **Control-in-operation** icon in the status overview.

**Further information:** "Status overview on the TNC bar", Page 127

### 7.2.1 Using axis keys to move the axes

To move an axis manually with the axis keys:



- ▶ Select an operating mode (e.g., **Manual**)

- ▶ Select an application (e.g., **Manual operation**)



- ▶ Press the axis key of the desired axis
- ▶ The control moves the axis as long as you press the key.




If you hold the axis key pressed down and simultaneously press the **NC start** key, the control moves the axis at a continuous feed rate. You have to end traverse movement with the **NC stop** key.

You can move more than one axis at a time.



## 7.2.2 Incremental jog positioning of axes

Incremental jog positioning allows you to move a machine axis by a preset distance. The input range for the infeed is from 0.001 mm to 10 mm.

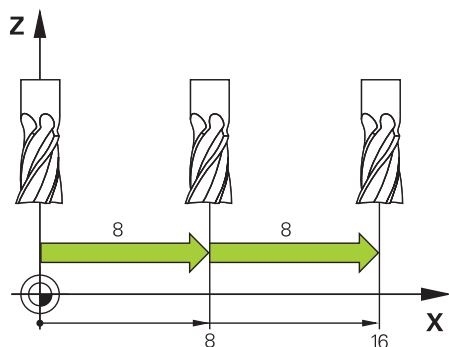

To position an axis incrementally:



- ▶ Select the **Manual** operating mode

Jog increment

- ▶ Select the **Manual operation** application
- ▶ Select **Jog increment**
  - The control opens the **Positions** workspace, if necessary, and shows the **Jog increment** area.

X+


- ▶ Enter the jog increment for linear axes and rotary axes
- ▶ Press the axis key of the desired axis
  - The control positions the axis in the selected direction by the defined jog increment.

Jog increment On

- ▶ Select **Jog increment On**
  - The control ends incremental jog positioning and closes the **Jog increment** area in the **Positions** workspace.



You can also end incremental jog positioning with the **Off** button in the **Jog increment** area.

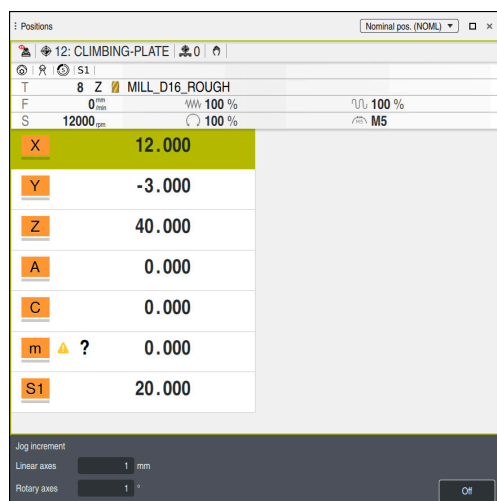

The **Positions** workspace with active **Jog increment** area

**Note**

When positioning an axis, the control checks whether the defined speed has been reached. The control does not check the speed in positioning blocks where **FMAX** is the feed rate.

## 7.3 Unbalance functions (#50 / #4-03-1)

### 7.3.1 Overview

The control provides the following unbalance functions:

Function	Meaning	Further information
<b>Calibrate unbalance</b>	Specify the unbalance reference values Only for the machine manufacturer	Page 166
<b>Measure unbalance</b>	Detect the unbalance of current clamping for turning and calculate suggestions for balance weights	Page 167

**Notes**

#### **WARNING**

##### **Caution: Danger to the operator and machine!**

Very high physical forces are generated during turning, for example due to high rotational speeds and heavy or unbalanced workpieces. Incorrect machining parameters, neglected unbalances or improper fixtures lead to an increased risk of accidents during machining!

- ▶ Clamp the workpiece in the spindle center
- ▶ Clamp workpiece securely
- ▶ Program low spindle speeds (increase as required)
- ▶ Limit the spindle speed (increase as required)
- ▶ Eliminate unbalance (calibrate)

Refer to your machine manual.

Unbalance functions are not required and available on all machine tool types.

The unbalance functions described here are basic functions that are set up and adapted to the machine by the machine manufacturer. The scope and effect of the described functions may therefore vary from machine to machine. The machine manufacturer may also provide different unbalance functions.

### 7.3.2 Calibrate unbalance (#50 / #4-03-1)

**Application**

The unbalance calibration is performed by the machine manufacturer before shipping the machine. With unbalance calibration, the rotary table is operated at various speeds with a defined weight mounted at a defined radial position. The measurement is repeated with different weights.

**Related topics**

- Determining the unbalance of the current fixture  
**Further information:** "Measure unbalance (#50 / #4-03-1)", Page 167
- Unbalance fundamentals  
**Further information:** User's Manual for Programming and Testing

**Requirements**

- Software option Mill-Turning (#50 / #4-03-1)
- Function enabled by the machine manufacturer
- **FUNCTION MODE TURN** active

**Description of function****NOTICE****Danger of collision!**

Changes to the calibration data can lead to undesired behavior. It is not recommended for the machine operator or NC programmer to use the **CALIBRATE UNBALANCE** cycle. There is a risk of collision during the execution of the function and during the subsequent machining!

- ▶ Use the function only if agreed upon with the machine manufacturer
- ▶ Refer to the machine tool manufacturer's documentation

**7.3.3 Measure unbalance (#50 / #4-03-1)****Application**

The **MEASURE UNBALANCE** cycle determines the unbalance of the workpiece and calculates the mass and position of a balancing mass.

**Related topics**

- Cycle **892 CHECK UNBALANCE**  
**Further information:** User's Manual for Machining Cycles
- Unbalance fundamentals

**Requirements**

- Software option Mill-Turning (#50 / #4-03-1)
- Function enabled by the machine manufacturer
- **FUNCTION MODE TURN** active

**Description of function**

In the **Unbalance measurement: Speed limitation** window, you define at which speed the control will measure the unbalance.

The control starts rotating the table at a low speed and gradually increases the speed up to the defined value.

After completion of the measurement, the control will display the calculated mass and the radial position of the compensation weight in the **Result diagram** window.

After clamping a balancing weight, the unbalance must be checked again in a measurement.

## The Result diagram window

The **Result diagram** window contains the following areas:

Area	Meaning
<b>Determined values</b>	<ul style="list-style-type: none"> <li>■ <b>Runout:</b> Determined unbalance at the defined speed</li> <li>■ <b>Shaft speed:</b> Speed defined in the <b>Unbalance measurement: Speed limitation</b> window</li> </ul>
<b>Proposed unbalance</b>	Properties and clamping of the ideal compensation weight: <ul style="list-style-type: none"> <li>■ <b>Angle:</b> Angle on the table</li> <li>■ <b>Radial position:</b> Distance from the table center in mm</li> <li>■ <b>Weight [g]:</b></li> </ul>
<b>Alternative settings</b>	<ul style="list-style-type: none"> <li>■ <b>Weight [g]:</b></li> <li>■ <b>Radial position:</b></li> </ul> <p>If you wish to use a different radial position or mass for the balancing mass, you can overwrite one value and have the other value recalculated automatically.</p> <p>When you enter a value and press the <b>RETURN</b> key, the control will recalculate the value.</p>

The control shows a diagram with the possible mass and radial-position values of the compensation weight. The control marks the **Proposed unbalance** with a circle. When you have the control recalculate the value, it marks the new value with a red circle.

## Note


To compensate for an unbalance, several balancing weights at different positions may be required.

# 8

**NC Fundamentals**

## 8.1 NC fundamentals

### 8.1.1 Programmable axes

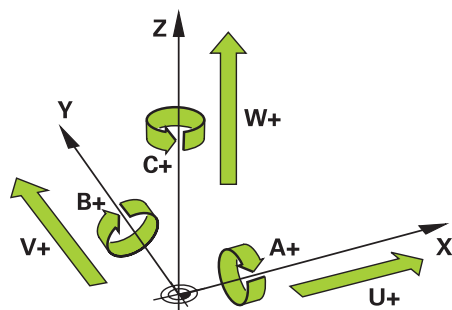

The programmable axes of the control are in accordance with the axis definitions specified in DIN 66217.

The programmable axes are designated as follows:

Main axis	Parallel axis	Rotary axis
X	U	A
Y	V	B
Z	W	C



Refer to your machine manual.

The number, designation and assignment of the programmable axes depend on the machine.

Your machine manufacturer can define further axes, such as PLC axes.

### 8.1.2 Designation of the axes of milling machines

The axes **X**, **Y** and **Z** on your milling machine are designated as the main axis (1st axis), secondary axis (2nd axis) and tool axis. The main axis and secondary axis define the working plane.

The axes are associated as follows:

Main axis	Secondary axis	Tool axis	Working plane
X	Y	Z	XY, also UV, XV, UY
Y	Z	X	YZ, also WU, ZU, WX
Z	X	Y	ZX, also VW, YW, VZ




The control's full range of functions is available only if the **Z** tool axis is used (e.g., **PATTERN DEF**).

Restricted use of the tool axes **X** and **Y** is possible when prepared and configured by the machine manufacturer.

### 8.1.3 Position encoders and reference marks

#### Fundamentals

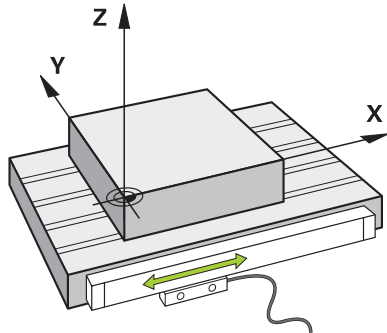

The position of the machine axes is ascertained with position encoders. As a rule, linear axes are equipped with linear encoders. Rotary tables and rotary axes feature angle encoders.

The position encoders detect the positions of the tool or machine table by generating an electrical signal during movement of an axis. The control ascertains the position of the axis in the current reference system from this electrical signal.

**Further information:** "Reference systems", Page 222

Position encoders can measure these positions through different methods:

- Absolutely
- Incrementally

The control cannot determine the position of the axes while the power is interrupted. Absolute and incremental position encoders behave differently once power is restored.

#### Absolute position encoders


On absolute position encoders, every position on the encoder is uniquely identified. The control can thus immediately determine the association between the axis position and the coordinate system after a power interruption.

#### Incremental position encoders

Incremental position encoders need to find the distance between the current position and a reference mark in order to determine the actual position. Reference marks indicate a machine-based reference point. A reference mark must be traversed in order to determine the current position after a power interruption.

If the position encoders feature distance-coded reference marks, then you need to move the linear encoders of the axes by no more than 20 mm. On angle encoders this distance is no more than 20 °.

**Further information:** "Axis reference run", Page 157

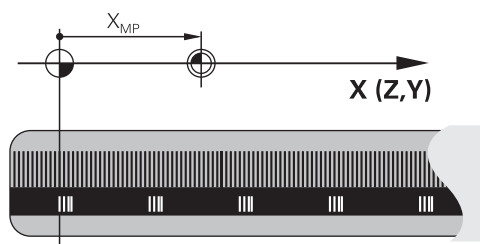





### 8.1.4 Presets in the machine

The following table contains an overview of the presets in the machine or on the workpiece.


#### Related topics

- Presets on the tool

**Further information:** "Presets on the tool", Page 177

Icon	Preset
	<p><b>Machine datum</b></p> <p>The machine datum is a fixed point defined in the machine configuration by the machine manufacturer.</p> <p>The machine datum is the origin of the machine coordinate system <b>M-CS</b>.</p> <p><b>Further information:</b> "Machine coordinate system M-CS", Page 224</p> <p>If you program <b>M91</b> in an NC block, the defined values are referenced to the machine datum.</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p>
	<p><b>M92 datum M92-ZP (zero point)</b></p> <p>The <b>M92</b> datum is a fixed point defined relative to the machine datum by the machine manufacturer in the machine configuration.</p> <p>The <b>M92</b> datum is the origin of the <b>M92</b> coordinate system. If you program <b>M92</b> in an NC block, the defined values are referenced to the <b>M92</b> datum.</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p>
	<p><b>Tool change position</b></p> <p>The tool change position is a fixed point defined relative to the machine datum by the machine manufacturer in the tool-change macro.</p>
	<p><b>Reference point</b></p> <p>The reference point is a fixed point for initializing position encoders.</p> <p><b>Further information:</b> "Position encoders and reference marks", Page 171</p> <p>If the machine has incremental position encoders, the axes must traverse the reference point after booting.</p> <p><b>Further information:</b> "Axis reference run", Page 157</p>
	<p><b>Workpiece preset</b></p> <p>With the workpiece preset you define the origin of the workpiece coordinate system <b>W-CS</b>.</p> <p><b>Further information:</b> "Workpiece coordinate system W-CS", Page 229</p> <p>The workpiece preset is defined in the active row of the preset table. You determine the workpiece preset with a 3D touch probe, for example.</p> <p><b>Further information:</b> "Preset management", Page 238</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p> <p>If no transformations are defined, the entries in the NC program refer to the workpiece preset.</p>



Icon	Preset
	<p><b>Workpiece datum</b></p> <p>You define the workpiece datum with transformations in the NC program, for example with <b>TRANS DATUM</b> or a datum table. The entries in the NC program refer to the workpiece datum. If no transformations are defined in the NC program, the workpiece datum corresponds to the workpiece preset.</p> <p>If you tilt the working plane (#8 / #1-01-1), the workpiece datum is the point around which the workpiece is rotated.</p>



# 9

**Tools**

## 9.1 Fundamentals

To use the control's functions, you must define the tools for the control using real data (e.g., the radius). This makes programming easier and improves process reliability.

To add a tool to the machine, follow the sequence below:

- Prepare your tool and clamp the tool into a suitable tool holder.
- To measure the tool dimensions, starting from the tool carrier preset, measure the tool (e.g., using a tool presetter). The control needs these dimensions for calculating the paths.

**Further information:** "Tool carrier reference point", Page 177

- Further tool data are needed to completely define the tool. Take these tool data from the manufacturer's tool catalog, for example.

**Further information:** "Tool data for the tool types", Page 191

- Save all collected tool data of this tool in the tool management.

**Further information:** "Tool management ", Page 205

- As needed, assign a tool carrier to the tool in order to achieve realistic simulation and collision protection.

**Further information:** "Tool carrier management", Page 209

- After finishing tool definition, program a tool call within an NC program.

**Further information:** User's Manual for Programming and Testing

- If your machine is equipped with a chaotic tool changer system and a double gripper, the tool change time may be shortened by pre-selecting the tool.

**Further information:** User's Manual for Programming and Testing

- If needed, perform a tool usage test before starting the program. This process checks if the tools are available in the machine and have sufficient remaining tool life.

**Further information:** "Tool usage test", Page 215

- After machining a workpiece and measuring it, you may correct the tools.

**Further information:** User's Manual for Programming and Testing

## 9.2 Presets on the tool


The control distinguishes the following presets on the tool for different calculations or applications.

### Related topics

- Presets in the machine or on the workpiece

**Further information:** "Presets in the machine", Page 172

### 9.2.1 Tool carrier reference point

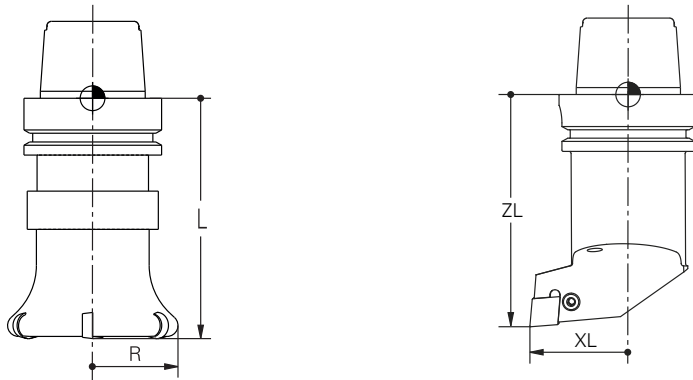


The tool carrier reference point is a fixed point defined by the machine manufacturer. The tool carrier reference point is usually located on the spindle nose.

Starting from the tool carrier reference point, define the tool dimensions in the tool management (e.g., length **L** and radius **R**).

**Further information:** "Tool management ", Page 205

**Further information:** "Measuring the tool by scratching", Page 405

### 9.2.2 Tool tip TIP

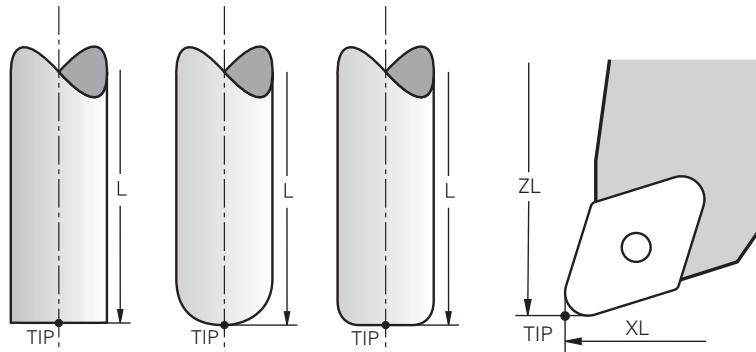

The tool tip has the greatest distance from the tool carrier reference point. The tool tip is the origin of the tool coordinate system **T-CS**.

**Further information:** "Tool coordinate system T-CS", Page 235

In case of milling cutters, the tool tip is at the center of the tool radius **R** and at the longest point of the tool on the tool axis.

You define the tool tip with the following columns of the tool management relative to the tool carrier reference point:

- **L**
- **DL**
- **ZL** (#50 / #4-03-1) (#156 / #4-04-1)
- **XL** (#50 / #4-03-1) (#156 / #4-04-1)
- **YL** (#50 / #4-03-1) (#156 / #4-04-1)
- **DZL** (#50 / #4-03-1) (#156 / #4-04-1)
- **DXL** (#50 / #4-03-1) (#156 / #4-04-1)
- **DYL** (#50 / #4-03-1) (#156 / #4-04-1)
- **LO** (#156 / #4-04-1)
- **DLO** (#156 / #4-04-1)


**Further information:** "Tool data for the tool types", Page 191

For turning tools (#50 / #4-03-1), the control uses the theoretical tool tip, i.e. the longest measured values for **ZL**, **XL**, and **YL**.

The tool tip is an auxiliary point for illustration purposes. The coordinates in the NC program reference the tool location point.

**Further information:** "Tool location point (TLP, tool location point)", Page 179

### 9.2.3 Tool center point (TCP, tool center point)

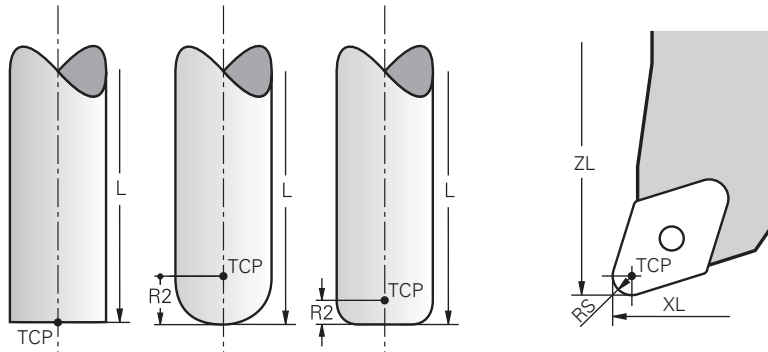

The tool center point is the center of the tool radius **R**. If a second tool radius (**R2**) is defined, the tool center point is offset from the tool tip by this value.

For turning tools (#50 / #4-03-1), the tool center point lies at the center of the tool-tip radius **RS**.


Making entries in the tool management relative to the tool carrier reference point defines the tool center point.

**Further information:** "Tool data for the tool types", Page 191

The tool center point is an auxiliary point for illustration purposes. The coordinates in the NC program reference the tool location point.

**Further information:** "Tool location point (TLP, tool location point)", Page 179

### 9.2.4 Tool location point (TLP, tool location point)

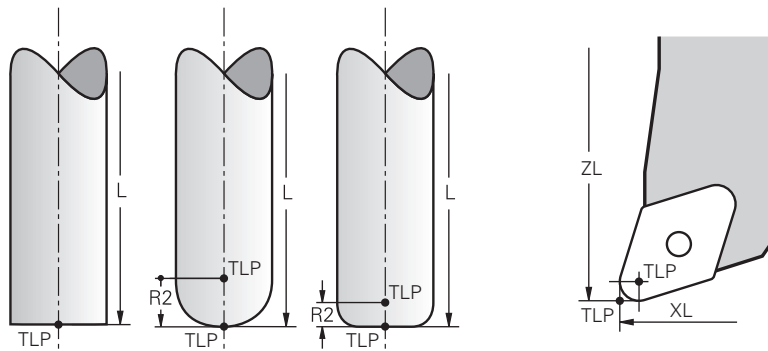


The control positions the tool on the tool location point. By default, the tool location point is at the tool tip.

In the function **FUNCTION TCPM** (#9 / #4-01-1), you can also choose the tool location point to be at the tool center point.

**Further information:** User's Manual for Programming and Testing

### 9.2.5 Tool rotation point (TRP, tool rotation point)

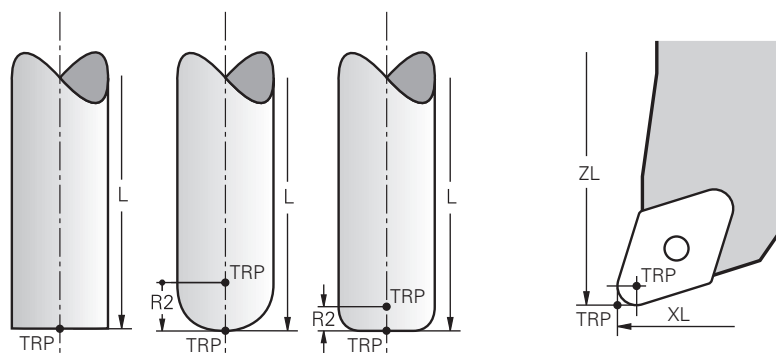

When applying the tilting function with **MOVE** (#8 / #1-01-1), the control tilts the tool about the tool center of rotation. By default, the tool center of rotation is at the tool tip.


When selecting **MOVE** in **PLANE** functions, the syntax element **DIST** is used to define the relative position between the workpiece and the tool. The control shifts the tool rotation point from the tool tip by this value. When **DIST** is not defined, the control keeps the tool tip constant.

**Further information:** User's Manual for Programming and Testing

In the function **FUNCTION TCPM** (#9 / #4-01-1), you can also choose the tool center of rotation to be at the tool center point.

**Further information:** User's Manual for Programming and Testing

### 9.2.6 Tool radius 2 center (CR2, center R2)

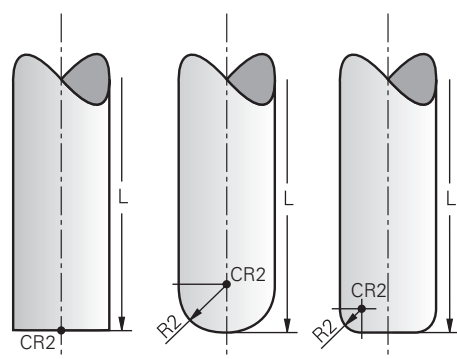

The control uses the tool radius 2 center in conjunction with 3D tool compensation (#9 / #4-01-1). In the case of straight lines **LN**, the surface-normal vector points to that point and defines the direction of the 3D tool compensation.

**Further information:** User's Manual for Programming and Testing

The tool radius 2 center is offset from the tool tip and the cutting edge by the **R2** value.

The tool radius 2 center is an auxiliary point for illustration purposes. The coordinates in the NC program reference the tool location point.

**Further information:** "Tool location point (TLP, tool location point)", Page 179



## 9.3 Tool data

### 9.3.1 Tool ID number

#### Application

Each tool has a unique number which equals the row number of the tool management. Each tool ID number is unique.

**Further information:** "Tool management ", Page 205

#### Description of function

The tool ID numbers can be defined in a range from 0 to 32,767.

The tool with the number 0 is defined as the zero tool with the length and the radius 0. Upon a TOOL CALL 0, the control unloads the currently used tool and inserts no new tool.

**Further information:** User's Manual for Programming and Testing

### 9.3.2 Tool name

#### Application

A tool name can be assigned in addition to the tool ID number. Contrary to the tool ID number, a tool name is not unique.

#### Description of function

The tool name allows identifying tools easier within the tool management. To this end, key features can be defined such as the diameter or the type of machining (e.g., **MILL\_D10\_ROUGH**).

As tool names are not unique, assign names that clearly identify the tools.

A tool name may contain up to 32 characters.

#### Permitted characters

You can use the following characters for the tool name:

A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0 1 2 3 4 5 6 7 8 9 # \$ % & , - \_ .

When entering lowercase letters, the control will substitute them by uppercase letters upon saving.

In conjunction with AFC (#45 / #2-31-1), the following characters are not permitted in the tool name: # \$ & , .

**Further information:** "Adaptive feed control (AFC) (#45 / #2-31-1)", Page 280

#### Note

- Assign unique tool names!

If you define identical tool names for multiple tools, the control will look for the tool in the following sequence:

- Tool that is in the spindle
- Tool that is in the magazine



Refer to your machine manual.

If there are multiple magazines, the machine manufacturer can specify the search sequence of the tools in the magazines.

- Tool that is defined in the tool table but is currently not in the magazine

If the control, for example, finds multiple available tools in the tool magazine, it inserts the tool with the least remaining tool life.

### 9.3.3 Database ID

#### Application

In a tool database for all machines, you can identify tools with unique database IDs (e.g., within a workshop). This allows you to coordinate the tools of multiple machines more easily.

The database ID is entered in the **DB\_ID** column of the tool management.

#### Related topics

- **DB\_ID** column of tool management

**Further information:** "Tool table tool.t", Page 451

#### Description of function

The database ID is stored in the **DB\_ID** column of the tool management.

For indexed tools, you can define the database ID either only for the physically existing main tool or as an ID for the data record at each index.

For indexed tools, HEIDENHAIN recommends that you assign the database ID to the main tool.

**Further information:** "Indexed tool", Page 182

A database ID may contain a maximum of 40 characters and is unique in the tool management.

The control does not allow a tool call with the database ID.

### 9.3.4 Indexed tool

#### Application

Using an indexed tool, several different sets of tool data can be stored for one physically available tool. This feature enables indication of a certain point on the tool by means of the NC program which does not necessarily have to correspond with the maximum tool length.

#### Requirement

- Main tool has been defined

## Description of function

Tools with multiple lengths and radii cannot be defined in one row of the tool management table. Additional table rows are required, specifying the full definitions of the indexed tools. The lengths of the indexed tools, starting from the maximum tool length, approach the tool carrier preset as the index increases.

**Further information:** "Tool carrier reference point", Page 177

**Further information:** "Creating an indexed tool", Page 184

Examples of an application of indexed tools:

- Step drill

The tool data of the main tool contain the drill tip, which corresponds to the maximum length. The tool steps are defined as indexed tools. This makes the lengths equal the actual tool dimensions.

- NC center drill

The main tool is used for defining the theoretical tool tip as the maximum length. This can be used for centering, for example. The indexed tool defines a point along the tool tooth. This can be used for deburring, for example.

- Cut-off milling cutter or T-slot milling cutter

The main tool is used for defining the lower point of the cutting edge, which equals the maximum length. The indexed tool defines the upper point of the cutting edge. When using the indexed tool for cutting-off, the specified workpiece height can be directly programmed.

## Creating an indexed tool

To create an indexed tool:



- ▶ Select the **Tables** operating mode



- ▶ Select **Tool management**

- ▶ Enable **Edit**

- > The control enables tool management for editing.



- ▶ Select **Insert tool**

- > The control opens the **Insert tool** window.

- ▶ Select the desired tool type

- ▶ Define the tool number of the main tool (e.g., **T5**)

- ▶ Press **OK**

- > The control adds table row **5**.

- ▶ Define any required tool data, including the maximum tool length

**Further information:** "Tool data for the tool types", Page 191



- ▶ Select **Insert tool**

- > The control opens the **Insert tool** pop-up window.

- ▶ Enable the **Index** check box

- > The control adds the next free index number for the currently selected tool (e.g., **T5.1**).

- ▶ Press **OK**

- > The control inserts table row **5.1** with the tool data of the main tool.

- ▶ Correct any deviating tool data

**Further information:** "Tool data for the tool types", Page 191



The lengths of the indexed tools approach the tool carrier preset as the index rises, starting from the maximum tool length.

**Further information:** "Tool carrier reference point", Page 177

## Notes

- The control describes some parameters automatically, for example the current tool age **CUR\_TIME**. The control describes these parameters separately for each table row.

**Further information:** "Tool table tool.t", Page 451


- When you create an indexed tool, the control will copy the tool data from the previous table row. The previous table row may be the main tool or an existing indexed tool.
- Index numbers do not need to be sequential. It is possible, for example, to create the tools **T5**, **T5.1** and **T5.3**.
- If you delete a main tool, the control will delete all associated indexed tools as well.
- If you copy or cut indexed tools only, you can use **Append** to add the indices to the currently selected tool.

**Further information:** User's Manual for Programming and Testing

- Up to nine indexed tools can be added to each main tool.
- If you define a replacement tool **RT**, this applies to the respective table row exclusively. When an indexed tool is worn and consequently blocked, this also does not apply to all other indices. This means, for example, that the main tool can still be used.

**Further information:** User's Manual for Programming and Testing

### Example of T-slot milling cutter

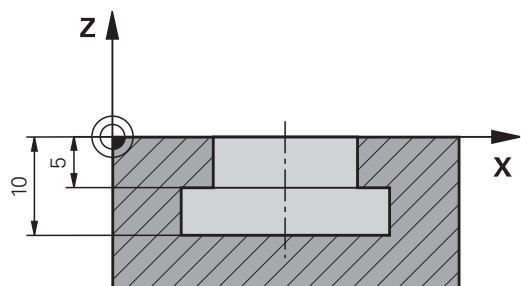

In this example, you program a T-slot with dimensions referring to the top and bottom edges as viewed from the coordinates surface. The height of the T-slot is larger than the length of the cutting edge of the tool used. This requires two steps.

Two tool definitions are required for producing the T-slot.

- The main tool dimension refers to the lower point of the cutting edge, which equals the maximum tool length. This can be used for machining the bottom edge of the T-slot.
- The dimension of the indexed tool refers to the upper point of the cutting edge. This can be used for machining the top edge of the T-slot.



Please ensure that all required tool data are defined both for the main tool and for the indexed tool! In case of a rectangular tool, the radius remains identical in both table lines.


The T-slot is programmed in two machining steps:

- The 10 mm depth is programmed with the main tool.
- The 5 mm depth is programmed with the indexed tool.

<b>11 TOOL CALL 7 Z S2000</b>	; Call the main tool
<b>12 L X+0 Y+0 Z+10 R0 FMAX</b>	; Pre-position the tool
<b>13 L Z-10 R0 F500</b>	; Move to machining depth
<b>14 CALL LBL "CONTOUR"</b>	; Machine the bottom edge of the T-slot with the main tool
<b>* - ...</b>	
<b>21 TOOL CALL 7.1 Z F2000</b>	; Call the indexed tool
<b>22 L X+0 Y+0 Z+10 R0 FMAX</b>	; Pre-position the tool
<b>23 L Z-5 R0 F500</b>	; Move to machining depth
<b>24 CALL LBL "CONTOUR"</b>	; Machine the top edge of the T-slot with the indexed tool





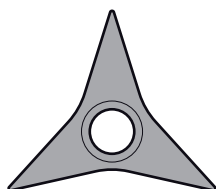



**Example: FreeTurn tool (#50 / #4-03-1)**



You need the following tool data for a FreeTurn tool:



FreeTurn tool with three finishing teeth

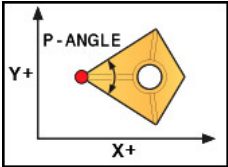**i** Integrating information about the point angles **P-ANGLE** and the tool length **ZL** (for example, **FT1\_35-35-35\_100**) into the tool name is recommended.

Icon and parameter	Meaning	Intended use
 <b>ZL</b>	Tool length 1	The tool length <b>ZL</b> equals the total tool length, relating to the tool carrier preset. <b>Further information:</b> "Presets on the tool", Page 177
 <b>XL</b>	Tool length 2	The tool length <b>XL</b> equals the difference between the spindle center and the tool tip of the tooth. <b>XL</b> must always be defined as a negative value with FreeTurn tools. <b>Further information:</b> "Presets on the tool", Page 177
 <b>YL</b>	Tool length 3	The tool length <b>YL</b> is always 0 with FreeTurn tools.
 <b>RS</b>	Cutting radius	You can take the radius <b>RS</b> from the tool catalog.
 <b>TYPE</b>	Lathe tool type	You select between a rough-turning tool ( <b>ROUGH</b> ) and finishing tool ( <b>FINISH</b> ). <b>Further information:</b> "Subgroups of technology-specific tool types", Page 189
 <b>TO</b>	Tool orientation	The tool orientation <b>TO</b> is always 18 with FreeTurn tools. 
 <b>ORI</b>	Angle of orientation	The angle of orientation <b>ORI</b> defines the offset of the single teeth with respect to one another. If the first tooth has the value 0, define the second tooth of symmetrical tools at 120 and the third tooth at 240.

Icon and parameter	Meaning	Intended use
 <b>P-ANGLE</b>	Point angle	You can get the point angle <b>P-ANGLE</b> from the tool catalog.
 <b>CUTLENGTH</b>	Cutting-edge length	You can get the tooth length <b>CUTLENGTH</b> from the tool catalog.
	Toolcarrier kinematics	Using the optional tool-carrier kinematics, the control can monitor the tool for collisions, for example. Assign the same kinematics to each single tooth.

### 9.3.5 Tool types

#### Application

Depending on the selected tool type, the control displays the editable tool data in the tool management.

#### Related topics












- Editing the tool data in the tool management

**Further information:** "Tool management ", Page 205


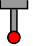













#### Description of function

A number is additionally assigned to each tool type.

The following tool types can be selected in the **TYPE** column of the tool management:

Icon	Tool type	Number
	Milling cutter ( <b>MILL</b> )	0
	Rough cutter ( <b>MILL_R</b> )	9
	Finishing cutter ( <b>MILL_F</b> )	10
	Face mill ( <b>MILL_FACE</b> )	14
	Ball-nose cutter ( <b>BALL</b> )	22
	Toroid cutter ( <b>TORUS</b> )	23
	Chamfer mill ( <b>MILL_CHAMFER</b> )	24
	Side milling cutter ( <b>MILL_SIDE</b> )	25
	Drill ( <b>DRILL</b> )	1
	Tap ( <b>TAP</b> )	2
	NC center drill ( <b>CENT</b> )	4



Icon	Tool type	Number
	Turning tool ( <b>TURN</b> ) (#50 / #4-03-1) <b>Further information:</b> "Turning tool types (#50 / #4-03-1)", Page 190	29
	Touch probe ( <b>TCHP</b> ) (#17 / #1-05-1)	21
	Reamer ( <b>REAM</b> )	3
	Countersink ( <b>CSINK</b> )	5
	Pilot hole ( <b>TSINK</b> )	6
	Boring tool ( <b>BOR</b> )	7
	Back boring tool ( <b>BCKBOR</b> )	8
	Thread miller ( <b>GF</b> )	1
	Thread miller with chamfer ( <b>GSF</b> )	16
	Thread mill with single thread ( <b>EP</b> )	17
	Thread mill with indexable insert ( <b>WSP</b> )	18
	Thread drilling/milling cutter ( <b>BGF</b> )	19
	Circular thread mill ( <b>ZBGF</b> )	20
	Grinding wheel ( <b>GRIND</b> ) (#156 / #4-04-1) <b>Further information:</b> "Grinding tool types (#156 / #4-04-1)", Page 190	30
	Dressing tool ( <b>DRESS</b> ) (#156 / #4-04-1) <b>Further information:</b> "Dressing tool types (#156 / #4-04-1)", Page 190	31

These tool types allow filtering the tools in the tool management.







**Further information:** "Tool management ", Page 205

### Subgroups of technology-specific tool types

In the **TYPE** column of the tool management, a technology-specific tool type can be defined, depending on the selected tool type. The control offers the **TYPE** column for the **TURN**, **GRIND** and **DRESS** tool types. Specify the tool type more precisely within these technologies.







**Turning tool types (#50 / #4-03-1)**

Select between the types below within the turning tools:

Icon	Tool type	Number
	Rough-turning tool ( <b>ROUGH</b> )	11
	Finish-turning tool ( <b>FINISH</b> )	12
	Thread-turning tool ( <b>THREAD</b> )	14
	Recessing tool ( <b>RECESS</b> )	15
	Button tool ( <b>BUTTON</b> )	21
	Recess-turning tool ( <b>RECTURN</b> )	26



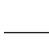


**Grinding tool types (#156 / #4-04-1)**

Select between the types below within the grinding tools:

Icon	Tool type	Number
	Cylindrical grinding pin ( <b>GRIND_PIN</b> )	1
	Conical grinding pin ( <b>GRIND_CONE</b> )	2
	Cup wheel ( <b>GRIND_CUP</b> )	3
	Straight wheel ( <b>GRIND_CYLINDER</b> ) Currently no function	26
	Slant wheel ( <b>GRIND_ANGULAR</b> ) Currently no function	27
	Facing wheel ( <b>GRIND_FACE</b> ) Currently no function	28

**Dressing tool types (#156 / #4-04-1)**

Select between the types below within the dressing tools:

Icon	Tool type	Number
	Stationary dresser with radius ( <b>DRESS_FIX_RADIUS</b> )	101
	Horn-type dresser ( <b>HORNED</b> ) Currently no function	102
	Rotating dresser with radius ( <b>DRESS_ROT_RADIUS</b> )	103
	Stationary dresser (flat) ( <b>DRESS_FIX_FLAT</b> )	110
	Rotating (flat) ( <b>DRESS_ROT_FLAT</b> )	120

### 9.3.6 Tool data for the tool types

#### Application

The tool data provide the control with all information necessary for calculating and checking the required movements.

The necessary data depend on the technology and the tool type.

#### Related topics

- Editing the tool data in the tool management  
**Further information:** "Tool management ", Page 205
- Tool types  
**Further information:** "Tool types", Page 188

#### Description of function

Some of the necessary tool data can be determined using the following options:

- You can measure your tools in the machine (e. g., with a tool touch probe) or externally with a tool presetter.  
**Further information:** User's Manual for Measuring Cycles for Workpieces and Tools
- Take further tool information from the manufacturer's tool catalog (e.g., the material or the number of teeth).












In the tables below, the relevance of the parameters is sub-divided into the optional, recommended and required categories.




The control takes recommended parameters into account for at least one of the functions below:

- Simulation  
**Further information:** User's Manual for Programming and Testing
- Machining or touch probe cycles  
**Further information:** User's Manual for Machining Cycles  
**Further information:** User's Manual for Measuring Cycles for Workpieces and Tools
- Dynamic Collision Monitoring (DCM (#40 / #5-03-1))  
**Further information:** "Dynamic Collision Monitoring (DCM) (#40 / #5-03-1)", Page 250
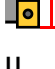
### Tool data for milling and drilling tools

The control offers the following parameters for milling and drilling tools:

Icon and parameter	Meaning	Intended use
 L	Length	Required for all milling and drilling tool types
 R	Radius	Required for all milling and drilling tool types
 R2	Radius 2	Required for the following milling and drilling tool types: <ul style="list-style-type: none"> <li>■ <b>Ball-nose cutter</b></li> <li>■ <b>Toroid cutter</b></li> </ul>
 DL	Delta value of length	Optional The control describes this parameter in connection with touch probe cycles.
 DR	Delta value of radius	Optional The control describes this parameter in connection with touch probe cycles.
 DR2	Delta value of radius 2	Optional The control describes this parameter in connection with touch probe cycles.
 LCUTS	Tooth length	Recommended
 RCUTS	Tooth width	Recommended
 LU	Useful length	Recommended
 RN	Neck radius	Recommended
 ANGLE	Plunge angle	Recommended for the following milling and drilling tool types: <ul style="list-style-type: none"> <li>■ <b>Milling tool</b></li> <li>■ <b>Roughing mill</b></li> <li>■ <b>Finishing cutter</b></li> <li>■ <b>Ball-nose cutter</b></li> <li>■ <b>Toroid cutter</b></li> </ul>












Icon and parameter	Meaning	Intended use
 <b>PITCH</b>	Thread pitch	Recommended for the following milling and drilling tool types: <ul style="list-style-type: none"> <li>■ <b>Tapping tools</b></li> <li>■ <b>Thread mill</b></li> <li>■ <b>Thread miller with chamfer</b></li> <li>■ <b>Thread mill with single thread</b></li> <li>■ <b>Thread mill w/ indexable insert</b></li> <li>■ <b>Thread drilling/milling cutter</b></li> <li>■ <b>Circular thread mill</b></li> </ul>
 <b>T-ANGLE</b>	Point angle	Recommended for the following milling and drilling tool types: <ul style="list-style-type: none"> <li>■ <b>Drill</b></li> <li>■ <b>NC center drill</b></li> <li>■ <b>Countersink</b></li> <li>■ <b>Chamfer cutter</b></li> </ul>
 <b>NMAX</b>	Maximum spindle speed	Optional
<b>R_TIP</b>	Radius at the tip	Recommended for the following milling and drilling tool types: <ul style="list-style-type: none"> <li>■ <b>Face mill</b></li> <li>■ <b>Countersink</b></li> <li>■ <b>Chamfer cutter</b></li> </ul>








- All tool types listed in the **TYP** column are milling and drilling tools except for:
  - **Touch probe**
  - **Turning tool** (#50 / #4-03-1)
  - **Grinding wheel** (#156 / #4-04-1)
  - **Dressing tool** (#156 / #4-04-1)**Further information:** "Tool types", Page 188
- The parameters are described in the tool table.  
**Further information:** "Tool table tool.t", Page 451
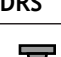
### Tool data for turning tools (#50 / #4-03-1)

The control offers the following parameters for turning tools:

Icon and parameter	Meaning	Intended use
 <b>ZL</b>	Tool length 1	Required for all turning tool types
 <b>XL</b>	Tool length 2	Required for all turning tool types
 <b>YL</b>	Tool length 3	Required for all turning tool types
 <b>RS</b>	Cutting radius	Required for the turning tool types below: <ul style="list-style-type: none"> <li>■ <b>Roughing tool</b></li> <li>■ <b>Finish-turning tool</b></li> <li>■ <b>Button tool</b></li> <li>■ <b>Recessing tool</b></li> <li>■ <b>Recess-turning tool</b></li> </ul>
 <b>TYPE</b>	Lathe tool type	Required for all turning tool types
 <b>TO</b>	Tool orientation	Required for all turning tool types Depending on the selected <b>TYPE</b> tool type, the control shows selected tool orientations with different graphics. The machine manufacturer can change this assignment.
 <b>DZL</b>	Delta value of tool length 1	Optional The control describes this value in connection with touch probe cycles.
 <b>DXL</b>	Delta value of tool length 2	Optional The control describes this value in connection with touch probe cycles.
 <b>DYL</b>	Delta value of tool length 3	Optional The control describes this value in connection with touch probe cycles.
 <b>DRS</b>	Delta value of cutter radius	Optional The control describes this value in connection with touch probe cycles.
 <b>DCW</b>	Delta value of cutter width	Optional The control describes this value in connection with touch probe cycles.

Icon and parameter	Meaning	Intended use
	Angle of orientation	Required for all turning tool types
<b>ORI</b>		
 <b>T-ANGLE</b>	Tool angle	Required for the turning tool types below: <ul style="list-style-type: none"> <li>■ <b>Roughing tool</b></li> <li>■ <b>Finish-turning tool</b></li> <li>■ <b>Button tool</b></li> <li>■ <b>Threading tool</b></li> </ul>
 <b>P-ANGLE</b>	Point angle	Required for the turning tool types below: <ul style="list-style-type: none"> <li>■ <b>Roughing tool</b></li> <li>■ <b>Finish-turning tool</b></li> <li>■ <b>Button tool</b></li> <li>■ <b>Threading tool</b></li> </ul>
	Cutting-edge length	Recommended
 <b>CUTLENGHT</b>		
	Tooth width	Required for the turning tool types below: <ul style="list-style-type: none"> <li>■ <b>Recessing tool</b></li> <li>■ <b>Recess-turning tool</b></li> </ul>
 <b>CUTWIDTH</b>		Recommended for the other turning tool types
 <b>SPB-INSERT</b>	Angular offset	Required for the turning tool types below: <ul style="list-style-type: none"> <li>■ <b>Recessing tool</b></li> <li>■ <b>Recess-turning tool</b></li> <li>■ <b>Threading tool</b></li> </ul>



- The **TYP** column of the **Turning tool** tool type as well as the associated technology-specific tool types in the **TYPE** column define turning tools.  
**Further information:** "Tool types", Page 188  
**Further information:** "Turning tool types (#50 / #4-03-1)", Page 190
- The parameters are described in the turning tool table.  
**Further information:** "Turning tool table toolturn.trn (#50 / #4-03-1)", Page 461

## Tool data for grinding tools (#156 / #4-04-1)

### NOTICE

#### Danger of collision!

In the tool management form, the control displays only the parameters relevant to the selected tool type. The tool tables contain locked parameters that are for internal consideration only. If you edit these additional parameters manually, tool data might no longer correctly match each other. There is a risk of collisions during subsequent movements!

- Edit the tools in the tool management form


### NOTICE

#### Danger of collision!


The control differentiates between freely editable and locked parameters. The control writes to the locked parameters and uses these parameters for internal consideration. You must not manipulate these parameters. If you manipulate the locked parameters, tool data might no longer correctly match each other. There is a risk of collisions during subsequent movements!

- Edit only freely editable tool management parameters
- Comply with the information about locked parameters in the tool data overview table

The control supports the following grinding tool types:

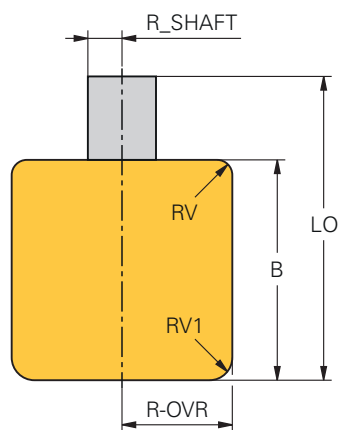


Cylindrical grinding pin

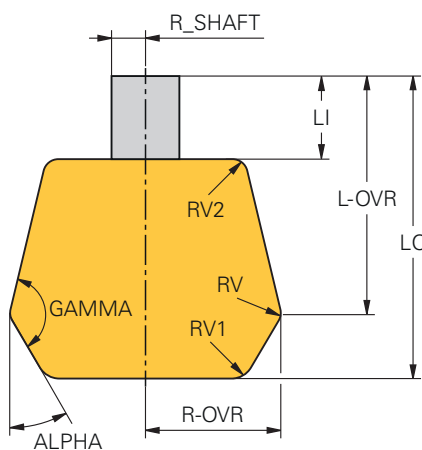





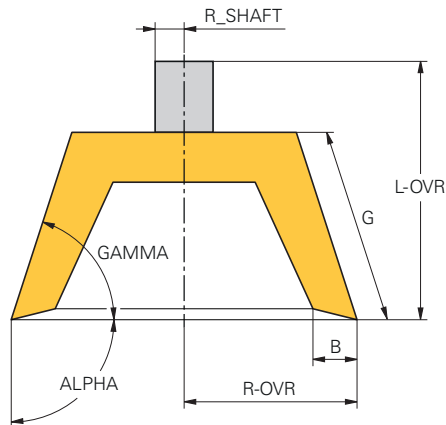



Conical grinding pin







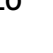




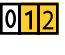
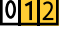
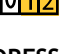
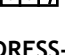
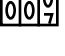
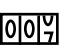









### Cup wheel

The control offers the following parameters for grinding tools:

Icon and parameter	Meaning	Usage
 <b>TYPE</b>	Grinding tool type	Required for all grinding tool types
 <b>R-OVR</b>	Radius	Required for all grinding tool types This value must not be edited after initial dressing.
 <b>L-OVR</b>	Overhang	Required for the grinding tool types below: <ul style="list-style-type: none"> <li>■ <b>Conical grinding pin</b></li> <li>■ <b>Cup wheel</b></li> </ul> This value must not be edited after initial dressing.
 <b>LO</b>	Overall length	Required for the grinding tool types below: <ul style="list-style-type: none"> <li>■ <b>Cylindrical grinding pin</b></li> <li>■ <b>Conical grinding pin</b></li> </ul> This value must not be edited after initial dressing.
 <b>LI</b>	Length to the inner edge	Required for the <b>Conical grinding pin</b> grinding tool type This value must not be edited after initial dressing.
 <b>B</b>	Width	Required for the grinding tool types below: <ul style="list-style-type: none"> <li>■ <b>Cylindrical grinding pin</b></li> <li>■ <b>Cup wheel</b></li> </ul> This value must not be edited after initial dressing.
 <b>G</b>	Depth of grinding tool	Required for the <b>Cup wheel</b> grinding tool type This value must not be edited after initial dressing.
 <b>ALPHA</b>	Slant angle	Required for the grinding tool types below: <ul style="list-style-type: none"> <li>■ <b>Conical grinding pin</b></li> </ul> For the <b>Conical grinding pin</b> grinding tool type, you must define the angle between 0° and 90°.

Icon and parameter	Meaning	Usage
		<ul style="list-style-type: none"> <li>■ <b>Cup wheel</b> For the <b>Cup wheel</b> grinding tool type, you must define the angle 90°.</li> </ul>
<b>GAMMA</b>	Corner angle	Required for the grinding tool types below: <ul style="list-style-type: none"> <li>■ <b>Conical grinding pin</b></li> <li>■ <b>Cup wheel</b></li> </ul>
 <b>RV</b>	Radius at the edge for <b>L-OVR</b>	Optional for the grinding tool types below: <ul style="list-style-type: none"> <li>■ <b>Cylindrical grinding pin</b></li> <li>■ <b>Conical grinding pin</b></li> </ul>
 <b>RV1</b>	Radius at the edge for <b>LO</b>	Optional for the grinding tool types below: <ul style="list-style-type: none"> <li>■ <b>Cylindrical grinding pin</b></li> <li>■ <b>Conical grinding pin</b></li> </ul>
 <b>RV2</b>	Radius at the edge for <b>LI</b>	Optional for the <b>Conical grinding pin</b> grinding tool type
 <b>HWI</b>	Angle for a relief cut on the inner edge	Required for the <b>Cup wheel</b> grinding tool type Optional for the remaining grinding tool types
 <b>HWA</b>	Angle for a relief cut on the outer edge	Required for the <b>Cup wheel</b> grinding tool type Optional for the remaining grinding tool types
<b>COR_TYPE</b>	Selection of compensation method	Required for all grinding tool types
<b>INIT_D_OK</b>	Initial dressing	Currently no function
<b>MESS_OK</b>	Measuring the grinding tool	The control uses this parameter only if <b>Dressing tool with wear, COR_TYPE_DRESSTOOL</b> has been selected in parameter <b>COR_TYPE</b> .
<b>T-DRESS</b>	Tool number of the dresser	The control uses this parameter only if <b>Dressing tool with wear, COR_TYPE_DRESSTOOL</b> has been selected in parameter <b>COR_TYPE</b> . Corresponds to parameter <b>A_NR_D</b> in the grinding tool table
 <b>dR-OVR</b>	Delta value of radius	The control uses this parameter only if <b>Grinding wheel with compensation, COR_TYPE_GRIND-TOOL</b> has been selected in parameter <b>COR_TYPE</b> .
 <b>dL-OVR</b>	Delta value of overhang	The control uses this parameter only if <b>Grinding wheel with compensation, COR_TYPE_GRIND-TOOL</b> has been selected in parameter <b>COR_TYPE</b> .
 <b>dLO</b>	Delta value of total length	The control uses this parameter only if <b>Grinding wheel with compensation, COR_TYPE_GRIND-TOOL</b> has been selected in parameter <b>COR_TYPE</b> .

Icon and parameter	Meaning	Usage
 <b>dLI</b>	Delta value of length up to the inner edge	The control uses this parameter only if <b>Grinding wheel with compensation, COR_TYPE_GRIND-TOOL</b> has been selected in parameter <b>COR_TYPE</b> .
 <b>DRESS-N-D</b>	Default value of diameter dressing counter	Currently no function
 <b>DRESS-N-A</b>	Default value of outer edge dressing counter	Currently no function Optional
 <b>DRESS-N-I</b>	Default value of inner edge dressing counter	Currently no function Optional
 <b>DRESS-N-D-ACT</b>	Diameter dressing counter	Currently no function
 <b>DRESS-N-A-ACT</b>	Outer edge dressing counter	Currently no function
 <b>DRESS-N-I-ACT</b>	Inner edge dressing counter	Currently no function
 <b>R_SHAFT</b>	Radius of the tool shank	Optional
 <b>R_MIN</b>	Min. permissible radius	Optional
 <b>B_MIN</b>	Min. permissible width	Optional
 <b>V_MAX</b>	Maximum permissible cutting speed	Optional
 <b>AD</b>	Retraction amount at the diameter	Required for all grinding tool types
 <b>AA</b>	Retraction amount at the outer edge	Required for all grinding tool types

Icon and parameter	Meaning	Usage
	Retraction amount at the inner edge	Required for all grinding tool types

AI



- To define grinding tools, use the **Grinding wheel** tool type in the **TYP** column as well as the associated technology-specific tool types in the **TYPE** column.

**Further information:** "Tool types", Page 188


**Further information:** "Grinding tool types (#156 / #4-04-1)", Page 190

- The parameters are described in the grinding tool table.


**Further information:** "Grinding tool table toolgrind.grd (#156 / #4-04-1)", Page 466

### Tool data for dressing tools (#156 / #4-04-1)


The control supports the following dressing tool types:

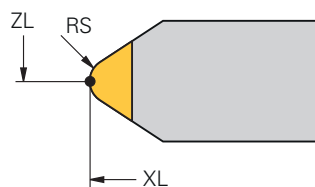


**Stationary dresser with radius**

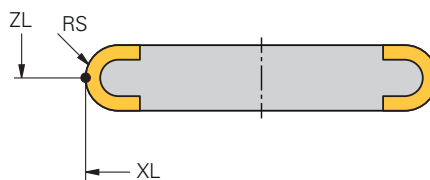

**Rotating dresser with radius**

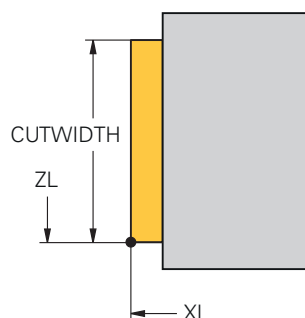



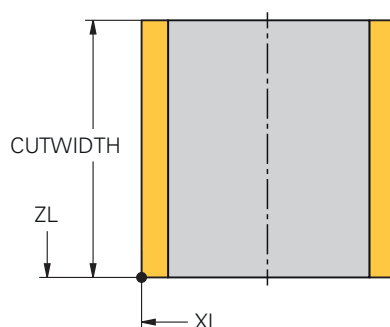







**Stationary dresser (flat)**



**Rotating dresser (flat)**

The control offers the following parameters for dressing tools:

Icon and parameter	Meaning	Intended use
 ZL	Tool length 1	Required for dressing tool types
 XL	Tool length 2	Required for all dressing tool types
 YL	Tool length 3	Required for all dressing tool types
 RS	Cutting radius	Required for the dressing tool types below: <ul style="list-style-type: none"> <li>■ <b>Stationary dresser with radius</b></li> <li>■ <b>Rotating dresser with radius</b></li> </ul>
<b>CUTWIDTH</b>	Width of tooth	Required for the dressing tool types below: <ul style="list-style-type: none"> <li>■ <b>Stationary dresser (flat)</b></li> <li>■ <b>Rotating dresser (flat)</b></li> </ul>
 <b>TYPE</b>	Dressing tool type	Required for all dressing tool types
 <b>TO</b>	Tool orientation	Required for all dressing tool types

Icon and parameter	Meaning	Intended use
 DZL	Delta value of tool length 1	Optional
 DXL	Delta value of tool length 2	Optional
 DYL	Delta value of tool length 3	Optional
 DRS	Delta value of cutter radius	Optional
N-DRESS	Tool speed	Required for the dressing tool types below: <ul style="list-style-type: none"> <li>■ Rotating dresser with radius</li> <li>■ Rotating dresser (flat)</li> </ul>



- You define dressing tools by selecting the **Dressing tool** tool type in the **TYP** column and the desired technology-specific tool type in the **TYPE** column.  
**Further information:** "Tool types", Page 188  
**Further information:** "Dressing tool types (#156 / #4-04-1)", Page 190
- The parameters are described in the dressing tool table.  
**Further information:** "Dressing tool table tooldress.drs (#156 / #4-04-1)", Page 475










## Tool data for touch probes



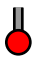


**NOTICE****Danger of collision!**

The control cannot protect L-shaped styli from collisions using Dynamic Collision Monitoring DCM (#40 / #5-03-1). When using a touch probe with an L-shaped stylus there is a risk of collision!

- ▶ Carefully run in the NC program or program section in the **Program Run Single Block** operating mode
- ▶ Watch out for possible collisions!

The control offers the following parameters for touch probes:

Icon and parameter	Meaning	Intended use
 L	Length	Required
 R	Radius	Required
TP_NO	Number in the touch probe table	Required
 TYPE	Type of touch probe	Required
 F	Probing feed rate	Required
 FMAX	Rapid traverse in probing cycle	Optional
 F_PREPOS	Pre-positioning at rapid traverse	Required
 TRACK	Orienting the touch probe in each probing process	Required When selecting <b>L-TYPE</b> in the <b>STYLUS</b> parameter, <b>ON</b> must be selected
 REACTION	Trigger <b>NCSTOP</b> or <b>EMERGSTOP</b> in case of collision	Required
 SET_UP	Set-up clearance	Recommended

Icon and parameter	Meaning	Intended use
 <b>DIST</b>	Maximum measuring range	Recommended
 <b>CAL_OF1</b>	Center offset in the main axis	Required when <b>ON</b> is selected in parameter <b>TRACK</b> The control describes this value in connection with the calibration cycle.
 <b>CAL_OF2</b>	Center offset in the secondary axis	Required when <b>ON</b> is selected in parameter <b>TRACK</b> The control describes this value in connection with the calibration cycle.
 <b>CAL_ANG</b>	Spindle angle during calibration	Required when <b>ON</b> is selected in parameter <b>TRACK</b>
 <b>STYLUS</b>	Shape of the stylus	Required If you do not define the parameter, the control uses <b>SIMPLE</b>



- You define touch probes by selecting the **Touch probe** tool type in the **TYPE** column and the touch probe model in the **TYPE** column.  
**Further information:** "Tool types", Page 188
- The parameters are described in the touch probe table.  
**Further information:** "Touch probe table tchprobe.tp", Page 478



## 9.4 Tool management

### Application

The control displays the tool definitions of all technologies as well as the tools currently present in the tool magazine in the **Tool management** application of the **Tables** operating mode.

The tool management allows adding tools, editing tool data and deleting tools.

### Related topics

- Creating new tools  
**Further information:** "Configuring a tool", Page 109
- Table workspace  
**Further information:** "The Table workspace", Page 442
- Form workspace  
**Further information:** "The Form workspace for tables", Page 448

### Description of function

You can define up to 32,767 tools in the tool management; this is the maximum number of available table rows.

The control displays all tool data of the tool tables below in the tool management:

- Tool table **tool.t**  
**Further information:** "Tool table tool.t", Page 451
- Turning-tool table **toolturn.trn** (#50 / #4-03-1)  
**Further information:** "Turning tool table toolturn.trn (#50 / #4-03-1)", Page 461
- Grinding-tool table **toolgrind.grd** (#156 / #4-04-1)  
**Further information:** "Grinding tool table toolgrind.grd (#156 / #4-04-1)", Page 466
- Dressing-tool table **tooldress.drs** (#156 / #4-04-1)  
**Further information:** "Dressing tool table tooldress.drs (#156 / #4-04-1)", Page 475
- Touch-probe table **tchprobe.tp**  
**Further information:** "Touch probe table tchprobe.tp", Page 478

The control additionally displays the pockets occupied in the magazine from pocket table **tool\_p.tch** in the tool management.

**Further information:** "Pocket table tool\_p.tch", Page 482

Tool data can be edited in the **Table** workspace or in the **Form** workspace. In the **Form** workspace the control shows the correct tool data for each tool type.

**Further information:** "Tool data", Page 181

## Notes

- When creating a new tool, the length **L** and radius **R** columns are empty at first. The control will not insert a tool whose length and radius are missing and will display an error message.
- The tool data of tools still stored in the pocket table cannot be deleted. The tools must be removed from the magazine first.
- When editing tool data, bear in mind that the current tool may have been entered in column **RT** as a replacement tool of another tool!
- Make sure to keep the tool table as short and clear as possible so that it does not impair the computing speed of your control. Use a maximum of 10,000 tool entries in tool management. For example, you can delete all unused tool numbers; tool numbers need not be sequential.
- If the cursor is within the **Table** workspace and the **Edit** toggle switch is deactivated, a search using the keyboard can be started. The control opens a separate window with an input field and automatically searches for the entered string. If the controls finds a tool with the entered characters, it selects this tool. If it finds several tools with this string of characters, you can scroll up and down in the window.
- The machine manufacturer uses the machine parameter **CfgTableCellLock** (no. 135600) to define whether and in which cases individual table cells are locked or write-protected. On some machines, you cannot change the tool type once a tool has been inserted into the machine.

### 9.4.1 Importing and exporting tool data

#### Application

The control can import and export tool data. This avoids manual editing efforts and possible typing errors. Importing tool data is particularly useful in connection with a tool presetter. Exported tool data can be used for the tool database of your CAM system, for example.

#### Description of function

The control transmits tool data as a CSV file.

**Further information:** User's Manual for Programming and Testing

The tool data transfer file is structured as follows:

- The first row contains the tool table column names that are transferred.
- The other rows contain the tool data to be transferred. The order of the data must match the order of the column names in row 1. A period is used as decimal separator.

The column names and the tool data stand between double quotation marks and are separated by semicolons.

Please note the following regarding the transfer file:

- The tool number must be present.
- Any tool data can be imported. The data record does not need to contain all tool table column names or all tool data.
- Missing tool data contain no value between the quotation marks.
- The column names can be arranged in any order. The order of tool data must match the order of column names.

## Importing tool data

To import tool data:



- ▶ Select the **Tables** operating mode



- ▶ Select **Tool management**

- ▶ Enable **Edit**


- > The control enables tool management for editing.



- ▶ Select **Import**

- > The control opens a selection window.

- ▶ Select the desired CSV file

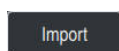

- ▶ Select **Import**

- > The control adds the tool data to the tool management.

- > If required, the control opens the **Confirm import** window (e.g., in case of identical tool numbers).

- ▶ Selecting the procedure:

- **Append:** the control adds the tool data as new rows at the end of the table.
- **Overwrite:** the control overwrites the initial tool data with the tool data from the transfer file.
- **Cancel:** the control cancels the import process.

### NOTICE

#### Caution: Data may be lost!

When overwriting existing tool data with the **Overwrite** function, the control will permanently delete the initial tool data!

- ▶ Use this function only with tool data that are no longer needed

## Exporting tool data

To export tool data:




- ▶ Select the **Tables** operating mode



- ▶ Select **Tool management**
- ▶ Enable **Edit**
- The control enables tool management for editing.
- ▶ Mark the tool to be exported
- ▶ Open the context menu with a long press or by right-clicking

**Further information:** User's Manual for Programming and Testing



- ▶ Select **Mark row**
- ▶ Mark further tools if required
- ▶ Select **Export**
- The control opens the **Save as** window.
- ▶ Select a path




By default, the control saves the transfer file under **TNC:\table**.

- ▶ Enter the file name
- ▶ Select the file type



You can export the following CSV formats:

- **TNC7 (semicolon-separated)**
- **iTNC 530 / TNC 640 (comma-separated)**



- ▶ Select **Create**
- The control will save the file using the selected path.

## Notes

### NOTICE

#### Caution: Possible material damage!

If the transfer file contains unknown column names, the control will not accept the data from this column! In this case, the control will perform the operations with an incompletely defined tool.

- ▶ Check whether the column names are correct
- ▶ After importing, check the tool data and adapt them if required.

- The transfer file must be saved under **TNC:\table**.
- The control creates an output of the CSV files with the following formatting:
  - **TNC7 (semicolon-separated)** encloses the values in double quotation marks, the individual values are separated by semicolons
  - **iTNC 530 / TNC 640 (comma-separated)** encloses the values in double curly brackets, the individual values are separated by commas

Most table calculation programs use the semicolon as the default separator.

The control is able to import and export data in both formats.

## 9.5 Tool carrier management

### Application

With tool carrier management, you can assign the 3D model of a tool carrier to a tool.

The tool carrier model will be used for the following functions:

- Representation in the **Simulation** workspace
- Consideration in Dynamic Collision Monitoring (DCM (#40 / #5-03-1))

### Related topics

- The **Simulation** workspace  
**Further information:** User's Manual for Programming and Testing
- Dynamic Collision Monitoring (DCM (#40 / #5-03-1))  
**Further information:** "Dynamic Collision Monitoring (DCM) (#40 / #5-03-1)", Page 250
- Adding a tool model to the tool definition (#140 / #5-03-2)  
**Further information:** "Tool model (#140 / #5-03-2)", Page 213
- Validating a 3D model for the tool carrier (#56-61 / #3-02-1\*)  
**Further information:** "OPC UA NC Server (#56-61 / #3-02-1\*)", Page 568

### Requirements

- Kinematics description  
 The machine manufacturer creates the kinematics description
- Insertion point defined  
 The machine manufacturer defines the insertion point for the tool carrier.
- Tool carrier model exists  
 You must save the tool carrier model in the **Toolkinematics** folder.  
 Path: **TNC:\system\Toolkinematics**
- The tool carrier model has been assigned to the tool  
**Further information:** "Assigning a tool carrier", Page 210

## Description of function

The tool carrier model must meet the following requirements:

- Use permitted characters for the file name

**Further information:** User's Manual for Programming and Testing

- Use a supported format

- CFG file
- M3D file
- STL file
  - Max. 20 000 triangles
  - Triangular mesh forms a closed shell

**Further information:** "Generating STL files with 3D mesh (#152 / #1-04-1)", Page 351



For tool carriers, the same requirements with respect to STL and M3D files apply as for fixtures.

**Further information:** "Options for fixture files", Page 258

If you are using CFT or CFX files, you must edit the templates in the **ToolHolderWizard** window.

**Further information:** "Customizing tool carrier templates with ToolHolderWizard", Page 212

### 9.5.1 Assigning a tool carrier

To assign a tool carrier to a tool:




- ▶ Select the **Tables** operating mode



- ▶ Select **Tool management**
- ▶ Select the tool you want to use
- ▶ Enable **Edit**

- ▶ If applicable, open the **Form** workspace
- ▶ In the **Additional geometry data** area, select the **KINEMATIC** parameter
- The control displays the available tool carriers in the **Tool-carrier kinematics** window.
- ▶ Select the desired tool carrier
- ▶ Select **OK**
- The control assigns the 3D model of the tool carrier to the tool.



The tool carrier will only be taken into account after the next tool call.

## Notes

- Sample files for tool carrier templates are available on the programming station in the **TNC:\system\Toolkinematics** folder.
- In the simulation, the tool carriers can be checked for collisions with the workpiece.

**Further information:** User's Manual for Programming and Testing

- On 3-axis machines with rectangular angle heads, tool carriers of angle heads are advantageous in connection with the tool axes **X** and **Y** because the control takes the dimensions of the angle heads into account.

HEIDENHAIN recommends machining in the **Z** tool axis. Using the software option Advanced Functions Set 1 (#8 / #1-01-1), you can tilt the working plane to the angle of the removable angled heads and thus keep working with the **Z** tool axis.

- The control monitors the tool carriers by means of Dynamic Collision Monitoring (DCM (#40 / #5-03-1)). Thus, the tool carriers are protected against collisions with fixtures or machine components.

**Further information:** "Dynamic Collision Monitoring (DCM) (#40 / #5-03-1)", Page 250

- A grinding tool to be dressed must not include a tool-carrier kinematics description (#156 / #4-04-1).
- Even if the inch unit of measure is active in the control or NC program, the control will interpret dimensions of 3D files in mm.

## 9.6 Customizing tool carrier templates with ToolHolderWizard



Many tool carriers only differ from others in terms of their dimensions, but their geometric shape is identical. HEIDENHAIN provides ready-to-use tool carrier templates for downloading. Tool carrier templates are 3D models with fixed geometries but editable dimensions.

They can be downloaded through the following link:

### HEIDENHAIN NC solutions

If you need further tool carrier templates, please contact your machine manufacturer or third-party vendor.

If you would like to use a CFX or CFT file, you need to parameterize the tool carrier template (i.e., to define the required dimensions). The tool carrier templates can be parametrized in the **ToolHolderWizard** window.

**Further information:** "Parameterizing tool carrier templates", Page 213

The **ToolHolderWizard** window contains the following icons:

Icon	Meaning
	Close the application
	Open file
	Switch between wire frame model and solid object view
	Switch between shaded and transparent view
	Show or hide <b>Transformation vectors</b>
	Show or hide <b>Names of collision objects</b>
	Show or hide <b>Test points</b>
	Show or hide <b>Measuring points</b>
	<b>Redo</b> (restore) the initial view
	<b>Orientations</b> (e.g., top view)



### 9.6.1 Parameterizing tool carrier templates

To parameterize a tool carrier template:



- ▶ Select the **Files** operating mode



- ▶ Open the **TNC:\system\Toolkinematics** folder
- ▶ Double-tap or double-click desired tool carrier template with the **\*.cft** extension
- The control opens the **ToolHolderWizard** window.
- ▶ Define the dimensions in the **Parameter** area
- ▶ Define a name with the **\*.cfx** extension in the **Output file** area
- ▶ Select **Generate file**
- The control shows the message that the tool carrier template was successfully generated and saves the file in the folder **TNC:\system\Toolkinematics**.
- ▶ Select **OK**
- ▶ Select **Close the application**



Parameterized tool carriers can consist of several subfiles. If the subfiles are incomplete, the control will display an error message.  
Only use fully parameterized tool carriers and error-free STL or M3D files!

## 9.7 Tool model (#140 / #5-03-2)

### Application

With the tool model, you can add to a tool definition (e.g., for forward or reverse deburring tools).

The tool model will be used in the following functions only:

- Representation in the **Simulation** workspace
- Consideration in Dynamic Collision Monitoring (DCM (#40 / #5-03-1))



The control will not use the tool model for path contours (e.g., for radius compensation or the **FUNCTION TCPM** function).

### Related topics

- The **Simulation** workspace
- Dynamic Collision Monitoring (DCM (#40 / #5-03-1))  
**Further information:** "Dynamic Collision Monitoring (DCM) (#40 / #5-03-1)", Page 250
- Tool carrier management  
**Further information:** "Tool carrier management", Page 209
- Validating 3D models with **OPC UA NC Server** (#56-61 / #3-02-1\*)  
**Further information:** "OPC UA NC Server (#56-61 / #3-02-1\*)", Page 568

## Requirements

- Software option Dynamic Collision Monitoring (DCM) version 2 (#140 / #5-03-2)
- The tool has been defined in tool management

**Further information:** "Tool management ", Page 205

- A suitable tool model exists

You must save the tool model in the **Toolshapes** folder.

Path: **TNC:\system\Toolshapes**

**Further information:** "Tool model requirements", Page 214

- The tool model has been assigned to the tool

**Further information:** "Assigning a tool model", Page 215

## Description of function

You can use the tool model for the following tool types:

- Milling tools
- Drilling tools
- Touch probes

**Further information:** "Tool types", Page 188

## Tool model requirements

### General requirements

The tool model must meet the following general requirements:

- Use permitted characters for the file name
- Use a supported format

**Further information:** User's Manual for Programming and Testing

- M3D file

- STL file

- Max. 20 000 triangles

- Triangular mesh forms a closed shell

**Further information:** "Generating STL files with 3D mesh (#152 / #1-04-1)", Page 351



For tool models, the same requirements with respect to STL and M3D files apply as for fixtures.

**Further information:** "Options for fixture files", Page 258

### Coordinate system requirements

The coordinate system of the tool model must meet the following requirements:

- The Z axis is the rotary axis of the tool model.

The control will align the tool model parallel to the tool coordinate system **T-CS**.

**Further information:** "Tool coordinate system T-CS", Page 235

- The coordinate origin of the 3D model must be identical to the measured point of the tool. If you measure the tool at the tool tip, you also need to set the coordinate origin of the 3D model to the tool tip.



If you measured a spherical cutter at the center of the sphere, you need to set the coordinate origin to the center of the sphere as well.

**Further information:** "Tool tip TIP ", Page 178

**Further information:** User's Manual for Programming and Testing

### 9.7.1 Assigning a tool model

To assign a tool model to a tool:



- ▶ Select the **Tables** operating mode



- ▶ Select **Tool management**
- ▶ Select the tool you want to use
- ▶ Activate **Edit**



- ▶ If applicable, open the **Form** workspace
- ▶ In the **Additional geometry data** area, select the **TSHAPE** parameter
- ▶ The control displays the available tool models in the **3D tool model** window.
- ▶ Select the desired tool model
- ▶ Select **OK**
- ▶ The control assigns the tool model to the tool.



The tool model will only be taken into account after the next tool call.

#### Notes

- The control will always take an assigned tool model into account (e.g., for the tool radius **R=0**). The simulation shows the correct shape of the tool model (e.g., in conjunction with a CAM output (center path)).
- When you delete a tool, make sure to remove the tool model from the **Toolshapes** folder as well. This way, you can avoid that the tool model is accidentally referenced for another tool.
- The **LCUTS** column of the tool table is independent of the datum of the tool model. The value is measured from the tool tip of the tool and is effective in the positive Z axis direction.  
**Further information:** "Tool table tool.t", Page 451
- Even if the inch unit of measure is active in the control or NC program, the control will interpret dimensions of 3D files in mm.

## 9.8 Tool usage test

### Application

The tool usage test allows checking the tools used in the NC program before starting the program. The control checks if the tools used are available in the machine magazine and have sufficient remaining tool life. Any missing tools can be stored in the machine or tools can be exchanged due to insufficient remaining tool life before starting the program. This avoids interruptions while the program is running.

#### Related topics

- Contents of the tool usage file  
**Further information:** "Tool usage file", Page 485
- Tool usage test in Batch Process Manager (#154 / #2-05-1)  
**Further information:** User's Manual for Programming and Testing

## Requirements

- To perform a tool usage test, you need a tool usage file  
In the machine parameter **createUsageFile** (no. 118701), the machine manufacturer defines whether the **Generate tool-usage file** function will be enabled.  
**Further information:** "Tool usage file", Page 485
- The **Generate tool-usage file** setting is set to **Once** or **Always**  
**Further information:** "Channel Settings", Page 546
- Use the same tool table for the simulation as for the program run  
**Further information:** User's Manual for Programming and Testing

## Description of function

### Creating the tool usage file

A tool usage file must be generated for performing the tool usage test.


When setting the **Generate tool-usage file** setting to **once** or **always**, the control will generate a tool usage file in the following cases:

- Simulating the NC program completely
- Executing the NC program completely
- Select the **Refresh** icon in the **Tool usage** area of the **Tool check** column

The control saves the tool usage file with the **\*.t.dep** extension in the same folder where the NC program is stored.

**Further information:** "Tool usage file", Page 485

## The Tool check column in the Program workspace

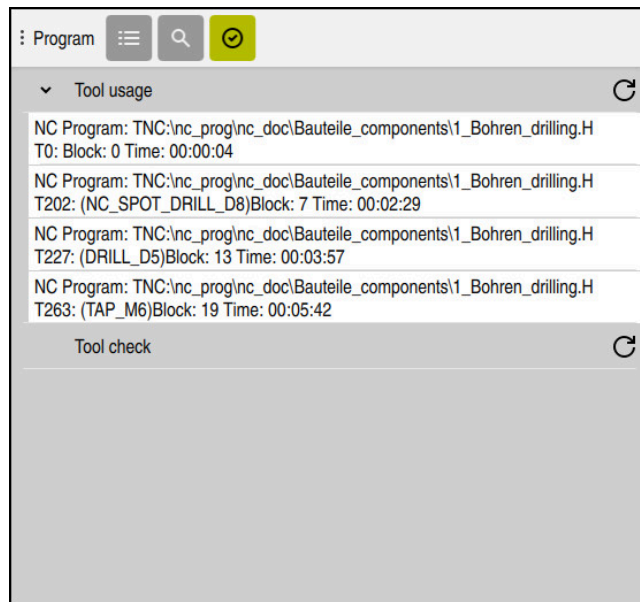

The **Tool check** column in the **Program** workspace

In the **Tool check** column of the **Program** workspace, the control displays the following areas:

- **Tool usage**  
**Further information:** "The Tool usage area", Page 217
- **Tool check**  
**Further information:** "The Tool check area", Page 218
- **Perform conditional stop**  
**Further information:** "Override Controller", Page 521

**Further information:** User's Manual for Programming and Testing

### The Tool usage area

If no tool-usage file has been created yet, the **Tool usage** area is empty.

**Further information:** "Creating the tool usage file", Page 216

**Further information:** "Tool usage file", Page 485

The control displays the chronological order of all tool calls in the **Tool usage** area, along with the following information:

- Path of NC program in which the tool is called
- Tool number and possibly tool name
- Row number of tool call in NC program
- Tool usage time between the tool changes

Select the **Refresh** icon to create a tool-usage file for your NC program.

### The Tool check area

The **Tool check** area is empty until you perform a tool usage test with the **Refresh** icon.

**Further information:** "Performing the tool usage test", Page 218

When performing the tool usage test, the control checks the following:

- The tool is defined in the tool management

**Further information:** "Tool management ", Page 205

- The tool is defined in the pocket table

**Further information:** "Pocket table tool\_p.tch", Page 482

- The tool has sufficient remaining tool life

The control checks if the remaining tool life **TIME1** minus **CUR\_TIME** is sufficient for the machining process. To meet this requirement, the remaining tool life must be longer than the tool usage time **WTIME** from the tool usage file.

**Further information:** "Tool table tool.t", Page 451

**Further information:** "Tool usage file", Page 485

The control displays the following information in the **Tool check** area:

- **OK:** All tools are available and have sufficient remaining tool life
- **No suitable tool:** The tool is not defined in the tool management  
In this case, check if the correct tool is selected in the tool call. Otherwise, create the tool in the tool management.
- **External tool:** The tool is defined in the tool management, but not in the pocket table  
If your machine is equipped with a magazine, position the missing tool in the magazine.
- **Insufficient remaining tool life:** The tool is blocked or does not have sufficient remaining tool life  
Change the tool or use a replacement tool.

**Further information:** User's Manual for Programming and Testing

## 9.8.1 Performing the tool usage test


To perform a tool usage test:



- ▶ Select the **Editor** operating mode



- ▶ Select **Add**
- ▶ Select the desired NC program



- ▶ Select **Open**
- The control opens the NC program in a new tab.



- ▶ Open the **Tool check** column



- ▶ In the **Tool usage** area, select **Refresh**
- The control generates a tool usage file and displays the tools used in the **Tool usage** area.

**Further information:** "Tool usage file", Page 485



- ▶ In the **Tool check** area, select **Refresh**
- The control performs the tool usage test.
- The **Tool check** area shows whether all tools are available and have sufficient remaining tool life.

## Notes

- If you double-tap or double-click a tool entry in the **Tool usage** or **Tool check** areas, the control switches to the tool selected in tool management. You can make modifications as needed.
- The **Simulation settings** window allows selecting when the control generates a tool usage file for the simulation.  
**Further information:** User's Manual for Programming and Testing
- The control saves the tool usage file as a dependent file (\*.dep).  
**Further information:** "Tool usage file", Page 485
- In the settings of the **Files** operating mode, you can specify whether the control displays dependent files in the file management.  
**Further information:** User's Manual for Programming and Testing
- The control displays the order of tool calls of the currently running NC program in the **T usage order** (#93 / #2-03-1) table.  
**Further information:** "T usage order (#93 / #2-03-1)", Page 487
- An overview of all tool calls of the NC program active in the program run is displayed by the control in the **Tooling list** table (#93 / #2-03-1).  
**Further information:** "Tooling list (#93 / #2-03-1)", Page 489
- The function **FN 18: SYSREAD ID975 NR1** allows querying the tool usage test for an NC program.
- The function **FN 18: SYSREAD ID975 NR2 IDX** allows querying the tool usage test for a pallet table. After **IDX** you define the pallet table row.
- The machine manufacturer uses the machine parameter **autoCheckPrg** (no. 129801) to define whether the control automatically generates a tool usage file upon selecting an NC program.
- The machine manufacturer uses the machine parameter **autoCheckPal** (no. 129802) to define whether the control automatically generates a tool usage file upon selecting a pallet table.





# 10

**Coordinate  
Transformation**

## 10.1 Reference systems

### 10.1.1 Overview

A control requires unambiguous coordinates in order to move an axis to a defined position correctly. For coordinates to be unambiguous, they not only require the values but also a reference system in which these values are valid.

The control differentiates between the following reference systems:

Abbrevia- tion	Meaning	Further information
<b>M-CS</b>	Machine coordinate system machine coordinate system	Page 224
<b>B-CS</b>	Basic coordinate system basic coordinate system	Page 227
<b>W-CS</b>	Workpiece coordinate system workpiece coordinate system	Page 229
<b>WPL-CS</b>	Working plane coordinate system working plane coordinate system	Page 231
<b>I-CS</b>	Input coordinate system input coordinate system	Page 234
<b>T-CS</b>	Tool coordinate system tool coordinate system	Page 235

The control uses different reference systems for different purposes. For example, this makes it possible to always exchange tools at the exact same position while maintaining the possibility of adapting an NC program to the workpiece position.

The reference systems build upon each other. The machine coordinate system **M-CS** is the fundamental reference system. The position and orientation of the following reference systems are determined by transformations of the M-CS.

#### Definition

##### Transformations

Translatory transformations each enable a shift along a number line. Rotatory transformations enable a rotation around a point.

10.1.2 Basics of coordinate systems


Types of coordinate systems

For coordinates to be unambiguous they must define one point in all axes of the coordinate system:

Axes	Function
One	In a one-dimensional coordinate system, one coordinate defines one point on a number line. Example: on a machine tool, a linear encoder represents a number line.
Two	In a two-dimensional coordinate system, two coordinates define one point in a plane.
Three	In a three-dimensional coordinate system, three coordinates define one point in space.


If the axes are arranged perpendicularly to each other, they create a Cartesian coordinate system.

Using the right-hand rule you can recreate a three-dimensional Cartesian coordinate system. The fingertips point in the positive directions of the three axes.

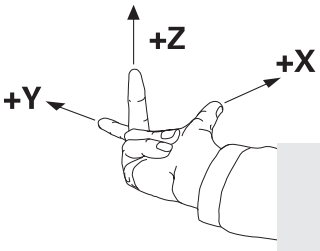

Origin of the coordinate system

Unambiguous coordinates require a defined reference point to which the values refer, starting from zero. This point is the coordinate origin, which lies at the intersection of the axes for all three-dimensional Cartesian coordinate systems of the control. The coordinate origin has the coordinates **X+0**, **Y+0**, and **Z+0**.

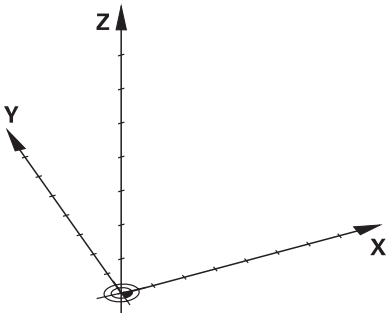

### 10.1.3 Machine coordinate system M-CS

#### Application


In the machine coordinate system **M-CS** you program constant positions, such as a safe position for retraction. The machine manufacturer also defines constant positions in the **M-CS**, such as the tool-change point.

#### Description of function

##### Properties of M-CS machine coordinate system


The machine coordinate system **M-CS** corresponds to the kinematics description and therefore to the actual mechanical design of the machine tool. The physical axes of a machine tool are not necessarily always exactly perpendicular to each other, and therefore do not represent a Cartesian coordinate system. The **M-CS** thus consists of multiple one-dimensional coordinate systems that correspond to the axes of the machine.

The machine manufacturer defines the position and orientation of the one-dimensional coordinate systems in the kinematics description.

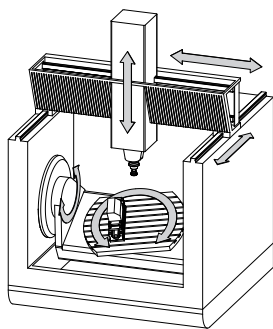

The machine datum is the coordinate origin of the **M-CS**. The machine manufacturer defines the machine datum in the machine configuration.

The values in the machine configuration define the zero positions of the position encoders and the corresponding machine axes. The machine datum does not necessarily have to be located in the theoretical intersection of the physical axes. It can also be located outside of the traverse range.

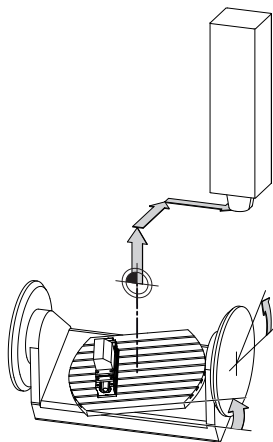

Position of the machine datum in the machine

### Transformations in the machine coordinate system M-CS

The following transformations can be defined in the **M-CS** machine coordinate system:

- Axis-specific shifts in the **OFFS** columns of the preset table

**Further information:** "Preset table \*.pr", Page 490



The machine manufacturer configures the **OFFS** columns of the preset table in accordance with the machine.

- Axis-specific shifts in the rotary and parallel axes using the datum table

**Further information:** User's Manual for Programming and Testing

- Axis-specific shifts in the rotary and parallel axes using the **TRANS DATUM** function

**Further information:** User's Manual for Programming and Testing

- **Additive offset (M-CS)** function for rotary axes in the **GPS** (#44 / #1-06-1) workspace

**Further information:** "Global program settings (GPS) (#44 / #1-06-1)", Page 291



The machine manufacturer can also define further transformations.

**Further information:** "Note", Page 226

### Position display

The following modes of the position display are referenced to the machine coordinate system **M-CS**:

- **Nominal reference position (RFNOML)**
- **Actual reference position (RFACTL)**

The difference between the values for the **RFACTL** and **ACTL** modes of an axis result from all stated offsets as well as all active transformations in other reference systems.

### Programming coordinate entry in machine coordinate system M-CS

With miscellaneous function **M91** you program the coordinates relative to the machine datum.

**Further information:** User's Manual for Programming and Testing

**Note**

The machine manufacturer can define the following further transformations in the machine coordinate system **M-CS**:

- Additive axis shifts for parallel axes with the **OEM-offset**
- Axis-specific shifts in the **OFFS** columns of the pallet preset table

**NOTICE****Danger of collision!**

The control may feature an additional pallet preset table, depending on the machine. Values that the machine manufacturer defined in the pallet preset table take effect before values that you defined in the preset table. The control indicates in the **Positions** workspace whether a pallet preset is active and if yes, which one. Since the values of the pallet preset table are neither visible nor editable outside the **Setup** application, there is a risk of collision during any movement!

- ▶ Refer to the machine manufacturer's documentation
- ▶ Use pallet presets only in conjunction with pallets
- ▶ Change pallet presets only after discussion with the machine manufacturer
- ▶ Check the pallet preset in the **Setup** application before you start machining

### Example

This example illustrates the difference between traverse movements with and without **M91**. The example shows the behavior with a Y axis as oblique axis that is not arranged perpendicularly to the ZX plane.

#### Traverse movement without M91

```
11 L IY+10
```

You use the Cartesian input coordinate system **I-CS** for programming. The **ACTL.** and **NOML.** modes of the position display show only a movement of the Y axis in the **I-CS**.

The control uses the defined values to determine the required traverse paths of the machine axes. Since the machine axes are not arranged perpendicularly to each other, the control moves the axes **Y** and **Z**.

Since the machine coordinate system **M-CS** is a projection of the machine axes, the **RFACTL** and **RFNOML** modes of the position display show movements of the Y axis and Z axis in the **M-CS**.

#### Traverse movement with M91

```
11 L IY+10 M91
```

The control moves the machine axis **Y** by 10 mm. The **RFACTL** and **RFNOML** modes of the position display show only a movement of the Y axis in the **M-CS**.

In contrast to the **M-CS**, the **I-CS** is a Cartesian coordinate system; the axes of the two reference systems do not coincide. The **ACTL.** and **NOML.** modes of the position display show movements of the Y axis and Z axis in the **I-CS**.

## 10.1.4 Basic coordinate system B-CS

### Application

In the basic coordinate system **B-CS** you define the position and orientation of the workpiece. You determine these values by using a 3D touch probe, for example. The control saves the values in the preset table.

### Description of function

#### Properties of the basic coordinate system B-CS

The basic coordinate system **B-CS** is a three-dimensional Cartesian coordinate system. Its coordinate origin is the end of the kinematics description.

The machine manufacturer defines the coordinate origin and orientation of the **B-CS**.


### Transformations in the basic coordinate system B-CS

The following columns of the preset table have an effect in the basic coordinate system **B-CS**:

- X
- Y
- Z
- SPA
- SPB
- SPC

You determine the position and orientation of the workpiece coordinate system **W-CS** by using a 3D touch probe, for example. The control saves the determined values as basic transformations in the **B-CS** in the preset table.

**Further information:** "Preset management", Page 238

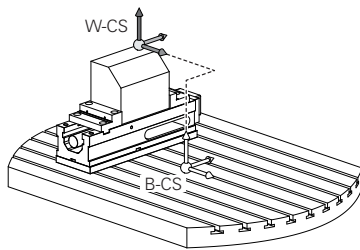

The machine manufacturer configures the **BASE TRANSFORM.** columns of the preset table in accordance with the machine.

**Further information:** "Note", Page 228

### Note

The machine manufacturer can define additional basic transformations in the pallet preset table.

### NOTICE

#### Danger of collision!

The control may feature an additional pallet preset table, depending on the machine. Values that the machine manufacturer defined in the pallet preset table take effect before values that you defined in the preset table. The control indicates in the **Positions** workspace whether a pallet preset is active and if yes, which one. Since the values of the pallet preset table are neither visible nor editable outside the **Setup** application, there is a risk of collision during any movement!

- ▶ Refer to the machine manufacturer's documentation
- ▶ Use pallet presets only in conjunction with pallets
- ▶ Change pallet presets only after discussion with the machine manufacturer
- ▶ Check the pallet preset in the **Setup** application before you start machining



### 10.1.5 Workpiece coordinate system W-CS

#### Application

In the workpiece coordinate system **W-CS** you define the position and orientation of the working plane. You do this by programming transformations and tilting the working plane.


#### Description of function

##### Properties of the workpiece coordinate system W-CS

The workpiece coordinate system **W-CS** is a three-dimensional Cartesian coordinate system. Its coordinate origin is the active workpiece preset from the preset table.

Both the position and orientation of the **W-CS** are defined by basic transformations in the preset table.

**Further information:** "Preset management", Page 238

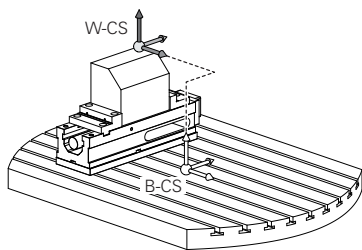

##### Transformations in the workpiece coordinate system (W-CS)


HEIDENHAIN recommends using the following transformations in the workpiece coordinate system **W-CS**:

- Axes **X, Y, Z** of the **TRANS DATUM** function before tilting the working plane  
**Further information:** User's Manual for Programming and Testing
- Columns **X, Y, Z** of the datum table before tilting the working plane  
**Further information:** User's Manual for Programming and Testing
- The **TRANS MIRROR** function or Cycle **8 MIRRORING** before tilting the working plane with spatial angles  
**Further information:** User's Manual for Programming and Testing  
**Further information:** User's Manual for Machining Cycles
- **PLANE** functions for tilting the working plane (#8 / #1-01-1)  
**Further information:** User's Manual for Programming and Testing



You can still run NC programs from earlier controls that contain Cycle **19 WORKING PLANE**.

With these transformations, the position and orientation of the working plane coordinate system **WPL-CS** are changed.

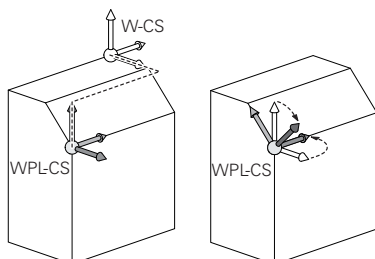

**NOTICE****Danger of collision!**

The control reacts differently to the various types of transformations as well as their programmed sequence. Unexpected movements or collisions can occur if the functions are not suitable.

- ▶ Program only the recommended transformations in the respective reference system
- ▶ Use tilting functions with spatial angles instead of with axis angles
- ▶ Use the Simulation mode to test the NC program



In the machine parameter **planeOrientation** (no. 201202), the machine manufacturer defines whether the control interprets input values of Cycle **19 WORKING PLANE** as spatial angles or as axis angles.

The type of tilting function has the following effects on the result:

- If you tilt using spatial angles (**PLANE** functions except for **PLANE AXIAL** or Cycle **19**), previously programmed transformations will change the position of the workpiece datum and the orientation of the rotary axes:
  - Shifting with the **TRANS DATUM** function will change the position of the workpiece datum.
  - Mirroring changes the orientation of the rotary axes. The entire NC program, including the spatial angles, will be mirrored.
- If you tilt using axis angles (**PLANE AXIAL** or Cycle **19**), a previously programmed mirroring has no effect on the orientation of the rotary axes. You use these functions for direct positioning of the machine axes.

### **Additional transformations with Global Program Settings (GPS (#44 / #1-06-1))**

In the **GPS** workspace (#167 / #1-02-1), you can define the following additional transformations in the workpiece coordinate system **W-CS**:

- **Additive basic rotat. (W-CS)**

The effects of this function are added to a basic rotation or a 3D basic rotation from the preset table or the pallet preset table. This function is the first transformation that is possible in the **W-CS**.

- **Shift (W-CS)**

This function is in effect in addition to a datum shift defined in the NC program with the **TRANS DATUM** function and before the working plane is tilted.

- **Mirroring (W-CS)**

The function is in effect in addition to a mirror image (**TRANS MIRROR** function or Cycle **8 MIRRORING**) defined in the NC program and before tilting the working plane.

- **Shift (mW-CS)**

This function is in effect in the modified workpiece coordinate system. This function is active after the **Shift (W-CS)** and **Mirroring (W-CS)** functions and before the working plane is tilted.

**Further information:** "Globale Programmeinstellungen GPS", Page

## Notes

- The programmed values in the NC program refer to the input coordinate system **I-CS**. If you do not program any transformations in the NC program, then the origin and position of the workpiece coordinate system **W-CS**, the working plane coordinate system **WPL-CS**, and the **I-CS** are identical.  
**Further information:** "Input coordinate system I-CS", Page 234
- During pure 3-axis machining, the workpiece coordinate system **W-CS** and the working plane coordinate system **WPL-CS** are identical. In this case, all transformations influence the input coordinate system **I-CS**.  
**Further information:** "Working plane coordinate system WPL-CS", Page 231
- The result of transformations built upon each other depends on the programming sequence.

### 10.1.6 Working plane coordinate system WPL-CS

#### Application

In the working plane coordinate system **WPL-CS** you define the position and orientation of the input coordinate system **I-CS** and therefore the reference for the coordinate system in the NC program. You do this by programming transformations after having tilted the working plane.

**Further information:** "Input coordinate system I-CS", Page 234


#### Description of function

##### Properties of the working plane coordinate system WPL-CS

The working plane coordinate system **WPL-CS** is a three-dimensional Cartesian coordinate system. You use transformations in the workpiece coordinate system **W-CS** to define the coordinate origin of the **WPL-CS**.

**Further information:** "Workpiece coordinate system W-CS", Page 229

If no transformations are defined in the **W-CS**, then the position and orientation of the **W-CS** and **WPL-CS** are identical.

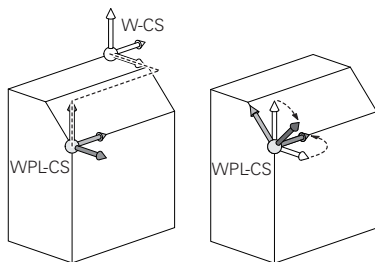


## Transformations in the working plane coordinate system WPL-CS

HEIDENHAIN recommends using the following transformations in the working plane coordinate system **WPL-CS**:

- Axes **X, Y, Z** of the **TRANS DATUM** function  
**Further information:** User's Manual for Programming and Testing
- The **TRANS MIRROR** function or Cycle **8 MIRRORING**  
**Further information:** User's Manual for Programming and Testing  
**Further information:** User's Manual for Machining Cycles
- The **TRANS ROTATION** function or Cycle **10 ROTATION**  
**Further information:** User's Manual for Programming and Testing  
**Further information:** User's Manual for Machining Cycles
- The **TRANS SCALE** function or Cycle **11 SCALING FACTOR**  
**Further information:** User's Manual for Programming and Testing  
**Further information:** User's Manual for Machining Cycles
- Cycle **26 AXIS-SPECIFIC SCALING**  
**Further information:** User's Manual for Machining Cycles
- The **PLANE RELATIV** function (#8 / #1-01-1)  
**Further information:** User's Manual for Programming and Testing

With these transformations you modify the position and orientation of the input coordinate system **I-CS**.

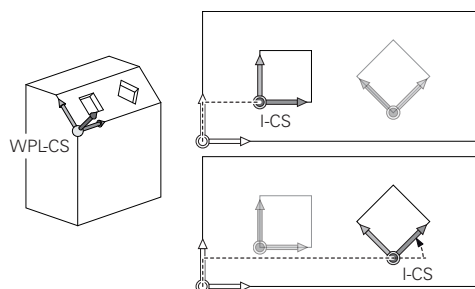

### NOTICE

#### Danger of collision!

The control reacts differently to the various types of transformations as well as their programmed sequence. Unexpected movements or collisions can occur if the functions are not suitable.

- ▶ Program only the recommended transformations in the respective reference system
- ▶ Use tilting functions with spatial angles instead of with axis angles
- ▶ Use the Simulation mode to test the NC program

## Additional transformations with Global Program Settings (GPS (#167 / #1-02-1))

The **Rotation (WPL-CS)** transformation in the **GPS** workspace has an additive effect to a rotation in the NC program.

**Further information:** "Global program settings (GPS) (#44 / #1-06-1)", Page 291

**Additional transformations with Mill Turning (#50 / #4-03-1)**

The following additional transformations are available with the mill-turning software option:

- Precession angle with the following cycles:
  - Cycle **800 ADJUST XZ SYSTEM**
  - Cycle **801 RESET ROTARY COORDINATE SYSTEM**
  - Cycle **880 GEAR HOBBING**
- OEM transformations defined by machine manufacturers for special turning kinematics



Machine manufacturers can also define an OEM transformation and a precession angle without the Mill Turning software option.

An OEM transformation takes effect before the precession angle.

If an OEM transformation or a precession angle is defined, the control shows the values on the **POS** tab of the **Status** workspace. These transformations are also in effect in milling mode!

**Further information:** "POS tab", Page 137

**Additional transformation with Gear Cutting (#157 / #4-05-1)**

You can use the following cycles to define a precession angle:

- Cycle **286 GEAR HOBBING**
- Cycle **287 GEAR SKIVING**



Machine manufacturers can also define a precession angle without the Gear Cutting software option (#157 / #4-05-1).

**Notes**

- The programmed values in the NC program refer to the input coordinate system **I-CS**. If you do not program any transformations in the NC program, then the origin and position of the workpiece coordinate system **W-CS**, the working plane coordinate system **WPL-CS**, and the **I-CS** are identical.  
**Further information:** "Input coordinate system I-CS", Page 234
- During pure 3-axis machining, the workpiece coordinate system **W-CS** and the working plane coordinate system **WPL-CS** are identical. In this case, all transformations influence the input coordinate system **I-CS**.
- The result of transformations built upon each other depends on the programming sequence.
- As a **PLANE** function (#8 / #1-01-1), **PLANE RELATIV** is in effect in the workpiece coordinate system **W-CS** and orients the working plane coordinate system **WPL-CS**. The values of additive tilting always relate to the current **WPL-CS**.

### 10.1.7 Input coordinate system I-CS

#### Application

The programmed values in the NC program refer to the input coordinate system **I-CS**. You use positioning blocks to program the position of the tool.


#### Description of function

##### Properties of the input coordinate system I-CS

The input coordinate system **I-CS** is a three-dimensional Cartesian coordinate system. You use transformations in the working plane coordinate system **WPL-CS** to define the coordinate origin of the **I-CS**.

**Further information:** "Working plane coordinate system WPL-CS", Page 231

If no transformations are defined in the **WPL-CS**, then the position and orientation of the **WPL-CS** and **I-CS** are identical.

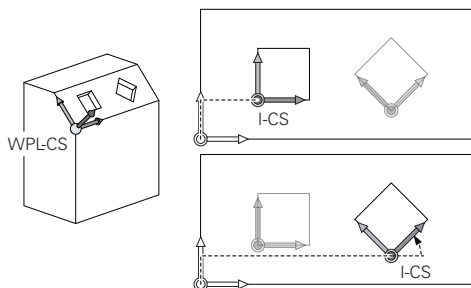

##### Positioning blocks in the input coordinate system I-CS

In the input coordinate system **I-CS** you use positioning blocks to define the position of the tool. The position of the tool defines the position of the tool coordinate system **T-CS**.

**Further information:** "Tool coordinate system T-CS", Page 235

You can define the following positioning blocks:

- Paraxial positioning blocks
- Path functions with Cartesian or polar coordinates
- Straight lines **LN** with Cartesian coordinates and surface normal vectors (#9 / #4-01-1)
- Cycles

<b>11 X+48 R+</b>	; Paraxial positioning block
<b>11 L X+48 Y+102 Z-1.5 R0</b>	; Path function <b>L</b>
<b>11 LN X+48 Y+102 Z-1.5 NX-0.04658107 NY0.00045007 NZ0.8848844 R0</b>	; Straight line <b>LN</b> with Cartesian coordinates and surface normal vector

#### Position display

The following modes of the position display are referenced to the input coordinate system **I-CS**:

- **Nominal pos. (NOML)**
- **Actual pos. (ACT)**

**Notes**

- The programmed values in the NC program refer to the input coordinate system **I-CS**. If you do not program any transformations in the NC program, then the origin and position of the workpiece coordinate system **W-CS**, the working plane coordinate system **WPL-CS**, and the **I-CS** are identical.
- During pure 3-axis machining, the workpiece coordinate system **W-CS** and the working plane coordinate system **WPL-CS** are identical. In this case, all transformations influence the input coordinate system **I-CS**.

**Further information:** "Working plane coordinate system WPL-CS", Page 231

**10.1.8 Tool coordinate system T-CS****Application**

In the tool coordinate system **T-CS** the control implements tool compensations and tool inclinations.

## Description of function

### Properties of the tool coordinate system T-CS

The tool coordinate system **T-CS** is a three-dimensional Cartesian coordinate system. Its coordinate origin is the tool tip TIP.

You make entries in the tool management to define the tool tip relative to the tool carrier reference point. The machine manufacturer usually defines the tool carrier reference point on the spindle tip.

**Further information:** "Presets in the machine", Page 172

You define the tool tip with the following columns of the tool management relative to the tool carrier reference point:

- **L**
- **DL**
- **ZL** (#50 / #4-03-1) (#156 / #4-04-1)
- **XL** (#50 / #4-03-1) (#156 / #4-04-1)
- **YL** (#50 / #4-03-1) (#156 / #4-04-1)
- **DZL** (#50 / #4-03-1) (#156 / #4-04-1)
- **DXL** (#50 / #4-03-1) (#156 / #4-04-1)
- **DYL** (#50 / #4-03-1) (#156 / #4-04-1)
- **LO** (#156 / #4-04-1)
- **DLO** (#156 / #4-04-1)

**Further information:** "Tool carrier reference point", Page 177

You use positioning blocks in the input coordinate system **I-CS** to define the position of the tool and therefore the position of the **T-CS**.

**Further information:** "Input coordinate system I-CS", Page 234

You can use miscellaneous functions to also program in other reference systems, such as **M91** for the machine coordinate system **M-CS**.


**Further information:** User's Manual for Programming and Testing

The orientation of the **T-CS** in most cases is identical to that of the **I-CS**.

If the following functions are active, the orientation of the **T-CS** depends on the tool angle of inclination:

- Miscellaneous function **M128** (#9 / #4-01-1)
- The **FUNCTION TCPM** function (#9 / #4-01-1)

**Further information:** User's Manual for Programming and Testing

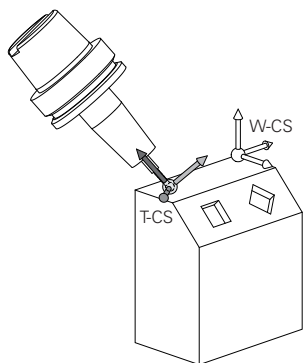



Use the miscellaneous function **M128** to define the tool angle of inclination in the machine coordinate system **M-CS** using axis angles. The effects of the tool angle of inclination depend on the machine kinematics:

**Further information:** User's Manual for Programming and Testing

<b>11 L X+10 Y+45 A+10 C+5 R0 M128</b>	; Straight line with miscellaneous function <b>M128</b> and axis angles
--	---

You can also define a tool angle of inclination in the working plane coordinate system **WPL-CS**, for example with **FUNCTION TCPM** or a straight line **LN**.

<b>11 FUNCTION TCPM F TCP AXIS SPAT PATHCTRL AXIS</b>	; <b>FUNCTION TCPM</b> with spatial angles
<b>12 L A+0 B+45 C+0 R0 F2500</b>	

<b>11 LN X+48 Y+102 Z-1.5 NX-0.04658107 NY0.00045007 NZ0.8848844 TX-0.08076201 TY-0.34090025 TZ0.93600126 R0 M128</b>	; Straight line <b>LN</b> with surface normal vector and tool orientation
---	---

### Transformations in the tool coordinate system T-CS

The following tool compensations have an effect in the tool coordinate system **T-CS**:

- Compensation values from the tool management  
**Further information:** User's Manual for Programming and Testing
- Compensation values from the tool call  
**Further information:** User's Manual for Programming and Testing
- Values of the compensation tables **\*.tco**  
**Further information:** User's Manual for Programming and Testing
- Values of **FUNCTION TURNDATA CORR T-CS** (#50 / #4-03-1)  
**Further information:** User's Manual for Programming and Testing
- 3D tool compensation with surface normal vectors (#9 / #4-01-1)  
**Further information:** User's Manual for Programming and Testing
- 3D tool radius compensation depending on the contact angle with compensation tables (#92 / #2-02-1)  
**Further information:** User's Manual for Programming and Testing

### Position display (#44 / #1-06-1)

The display of the virtual tool axis **VT** refers to the tool coordinate system **T-CS**.

The control shows the values of **VT** in the **GPS** (#44 / #1-06-1) workspace and on the **GPS** tab of the **Status** workspace.

**Further information:** "Global program settings (GPS) (#44 / #1-06-1)", Page 291

The HR 520 and HR 550 FS handwheels show the values of **VT** in the display.

**Further information:** "Contents of an electronic handwheel display", Page 510

## 10.2 Preset management

### Application

The preset management allows setting and activating single presets. The presets to be saved may include, for example, the position and the misalignment of a workpiece in the preset table. The active row of the preset table serves as the workpiece preset in the NC program and as the origin of workpiece coordinate system **W-CS**.

**Further information:** "Presets in the machine", Page 172

Use the preset management in the following cases:

- To tilt the working plane of a machine with table or head rotation axes (#8 / #1-01-1)
- To work on a machine with a head change system
- To machine several workpieces that are clamped down at different misaligned positions
- If REF-based datum tables were used on previous control models

### Related topics

- Contents of preset table, write protection

**Further information:** "Preset table \*.pr", Page 490

### Description of function

#### Setting presets

Presets can be set in the following ways:


- Setting axis positions manually  
**Further information:** "Setting a preset manually", Page 241
- Touch probe cycles in the **Setup** application  
**Further information:** "Touch Probe Functions in the Manual Operating Mode", Page 375
- Touch probe cycles in the NC program  
**Further information:** User's Manual for Measuring Cycles for Workpieces and Tools

If you try to write a value in a write-protected preset table row, the control cancels this process with an error message. Write-protection for this row must be rescinded first.

**Further information:** "Removing write protection", Page 496

## Setting a preset with milling cutters

If no workpiece touch probe is available, the preset can also be set by using a milling cutter. In this case, the values are not obtained by probing, but by scratching.

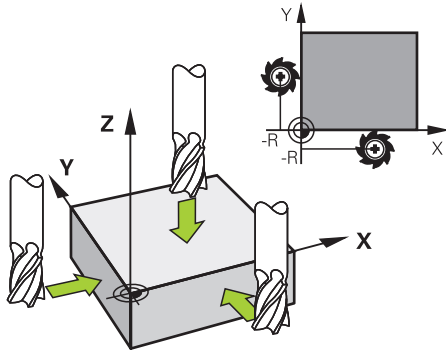

When scratching with a milling cutter, the tool is slowly moved to the workpiece edge in the **Manual operation** application while the spindle is rotating.

As soon as the tool produces chips on the workpiece, the preset is manually set in the desired axis.

**Further information:** "Setting a preset manually", Page 241

## Activating presets

### NOTICE

#### Caution: Significant property damage!

Undefined fields in the preset table behave differently from fields defined with the value **0**: Fields defined with the value **0** overwrite the previous value when activated, whereas with undefined fields the previous value is kept. If the previous value is kept, there is a danger of collision!

- ▶ Before activating a preset, check whether all columns contain values.
- ▶ For undefined columns, enter values (e.g., **0**)
- ▶ As an alternative, have the machine manufacturer define **0** as the default value for the columns

Presets can be activated in the following ways:

- Activating manually in the **Tables** operating mode  
**Further information:** "Activating a preset manually", Page 242
- Cycle **247 PRESETTING**  
**Further information:** User's Manual for Machining Cycles
- **PRESET SELECT** function  
**Further information:** User's Manual for Programming and Testing

When activating a preset, the control resets the following transformations:

- Datum shift with the **TRANS DATUM** function
- Mirroring with the **TRANS MIRROR** function or cycle **8 MIRRORING**
- Rotation with the **TRANS ROTATION** function or cycle **10 ROTATION**
- Scaling with the **TRANS SCALE** function or cycle **11 SCALING FACTOR**
- Axis-specific scaling with Cycle **26 AXIS-SPECIFIC SCALING**

Tilting the working plane by using **PLANE** functions or Cycle **19 WORKING PLANE** will not be reset by the control.

### Basic rotation and 3D basic rotation

The **SPA**, **SPB** and **SPC** columns define a spatial angle for orienting the workpiece coordinate system **W-CS**. This spatial angle defines the basic rotation or 3D basic rotation of the preset.

**Further information:** "Workpiece coordinate system W-CS", Page 229

When a rotation around the tool axis is defined, the preset contains a basic rotation (e.g., **SPC** for tool axis **Z**). If one of the remaining columns is defined, the preset contains a 3D basic rotation. If the workpiece preset contains a basic rotation or 3D basic rotation, the control takes these values into account when executing an NC program.


You can use the **3D ROT** (#8 / #1-01-1) button to define whether the control takes a basic rotation or 3D basic rotation into account in the **Manual operation** application.

**Further information:** User's Manual for Programming and Testing

When a basic rotation or 3D basic rotation is active, the control displays a symbol in the **Positions** workspace.

**Further information:** User's Manual for Programming and Testing

### 10.2.1 Setting a preset manually

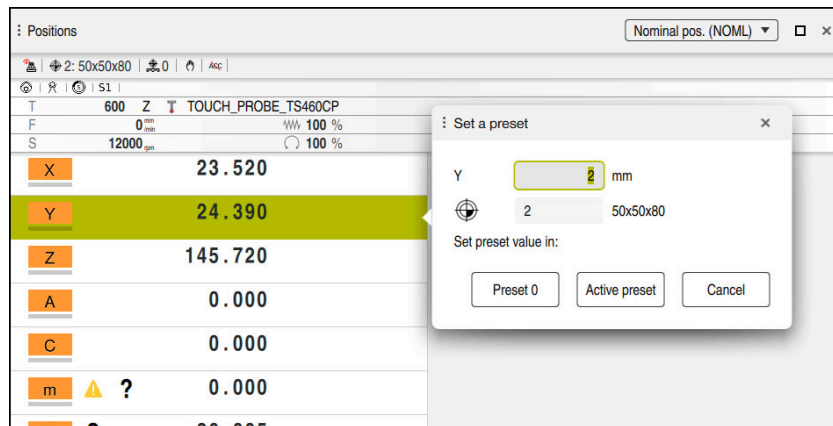


The **Set a preset** window in the **Positions** workspace

When setting the preset manually, the values can be written either in row 0 of the preset table or in the active row.

To set a preset manually in an axis:



- ▶ Select the **Manual operation** application in the **Manual** operating mode
- ▶ Open the **Positions** workspace
- ▶ Traverse the tool to the desired position (e.g., for scratching)
- ▶ Select the row of the desired axis
- ▶ The control opens the **Set a preset** window.
- ▶ Enter the value of the current axis position, relating to the new preset (e.g., **0**)
- ▶ The control activates the **Preset 0** and **Active preset** buttons for selection.
- ▶ Select an option (e.g., **Active preset**)
- ▶ The control saves the value in the selected preset table row and closes the **Set a preset** window.
- ▶ The control updates the values in the **Positions** workspace.



- The **Set the preset** button in the function bar opens the **Set a preset** window for the row marked in green.
- When selecting **Preset 0**, the control automatically activates row 0 of the preset table as the workpiece preset.

## 10.2.2 Activating a preset manually

### NOTICE

#### Caution: Significant property damage!

Undefined fields in the preset table behave differently from fields defined with the value **0**: Fields defined with the value **0** overwrite the previous value when activated, whereas with undefined fields the previous value is kept. If the previous value is kept, there is a danger of collision!

- ▶ Before activating a preset, check whether all columns contain values.
- ▶ For undefined columns, enter values (e.g., **0**)
- ▶ As an alternative, have the machine manufacturer define **0** as the default value for the columns

To activate a preset manually:



- ▶ Select the **Tables** operating mode

- ▶ Select the **Presets** application

- ▶ Select the desired row

- ▶ Select **Activate the preset**

- > The control activates the preset.

- > The control displays the number and comment of the active preset in the **Positions** workspace and in the status overview.

Activate  
the preset

**Further information:** "Description of function", Page 121

**Further information:** "Status overview on the TNC bar", Page 127

### Notes

- In the optional machine parameter **initial** (no. 105603), the machine manufacturer defines a default value for every column of a new row.
- In the optional machine parameter **CfgPresetSettings** (no. 204600), the machine manufacturer can block the setting of a preset in individual axes.
- When setting a preset, the positions of the rotary axes must match the tilting situation in the **3-D rotation** window (#8 / #1-01-1). If the rotary axes are positioned differently than is defined in the **3-D rotation** window, then, by default, the control aborts with an error message.

**Further information:** User's Manual for Programming and Testing

In the optional machine parameter **chkTiltingAxes** (no. 204601) the machine manufacturer defines the control reaction.

- When scratching a workpiece with the radius of a milling cutter, the radius value must be taken into account in the preset.
- Even if the current preset contains a basic rotation or a 3D basic rotation, the **PLANE RESET** function will position the rotary axes at 0° in the **MDI** application.

**Further information:** "The MDI Application", Page 365

- The control may feature a pallet preset table, depending on the machine. When a pallet preset is active, the presets in the preset table are referenced to this pallet preset.

**Further information:** User's Manual for Programming and Testing

## 10.3 Tilting the working plane (#8 / #1-01-1)


### 10.3.1 Fundamentals

Machines with rotary axes allow machining of, for example, several workpiece sides after one clamping process, by tilting the working plane. The tilting functions also allow aligning a workpiece clamped at an incorrect angle.

The working plane can be tilted only when tool axis **Z** is active.

The control functions for tilting the working plane are coordinate transformations. The working plane is always perpendicular to the direction of the tool axis.

**Further information:** "Working plane coordinate system WPL-CS", Page 231

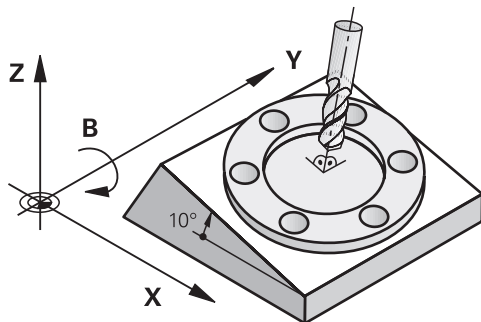

Two functions are available for tilting the working plane:

- Manual tilting with the **3-D rotation** window in the **Manual operation** application

**Further information:** "The 3-D rotation window (#8 / #1-01-1)", Page 245

- Tilting under program control with the **PLANE** functions in the NC program

**Further information:** User's Manual for Programming and Testing



You can still run NC programs from earlier controls that contain Cycle **19 WORKING PLANE**.

## Notes concerning different machine kinematics

When no transformations are active and the working plane is not tilted, the linear machine axes move in parallel with the basic coordinate system **B-CS**. In this process, machines behave almost identically, regardless of the kinematics.

**Further information:** "Basic coordinate system B-CS", Page 227


When tilting the working plane, the control moves the machine axes according to the kinematics.

Please observe the aspects below regarding the machine kinematics:

### ■ Machine with table rotary axes

With this kinematic model, the table rotary axes execute the tilting movement and the position of the workpiece in the work envelope changes. The linear machine axes move in the tilted working plane coordinate system **WPL-CS** just as they do in the non-tilted **B-CS**.


**Further information:** "Working plane coordinate system WPL-CS", Page 231

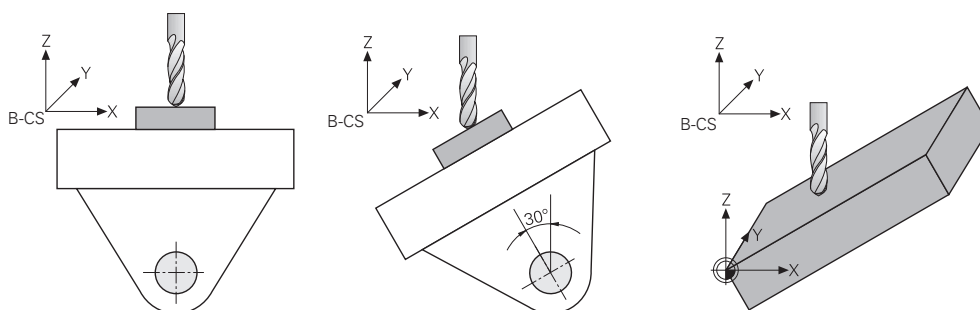

### ■ Machine with head rotary axes

With this kinematic model, the head rotary axes execute the tilting movement and the position of the workpiece in the work envelope remains the same. In the tilted **WPL-CS**, at least two linear machine axes no longer move in parallel with the non-tilted **B-CS**, depending on the rotary angle.

**Further information:** "Working plane coordinate system WPL-CS", Page 231

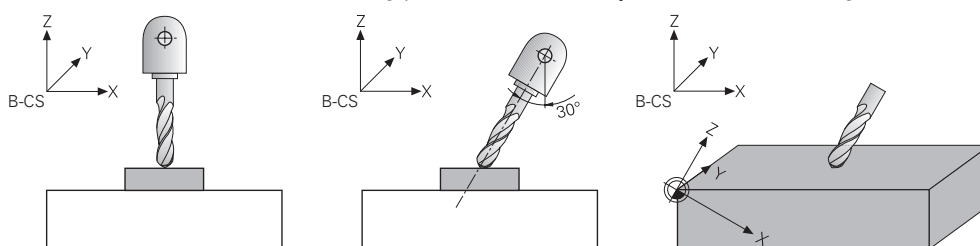



### 10.3.2 The 3-D rotation window (#8 / #1-01-1)

#### Application

The **3-D rotation** window allows activating and deactivating tilting of the working plane for the **Manual** and **Program Run** operating modes. This allows restoring the tilted working plane and retracting the tool (e.g., after program cancellation in the **Manual operation** application).

#### Related topics

- Tilting the working plane in the NC program  
**Further information:** User's Manual for Programming and Testing
- Reference systems of the control  
**Further information:** "Reference systems", Page 222


#### Requirements

- Machine with rotary axes
- Kinematics description  
To calculate the tilting angles, the control requires a kinematics description prepared by the machine manufacturer.
- Software option Advanced Functions Set 1 (#8 / #1-01-1)
- Function enabled by the machine manufacturer  
In the machine parameter **rotateWorkPlane** (no. 201201), the machine manufacturer defines whether tilting the working plane is allowed on the machine.
- Tool with tool axis **Z**

### Description of function

The **3-D rotation** window can be opened with the **3D ROT** button in the **Manual operation** application.

**Further information:** "The Manual operation application", Page 162

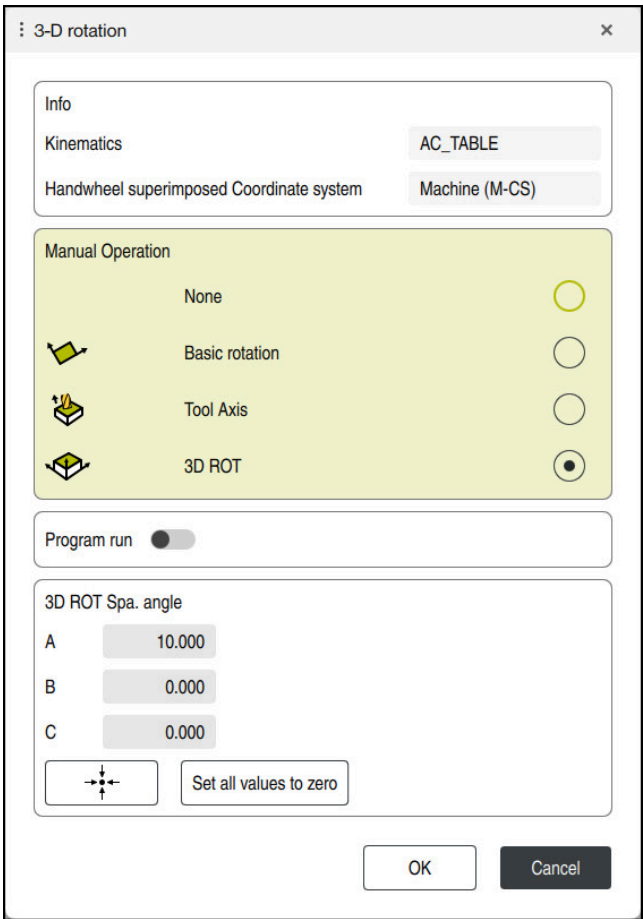

The **3-D rotation** window

The **3-D rotation** window contains the following information:

Area	Contents
Info	<p>Information about the machine:</p> <ul style="list-style-type: none"> <li>■ Name of the active machine kinematics</li> <li>■ Coordinate system in which handwheel superimpositioning is active</li> </ul> <p><b>Further information:</b> "Reference systems", Page 222</p> <p><b>Further information:</b> "The Handwheel superimp. function", Page 298</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p>

Area	Contents
<b>Manual Operation</b>	<p>Effect of the tilting function in the <b>Manual</b> operating mode:</p> <ul style="list-style-type: none"> <li>■ <b>None</b> The control will not take the rotary axes positions that are not equal to 0 into account. Traverses take place in the <b>W-CS</b> workpiece coordinate system. <b>Further information:</b> "Workpiece coordinate system W-CS", Page 229</li> <li>■ <b>Basic rotation</b> The control takes the columns <b>SPA</b>, <b>SPB</b> and <b>SPC</b> into account, but no rotary axis positions that are not equal to 0. Traverses take place in the <b>W-CS</b> workpiece coordinate system. <b>Further information:</b> "Selection item Basic rotation", Page 247</li> <li>■ <b>Tool axis</b> This is relevant only for head rotary axes. The traverses take place in the <b>T-CS</b> tool coordinate system. <b>Further information:</b> "The Tool axis selection item", Page 248</li> <li>■ <b>3D ROT</b> The control takes the positions of rotary axes and columns <b>SPA</b>, <b>SPB</b> and <b>SPC</b> of the preset table into account. The traverses take place in the <b>WPL-CS</b> working plane coordinate system. <b>Further information:</b> "The 3D ROT selection item", Page 248</li> </ul>
<b>Program run</b>	<p>When activating the <b>Tilt working plane</b> function for the <b>Program run</b> operating mode, the entered angle of rotation applies starting from the first NC block of the NC program to be run.</p> <p>If you use Cycle <b>19 WORKING PLANE</b> or the <b>PLANE</b> function in the NC program, then the angular values defined there become active. The control will reset the entered angular values to 0.</p>
<b>3D ROT Spa. angle</b>	<p>Currently active angle for the <b>3D ROT</b> selection item</p> <p>The machine manufacturer uses the machine parameter <b>planeOrientation</b> (no. 201202) to define whether the control calculates with spatial angles <b>SPA</b>, <b>SPB</b> and <b>SPC</b> or with the axis values of the existing rotary axes.</p>

Confirm the selection with **OK**. If a selection item is active in the **Manual Operation** or **Program run** areas, then the control highlights the area in green.

If a selection item is active in the **3-D rotation** window, then the control displays the appropriate symbol in the **Positions** workspace.

**Further information:** "The Positions workspace", Page 121

### Selection item Basic rotation

If you select **Basic rotation**, then the axes move, taking into account a basic rotation or a 3D basic rotation.

**Further information:** "Basic rotation and 3D basic rotation", Page 240

The axis movements take effect in the **W-CS** workpiece coordinate system.

**Further information:** "Workpiece coordinate system W-CS", Page 229

If the active workpiece preset contains a basic rotation or 3D basic rotation, the control additionally displays the corresponding icon in the **Positions** workspace.

**Further information:** "The Positions workspace", Page 121

With this selection item, the **3D ROT Spa. angle** area has no function.

### The Tool axis selection item

If you select **Tool axis**, then you can move in the positive or negative direction of the tool axis. The control locks all other axes. This selection item makes sense only for machines with rotary head axes.

The traverse movement is active in the **T-CS** tool coordinate system.

**Further information:** "Tool coordinate system T-CS", Page 235

This selection item can be used, for example, in the following cases:

- When retracting the tool in the direction of the tool axis during an interruption of a 5-axis machining program.
- When traversing with the axis keys or the handwheel with a pre-positioned tool.

With this selection item, the **3D ROT Spa. angle** area has no function.

### The 3D ROT selection item

If you select **3D ROT**, then all axes move in the tilted machining plane. The traversing movements are active in the **WPL-CS** working plane coordinate system.

**Further information:** "Working plane coordinate system WPL-CS", Page 231

If a basic rotation or 3D basic rotation has additionally been saved to the preset table, then it will automatically be taken into account.

In the **3D ROT Spa. angle** area, the control shows the currently active angle. The spatial angle can also be edited.



If you edit the values in the **3D ROT Spa. angle** area, then you must position the rotary axes (e.g., in the **MDI** application).

### Notes

- The control uses the **COORD ROT** transformation type in the following situations:
  - if a **PLANE** function was previously executed with **COORD ROT**
  - after **PLANE RESET**
  - with corresponding configuration of the machine parameter **CfgRot-WorkPlane** (no. 201200) by the machine manufacturer



**COORD ROT** is only possible with a free rotary axis.

**Further information:** User's Manual for Programming and Testing

- The control uses the **TABLE ROT** transformation type in the following situations:
  - if a **PLANE** function was previously executed with **TABLE ROT**
  - with corresponding configuration of the machine parameter **CfgRot-WorkPlane** (no. 201200) by the machine manufacturer
- When setting a preset, the positions of the rotary axes must match the tilting situation in the **3-D rotation** window (#8 / #1-01-1). If the rotary axes are positioned differently than is defined in the **3-D rotation** window, then, by default, the control aborts with an error message.  
In the optional machine parameter **chkTiltingAxes** (no. 204601) the machine manufacturer defines the control reaction.
- A tilted working plane will remain active even after a control restart.  
**Further information:** "The Referencing workspace", Page 157
- PLC positionings defined by the machine manufacturer are not allowed when the working plane is tilted.

11


**Collision Monitoring**

## 11.1 Dynamic Collision Monitoring (DCM) (#40 / #5-03-1)

### Fundamentals

#### Application

Dynamic Collision Monitoring (DCM, dynamic collision monitoring) can be used for collision monitoring of machine components defined by the machine manufacturer. When the collision objects come closer to each other than a defined minimum distance, the control stops and displays an error message. This procedure reduces the risk of collision.

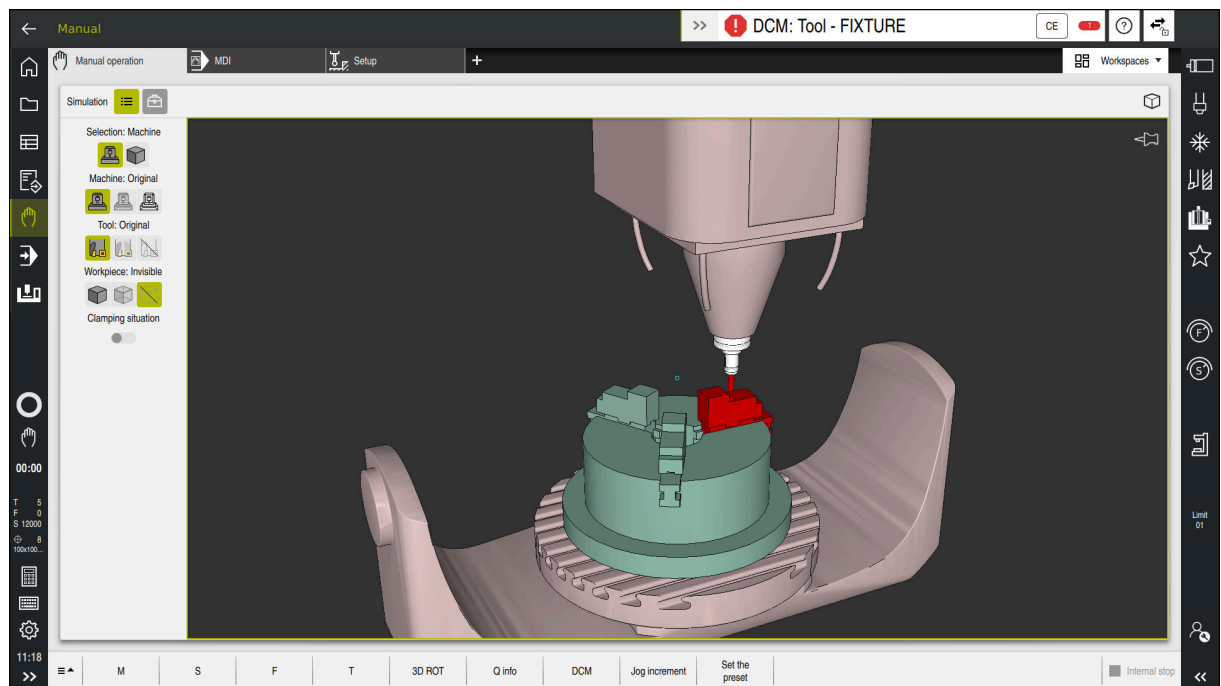

Dynamic Collision Monitoring (DCM) including collision warning

#### Related topics

- Fundamentals of fixture management  
**Further information:** "Fixture management", Page 257
- Extended tests in the simulation  
**Further information:** User's Manual for Programming and Testing
- Fundamentals of tool carrier management  
**Further information:** "Tool carrier management", Page 209
- Reduce the minimum clearance between two collision objects (#140 / #5-03-2)  
**Further information:** User's Manual for Programming and Testing

## Requirements

- Dynamic Collision Monitoring (DCM) software option (#40 / #5-03-1)
- Control prepared by the machine manufacturer  
The machine manufacturer must define a kinematics model of the machine, insertion point for fixtures and the safety distance between collision objects.

**Further information:** "Fixture management", Page 257

- Tools with a positive radius **R** and length **L**.

**Further information:** "Tool table tool.t", Page 451

- The values in the tool management equal the actual tool dimensions

**Further information:** "Tool management ", Page 205

## Description of function



Refer to your machine manual.

The machine manufacturer adapts the Dynamic Collision Monitoring (DCM) function to the control.

The machine manufacturer can define machine components and minimum distances to be monitored by the control during all machine movements. If two collision objects come closer to each other than a defined minimum distance, the control generates an error message and terminates the movement.



Error message for Dynamic Collision Monitoring (DCM)

### NOTICE

#### Danger of collision!

If Dynamic Collision Monitoring (DCM) is deactivated, the control will not perform any automatic collision checking. This means that movements that might cause collisions will not be prevented. There is a risk of collision during all movements!

- ▶ Make sure to activate DCM whenever possible
- ▶ Make sure to always re-activate DCM immediately after a temporary deactivation
- ▶ Carefully test your NC program or program section in **Single Block** mode while DCM is deactivated

The control displays the collision objects graphically in the following operating modes:

- **Editor** operating mode
- **Manual** operating mode
- **Program Run** operating mode

The control also monitors the tools, as defined in tool management, for collision.

### NOTICE

#### Danger of collision!

Even if Dynamic Collision Monitoring (DCM) is active, the control will not automatically monitor the workpiece for collisions, neither with the tool nor with other machine components. There is a risk of collision during machining!

- ▶ Activate the **Advanced checks** toggle switch for the simulation
- ▶ Check the machining sequence using a simulation
- ▶ Carefully test your NC program or program section in the **Single Block** mode

**Further information:** User's Manual for Programming and Testing



### Dynamic Collision Monitoring (DCM) in the Manual and Program Run operating modes

Dynamic Collision Monitoring (DCM) is activated separately for the **Manual** and **Program Run** operating modes, using the **DCM** button.

**Further information:** "Activating Dynamic Collision Monitoring (DCM) for the Manual and Program Run operating modes", Page 255

In the **Manual** and **Program Run** operating modes, the control stops the movement if two collision objects approach each other by less than a minimum clearance. In this case, the control displays an error message naming the two objects causing collision.



Refer to your machine manual.

The machine manufacturer can define the minimum distance between two collision-monitored objects.

Before the collision warning, the control dynamically reduces the feed rate of movements. This ensures that the axes stop in good time before a collision occurs. When the collision warning is triggered, the control displays the colliding objects in red in the **Simulation** workspace.



When a collision warning has been issued, machine movements via the axis direction keys or the handwheel are only possible if they increase the distance between the collision objects.

With active collision monitoring and a simultaneous collision warning, no movements are permitted that reduce the distance or leave it unchanged.

### Dynamic Collision Monitoring (DCM) in the Editor operating mode

Dynamic Collision Monitoring (DCM) is activated for simulation in the **Simulation** workspace.

**Further information:** User's Manual for Programming and Testing

In the **Editor** operating mode, an NC program can be collision-monitored even prior to execution. In case of collision, the control stops the simulation and displays an error message naming the two objects causing collision.

HEIDENHAIN recommends the use of Dynamic Collision Monitoring (DCM) in the **Editor** operating mode only in addition to DCM in the **Manual** and **Program Run** operating modes.



The enhanced collision monitoring shows collisions between the workpiece and tools or tool holders.

**Further information:** User's Manual for Programming and Testing

To obtain a simulation result that is similar to the program run, the following aspects must match:

- Workpiece preset
- Basic rotation
- Offsets of each axis
- Tilting condition
- Active kinematic model

The active workpiece preset for the simulation must be selected. The active workpiece preset from the preset table can be adopted into the simulation.

**Further information:** User's Manual for Programming and Testing

In a simulation, the following aspects may differ from the actual machine or may not be available at all:

- The simulated tool change position may differ from the tool change position in the machine.
- Changes in the kinematics may have a delayed effect in the simulation.
- PLC positioning movements are not displayed in the simulation.
- Global program settings (GPS) (#44 / #1-06-1) are not available
- Handwheel override is not available
- Editing of job lists is not available
- Traverse range limits from the **Settings** application are not available.

## Activating Dynamic Collision Monitoring (DCM) for the Manual and Program Run operating modes

### NOTICE

#### Danger of collision!

If Dynamic Collision Monitoring (DCM) is deactivated, the control will not perform any automatic collision checking. This means that movements that might cause collisions will not be prevented. There is a risk of collision during all movements!

- ▶ Make sure to activate DCM whenever possible
- ▶ Make sure to always re-activate DCM immediately after a temporary deactivation
- ▶ Carefully test your NC program or program section in **Single Block** mode while DCM is deactivated


To Dynamic Collision Monitoring (DCM) for the **Manual** and **Program Run** operating modes:



- ▶ Select the **Manual** operating mode



- ▶ Select the **Manual** application
- ▶ Select **DCM**
- The control opens the **Dyna. Coll. Monitoring (DCM)** window.
- ▶ Activate DCM in the desired operating modes, using the toggle switches




- ▶ Press **OK**
- The control activates DCM in the selected operating modes.



The control displays the status of Dynamic Collision Monitoring (DCM) in the **Positions** workspace. When deactivating DCM, the control displays an icon in the information bar.

## Activating the graphic display of the collision objects

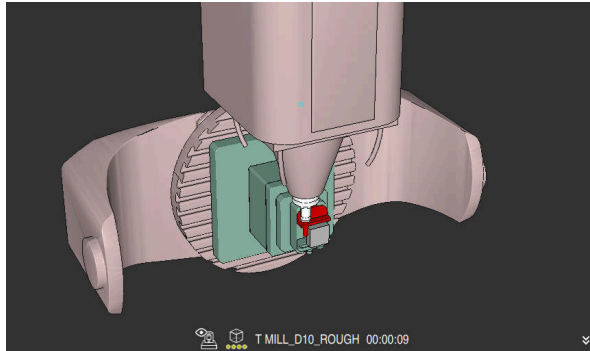

Simulation in the **Machine** mode

To activate the graphic display of the collision objects:



- ▶ Select an operating mode (e.g., **Manual**)

- ▶ Select **Workspaces**
- ▶ Select the **Simulation** workspace
- ▶ The control opens the **Simulation** workspace.



- ▶ Select the **Visualization options** column
- ▶ Select the **Machine** mode
- ▶ The control displays a graphic representation of the machine and the workpiece.

## Changing the representation

To change the graphic display of the collision objects:

- ▶ Activate the graphic display of the collision objects



- ▶ Select the **Visualization options** column



- ▶ Change the graphic display of the collision objects (e.g., **Original**)

## Notes

- Dynamic Collision Monitoring (DCM) helps you reduce the risk of collision. However, the control cannot consider all possible constellations during operation.
- The control can protect only those machine components from collision that your machine manufacturer has defined correctly with regard to dimensions, orientation, and position.
- The control takes the **DL** and **DR** delta values from the tool management into account. Delta values from the **TOOL CALL** block or a compensation table are not taken into account.
- For certain tools (e.g., face-milling cutters) the radius that would cause a collision can be greater than the value defined in the tool management.
- When a touch probe cycle starts, the control no longer monitors the stylus length and ball-tip diameter, so you can still probe collision objects.

## 11.2 Fixture management

### 11.2.1 Fundamentals

#### Application

You can integrate fixtures as 3D models in the control in order to represent clamping situations for simulation or execution.

When DCM is active, the control checks during simulation or machining if the fixture collides (#40 / #5-03-1).

#### Related topics

- Dynamic Collision Monitoring (DCM (#40 / #5-03-1))  
**Further information:** "Dynamic Collision Monitoring (DCM) (#40 / #5-03-1)", Page 250
- Integrating an STL file as workpiece blank  
**Further information:** User's Manual for Programming and Testing


#### Requirements

- Kinematics description  
The machine manufacturer creates the kinematics description
- Insertion point defined  
Using the insertion point, the machine manufacturer defines the preset for positioning the fixtures. The insertion point is often located at the end of the kinematic chain (e.g., at the center of a rotary table). For information about the position of the insertion point, please refer to your machine manual.
- Fixtures of suitable format:
  - STL file
    - 20,000 triangles maximum
    - Triangular mesh forms a closed shell
  - CFG file
  - M3D file

## Description of function

To use fixture monitoring, the steps below are needed:

- Creating a fixture or loading it into the control
  - Further information:** "Options for fixture files", Page 258
- Fixture placement
  - The **Set up fixtures** function in the **Setup** (#140 / #5-03-2) application
    - Further information:** "Integrating fixtures into collision monitoring (#140 / #5-03-2)", Page 260
  - Manual fixture placement
- When changing fixtures, load or remove the fixture in the NC program
  - Further information:** User's Manual for Programming and Testing

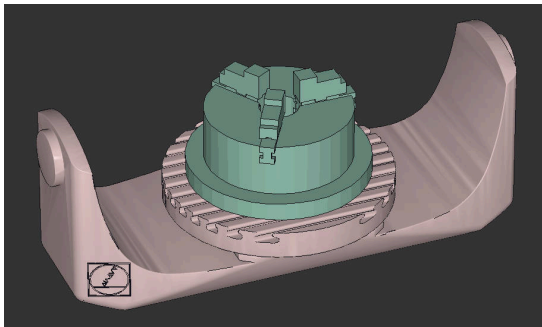

Three-jaw chuck loaded as fixture

## Options for fixture files

If you use the **Set up fixtures** function to integrate fixtures, then only STL files are possible (#140 / #5-03-2).

Alternatively, CFG and M3D files can be set up manually.

You can use the function **3D mesh** (#152 / #1-04-1) to create STL files from other file types and adapt STL files to the requirements of your control.

**Further information:** "Generating STL files with 3D mesh (#152 / #1-04-1)", Page 351

## Fixtures from STL files

STL files allow you to map both individual components and entire assemblies as an immobile fixture. The STL format is useful, in particular, for datum clamping systems and recurring setups.

If an STL file does not meet the requirements of the control, then the control issues an error message.

With the software option CAD Model Optimizer (#152 / #1-04-1), you can adapt STL files that do not meet the requirements and then use them for fixtures.

**Further information:** "Generating STL files with 3D mesh (#152 / #1-04-1)", Page 351

## Fixtures from CFG files

CFG files are configuration files. You can integrate the STL and M3D files available in a CFG file. This enables you to map complex setups.

The **Set up fixtures** function can be used to create a CFG file for the fixture, using the measured value.

In CFG files, you can correct the orientation of the fixture files to be in effect on the control. **KinematicsDesign** can be used to create and edit CFG files on the control.

**Further information:** "Editing CFG files with KinematicsDesign", Page 270

### Fixtures from M3D files

M3D is a file type designed by HEIDENHAIN. The paid M3D Converter software from HEIDENHAIN allows you to create M3D files from STL or STEP files.

In order to use an M3D file as a fixture, you need to use the M3D Converter software to create and check the file.

### Notes

#### NOTICE

##### Danger of collision!

The setup situation defined for fixture monitoring must match the actual machine status. Otherwise, there is a risk of collision.

- ▶ Measure the position of the fixture in your machine
- ▶ Use the measured values for positioning the fixture
- ▶ Test the NC programs in the simulation

- When using a CAM system, use a postprocessor to output the fixture situation.
- Note the orientation of the coordinate system in the CAD system. Use the CAD system to adapt the orientation of the coordinate system to the desired orientation of the fixture in the machine.
- You can choose any orientation of the fixture model in the CAD system, and therefore the orientation does not always match the orientation of the fixture in the machine.
- Define the coordinate origin in the CAD system such that the fixture can be directly attached to the point of insertion of the kinematics.
- Create a central directory for your fixtures (e.g., **TNC:\system\Fixture**).
- When DCM is active, the control checks during simulation or machining if the fixture collides (#40 / #5-03-1).

By storing multiple fixtures, you can choose the appropriate fixture for your machining operation without needing to configure it.

- Example files for setups used in everyday manufacturing are provided in the NC database of the Klartext Portal:

##### HEIDENHAIN NC solutions

- Even if the inch unit of measure is active in the control or NC program, the control will interpret dimensions of 3D files in mm.

## 11.2.2 Integrating fixtures into collision monitoring (#140 / #5-03-2)

### Application

The **Set up fixtures** function determines the position of a 3D model in the **Simulation** workspace, matching the real fixture in the workspace. Once the fixture has been set-up, the control considers it in Dynamic Collision Monitoring (DCM).

### Related topics

- The **Simulation** workspace  
**Further information:** User's Manual for Programming and Testing
- Dynamic Collision Monitoring (DCM)  
**Further information:** "Dynamic Collision Monitoring (DCM) (#40 / #5-03-1)", Page 250
- Fixture monitoring  
**Further information:** "Fixture management", Page 257
- Setting up a workpiece with graphical support (#159 / #1-07-1)  
**Further information:** "Setting up the workpiece with graphical support (#159 / #1-07-1)", Page 398

### Requirements

- Software option Dynamic Collision Monitoring (DCM) version 2 (#140 / #5-03-2)
- Workpiece touch probe
- Permitted fixture file matching the real fixture  
**Further information:** "Options for fixture files", Page 258



## Description of function

The **Set up fixtures** function is available as a touch probe function in the **Setup** application of the **Manual** operating mode.

The **Set up fixtures** function determines the fixture position using various probing processes. First, one point on the fixture is probed in every linear axis. The position of the fixture is defined in this way. After probing one point in all linear axes, further points can be integrated in order to improve positioning accuracy. After defining the position in one axis direction, the control changes the status of that axis from red to green.

The error estimate diagram shows the estimated distance of the 3D model from the real fixture for each probing point.

**Further information:** "Error estimate diagram", Page 265

The scope of the **Set up fixtures** function depends on the Extended Functions Group 1 (#8 / #1-01-1) and Extended Functions Group 2 (#9 / #4-01-1) software options as follows:

- Both software options enabled:  
You can tilt before probing, and incline the tool while probing, in order to probe even complex fixtures.
- Only Extended Functions Group 1 (#8 / #1-01-1) enabled:  
You can tilt before probing. The working plane must be consistent. If you move the rotary axes between the touch points, the control will display an error message.



If the current coordinates of the rotary axes and the defined tilt angles (**3D ROT** window) match, the working plane is consistent.


- None of the two software options is enabled:  
You cannot tilt before probing. If you move the rotary axes between the touch points, the control will display an error message.

**Further information:** "Tilting the working plane (#8 / #1-01-1)", Page 243

**Further information:** User's Manual for Programming and Testing

## Extension of the Simulation workspace

In addition to the **Probing function** workspace, the **Simulation** workspace offers graphic support for setting up the fixture.

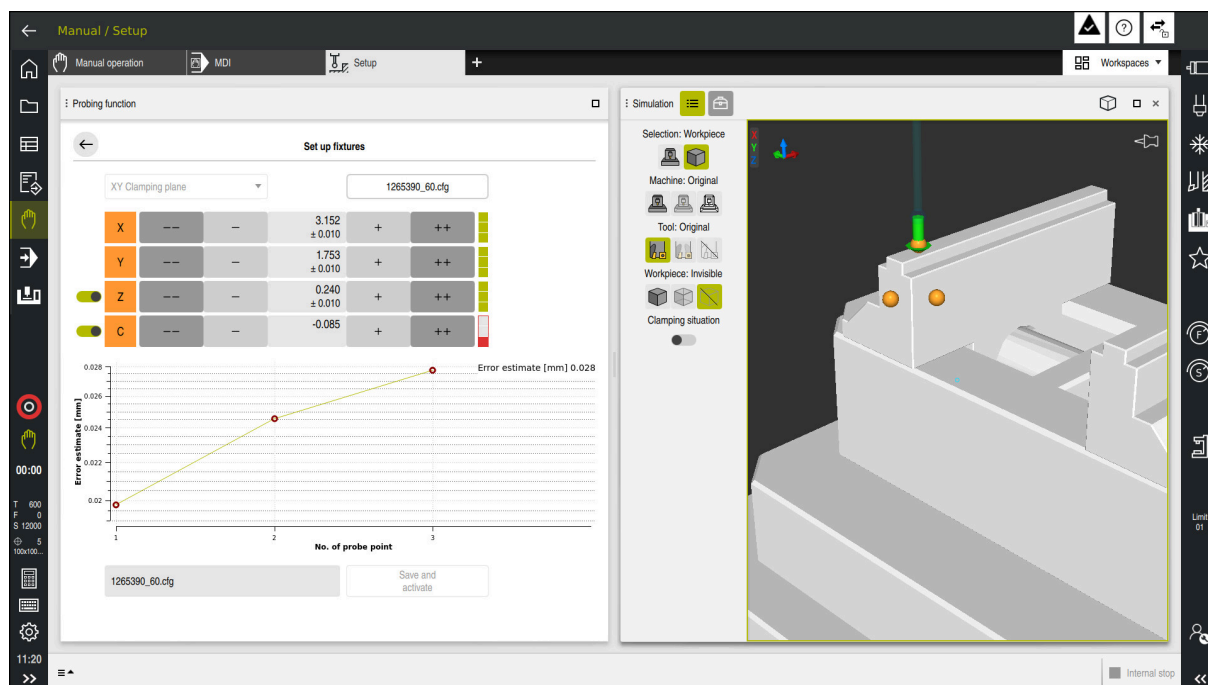

The **Set up fixtures** function with the **Simulation** workspace open

When the **Set up fixtures** function is active, the **Simulation** workspace shows the content below:

- Current position of fixture as viewed by the control
- Probed points on the fixture
- Possible direction of probing by means of an arrow:

- No arrow

Probing is not possible. The workpiece touch probe is too distant from the fixture or the workpiece touch probe is positioned within the fixture, as seen by the control.

In this case, you can adjust the position of the 3D model in the simulation, if applicable.

- Red arrow

Probing in the direction of the arrow is not possible.



Probing on edges, corners or heavily curved fixture areas fails to deliver precise measuring results. This is why the control blocks probing in these areas.

- Yellow arrow






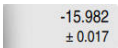







Probing in the direction of the arrow is possible under certain conditions. Probing is done in a deselected direction or might cause collisions.


- Green arrow

Probing in the direction of the arrow is possible.

## Icons and buttons

The **Set up fixtures** function contains the following icons and buttons:

Icon or button	Meaning
<b>XY Clamping plane</b>	<p>This selection menu defines the plane in which the fixture is in contact with the machine.</p> <p>The control offers the following planes:</p> <ul style="list-style-type: none"> <li>■ XY clamping plane</li> <li>■ XZ clamping plane</li> <li>■ YZ clamping plane</li> </ul> <div>  Depending on the selected clamping plane, the control displays the corresponding axis directions. In the <b>XY Clamping plane</b>, for example, the control displays the axes <b>X</b>, <b>Y</b>, <b>Z</b> and <b>C</b>.         </div>
	<p>Name of fixture file</p> <p>The control automatically saves the fixture file in the initial folder.</p> <p>The fixture file name can be edited before saving.</p>
	<p>Shifts the position of the virtual fixture by 10 mm or 10° in the negative axis direction</p> <div>  Shifts the fixture in mm in a linear axis and in degrees in a rotary axis.         </div>
	Shifts the position of the virtual fixture by 1 mm or 1° in the negative axis direction
	<ul style="list-style-type: none"> <li>■ Enter the position of the virtual fixture directly</li> <li>■ Value and estimated accuracy after probing</li> </ul>
	Shifts the position of the virtual fixture by 1 mm or 1° in the positive axis direction
	Shifts the position of the virtual fixture by 10 mm or 10° in the positive axis direction
    	<p>Status of axis</p> <p>The control displays the following colors:</p> <ul style="list-style-type: none"> <li>■ Gray The axis direction is deselected for this set-up process and will not be taken into account.</li> <li>■ White No probing points have been determined yet.</li> <li>■ Red The control cannot determine the fixture position in this axis direction.</li> <li>■ Yellow The position of the fixture in this axis direction already contains information. The information is not meaningful yet.</li> <li>■ Green The control can determine the fixture position in this axis direction.</li> </ul>

Icon or button	Meaning
<b>Save and activate</b>	<p>This function saves all obtained data in a CFG file and activates the measured fixture in Dynamic Collision Monitoring (DCM).</p> <div>  <p>When using a CFG file as the data source for the measuring process, the existing CFG file can be overwritten by <b>Save and activate</b> at the end of the measuring process.</p> <p>When creating a new CFG file, enter a different file name next to the button.</p> </div>

When using a datum clamping system and for this reason you do not want to consider one axis direction (such as **Z**) when setting up the fixture, the axis in question can be deselected by a toggle switch. The control will not take deselected axis directions into account in the set-up process and positions the fixture by considering the remaining axis directions only.

### Error estimate diagram


Every probing point further restricts the possible positioning of the fixture and puts the 3D model closer to the actual position in the machine.

The error estimate diagram shows the estimated distance of the 3D model from the real fixture. The control not only considers the probing points, but also the entire fixture.

As soon as the error estimate diagram shows green circles and the desired accuracy, the set-up process is completed.

The factors below influence the accuracy that can be achieved when measuring fixtures:

- Accuracy of workpiece touch probe
- Repeatability of workpiece touch probe
- Accuracy of 3D model
- Condition of the actual fixture (e.g., existing wear or score marks)

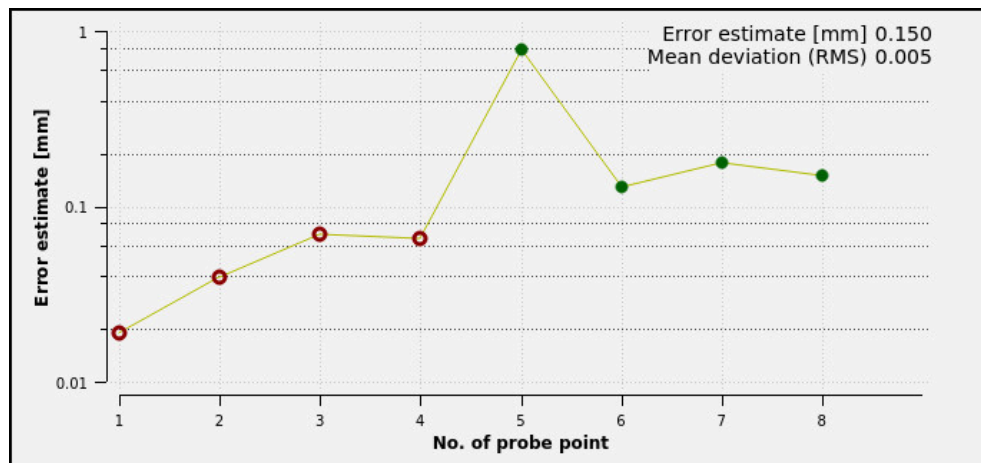



Error estimate diagram in the **Set up fixtures** function

The error estimate diagram of the **Set up fixtures** function displays the following information:

- **Mean deviation (RMS)**  
This area shows the average distance of the measured probing points from the 3D model in mm.
- **Error estimate [mm]**  
This axis shows the course of the revised model position by means of the individual probing points. Red circles are shown until the values for all axis directions are determined. From then on, the control displays green circles.
- **No. of probe point**  
This axis shows the numbers of the individual probing points.

### Example of sequence of fixture probing points

Below are some of the probing points that can be set for different fixtures:

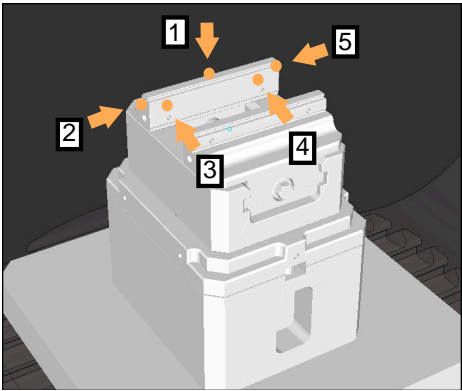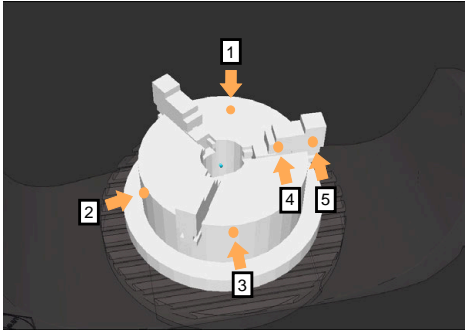Chucking equipment/fixtures	Possible sequence
	<p>The following probing points can be set when measuring a vice:</p> <ol style="list-style-type: none"> <li>1 Touching the fixed vice jaw in <b>Z-</b></li> <li>2 Touching the fixed vice jaw in <b>X+</b></li> <li>3 Touching the fixed vice jaw in <b>Y+</b></li> <li>4 Touching the second value in <b>Y+</b> for rotation</li> <li>5 To improve accuracy, touching the check point in <b>X-</b></li> </ol>
	<p>The following probing points can be set when measuring a three-point chuck:</p> <ol style="list-style-type: none"> <li>1 Touching the jaw chuck body in <b>Z-</b></li> <li>2 Touching the jaw chuck body in <b>X+</b></li> <li>3 Touching the jaw chuck body in <b>Y+</b></li> <li>4 Touching the jaw in <b>Y+</b> for rotation</li> <li>5 Touching the second value at the jaw in <b>Y+</b> for rotation</li> </ol>

Probing points with a three-jaw chuck

## Measuring the fixed-jaw vice



The desired 3D model must meet the requirements of the control.

**Further information:** "Options for fixture files", Page 258

To measure a vise using the **Set up fixtures** function:

- ▶ Affix a real vise in the working space



- ▶ Select the **Manual** operating mode
- ▶ Insert the workpiece touch probe
- ▶ Manually position the workpiece touch probe above the fixed vice jaw at a notable point



This step makes the subsequent steps easier.



Open

++

- ▶ Select the **Setup** application
- ▶ Select **Set up fixtures**
- ▶ The control opens the **Set up fixtures** menu.
- ▶ Select a 3D model matching the real vice
- ▶ Select **Open**
- ▶ The control opens the selected 3D model in the simulation.
- ▶ Pre-position the 3D model by using the buttons for the individual axes within the virtual working space



For pre-positioning the vice, use the workpiece touch probe as a point of reference.

At this point in time, the control does not know the precise position of the fixture, but of the workpiece touch probe. Pre-positioning the 3D model in accordance with the position of the workpiece touch probe and by using, for example, the table's T-slots produces values close to the position of the real vice.

Even after recording the first measuring points, the shifting functions are still available for correcting the fixture position manually.

- ▶ Specify the clamping plane (e. g., **XY**)
- ▶ Position the workpiece touch probe until a green down arrow appears



As the 3D model is only pre-positioned at this point in time, the green arrow cannot provide any reliable information about whether the desired surface of the fixture will actually be touched. Check if the fixture position in the simulation and in the machine match and if touching in the direction of the arrow is possible on the machine.

Do not touch directly near edges, chamfers and roundings.



- ▶ Press the **NC Start** key
- The control probes in the direction of the arrow.
- The control displays the status of the **Z** axis in green and shifts the fixture to the touched position. The control marks the touched position by a point in the simulation.
- ▶ Repeat this process in axis directions **X+** and **Y+**
- The status of the axes turns green.
- ▶ Touch another point in axis direction **Y+** for the basic rotation



To achieve maximum accuracy when touching the basic rotation, the probing points should be as far apart from one another as possible.

- The control changes the status of the **C** axis to green.
- ▶ Touch the check point in axis direction **X-**



Additional check points at the end of the measuring process improve the matching accuracy and minimize the faults between the 3D model and the real fixture.

Save and  
activate

- ▶ Select **Save and activate**
- The control closes the **Set up fixtures** function, saves a CFG file with the measured values at the path specified above, and integrates the measured fixture into Dynamic Collision Monitoring (DCM).



## Notes

### NOTICE

#### Danger of collision!

To probe the clamping situation in the machine exactly, the workpiece touch probe must be properly calibrated and the value **R2** properly defined in the tool management. Otherwise, incorrect tool data of the workpiece touch probe may cause inaccurate measurement and possibly a collision.

- ▶ Calibrate the workpiece touch probe at regular intervals
- ▶ Enter parameter **R2** in the tool management

- The control cannot identify modeling differences between the 3D model and the real fixture.
- At the time of set-up, Dynamic Collision Monitoring (DCM) does not know the exact position of the fixture. In this condition, collisions with the fixture, the tool or other non-machine components such as fixing clamps in the work envelope may occur. The non-machine components can be modeled on the control using a CFG file.

**Further information:** "Editing CFG files with KinematicsDesign", Page 270

- If you cancel the **Set up fixtures** function, DCM will not monitor the fixture. In this case, any fixtures previously set up are also removed from the scope of monitoring. The control displays a warning.
- Only one fixture can be measured at a time. To monitor several fixtures simultaneously by DCM, the fixtures must be integrated into a CFG file.

**Further information:** "Editing CFG files with KinematicsDesign", Page 270

- When measuring a jaw chuck, the coordinates of the axes **Z**, **X** and **Y** are determined just as when measuring a vice. The rotation is determined from one single jaw.
- The saved fixture file can be integrated into the NC program with the **FIXTURE SELECT** function. This can be used for simulating and executing the NC program, considering the real setup situation.

**Further information:** User's Manual for Programming and Testing

### 11.2.3 Editing CFG files with KinematicsDesign

#### Application

**KinematicsDesign** allows editing CFG files in the control. In this process, **KinematicsDesign** displays the fixtures graphically and thus supports troubleshooting and removal of errors.

#### Related topics

- Combine fixtures into complex clamping arrangements

**Further information:** "Combining fixtures in the New Fixture window", Page 275


#### Description of function

When opening a CFG file in the control, the control makes **KinematicsDesign** available as a selection item.

**KinematicsDesign** offers the following functions:

- Editing of fixtures with graphic support
- Feedback in case of incorrect entries
- Integration of transformations
- Addition of new elements
  - 3D model (M3D or STL files)
  - Cylinder
  - Prism
  - Cuboid
  - Truncated cone
  - Hole

You can integrate both STL files and M3D files into CFG files more than once.

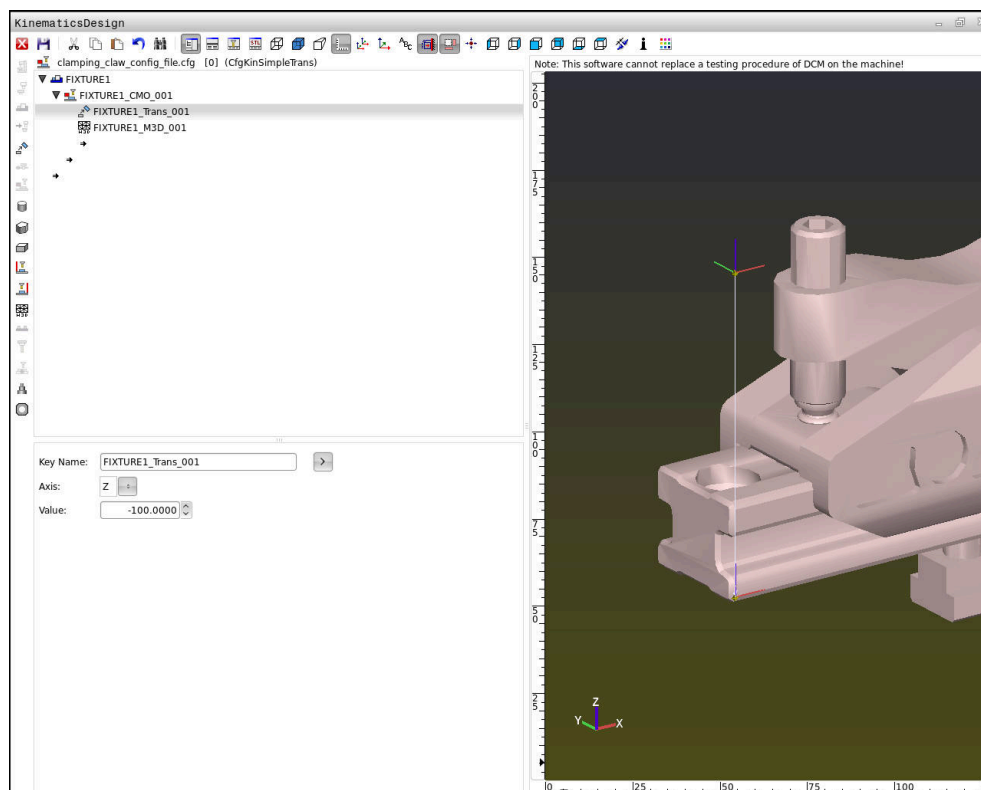


## Syntax in CFG files

The following syntax elements are used within the various CFG functions:

Function	Description
<code>key:= " "</code>	Name of the function
<code>dir:= " "</code>	Direction of a transformation (e.g., <b>X</b> )
<code>val:= " "</code>	Value
<code>name:= " "</code>	Name displayed if a collision occurs (optional input)
<code>filename:= " "</code>	File name
<code>vertex:= [ ]</code>	Position of a cube
<code>edgeLengths:= [ ]</code>	Dimensions of a cuboid
<code>bottomCenter:= [ ]</code>	Center of a cylinder
<code>radius:= [ ]</code>	Radius of a cylinder
<code>height:= [ ]</code>	Height of a geometric object
<code>polygonX:= [ ]</code>	Line of a polygon in X
<code>polygonY:= [ ]</code>	Line of a polygon in Y
<code>origin:= [ ]</code>	Starting point of a polygon

Each element is assigned its own **key**. A **key** must be unambiguous and unique, meaning that it must not occur more than once in the description of a fixture. Based on the **key**, the elements are referenced to each other.

The following functions are available if you wish to use CFG functions to describe a fixture in the control:

Function	Description
<code>CfgCMOMesh3D(key:="Fixture_body", filename:="1.STL",name:=" ")</code>	Definition of fixture component <div>  You can also enter an absolute path for the defined fixture component (e.g., <b>TNC:\nc_prog\1.STL</b>) </div>
<code>CfgKinSimpleTrans(key:="XShiftFixture", dir:=X,val:=0)</code>	Shift in X axis Inserted transformations, such as a shift or rotation, are effective for all of the elements following in the kinematic chain.
<code>CfgKinSimpleTrans(key:="CRot0", dir:=C,val:=0)</code>	Rotation in C axis
<code>CfgCMO ( key:="fixture", primitives:= [ "XShiftFixture", "CRot0", "Fixture_body"], active :=TRUE, name :=" ")</code>	Describes all of the transformations contained in the fixture. The parameter active <b>:= TRUE</b> activates collision monitoring for the fixture.  The <b>CfgCMO</b> contains collision objects and transformations. The fixture is combined based on the arrangement of the different transformations. Here, the transformation <b>XShiftFixture</b> shifts the center of rotation of the transformation <b>CRot0</b> .

Function	Description
<code>CfgKinFixModel (key:="Fix_Model", kinObjects:=["fixture"])</code>	Fixture designation <b>CfgKinFixModel</b> contains one or more <b>CfgCMO</b> elements.

### Geometric shapes

You can add simple geometric objects to your collision object either directly in the CFG file or by using **KinematicsDesign**.

All integrated geometric shapes are subelements of the higher-order **CfgCMO**, in which they are listed as **primitives**.

The following geometric objects are available:

Function	Description
<code>CfgCMOCuboid ( key:="FIXTURE_Cub", vertex:= [ 0, 0, 0 ], edgeLengths:= [0, 0, 0], name:="" )</code>	Definition of a cuboid
<code>CfgCMOCylinder ( key:="FIXTURE_Cyl", dir:=Z, bottomCenter:= [0, 0, 0], radius:=0, height:=0, name:="" )</code>	Definition of a cylinder
<code>CfgCMOPrism ( key:="FIXTURE_Pris_002", height:=0, polygonX:=[], polygonY:=[], name:="", origin:= [ 0, 0, 0 ] )</code>	Definition of a prism A prism is described by entering the height and several polygonal lines.

### Creating a fixture entry with a collision object

The content below describes the procedure with **KinematicsDesign** opened.

To create a fixture entry with a collision object:



- ▶ Select **Insert chucking equipment**
- **KinematicsDesign** creates a new fixture entry within the CFG file.
- ▶ Enter a **keyname** for the fixture (e.g., **clamping jaw**)
- ▶ Confirm your input
- **KinematicsDesign** loads the input.



- ▶ Move cursor down one level



- ▶ Select **Insert collision object**
- ▶ Confirm your input
- **KinematicsDesign** creates a new collision object.

## Defining geometric shapes

**KinematicsDesign** allows you to define various geometric shapes. You can construct simple fixtures by combining several geometric shapes.

To define a geometric shape:

- ▶ Create a fixture entry with a collision object



- ▶ Select the cursor key beneath the collision object



- ▶ Select the desired geometric shape (e.g., a cuboid)
- ▶ Define the position of the cuboid (e.g., **X = 0, Y = 0, Z = 0**)
- ▶ Define the dimensions of the cuboid (e.g., **X = 100, Y = 100, Z = 100**)
- ▶ Confirm your input
- The control displays the defined cuboid in the graphic.

## Integrating 3D models

The integrated 3D models must meet the requirements of the control.

To integrate a 3D model as a fixture:

- ▶ Create a fixture entry with a collision object



- ▶ Select the cursor key beneath the collision object



- ▶ Select **Insert 3D model**
- The control opens the **Open File** window.
- ▶ Select the desired STL or M3D file
- ▶ Press **OK**
- The control integrates the selected file and displays the file in the graphic window.

## Fixture placement

You can place the integrated fixture at any position (e.g., for correcting the orientation of an external 3D model). For this purpose, insert transformations for all axes you wish to use.

To position a fixture with **KinematicsDesign**:

- ▶ Define the fixture



- ▶ Select the cursor key beneath the element to be positioned



- ▶ Select **Insert transformation**
- ▶ Enter a **key name** for the transformation (e.g., **Z shift**)
- ▶ Select the **axis** for the transformation (e.g., **Z**)
- ▶ Select the **value** for the transformation (e.g., **100**)
- ▶ Confirm your input
- **KinematicsDesign** inserts the transformation.
- **KinematicsDesign** depicts the transformation in the graphic.

## Notes

- If one of the transformations contains the ? character in the key, you can enter the value of the transformation within the **Combine fixtures** function. This allows easy positioning of clamping jaws, for example.  
**Further information:** "Combining fixtures in the New Fixture window", Page 275
- As an alternative to using **KinematicsDesign**, you can also create fixture files directly from the CAM system or by using the appropriate code in a text editor.

## Example

The example below describes the syntax of a CFG file for a vise with two movable jaws.

### Files used

Various STL files are used to describe the vise. Since the jaws of the vise are dimensionally identical, they are defined using the same STL file.

Code	Explanation
<pre>CfgCMOMesh3D (key:="Fixture_body",  filename:="vice_47155.STL",  name:=" ")</pre>	Body of the vise
<pre>CfgCMOMesh3D (key:="vice_jaw_1",  filename:="vice_jaw_47155.STL",  name:=" ")</pre>	First jaw of the vise
<pre>CfgCMOMesh3D (key:="vice_jaw_2",  filename:="vice_jaw_47155.STL",  name:=" ")</pre>	Second jaw of the vise

### Definition of jaw opening width

In this example, the opening width of the vise is defined using two mutually dependent transformations.

Code	Explanation
<pre>CfgKinSimpleTrans (key:="TRANS_opening_width",  dir:=Y, val:=-60)</pre>	Jaw opening width of the vise in Y direction: 60 mm
<pre>CfgKinSimpleTrans (key:="TRANS_opening_width_2",  dir:=Y, val:=30)</pre>	Position of the first jaw of the vise in Y direction: 30 mm

### Positioning of the fixture within the working space

The defined fixture components are positioned using various transformations.

Code	Explanation
<pre> CfgKinSimpleTrans (key:="TRANS_X", dir:=X, val:=0) CfgKinSimpleTrans (key:="TRANS_Y", dir:=Y, val:=0) CfgKinSimpleTrans (key:="TRANS_Z", dir:=Z, val:=0) CfgKinSimpleTrans (key:="TRANS_Z_vice_jaw", dir:=Z, val:=60) CfgKinSimpleTrans (key:="TRANS_C_180", dir:=C, val:=180) CfgKinSimpleTrans (key:="TRANS_SPC", dir:=C, val:=0) CfgKinSimpleTrans (key:="TRANS_SPB", dir:=B, val:=0) CfgKinSimpleTrans (key:="TRANS_SPA", dir:=A, val:=0) </pre>	<p>Positioning of the fixture components</p> <p>In this example, a rotation by 180° is inserted for rotating the defined jaw of the vise. This is necessary because the same initial model is used for both jaws of the vise.</p> <p>The rotation inserted applies to all subsequent components in the transformation chain.</p>

### Description of the fixture

You need to combine all objects and transformations in the CFG file in order to ensure that the fixture is correctly depicted in the simulation.

Code	Explanation
<pre> CfgCMO (key:="FIXTURE", primitives:= [ "TRANS_X", "TRANS_Y", "TRANS_Z", "TRANS_SPC", "TRANS_SPB", "TRANS_SPA", "Fixture_body", "TRANS_Z_vice_jaw", "TRANS_opening_width_2", "vice_jaw_1", "TRANS_opening_width", "TRANS_C_180", "vice_jaw_2" ], active:=TRUE, name:="") </pre>	<p>Combining the transformations and objects contained in the fixture</p>

### Fixture designation

You need to assign a designation to the combined fixture.

Code	Explanation
<pre> CfgKinFixModel (key:="FIXTURE1", kinObjects:=["FIXTURE"]) </pre>	<p>Designation of the combined fixture</p>

## 11.2.4 Combining fixtures in the New Fixture window

### Application

The **New Fixture** window allows combining several fixtures and saving them as a new fixture. This enables realizing and monitoring complex clamping situations.

### Related topics

- Fundamentals of fixtures  
**Further information:** "Fundamentals", Page 257
- Integrating fixtures into the NC program  
**Further information:** User's Manual for Programming and Testing
- Set up fixtures (#140 / #5-03-2)  
**Further information:** "Integrating fixtures into collision monitoring (#140 / #5-03-2)", Page 260

### Requirement


- Fixtures of suitable format:
  - STL file
    - 20,000 triangles maximum
    - Triangular mesh forms a closed shell
  - CFG file
  - M3D file

### Description of function

To navigate to this function:

#### Tools ► Combine fixtures

The control also makes this function available as a selection option for opening CFG files.

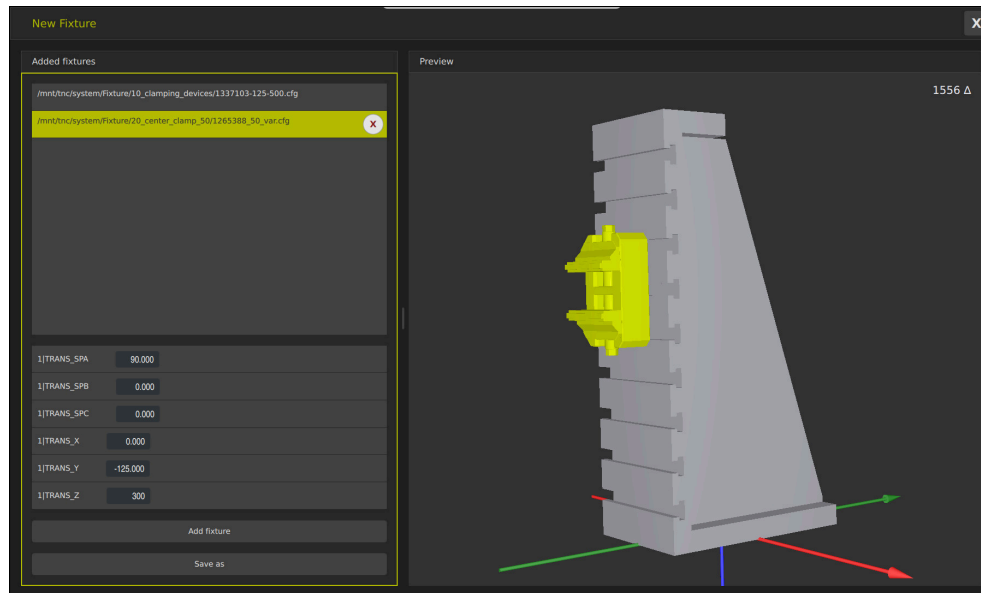

Combined fixture with variable transformations

The **Add fixture** button selects all required fixtures one by one.

If one of the transformations contains the **?** character in the key, you can enter the value of the transformation within the **Combine fixtures** function. This allows easy positioning of clamping jaws, for example.

The control displays a preview of the combined fixture and the total number of all triangles.

The **Save as** button saves the combined fixture as a CFG file.



**Notes**

- For optimum performance, HEIDENHAIN recommends that combined fixtures contain no more than 20,000 triangles.
- If the position or the size of a fixture must be adapted, use **KinematicsDesign**.  
**Further information:** "Editing CFG files with KinematicsDesign", Page 270



# 12

**Control Functions**

## 12.1 Adaptive feed control (AFC) (#45 / #2-31-1)

### 12.1.1 Fundamentals

#### Application

Adaptive Feed Control (AFC) saves time when processing NC programs and reduces wear on the machine. The control regulates the contouring feed rate during program run depending on the spindle power. In addition, the control responds to overloading of the spindle.

#### Related topics

- Tables related to AFC

**Further information:** "Tables for AFC (#45 / #2-31-1)", Page 500

#### Requirements

- Adaptive Feed Control software option (AFC (#45 / #2-31-1))
- Enabled by the machine manufacturer  
The machine manufacturer uses the optional machine parameter **Enable** (no. 120001) to define whether you can use AFC.

#### Description of function

To regulate the feed rate during program run with AFC:

- Define basic settings for AFC in the **AFC.tab** table  
**Further information:** "Basic AFC settings in AFC.tab", Page 500
- Define settings for AFC for each tool in the tool management  
**Further information:** "Tool table tool.t", Page 451
- Define AFC in the NC program  
**Further information:** "NC functions for AFC (#45 / #2-31-1)", Page 283
- Define AFC in the **Program Run** operating mode with the **AFCtoggle** switch.  
**Further information:** "The AFC toggle switch in the Program Run operating mode", Page 285
- Prior to automatic control, determine the reference spindle power with a teach-in cut  
**Further information:** "AFC teach-in cut", Page 286

If AFC is active in the teach-in cut or in control mode, the control displays an icon in the **Positions** workspace.

**Further information:** "The Positions workspace", Page 121

Detailed information about the function is provided by the control on the **AFC** tab of the **Status** workspace.

**Further information:** "The AFC tab (#45 / #2-31-1)", Page 131

## Benefits of AFC

Adaptive feed control (AFC) has the following advantages:

- Optimization of machining time  
By controlling the feed rate, the control tries to maintain the previously recorded maximum spindle power or the reference power specified in the tool table (**AFC-LOAD** column) during the entire machining time. It shortens the machining time by increasing the feed rate in machining zones with little material removal.
- Tool monitoring  
If the spindle power exceeds the taught-in or specified maximum value, the control reduces the feed until the reference spindle power is reached. If the minimum feed rate is exceeded, the control executes a shutdown response. AFC can also use the spindle power to monitor the tool for wear and breakage without changing the feed rate.  
**Further information:** "Monitoring tool wear and tool load", Page 288
- Protection of the machine's mechanical elements  
Timely feed rate reduction and shutdown reactions help to avoid machine overload.

## Tables related to AFC

The control offers the following tables in conjunction with AFC:

- **AFC.tab**  
In the **AFC.tab** table, you define the feed-rate control settings to be used by the control. This table must be saved in the **TNC:\table** directory.  
**Further information:** "Basic AFC settings in AFC.tab", Page 500
- **\*.H.AFC.DEP**  
With a teach-in cut, the control at first copies the basic settings for each machining step, as defined in the AFC.TAB table, to a file called **<name>.H.AFC.DEP**. The string **<name>** is identical to the name of the NC program for which you have recorded the teach-in cut. In addition, the control measures the maximum spindle power consumed during the teach-in cut and saves this value to the table.  
**Further information:** "AFC.DEP settings file for teach-in cuts", Page 503
- **\*.H.AFC2.DEP**  
During a teach-in cut, the control stores information for each machining step in the **<name>.H.AFC2.DEP** file. The string **<name>** is identical to the name of the NC program for which you are performing the teach-in cut.  
In control mode, the control updates the data in this table and performs evaluations.  
**Further information:** "Log file AFC2.DEP", Page 504

You can open and, if necessary, edit the tables for AFC during program run. The control provides only the tables of the active NC program.

**Further information:** "Editing the tables for AFC", Page 506

## Notes

### NOTICE

#### Caution: Danger to the tool and workpiece!

As soon as Adaptive Feed Control (AFC) is deactivated, the control immediately switches back to the programmed machining feed rate. If AFC decreased the feed rate (e.g., due to wear) before it was deactivated, the control accelerates the feed rate up to the programmed value. This behavior applies regardless of how the function is deactivated. This feed acceleration may result in damage to the tool and/or the workpiece!

- ▶ If the feed rate is about to fall below the **FMIN** value, stop the machining operation (instead of deactivating the AFC function)
  - ▶ Define the overload response for cases in which the feed rate falls below the **FMIN** value
- If Adaptive Feed Control is active in **Control** mode, the control executes a shutdown response independent of the programmed overload response.
    - If, with the reference spindle load, the value falls below the minimum feed factor
 

The control executes the shutdown response from the **OVLD** column of the **AFC.tab** table.

**Further information:** "Basic AFC settings in AFC.tab", Page 500
    - If the programmed feed rate falls below the 30% threshold
 

The control executes an NC stop.
  - Adaptive feed control is not intended for tools with diameters less than 5 mm. If the rated power consumption of the spindle is very high, the limit diameter of the tool may be larger.
  - Do not work with adaptive feed control in operations in which the feed rate and spindle speed must be adapted to each other, such as tapping.
  - During turning (#50 / #4-03-1), the control can monitor only tool wear and tool load, but cannot influence the feed rate.
 

**Further information:** "Monitoring tool wear and tool load", Page 288
  - In NC blocks containing **FMAX**, the adaptive feed control is **not active**.
  - In the settings of the **Files** operating mode, you can specify whether the control displays dependent files in the file management.
 

**Further information:** User's Manual for Programming and Testing

### 12.1.2 Activating and deactivating AFC

#### NC functions for AFC (#45 / #2-31-1)

##### Application

Adaptive Feed Control (AFC) is activated and deactivated from the NC program.

##### Requirements

- Adaptive Feed Control software option (AFC (#45 / #2-31-1))
- Control settings defined in the **AFC.tab** table  
**Further information:** "Basic AFC settings in AFC.tab", Page 500
- Desired control setting defined for all tools  
**Further information:** "Tool table tool.t", Page 451
- **AFC** toggle switch active  
**Further information:** "The AFC toggle switch in the Program Run operating mode", Page 285

##### Description of function

The control provides several functions that enable you to start and stop AFC:

- **FUNCTION AFC CTRL:** The **AFC CTRL** function activates feedback control mode starting with this NC block, even if the learning phase has not been completed yet.
- **FUNCTION AFC CUT BEGIN TIME1 DIST2 LOAD3:** The control starts a sequence of cuts with active **AFC**. The changeover from the teach-in cut to feedback control mode begins as soon as the reference power has been determined in the teach-in phase, or once one of the **TIME**, **DIST** or **LOAD** conditions has been met.
- **FUNCTION AFC CUT END:** The **AFC CUT END** function deactivates AFC control.

##### Input

##### FUNCTION AFC CTRL

11 FUNCTION AFC CTRL	; Start AFC in control mode
----------------------	-----------------------------

The NC function includes the following syntax elements:

Syntax element	Meaning
FUNCTION AFC CTRL	Syntax initiator for the start of control mode

**FUNCTION AFC CUT**

**11 FUNCTION AFC CUT BEGIN TIME10  
DIST20 LOAD80**

; Start AFC machining step, limit the duration of the teach-in phase

The NC function includes the following syntax elements:

Syntax element	Meaning
<b>FUNCTION AFC CUT</b>	Syntax initiator for an AFC machining step
<b>BEGIN</b> or <b>END</b>	Start or end machining step
<b>TIME</b>	End teach-in phase after the defined time in seconds Optional syntax element Only if <b>BEGIN</b> has been selected
<b>DIST</b>	End teach-in phase after the defined distance in mm Optional syntax element Only if <b>BEGIN</b> has been selected
<b>LOAD</b>	Enter the reference load of the spindle directly, max. 100% Optional syntax element Only if <b>BEGIN</b> has been selected

**Notes****NOTICE****Caution: Danger to the tool and workpiece!**

If you activate the **FUNCTION MODE TURN** machining mode, the control will clear the current **OVLD** values. This means that you need to program the machining mode before the tool call! If the programming sequence is not correct, no tool monitoring will take place, which might result in damage to the tool or workpiece!

- Program the **FUNCTION MODE TURN** machining mode before the tool call

- The **TIME**, **DIST** and **LOAD** defaults are modally effective. They can be reset by entering **0**.
- Execute the function **AFC CUT BEGIN** only after the starting rotational speed has been reached. If this is not the case, then the control issues an error message, and the AFC cut is not started.
- You can define a feedback-control reference power with the **AFC LOAD** tool table column and the **LOAD** input in the NC program. You can activate the **AFC LOAD** value via the tool call and the **LOAD** value with the **FUNCTION AFC CUT BEGIN** function.

If you program both values, the control will use the value programmed in the NC program!



## The AFC toggle switch in the Program Run operating mode

### Application

The **AFC** toggle switch allows you to activate or deactivate Adaptive Feed Control (AFC) in the **Program Run** operating mode.

### Related topics

- Activating AFC in the NC program

**Further information:** "NC functions for AFC (#45 / #2-31-1)", Page 283

### Requirements

- Adaptive Feed Control software option (AFC (#45 / #2-31-1))
- Enabled by the machine manufacturer  
The machine manufacturer uses the optional machine parameter **Enable** (no. 120001) to define whether you can use AFC.

### Description of function

The **AFC** toggle switch must be activated for the NC functions for AFC to have an effect.

If you do not specifically deactivate AFC using the toggle switch, AFC remains active. The control remembers the setting of the toggle switch even if the control is restarted.

If the **AFC** toggle switch is active, the control displays an icon in the **Positions** workspace. In addition to the current setting of the feed rate potentiometer, the control shows the controlled feed value as a percentage (%).

**Further information:** "The Positions workspace", Page 121

## Notes

### NOTICE

#### Caution: Danger to the tool and workpiece!

As soon as the AFC function is deactivated, the control immediately switches back to the programmed machining feed rate. If AFC decreased the feed rate (e.g. due to wear) before it was deactivated, the control accelerates the feed rate up to the programmed value. This applies regardless of how the function is deactivated (e.g. feed rate potentiometer). This acceleration may result in damages to the tool or the workpiece!

- ▶ If the feed rate is about to fall below the **FMIN** value, stop the machining operation (instead of deactivating the **AFC** function)
  - ▶ Define the overload response for cases in which the feed rate falls below the **FMIN** value
- If Adaptive Feed Control is active in **Control** mode, the control internally sets the spindle override to 100%. Then you can no longer change the spindle speed.
  - If Adaptive Feed Control is active in **Control** mode, the control assumes the value from the feed rate override function.
    - Increasing the feed-rate override has no influence on the control.
    - If you reduce the feed override with the potentiometer by more than 10% in relation to the position at the start of the program, the control switches AFC off.  
You can reactivate control with the **AFC** toggle switch.
    - Potentiometer values of up to 50% always have an effect, even with active control.
  - Mid-program startup is allowed during active feed control. The control takes the cutting number of the startup block in account.

## 12.1.3 AFC teach-in cut

### Fundamentals

#### Application

With the teach-in cut, the control determines the reference power of the spindle for the machining step. Based on the reference power, the control adjusts the feed rate in control mode.

If you have already determined the reference power for a machining operation, you can specify the value for the machining operation. For this, the control provides the **AFC-LOAD** column in the tool management and the **LOAD** syntax element in the **FUNCTION AFC CUT BEGIN** function. In this case, the control no longer performs a teach-in cut, but uses the specified value immediately for control.

#### Related topics

- Enter the known reference power in the **AFC-LOAD** column in the tool management  
**Further information:** "Tool table tool.t", Page 451
- Define the known reference power in the **FUNCTION AFC CUT BEGIN** function  
**Further information:** "NC functions for AFC (#45 / #2-31-1)", Page 283

### Requirements

- Adaptive Feed Control software option (AFC (#45 / #2-31-1))
- Control settings defined in the **AFC.tab** table  
**Further information:** "Basic AFC settings in AFC.tab", Page 500
- Desired control setting defined for all tools  
**Further information:** "Tool table tool.t", Page 451
- Desired NC program selected in the **Program Run** operating mode
- **AFC** toggle switch active  
**Further information:** "The AFC toggle switch in the Program Run operating mode", Page 285

### Description of function

With a teach-in cut, the control at first copies the basic settings for each machining step, as defined in the AFC.TAB table, to a file called **<name>.H.AFC.DEP**.

**Further information:** "AFC.DEP settings file for teach-in cuts", Page 503

When you are performing a teach-in cut, the control shows the spindle reference power determined until this time in a pop-up window.

When the control has determined the control reference power, it ends the teach-in cut and switches to control mode.

### Notes

- When you record a teach-in cut, the control internally sets the spindle override to 100%. Then you can no longer change the spindle speed.
- During the teach-in cut, you can influence the measured reference load by using the feed rate override to make any changes to the contouring feed rate.
- You can repeat a teach-in cut as often as desired. Manually change the status from **ST** back to **L**. If the programmed feed rate value is far too high and forces you to sharply decrease the feed rate override during the machining step, you will have to repeat the teach-in cut.
- If the determined reference load is greater than 2%, the control changes the status from teach-in (**L**) to controlling (**C**). Adaptive feed control is not possible for smaller values.
- In **FUNCTION MODE TURN** machining mode, the minimum reference load is 5%. Even if the control determines lower values, it will still use this minimum reference load. Thus, the overload limits (indicated as percentage values) are based on a minimum reference load of at least 5%.

### The AFC settings button

#### Application

The **AFC settings** button in the **Program Run** operating mode allows terminating a teach-in cut or opening the tables for AFC.

#### Related topics

- Fundamentals for the teach-in cut  
**Further information:** "Fundamentals", Page 286
- Tables for AFC  
**Further information:** "Tables for AFC (#45 / #2-31-1)", Page 500

### Requirements

- Adaptive Feed Control software option (AFC (#45 / #2-31-1))
- Enabled by the machine manufacturer  
The machine manufacturer uses the optional machine parameter **Enable** (no. 120001) to define whether you can use AFC.

### Description of function

This button offers the following select options:

Button	Meaning
<b>AFC.TAB</b>	Editing the factory default settings When selecting this button, the control will open the <b>AFC.TAB</b> table in the <b>Tables</b> operating mode. <b>Further information:</b> "Basic AFC settings in AFC.tab", Page 500
<b>AFC.DEP</b>	Editing the settings file for teach-in cuts When selecting this button, the control will open the <b>AFC.DEP</b> table for the current NC program in the <b>Tables</b> operating mode. <b>Further information:</b> "AFC.DEP settings file for teach-in cuts", Page 503
<b>AFC2.DEP</b>	Editing the log file for evaluation When selecting this button, the control will open the <b>AFC2.DEP</b> table for the current NC program in the <b>Tables</b> operating mode. <b>Further information:</b> "Log file AFC2.DEP", Page 504
<b>Stop Teach</b>	Terminating a teach-in cut <ul style="list-style-type: none"> <li>■ The control terminates the teach-in cut and changes to control mode <b>Further information:</b> "AFC teach-in cut", Page 286</li> <li>■ In the <b>AFC.DEP</b> table, the control changes the status of the <b>ST</b> column from teaching-in (<b>L</b>) to controlling (<b>C</b>). <b>Further information:</b> "AFC.DEP settings file for teach-in cuts", Page 503</li> <li>■ In the <b>Positions</b> workspace, the control changes the icon for the teaching-in cut into the control mode icon. <b>Further information:</b> "The Positions workspace", Page 121</li> </ul>



In a milling operation, you do not have to run the entire machining step in teaching-in mode. If the cutting conditions do not change significantly, you can switch to control mode immediately.

## 12.1.4 Monitoring tool wear and tool load

### Application

With Adaptive Feed Control (AFC), you can monitor the tool for wear or breakage. To do this, use columns **AFC-OVLD1** or **AFC-OVLD2** in the tool management.

The control offers tool wear and tool load monitoring even in turning mode (#50 / #4-03-1).

**Related topics**

- **AFC-OVLD1** and **AFC-OVLD2** columns in the tool management

**Further information:** "Tool table tool.t", Page 451

**Description of function**

If the **AFC.TAB** columns **FMIN** and **FMAX** each have a value of 100%, Adaptive Feed Control is deactivated, but cut-related tool wear monitoring and tool load monitoring remain active.

**Further information:** "Basic AFC settings in AFC.tab", Page 500

Tool wear and tool breakage cannot be monitored at the same time. If the **AFC\_OVLD2** column contains a value, the control will ignore the **AFC\_OVLD1** column.

**Tool wear monitoring**

Activate cut-related tool wear monitoring by entering a value not equal to 0 in the **AFC-OVLD1** column in the tool table.

The overload response depends on the **AFC.TAB** column **OVLD**.

In conjunction with cut-related tool wear monitoring, the control only evaluates the options **M**, **E**, and **L** in the **OVLD** column. The following responses are possible:

- Pop-up window
- Lock current tool
- Insert replacement tool

**Tool load monitoring**

Activate cut-related tool load monitoring (tool breakage control) by entering a value not equal to 0 in the **AFC-OVLD2** column in the tool table.

As overload response, the control always executes a machining stop and locks the momentary tool.

In turning mode, the control can check for tool wear and tool breakage.

Tool breakage leads to a sudden load decrease. If you want the control to monitor the load decrease, too, enter the value 1 in the **SENS** column.

**Further information:** "Basic AFC settings in AFC.tab", Page 500

**Example**

The entries in columns **AFC-OVLD1** and **AFC-OVLD2** are added to the feedback-control reference power **AFC-LOAD**.

**Further information:** "AFC teach-in cut", Page 286

Example input for tool wear and tool load monitoring:

Column	Input
<b>AFC-LOAD</b>	30%
<b>AFC-OVLD1</b>	5%
<b>AFC-OVLD2</b>	10%

In this example, the control adds the 5% and 10% to the 30% in each case.

As soon as a value is defined in column **AFC-OVLD1**, the tool will monitor tool wear. When the control used in the example reaches a spindle power of 35% in total, it executes the defined reaction.

## 12.2 Active Chatter Control (ACC) (#145 / #2-30-1)

### Application

Chatter marks can be caused during heavy-duty machining, in particular. **ACC** reduces chattering, thereby reducing wear on the tool and machine. In addition, **ACC** increases metal removal rates.

### Related topics

- **ACC** column in the tool table  
**Further information:** "Tool table tool.t", Page 451

### Requirements

- Active Chatter Control software option (ACC) (#145 / #2-30-1)
- Control adapted by the machine manufacturer
- **ACC** column in the tool management defined with **Y**
- Number of tool cutting edges defined in the **CUT** column

### Description of function

Strong forces come into play during roughing (power milling). Depending on the tool spindle speed, the resonances in the machine tool and the chip volume (metal-removal rate during milling), the machine can sometimes begin to **chatter**. This chattering places heavy strain on the machine, and causes ugly marks on the workpiece surface. The tool, too, is subject to heavy and irregular wear from chattering. In extreme cases it can result in tool breakage.

In order to reduce a machine's tendency to chatter, HEIDENHAIN offers an effective control function known as Active Chatter Control (**ACC**). The use of this control function is particularly advantageous during heavy machining. ACC makes substantially higher metal removal rates possible. Depending on the type of machine, the metal-removal rate can often be increased by more than 25%. You reduce the mechanical load on the machine and increase the life of your tools at the same time.

ACC was developed especially for roughing and heavy machining and is particularly effective in this area. You need to conduct appropriate tests to see whether ACC will also be advantageous on your machine and with your tool.

ACC is activated and deactivated using the **ACC** toggle switch in the **Program Run** operating mode or the **MDI** application.

**Further information:** "The Program Run operating mode", Page 412

**Further information:** "The MDI Application", Page 365

If ACC is active, the control shows a corresponding icon in the **Positions** workspace.

**Further information:** "The Positions workspace", Page 121

### Notes

- ACC reduces or prevents vibrations in the range of 20 Hz to 150 Hz. If ACC does not appear to have an effect, the vibrations may be outside of this range.
- The Machine Vibration Control software option (MVC) (#146 / #2-24-1) allows influencing the result even more positively.

## 12.3 Global program settings (GPS) (#44 / #1-06-1)

### 12.3.1 Fundamentals

#### Application

The Global Program Settings (GPS) allow you to define selected transformations and settings without changing the NC program. All of the settings apply globally and are superimposed on the relevant active NC program.

#### Related topics

- Coordinate transformations in the NC program  
**Further information:** User's Manual for Programming and Testing  
**Further information:** User's Manual for Machining Cycles
- The **GPS** tab in the **Status** workspace  
**Further information:** "The GPS tab (#44 / #1-06-1)", Page 133
- Reference systems of the control  
**Further information:** "Reference systems", Page 222

#### Requirement


- Global program settings (GPS) (#44 / #1-06-1) software option

#### Description of function

The values of the Global Program Settings are defined and activated in the **GPS** workspace.

The **GPS** workspace is available in the **Program Run** operating mode and in the **MDI** application of the **Manual** operating mode.

The transformations of the **GPS** workspace are effective in all operating modes and are persistent across reboots of the control.

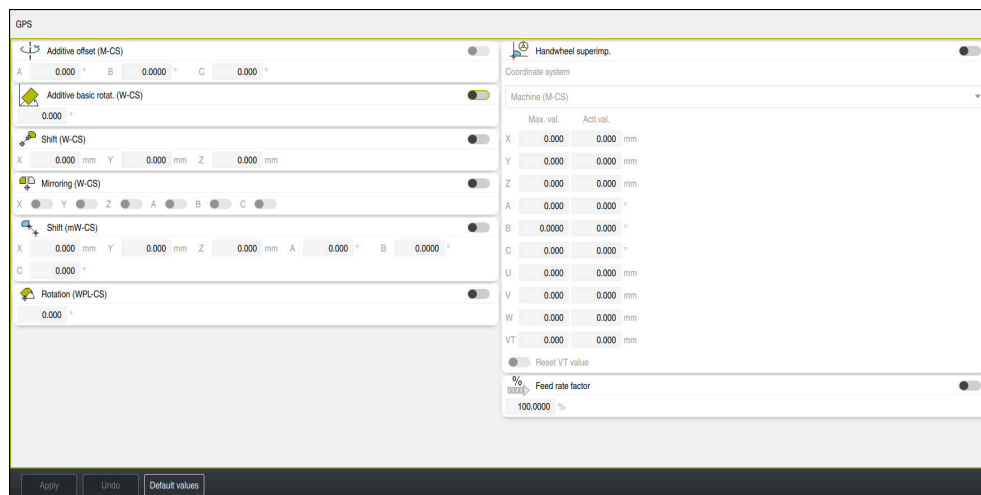

The **GPS** workspace with active functions

The functions of GPS are activated using toggle switches.

The control marks the sequence in which the transformations are effective with green digits.

The control shows the active GPS settings on the **GPS** tab of the **Status** workspace.

**Further information:** "The GPS tab (#44 / #1-06-1)", Page 133

Before executing an NC program with active GPS in the **Program Run** operating mode, you must confirm use of the GPS functions in a pop-up window.

## Buttons

The control provides the following buttons in the **GPS** workspace:

Button	Description
<b>Apply</b>	Save changes in the <b>GPS</b> workspace
<b>Undo</b>	Reset unsaved changes in the <b>GPS</b> workspace
<b>Default values</b>	Set the <b>Feed rate factor</b> function to 100%, reset all other functions to zero

## Overview of Global Program Settings (GPS)

The Global Program Settings (GPS) include the following functions:

Function	Description
<b>Additive offset (M-CS)</b>	Shift of the zero position of an axis in the machine coordinate system <b>M-CS</b> <b>Further information:</b> "The Additive offset (M-CS) function", Page 293
<b>Additive basic rotat. (W-CS)</b>	Additional rotation based on basic rotation or 3D basic rotation in the workpiece coordinate system <b>W-CS</b> . <b>Further information:</b> "The Additive basic rotat. (W-CS) function", Page 295
<b>Shift (W-CS)</b>	Shift of workpiece preset in a single axis in the workpiece coordinate system <b>W-CS</b> <b>Further information:</b> "The Shift (W-CS) function", Page 295
<b>Mirroring (W-CS)</b>	Mirroring of individual axes in the workpiece coordinate system <b>W-CS</b> <b>Further information:</b> "The Mirroring (W-CS) function", Page 296
<b>Shift (mW-CS)</b>	Additional shift of a workpiece datum already shifted in the modified workpiece coordinate system ( <b>mW-CS</b> ). <b>Further information:</b> "The Shift (mW-CS) function", Page 297
<b>Rotation (WPL-CS)</b>	Rotation around the active tool axis in the working plane coordinate system <b>WPL-CS</b> <b>Further information:</b> "The Rotation (WPL-CS) function", Page 298
<b>Handwheel superimposition</b>	Superimposed movement of NC program positions with the electronic handwheel <b>Further information:</b> "The Handwheel superimp. function", Page 298
<b>Feed rate factor</b>	Manipulation of the active feed rate <b>Further information:</b> "The Feed rate factor function", Page 301




## Defining and activating Global Program Settings (GPS)

To define and activate the Global Program Settings (GPS):



- ▶ Select an operating mode (e.g., **Program run**)
- ▶ Open the **GPS** workspace
- ▶ Activate the toggle switch of the desired function (e.g., **Additive offset (M-CS)**)
- ▶ The control activates the selected function.
- ▶ Enter a value in the desired field (e.g., **A=10.0°**)
- ▶ Press **Apply**
- ▶ The control accepts the entered values.




If you select an NC program for program run, you must confirm the Global Program Settings (GPS).

## Resetting Global Program Settings (GPS)

To reset the Global Program Settings (GPS):




- ▶ Select an operating mode (e.g., **Program Run**)
- ▶ Open the **GPS** workspace
- ▶ Select **Default values**

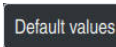

Provided that you have not selected the **Apply** button, you can restore the values with the **Undo** function.

- ▶ The control sets the values of all Global Program Settings (GPS) to zero except for the feed factor.
- ▶ The control sets the feed factor to 100%.
- ▶ Press **Apply**
- ▶ The control saves the values that have been reset.



### Notes

- The control dims any axes that are not active on your machine.
- Value inputs are defined in the selected unit of measurement for the position display (mm or inch). These values include offset values and values of **Handwheel superimp**. Angles are always entered in degrees.
- The use of touch-probe functions deactivates the Global Program Settings (GPS) (#44 / #1-06-1) temporarily.
- The optional machine parameter **CfgGlobalSettings** (no. 128700) can be used to define which GPS functions are available on the control. The machine manufacturer enables this parameter.

### 12.3.2 The Additive offset (M-CS) function

#### Application

With the **Additive offset (M-CS)** function, you can shift the zero position of a machine axis in the machine coordinate system **M-CS**. You can use this function, for example, on large machines, to compensate an axis when using axis angles.

**Related topics**

- Machine coordinate system **M-CS**  
**Further information:** "Machine coordinate system M-CS", Page 224
- Difference between basic rotation and offset  
**Further information:** "Basic transformation and offset", Page 494

**Description of function**

The control adds the value to the active axis-specific offset from the preset table.

**Further information:** "Preset table \*.pr", Page 490

If you activate a value in the **Additive offset (M-CS)** function, the zero position of the affected axis changes in the position display of the **Positions** workspace. The control assumes a different zero position of the axes.

**Further information:** "The Positions workspace", Page 121

**Application example**

The travel range of a machine with AC fork head is increased using the **Additive offset (M-CS)** function. An eccentric tool chuck is used and the zero position of the C axis is shifted by 180°.

Initial situation:

- Machine kinematics with AC fork head
- Use of an eccentric tool chuck  
 The tool is clamped in an eccentric tool chuck outside the center of rotation of the C axis.
- The machine parameter **presetToAlignAxis** (no. 300203) for the C axis is set to **FALSE**

To increase the traversing distance:

- ▶ Open the **GPS** workspace
- ▶ Activate the **Additive offset (M-CS)** toggle switch
- ▶ Enter **C 180°**

Apply

- ▶ Press **Apply**
- ▶ Program a positioning movement with **L C+0** in the desired NC program
- ▶ Select an NC program
- The control considers the 180° rotation for all C axis positioning movements as well as the changed tool position.
- The position of the C axis does not affect the position of the workpiece preset.

**Notes**

- After having activated an additive offset, reset the workpiece preset.
- The machine manufacturer uses the optional machine parameter **preset-ToAlignAxis** (no. 300203) to define for each axis how the control is to interpret offsets in the following NC functions:
  - **FUNCTION PARAXCOMP**
  - **FUNCTION POLARKIN** (#8 / #1-01-1)
  - **FUNCTION TCPM** or **M128** (#9 / #4-01-1)
  - **FACING HEAD POS** (#50 / #4-03-1)**Further information:** User's Manual for Programming and Testing

### 12.3.3 The Additive basic rotat. (W-CS) function

#### Application

The **Additive basic rotat. (W-CS)** function enables, for example, a better use of the workspace. For example, you can rotate an NC program by 90° so that the X and Y directions are inverted during execution.

#### Description of function

The **Additive basic rotat. (W-CS)** function takes effect in addition to the basic rotation or 3D basic rotation from the preset table. The values of the preset table do not change in this respect.

**Further information:** "Preset table \*.pr", Page 490

The **Additive basic rotat. (W-CS)** function has no effect on the position display.

#### Application example


You rotate the CAM output of an NC program by 90° and compensate for the rotation using the **Additive basic rotat. (W-CS)** function.

Initial situation:

- Available CAM output for gantry-type milling machine with a large range of traverse of the Y axis
- The available machining center has the necessary traversing range only in the X axis
- The workpiece blank is clamped with a 90° rotation (long side along the X axis)
- The NC program must be rotated by 90° (algebraic sign depends on the preset position)

To rotate the CAM output:

- ▶ Open the **GPS** workspace
- ▶ Activate the **Additive basic rotat. (W-CS)** toggle switch
- ▶ Enter 90°



- ▶ Press **Apply**
- ▶ Select NC program
- ▶ The control considers the 90° rotation for all axis positioning movements.

### 12.3.4 The Shift (W-CS) function

#### Application

You may use the **Shift (W-CS)** function to, for example, rework in order to compensate for the relative offset of a position that is difficult to probe and the workpiece datum.

#### Description of function

The **Shift (W-CS)** function acts on an axis-by-axis basis. The value is added to an existing shift in the **W-CS** workpiece coordinate system.

**Further information:** "Workpiece coordinate system W-CS", Page 229

The **Shift (W-CS)** function affects the position display. The control shifts the display by the active value.

**Further information:** "Position displays", Page 148

### Application example

The surface of a workpiece to be reworked is determined using the handwheel and the offset is compensated for using the **Shift (W-CS)** function.

Initial situation:

- Reworking of a free-form surface is required
- Workpiece clamped
- Basic rotation and workpiece preset measured in the working plane
- Z coordinate must be defined with the handwheel due to the presence of a free-form surface

To shift the workpiece surface of a workpiece to be reworked:

- ▶ Open the **GPS** workspace
- ▶ Activate the **Handwheel superimp.** toggle switch
- ▶ Determine the workpiece surface by scratching, using the handwheel
- ▶ Activate the **Shift (W-CS)** toggle switch
- ▶ Transfer the determined value to the corresponding axis of the **Shift (W-CS)** function (e.g., **Z**)

Apply

- ▶ Press **Apply**
  - ▶ Starting an NC program
  - ▶ Activate **Handwheel superimp.** with the **Workpiece (WPL-CS)** coordinate system
  - ▶ Determine the workpiece surface by scratching, using the handwheel for fine adjustment
  - ▶ Select NC program
  - The control takes the **Shift (W-CS)** into account.
  - The control uses the current values from **Handwheel superimp.** in the **Workpiece (WPL-CS)** coordinate system.

## 12.3.5 The Mirroring (W-CS) function

### Application

You can use the **Mirroring (W-CS)** function to execute mirror-inverted execution of an NC program without having to modify the NC program.

### Description of function

The **Mirroring (W-CS)** function acts on an axis-by-axis basis. The value is additive to mirroring defined in the NC program before tilting the working plane with Cycle **8 MIRRORING** or the **TRANS MIRROR** function.

**Further information:** User's Manual for Machining Cycles

**Further information:** User's Manual for Programming and Testing

The **Mirroring (W-CS)** function has no effect on the position display in the **Positions** workspace.

**Further information:** "Position displays", Page 148

### Application example

The **Mirroring (W-CS)** function makes the control carry out machining in a mirror-inverted way.

Initial situation:

- A CAM output exists for the non-mirrored workpiece (e.g., for a right-side mirror cap)
- CAM output with the following properties:
  - Output to the tool center point of the ball-nose cutter.
  - **FUNCTION TCPM** defined with the selection **AXIS SPAT**
- Workpiece datum positioned at the workpiece blank center

For mirror-inverted machining:

- ▶ Open the **GPS** workspace
- ▶ Activate the **Mirroring (W-CS)** toggle switch
- ▶ Activate the **X** toggle switch
 

Apply

  - ▶ Press **Apply**
  - ▶ Run the NC program
  - ▶ The control takes the **Mirroring (W-CS)** value for the X axis and the required rotary axes into account.

### Notes

- If you use **PLANE** functions or the **FUNCTION TCPM** function with spatial angles, the rotary axes are mirrored accordingly along with the mirrored main axes. This always creates the same constellation, regardless of whether the rotary axes were marked in the **GPS** workspace.
- With **PLANE AXIAL**, the mirroring of rotary axes is irrelevant.
- With the **FUNCTION TCPM** function with axis angles, you must activate all axes to be mirrored individually in the **GPS** workspace.

## 12.3.6 The Shift (mW-CS) function

### Application

You can use the **Shift (mW-CS)** function to compensate for an offset relative to the workpiece preset for a reworking operation where probing is difficult in the modified workpiece coordinate system **mW-CS**, for example.

### Description of function

The **Shift (mW-CS)** function acts on an axis-by-axis basis. The value is added to an existing shift in the **W-CS** workpiece coordinate system.

**Further information:** "Workpiece coordinate system W-CS", Page 229

The **Shift (mW-CS)** function affects the position display. The control shifts the display by the active value.

**Further information:** "Position displays", Page 148

A modified workpiece coordinate system **mW-CS** is present with active **Shift (W-CS)** or active **Mirroring (W-CS)**. Without these preceding coordinate transformations, the **Shift (mW-CS)** option would be effective directly in the workpiece coordinate system (**W-CS**) and would thus be identical to **Shift (W-CS)**.

### Application example


You mirror the CAM output of an NC program. After mirroring, you shift the workpiece datum in the mirrored coordinate system to produce the counterpart to a mirror cap.

Initial situation:

- Available CAM output for a right-side mirror cap
- The workpiece datum is located in the left front corner of the workpiece blank.
- NC program set to the center of the ball-nose cutter and **Function TCPM** function with spatial angles output
- The left-side mirror cap is to be machined

To shift the datum in the mirrored coordinate system:

- ▶ Open the **GPS** workspace
- ▶ Activate the **Mirroring (W-CS)** toggle switch
- ▶ Activate the **X** toggle switch
- ▶ Activate the **Shift (mW-CS)** toggle switch
- ▶ Enter the value for shifting the workpiece datum in the mirrored coordinate system



- ▶ Press **Apply**
- ▶ Run the NC program
- ▶ The control takes the **Mirroring (W-CS)** value for the X axis and the required rotary axes into account.
- ▶ The control takes the modified position of the workpiece datum into account.

## 12.3.7 The Rotation (WPL-CS) function

### Application

With the **Rotation (WPL-CS)** function, you can, for example, compensate for the misalignment of a workpiece in the already swiveled working plane coordinate system **WPL-CS** without modifying the NC program.

### Description of function

The **Rotation (WPL-CS)** function is effective in the tilted working plane coordinate system **WPL-CS**. The value is added to a rotation in the NC program with Cycle **10 ROTATION** or the **TRANS ROTATION** function.

**Further information:** User's Manual for Machining Cycles

**Further information:** User's Manual for Programming and Testing

The **Rotation (WPL-CS)** function has no effect on the position display.

## 12.3.8 The Handwheel superimp. function

### Application

With the **Handwheel superimp.** function, you can traverse the axes with the superimposed handwheel during program run. You select the coordinate system in which the **Handwheel superimp.** function is effective.

### Related topics

- Handwheel superimpositioning with **M118**  
**Further information:** User's Manual for Programming and Testing

## Description of function

In the **Max. val.** column, you define the maximum traversing distance for the respective axis. The traverse can be either in the positive or in the negative direction. The maximum path is therefore twice as large as the input value.

In the **Actl.val.** column, the control displays the path traversed using the handwheel for each axis.

The **Actl.val.** column can also be edited manually. If you enter a value greater than the **Max. val.**, you cannot activate the value. The control marks an incorrect value in red. The control displays a warning message and prevents the form from being closed.

If the **Actl.val.** column contains a value when you activate the function, the control will use the menu for returning to move to the new position.

**Further information:** "Returning to the contour", Page 430

The **Handwheel superimp.** function affects the position display in the **Positions** workspace. The control shows the values offset by the handwheel in the position display.

**Further information:** "The Positions workspace", Page 121

The control displays the values of the two methods for **Handwheel superimp.** on the **POS HR** tab of the additional status display.

On the **POS HR** tab of the **Status** workspace, the control shows whether the **Max. val.** is defined using the **M118** function or the Global Program Settings (GPS).

**Further information:** "POS HR tab", Page 139

## Virtual tool axis VT

The virtual tool axis **VT** is needed for machining operations with inclined tools (e.g., for manufacturing oblique holes without using a tilted working plane).

**Handwheel superimp.** can also be executed in the active tool axis direction. The **VT** always corresponds to the direction of the active tool axis. On machines with head rotation axes, this direction may not correspond to the basic coordinate system **B-CS**. You activate the function with the **VT** line.

**Further information:** "Notes concerning different machine kinematics", Page 244

By default, values traversed with the handwheel in the **VT** remain active even after a tool change. If you activate the **Reset VT value** toggle switch, the control resets the actual value of the **VT** when a tool is changed.

The control displays the values of the virtual tool axis **VT** on the **POS HR** tab of the **Status** workspace.

**Further information:** "POS HR tab", Page 139

For the control to display values, you must define a value greater than 0 in the **VT** function for **Handwheel superimp.**

## Notes

**NOTICE****Danger of collision!**

The coordinate system chosen in the selection menu also takes effect on **Handwheel superimp.** with **M118**, even if the Global Program Settings function (GPS) is not active. There is a risk of collision during the execution of **Handwheel superimp.** and the subsequent machining operations!

- ▶ Before exiting the form, always make sure to select the **Machine (M-CS)** coordinate system
- ▶ Test the behavior at the machine

**NOTICE****Danger of collision!**

When both methods for **Handwheel superimp.** with **M118** and with the Global Program Settings GPS are active at the same time, the definitions influence each other, depending on their sequence of activation. There is a risk of collision during the execution of **Handwheel superimp.** and the subsequent machining operations!

- ▶ Use only one method for **Handwheel superimp.**
- ▶ Preferably use the **Handwheel superimp.** option of the **Global Program Settings** function
- ▶ Test the behavior at the machine

HEIDENHAIN does not recommend using both methods for **Handwheel superimp.** at the same time. If **M118** cannot be removed from the NC program, you should at least activate **Handwheel superimp.** from GPS prior to selecting the program. This ensures that the control uses the GPS function rather than **M118**.

- If neither the NC program nor the Global Program Settings were used to activate coordinate system transformations, **Handwheel superimp.** is effective in the same manner in all coordinate systems.
- If, while machining with active Dynamic Collision Monitoring DCM (#40 / #5-03-1), you want to use **Handwheel superimp.**, then the control must be in a stopped or interrupted state. Alternatively, you can also deactivate DCM.  
**Further information:** "Dynamic Collision Monitoring (DCM) (#40 / #5-03-1)", Page 250
- **Handwheel superimp.** in virtual axis direction **VT** requires neither a **PLANE** function nor the **FUNCTION TCPM** function.
- Use the machine parameter **axisDisplay** (no. 100810) to define whether the control also shows the virtual axis **VT** in the position display of the **Positions** workspace.  
**Further information:** "The Positions workspace", Page 121



### 12.3.9 The Feed rate factor function

#### Application

You can use the **Feed rate factor** function to influence the effective feed rates on the machine (e.g., to adjust the feed rates of a CAM program). This will prevent the CAM program from being re-output using the postprocessor. When doing so, you change all feed rates as a percentage without making any changes in the NC program.

#### Related topics

- Feed rate limit **F MAX**

The **Feed rate factor** function has no influence on the feed rate limit with **F MAX**.

**Further information:** "Feed rate limit F LIMIT", Page 416

#### Description of function

All feed rates are changed as a percentage. You define a percentage value from 1% to 1000%.

The **Feed rate factor** function acts on the programmed feed rate and the feed rate potentiometer, but not on rapid traverse **FMAX**.

The control shows the current feed rate in field **F** of the **Positions** workspace. If the **Feed rate factor** function is active, the feed rate is shown with the defined values taken into account.

**Further information:** "Presets and technology values", Page 123



# 13

**Monitoring**


## 13.1 Process monitoring (#168 / #5-01-1)

### 13.1.1 Fundamentals

The control uses process monitoring to detect disturbances in the machining process, e.g.:

- Tool breakage
- Incorrect or missing workpiece pre-machining
- Changed position or size of the workpiece blank
- Wrong material (e.g., aluminum instead of steel)

Process monitoring compares the signal run of the current machining process of an NC program with previous machining processes or with constant values and identifies deviations. In case of deviations, the control reacts by showing one or several defined reactions. You may, for example, define that the control stops when the spindle current fails due to tool breakage.

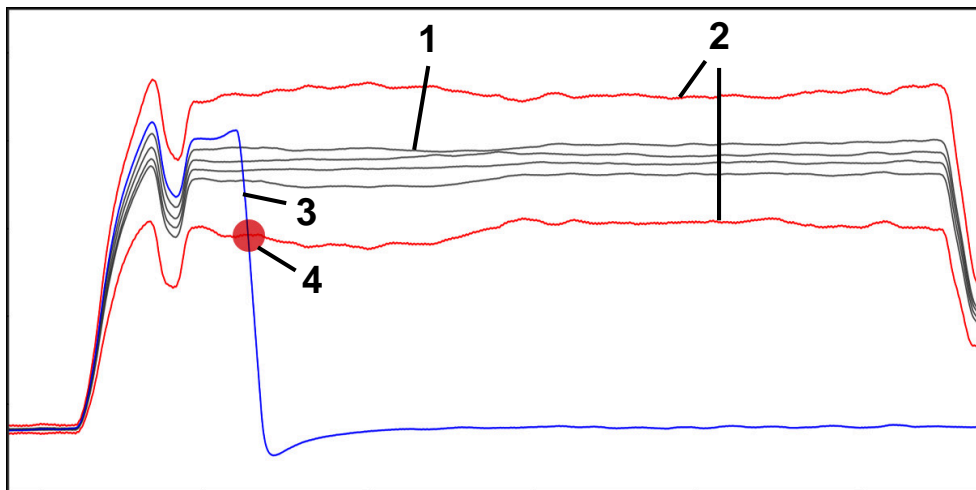

Example: Drop in spindle current due to tool breakage

- 1 — Recording of machining processes
- 2 — Limits arising from the recordings and the defined parameters
- 3 — Current machining operation
- 4 ● A process fault (e.g., due to tool breakage)

**Definitions**

<b>Term</b>	<b>Meaning</b>
<b>Monitoring section</b>	Monitoring sections define the areas in the NC program to be monitored by the control. The monitoring sections contain the <b>SECTION MONITORING START</b> and <b>SECTION MONITORING STOP</b> syntax elements at the beginning and at the end.
<b>Monitoring task</b>	The control uses the monitoring task to monitor the monitoring sections during the program run. A monitoring task consists of a signal, a procedure and one or several reactions. The control displays every monitoring task as a graph.
<b>Signal</b>	The signal defines what the control must monitor. The machine provides information about the machining process by means of signals.
<b>Procedure</b>	The procedure defines how the control monitors the signal.
<b>Reactions</b>	The reactions define how the control reacts in case the current machining deviates from the recorded machining processes (e.g., <b>Trigger NC stop</b> ).
<b>Parameterization</b>	Parameterization allows adapting the procedure to the machining process if required.
<b>Recordings</b>	The control monitors the current machining process by comparing the current machining process with the recorded machining processes. The control shows the recordings in a table.
<b>Setup mode</b>	The setup mode can be activated by an icon. After activating, all setting options are accessible (e.g., for parameterizing the monitoring tasks).



Recordings and settings of prior software versions are not compatible with software version 18. When the software is updated, the old recordings and settings must be deleted. The monitoring tasks must be newly set up and new reference machining processes must be recorded.

### 13.1.2 First steps in process monitoring

#### Starting process monitoring



Use process monitoring only for machining processes with the final feed rate override. Activate process monitoring only after positioning the component when the monitored sections of the NC program no longer change.

Start process monitoring as follows:



- ▶ Open the NC program in the **Editor** operating mode
- ▶ Define the start of a monitoring section with **MONITORING SECTION START**
- ▶ Define the end of a monitoring section with **MONITORING SECTION STOP**



- ▶ Select the **Program Run** operating mode
- ▶ Open an NC program
- ▶ Open the **Process Monitoring** workspace
- ▶ Open the **Recording and options** column
- ▶ Activate monitoring by means of the **Active** toggle switch



- ▶ Press the **NC Start** key
- ▶ The control starts the NC program and displays the graph during execution.
- ▶ Depending on the selected monitoring task and assessments, this machining process is already monitored.
- ▶ Assess the machining results in the **Assessment** table column



Depending on the monitoring task, several assessments may be required for active monitoring by the monitoring task.

- ▶ Machine further workpieces
- ▶ Assess the machining results in the **Assessment** table column



You can use the pre-defined monitoring tasks for the most part without having to make any adaptations. If you have to adapt the monitoring tasks due to the machining process, you may modify the parametrization of the monitoring tasks.

**Further information:** "Modifying the parametrization of monitoring tasks", Page 307

## Modifying the parametrization of monitoring tasks

To modify the parametrization of monitoring tasks:

- ▶ Select an NC block within a monitoring section
- > In the **Process Monitoring** workspace, the control displays the monitoring tasks including the recorded machining processes as a graph.



- ▶ Activate **Setup mode**



- ▶ Open **Settings** within the monitoring task for parameterizing
- > The control shows the selected record on the left and the preview for the next record on the right.
- ▶ Adapt the **parameter settings** if required
- ▶ Adapt the **fault threshold reactions** if required



- ▶ Press **Apply**
- > The control saves the changes and activates them when the NC program is executed the next time.

## Changing the monitoring task

To change a monitoring task:


- ▶ Select an NC block within a monitoring section
- > In the **Process Monitoring** workspace, the control displays the monitoring tasks including the recorded machining processes as a graph.



- ▶ Activate **Setup mode**



- ▶ Select the monitoring task icon (e.g., **Spindle current - Waveform comparison**)
- > The control opens the **Monitoring task** window.
- ▶ Select a signal (e.g., perpendicular servo lag)
- ▶ Select a procedure (e.g., absolute deviation)
- > The control only offers the procedures that are permitted for the selected signal.



- ▶ Press **Apply**
- > The control saves your change.

## Removing a monitoring task

To remove a monitoring task:

- ▶ Select an NC block within a monitoring section
- > In the **Process Monitoring** workspace, the control displays the monitoring tasks including the recorded machining processes as a graph.




- ▶ Activate **Setup mode**



- ▶ Select the monitoring task icon (e.g., **Spindle current - Waveform comparison**)
- > The control opens the **Monitoring task** window.



- ▶ Select **Remove**
- > The control opens a window with a prompt.



- ▶ Select **OK**
- > The control removes the monitoring task.



If you remove and add a monitoring task again, the previous recordings remain.



### 13.1.3 The Process Monitoring workspace (#168 / #5-01-1)

#### Application

In the **Process Monitoring** workspace the control visualizes the machining process during program run. Up to four monitoring tasks can be activated at the same time to suit the monitoring section. If required, monitoring tasks can be parameterized, replaced or removed.

#### Requirements

- Process monitoring software option (#168 / #5-01-1)
- Monitoring sections have been defined with **MONITORING SECTION**  
**Further information:** User's Manual for Programming and Testing
- Reproducible process is available in **FUNCTION MODE MILL** machining mode  
**Further information:** User's Manual for Programming and Testing

#### Description of function


The **Process Monitoring** workspace provides information and settings for monitoring the machining process.

#### Areas of the Process Monitoring workspace

Depending on whether the cursor is outside or inside of monitoring sections in the NC program, the **Process Monitoring** workspace offers different pieces of information and functions.

### Cursor outside of monitoring sections

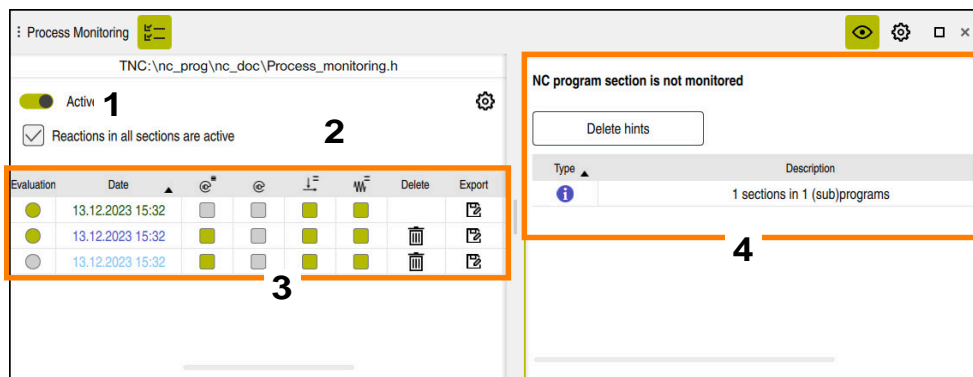


When the cursor is outside of a monitoring section in the NC program, the control displays general information in the global area.



Global area

The global area contains the following:

- 1 Toggle switch for activating or deactivating process monitoring for the entire NC program
- 2 Check box for activating or deactivating the reactions of all monitoring sections for the entire NC program  
Available only in setup mode
- 3 Table containing general information about the recorded machining processes  
**Further information:** "Recording of machining processes", Page 318
- 4 Table with notes on the active NC program  
The table contains the following information:


Column or icon	Meaning
<b>Type</b>	In the <b>Type</b> column, the control shows different types of notes.
	Information (for example, the number of monitoring sections)
	Warning (for example, whether a monitoring section has been removed)
	Faults (for example, <b>Consider deleting all records for NC program</b> ) When changing the NC blocks within a monitoring section, the control is no longer able to consider the recordings made so far. The recordings must be reset in the NC program-specific settings. <b>Further information:</b> "NC program-specific settings", Page 317
<b>Description</b>	The control displays a hint in the <b>Description</b> column.
<b>Program line</b>	If the information depends on an NC block number, the control displays the program name and the NC block number.

You can sort the table contents by a column by selecting the header of a column.

You can use the **Delete hints** button to empty the table.

### Cursor within a monitoring section

When the cursor is inside a monitoring section in the NC program, the control displays detailed information in the section-specific area.

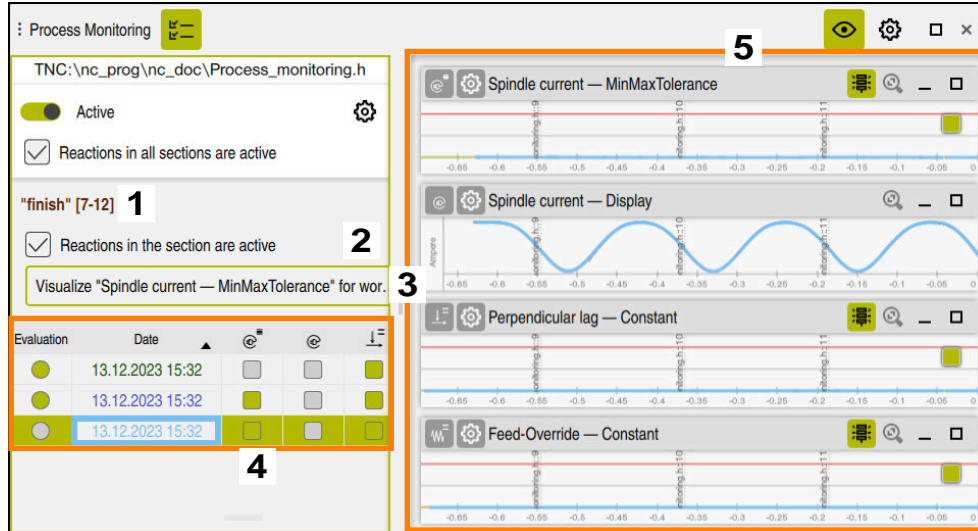

Section-specific area




The left column contains general information on a white background and section-specific information on a gray background.





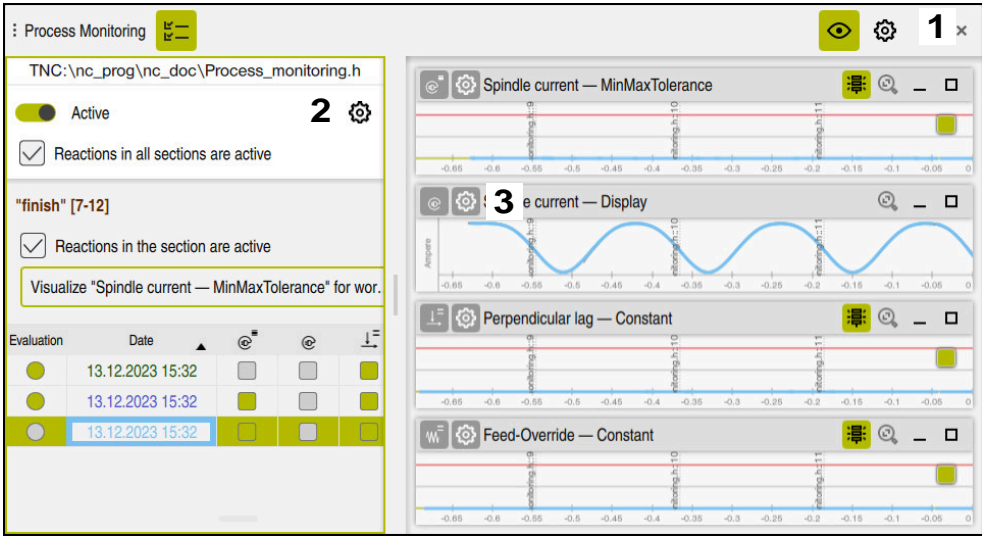


The section-specific area contains the following:


- 1 Section-specific information:
  - Name of the monitoring section, if applicable  
If a name is defined in the NC program with the optional **AS** syntax element, the control displays this name.  
If no name is defined, the control displays **MONITORING SECTION**.
  - Range of NC block numbers of the monitoring section in square brackets
- 2 Check box to activate or deactivate the reactions of the currently selected monitoring section  
Available only in setup mode
- 3 Selection menu for visualizing as a heatmap  
The result of a monitoring task can be displayed in the **Simulation** workspace as a heatmap on the simulated workpiece.  
Available only in setup mode  
**Further information:** User's Manual for Programming and Testing
- 4 Table containing section-specific information about the recorded machining processes  
**Further information:** "Recording of machining processes", Page 318
- 5 Monitoring tasks  
The control displays up to four monitoring tasks including the recorded machining processes as graphs.  
**Further information:** "Monitoring tasks", Page 320


Icons




The following icons are shown in the **Process Monitoring** workspace:

Icon	Meaning
	Open or close the <b>Recording and options</b> column
	Activate or deactivate the <b>Setup mode</b> If setup mode is active, the control displays extended settings for process monitoring. In order to see relevant information exclusively during execution, the setup mode can be deactivated.
	Open or close <b>Settings</b> 1 Global settings <b>Further information:</b> "Global settings in the Process Monitoring workspace", Page 315 2 NC program-specific settings Available only in setup mode <b>Further information:</b> "NC program-specific settings", Page 317 3 Setting for parameterization The control offers parameterization settings for every monitoring task. Available only in setup mode <b>Further information:</b> "Settings for parameterizing of monitoring tasks", Page 330
	<b>Reset scaling</b> Show graph of the entire monitoring section <div> If the icon is dimmed, the control displays the entire graph.</div>
	Rectangular color icons are automatic assessments by process monitoring.
	Round color icons are assessments that you can define.

Icon	Meaning
	<p data-bbox="480 360 847 389">Change <b>Signal representation</b></p> <p data-bbox="480 398 1209 427">You can change between the following signal representations:</p> <ul style="list-style-type: none"> <li data-bbox="480 436 1209 712"> <p data-bbox="480 436 730 465">■ Resulting quantity</p> <p data-bbox="517 474 1209 539">The resulting quantity shows the evaluated signal relative to the error limits.</p> <p data-bbox="517 548 1209 613">When the signal approaches the red line, machining deviates from the records.</p> <p data-bbox="517 622 1209 712">If the current machining process exceeds the red line during the defined hold time, the monitoring task triggers the defined reactions (e.g., NC stop).</p> </li> <li data-bbox="480 721 1209 956"> <p data-bbox="480 721 639 750">■ Signal run</p> <p data-bbox="517 759 1209 824">The signal run shows the unevaluated signal as an absolute value.</p> <p data-bbox="517 833 1209 956">If the selected procedure uses a tunnel, the control displays the tunnel around the signal by means of broken lines. Depending on the settings, the control displays the tunnel with a color background.</p> </li> </ul>

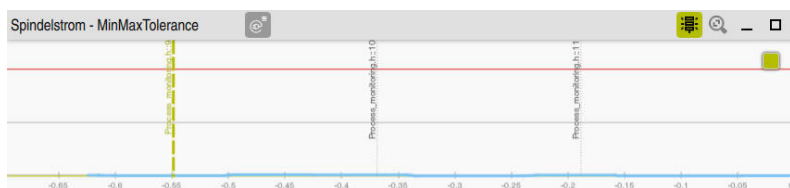

Graph as a resulting quantity with evaluated signal

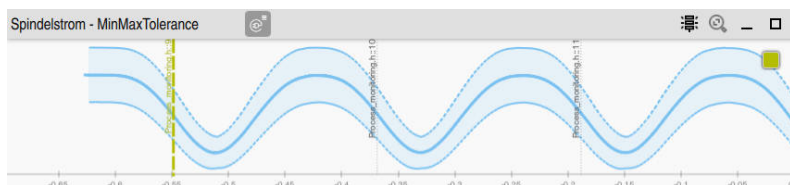

Graph as a signal run with unevaluated signal

### Notes


- Notes on handling the graph:
  - You can zoom in or out of the graph horizontally by scrolling or dragging.
  - When dragging or swiping with the left mouse button held down, you can move the graph.
  - You can align the graph by aligning an NC block number to the graph. The control marks the selected NC block number within the graph by a vertical green line.
  - If you double-click or double-tap a position within the graph, the control selects the corresponding NC block in the NC program and in the graph.
- The monitoring tasks are marked by specific icons.

**Further information:** "Overview of monitoring tasks", Page 321

Global settings in the Process Monitoring workspace

Open the global settings with an icon in the workspace title bar.

The Graph area

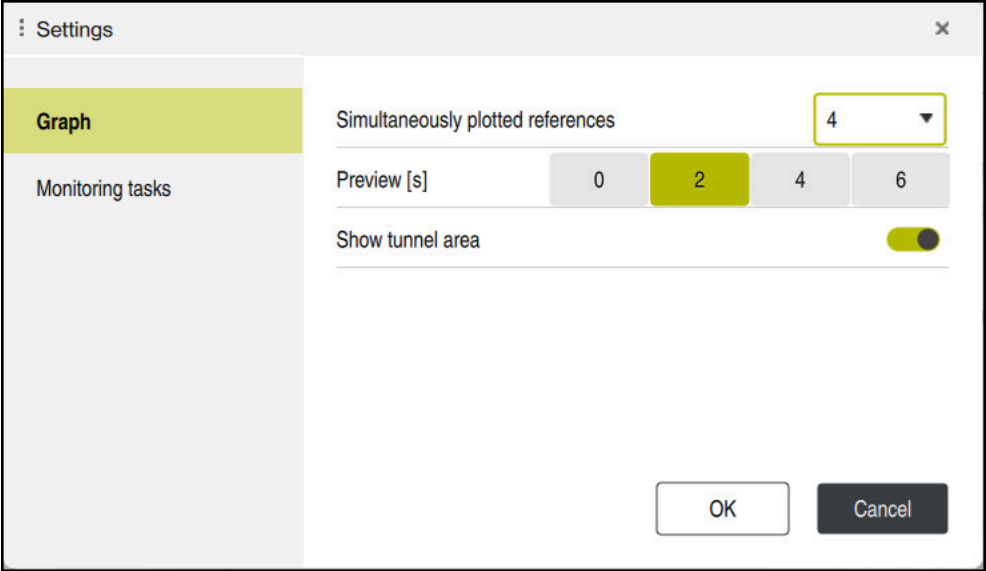


The **Graph** area of global settings

The **Graph** area offers the following settings:

Setting	Meaning
Simultaneous-ly plotted refer-ences	Select the maximum number of recordings that the control displays simultaneously as graphs in the monitoring tasks: <ul style="list-style-type: none"><li>■ 2</li><li>■ 4</li><li>■ 6</li><li>■ 8</li><li>■ 10</li></ul>
Preview [s]	During execution, the control displays graphs of current monitoring tasks. You can show an area for signals expected during the next seconds on the right in the graph. You can choose how many seconds the control displays on the right in the graph: <ul style="list-style-type: none"><li>■ 0</li><li>■ 2</li><li>■ 4</li><li>■ 6</li></ul>
Show tunnel area	When the toggle switch is active, the control displays the monitoring tunnel area in the graph on a color background. Only for procedures that work with a tunnel

### The Monitoring tasks area

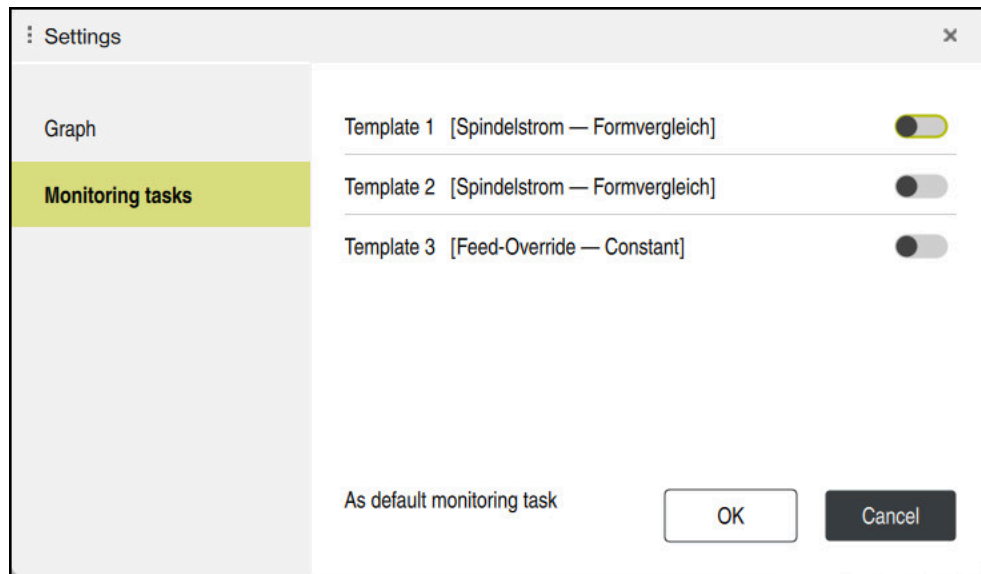

The **Monitoring tasks** area of global settings

The **Monitoring tasks** area shows saved templates for monitoring tasks with user-defined parameterization. If you have not yet saved any templates for monitoring tasks, this area is empty.


The first four activated templates are used for new monitoring sections or NC programs. If several activated templates show an identical signal and procedure, the control will use only the first template. If you have activated fewer than four unambiguous templates, the control will use templates defined by the machine manufacturer first and then HEIDENHAIN templates.

**Further information:** "Settings for parameterizing of monitoring tasks", Page 330



## NC program-specific settings

Open the NC program-specific settings with an icon in the **Recording and** column.

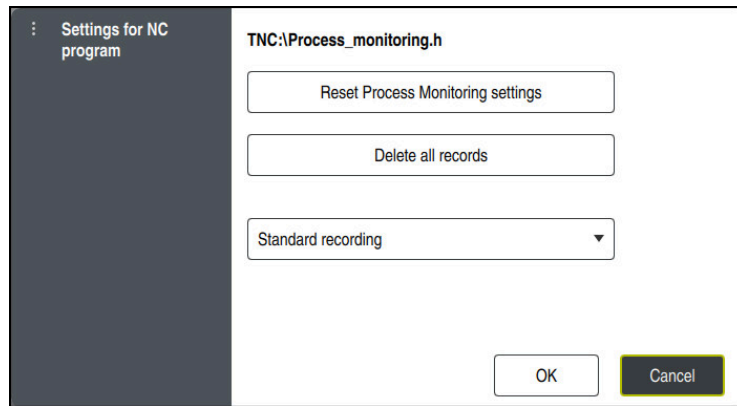


The **Settings for NC program** window

The **Settings for NC program** window provides the following settings:

- **Reset Process Monitoring settings**  
The control resets the monitoring settings including parameterizations to the default settings.
- **Delete all records**  
As opposed to manual deletion of a recording, the control will also delete the first line.  
**Further information:** "Recording of machining processes", Page 318
- Selection menu with recording options in order to influence the memory capacity needed on the hard disk:
  - **Standard recording**  
The control records all information.
  - **Limit recordings**  
The control records machining operations up to a defined count.  
If the number of recorded machining operations exceeds the maximum number, the control will overwrite the last machining operation.  
Input: **2...999999999**
  - **Only meta-information**  
The control does not record any process data, but only meta-information such as the date, time and the results of monitoring tasks. The control cannot use recordings without process data as a reference machining process. This setting can be used for monitoring and logging once process monitoring has been set up completely. This setting significantly reduces the amount of data.
  - **Each nth recording**  
The control does not record process data for each machining operation. You can define after which number of machining operations the control records process data. For the other machining operations, only meta-information will be recorded.  
Input: **2...20**

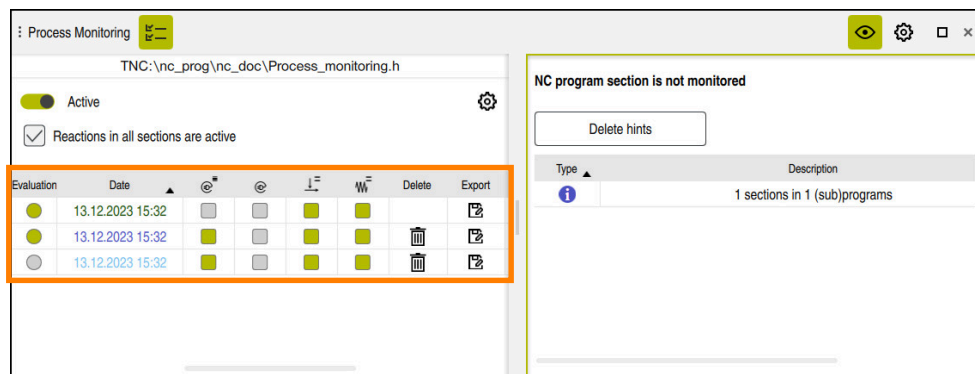

## Recording of machining processes



The table marked in this screenshot is not displayed completely. The scope of the table depends on the position of the cursor in the NC program.

The table provides the following information and functions:

Column	Meaning
<b>Assessment</b>	<p>When selecting a cell of this column, the control will open the <b>Component assessment</b> window.</p> <p>You can assess records in the <b>Component assessment</b> window:</p> <ul style="list-style-type: none"> <li>■ <b>Bad part</b></li> <li>■ <b>No assessment</b></li> <li>■ <b>Good part</b></li> </ul> <p>Depending on the procedure, the control uses the assessed records as reference machining operations for monitoring. The control only uses the first ten good parts as reference machining operations.</p> <div> <p><b>i</b> You can assess only completely executed records.</p> <p>Rectangular color icons are automatic assessments by process monitoring. Round color icons are assessments that you can define.</p> <p>Good parts must be representative for the machining process (for example, they must not include slower feed rates from positioning).</p> </div>
<b>Date</b>	<p>The control displays the date and time of the program start or the starting time of the monitoring section of each recorded machining operation.</p>
Symbols of monitoring tasks which have generated a result	<p>The control displays several columns with the monitoring tasks which have generated a result. In the columns, the monitoring task displays the worst assessment in color.</p> <div> <p><b>i</b> Rectangular color icons are automatic assessments by process monitoring. Round color icons are assessments that you can define.</p> </div> <p><b>Further information:</b> "Overview of monitoring tasks", Page 321</p> <p>When the monitoring task has triggered at least one reaction, the control additionally displays an exclamation mark. When you select a table cell that contains an exclamation mark, the control will display detailed information on the reactions.</p>

Column	Meaning
Delete	<p>If you select the trash bin icon, the control deletes the table row and the associated recorded process data.</p> <p>You cannot delete the first table line at this point because the control requires the record for synchronizing the process data.</p> <p>You can delete all records including the first table line in the <b>Settings for NC program</b> window.</p> <p><b>Further information:</b> "NC program-specific settings", Page 317</p> <p>This is available only when the cursor is outside of monitoring sections</p>
Export	<p>You can export a record log as an HTML or CSV file. The export contains, for example, the tool data and evaluations of the monitoring tasks.</p> <div>  <p>Refer to your machine manual.</p> <ul style="list-style-type: none"> <li>■ The machine manufacturer defines the data to be exported by the control.</li> <li>■ The machine manufacturer can define that the control automatically exports the recording after machining.</li> </ul> <p>Machine parameter <b>permitAutoExport</b> (no. 141601) defines whether the control is allowed to generate automatic records for the machine manufacturer.</p> </div> <p>This is available only when the cursor is outside of monitoring sections</p>
Note	In the <b>Note</b> column, you can enter notes about the record.
Tool name	<p>Name of the tool used from the tool management</p> <p>This is available only when the cursor is inside monitoring sections</p> <p><b>Further information:</b> "Tool management ", Page 205</p>
R	<p>Radius of the tool used from the tool management</p> <p>This is available only when the cursor is inside monitoring sections</p> <p><b>Further information:</b> "Tool management ", Page 205</p>
DR	<p>Delta value of the tool radius used from the tool management</p> <p>This is available only when the cursor is inside monitoring sections</p> <p><b>Further information:</b> "Tool management ", Page 205</p>
L	<p>Length of the tool used from the tool management</p> <p>This is available only when the cursor is inside monitoring sections</p> <p><b>Further information:</b> "Tool management ", Page 205</p>
CUT	<p>Number of cutting edges of the tool used from the tool management</p> <p>This is available only when the cursor is inside monitoring sections</p> <p><b>Further information:</b> "Tool management ", Page 205</p>
CURR_TIME	<p>Tool life of the tool used from the tool management at the beginning of the respective machining operation</p> <p>This is available only when the cursor is inside monitoring sections</p> <p><b>Further information:</b> "Tool management ", Page 205</p>
<div>  <p>You can sort the table contents by a column by selecting the header of a column.</p> </div>	

### 13.1.4 Monitoring tasks

A monitoring task consists of the following properties:

- Signal (e.g., spindle current)
- Procedure for evaluating the signal (e.g., waveform comparison)
- Depending on the selected procedure: one or several parameters (e.g., sensitivity of monitoring task)
- Reactions (e.g., stopping the NC program)

The control contains pre-defined monitoring tasks.



Refer to your machine manual.

The following monitoring tasks are included in the standard scope and have been configured by HEIDENHAIN. The machine manufacturer cannot modify these monitoring tasks, but can define further monitoring tasks.

In each monitoring task, the control displays the current machining operation as a resulting quantity or a signal run. The signal run additionally shows the reference machining operations used as well as a vertical axis with the relevant unit. The time axis is specified in seconds, or in minutes for longer monitoring sections.



Monitoring tasks

## Overview of monitoring tasks

**i** The table below contains an overview of the monitoring tasks. Detailed information about the following properties can be found in the content below:

- Procedure  
**Further information:** "Procedure", Page 324
- Reactions  
**Further information:** "Reactions", Page 331






The first four monitoring tasks are the HEIDENHAIN default monitoring tasks. If the machine manufacturer has not defined any templates, these monitoring tasks are active by default in a new NC program or monitoring section. You can also modify the monitoring tasks.

**Further information:** "Changing the monitoring task", Page 307

The control provides the following monitoring tasks:

Icon	Meaning
	<b>Spindle current – Waveform comparison</b> <p><b>Sample cases:</b></p> <ul style="list-style-type: none"> <li>■ Identifying broken tools</li> <li>■ Identifying a missing tool</li> <li>■ Identifying faulty clamping</li> <li>■ Identifying missing pre-machining.</li> </ul> <p><b>Signal:</b> Spindle current (without spindle acceleration)</p> <p><b>Procedure:</b> Waveform comparison</p> <p><b>Requirement:</b> At least one good part</p> <p><b>Parameters:</b> Tolerance of waveform with the reference signals</p>
	<b>Spindle current – Display</b> <p><b>Sample case:</b> Pure display without monitoring</p> <p><b>Signal:</b> Spindle current (smoothed)</p> <p><b>Procedure:</b> Graph display</p> <p><b>Requirement:</b> No assessment required</p>
	<b>Perpendicular lag – Constant</b> <p><b>Sample case:</b> Identifying contouring deviations vertically with respect to the contour run</p> <p><b>Signal:</b> Lag of all axes vertically with respect to contour run</p> <p><b>Procedure:</b> Constant</p> <p>Fixed limits that are independent of the signal</p> <p><b>Requirement:</b> No assessment required</p> <p><b>Parameters:</b></p> <ul style="list-style-type: none"> <li>■ Upper limit for lag in <math>\mu\text{m}</math></li> <li>■ Lower limit for lag in <math>\mu\text{m}</math></li> <li>■ Hold time for reactions in ms</li> </ul>

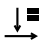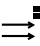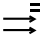Icon	Meaning
	<b>Feed rate override – Constant</b>  <b>Sample case:</b> Identifying feed rate override deviations <b>Signal:</b> Feed rate override <b>Procedure:</b> Constant Fixed limits that are independent of the signal <b>Requirement:</b> No assessment required <b>Parameters:</b> <ul style="list-style-type: none"> <li>■ Upper limit for the override in %</li> <li>■ Lower limit for the override in %</li> <li>■ Hold time for reactions in ms</li> </ul>
	<b>Spindle override – Constant</b>  <b>Sample case:</b> Identifying changes of spindle override <b>Signal:</b> Spindle override <b>Procedure:</b> Constant Fixed limits that are independent of the signal <b>Requirement:</b> No assessment required <b>Parameters:</b> <ul style="list-style-type: none"> <li>■ Upper limit for the override in %</li> <li>■ Lower limit for the override in %</li> <li>■ Hold time for reactions in ms</li> </ul>
	<b>Spindle current – MinMaxTolerance</b>  <b>Sample cases:</b> <ul style="list-style-type: none"> <li>■ Identifying broken tools</li> <li>■ Identifying a missing tool</li> <li>■ Identifying faulty clamping</li> <li>■ Identifying missing pre-machining.</li> </ul> <b>Signal:</b> Spindle current (smoothed, without spindle acceleration) <b>Procedure:</b> MinMaxTolerance <b>Requirement:</b> At least one good part <b>Parameters:</b> <ul style="list-style-type: none"> <li>■ Tolerance percentage of mean value of reference signals in %</li> <li>■ Static tunnel width in A</li> <li>■ Hold time for reactions in ms</li> </ul>
	<b>Spindle current – Standard deviation</b>  <b>Sample cases:</b> <ul style="list-style-type: none"> <li>■ Identifying broken tools</li> <li>■ Identifying a missing tool</li> <li>■ Identifying faulty clamping</li> <li>■ Identifying missing pre-machining.</li> </ul> <b>Signal:</b> Spindle current (smoothed, without spindle acceleration) <b>Procedure:</b> Standard deviation <b>Requirement:</b> At least three good parts <b>Parameters:</b> <ul style="list-style-type: none"> <li>■ Dynamic tunnel width: Multiple of measured standard deviation <math>\sigma</math> of the reference signals</li> <li>■ Static tunnel width in A</li> <li>■ Hold time for reactions in ms</li> </ul>

Icon	Meaning
	<b>Perpendicular lag – Absolute</b> <p><b>Sample case:</b> Identifying contouring deviations vertically with respect to the contour run</p> <p><b>Signal:</b> Lag of all axes vertically with respect to contour run</p> <p><b>Procedure:</b> Absolute Limits that depend on the signal</p> <p><b>Requirement:</b> At least one good part</p> <p><b>Parameters:</b> <ul style="list-style-type: none"> <li>■ Permitted deviation from maximum or minimum reference value of the signal in <math>\mu\text{m}</math></li> <li>■ Hold time for reactions in ms</li> </ul> </p>
	<b>Parallel lag – Absolute</b> <p><b>Sample case:</b> Identifying contouring deviations in parallel with the contour run</p> <p><b>Signal:</b> Lag of all axes in parallel with contour run</p> <p><b>Procedure:</b> Absolute Limits that depend on the signal</p> <p><b>Requirement:</b> At least one good part</p> <p><b>Parameters:</b> <ul style="list-style-type: none"> <li>■ Permitted deviation from maximum or minimum reference value of the signal in <math>\mu\text{m}</math></li> <li>■ Hold time for reactions in ms</li> </ul> </p>
	<b>Parallel lag – Constant</b> <p><b>Sample case:</b> Identifying contouring deviations in parallel with the contour run</p> <p><b>Signal:</b> Lag of all axes in parallel with contour run</p> <p><b>Procedure:</b> Constant Fixed limits that are independent of the signal</p> <p><b>Requirement:</b> No assessment required</p> <p><b>Parameters:</b> <ul style="list-style-type: none"> <li>■ Upper limit for lag in <math>\mu\text{m}</math></li> <li>■ Lower limit for lag in <math>\mu\text{m}</math></li> <li>■ Hold time for reactions in ms</li> </ul> </p>
	<b>Testing signal – Waveform comparison</b> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;">  This monitoring task is intended for test purposes and should be used only if requested by HEIDENHAIN or by the machine manufacturer! </div> <p><b>Sample cases:</b> <ul style="list-style-type: none"> <li>■ Identifying broken tools</li> <li>■ Identifying a missing tool</li> <li>■ Identifying faulty clamping</li> <li>■ Identifying missing pre-machining.</li> </ul> </p> <p><b>Signal:</b> Process signal The signal may change between different software statuses. Compatibility between software updates is not guaranteed.</p> <p><b>Procedure:</b> Waveform comparison</p> <p><b>Requirement:</b> At least one good part</p> <p><b>Parameters:</b> Tolerance of waveform with the reference signals</p>

When the icon of a monitoring task is selected, the control opens the **Monitoring task** window. You can change or remove a monitoring task.

### Procedure

Process monitoring offers the following procedures:


- Waveform comparison  
**Further information:** "Waveform comparison", Page 325
- MinMaxTolerance  
**Further information:** "MinMaxTolerance", Page 326
- Standard deviation  
**Further information:** "Standard deviation", Page 328
- Display  
**Further information:** "Display", Page 328
- Absolute  
**Further information:** "Absolute", Page 329
- Constant  
**Further information:** "Constant", Page 329



### Waveform comparison

In the **Waveform comparison** procedure, the control compares the current signal wave with the records of good parts at short time intervals. If the wave deviates too strongly, the monitoring task identifies a potential fault. A long-term signal drift will not modify the waveform and will therefore not cause any reaction.


In this procedure, the control will not display any error limits in the signal run.

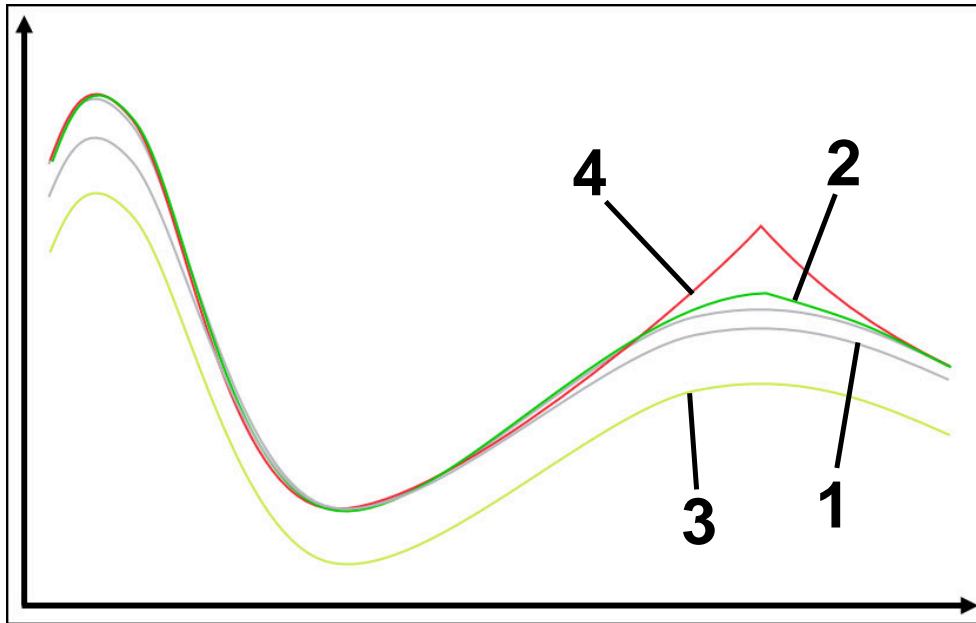

- |   |   |  |
|---|---|--|
| 1 | — | Good parts<br>These records are assessed as good parts and are used as reference machining operations.   |
| 2 | — | Machining with a slight deviation<br>The waveform of this machining operation deviates slightly from the previous records, but will not yet trigger a reaction.  |
| 3 | — | Machining with a slight deviation<br>The signal of this machining operation deviates slightly from the previous records. As the waveform is identical with the reference machining operations, this machining operation will not trigger a reaction. |
| 4 | — | Machining with a heavy deviation<br>The waveform of this machining operation deviates heavily from the previous records and will trigger the configured reactions.   |

### MinMaxTolerance

In the **MinMaxTolerance** procedure, the control monitors if the current machining operation is within the range of the previously selected good parts including their tolerance. The tolerance consists of the absolute static tolerance and the percentage tolerance that depends on the process signal. This procedure reacts to both short-term changes and long-term signal drifts. A short-term change may be due to tool breakage, for example, and a long-term drift may originate from a change in temperature, for example.

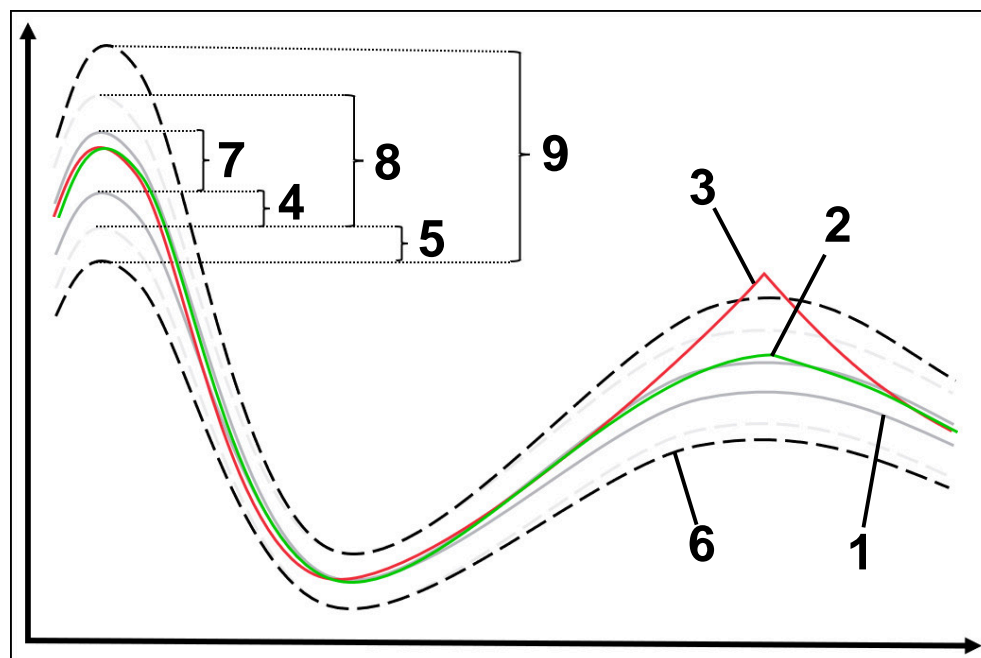


- 1 — Good parts  
These machining operations are assessed as good parts and are used as reference machining operations for calculating the error limits.
- 2 — Machining without exceeding the error limit  
This machining operation deviates slightly from the previous records, but is still within the error limits.
- 3 — Machining with exceeding the error limit  
This machining operation deviates heavily from the previous records. The machining operation exceeds the error limit and triggers the configured reactions.
- 4 — Static tolerance, starting from the MinMax range
- 5 — Percentage tolerance  
Depends on the values of reference signals
- 6 - - Error limits  
When a machining operation exceeds the upper or lower error limit, the monitoring task triggers the configured reaction.

The error limits result from the total of the following values:

- 7 MinMax range  
Range between the highest and the lowest reference machining operation signal runs
- 8 Statically extended range  
MinMax range evenly extended by the static tolerances  
The control does not display the lines of this range.
- 9 Tunnel width  
Statically extended range, extended by the percentage tolerances

### Standard deviation

In the **Standard deviation** procedure, the control monitors if the current machining operation is within the range of the previously selected good parts including their tolerance. The tolerance consists of the static range and a multiple of the standard deviation  $\sigma$ . This procedure reacts to both short-term changes and long-term signal drifts. A short-term change may be due to tool breakage, for example, and a long-term drift may originate from a change in temperature, for example.

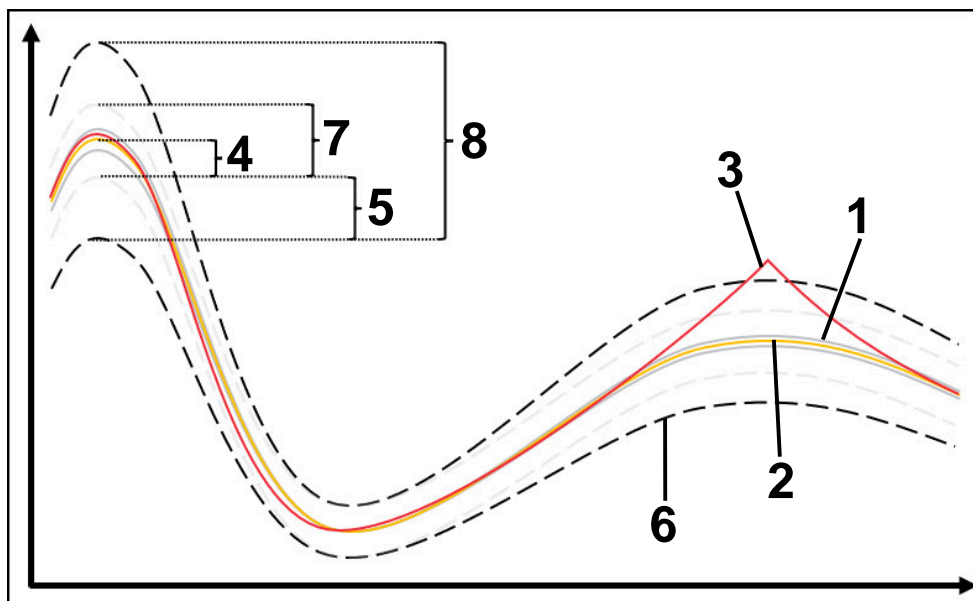

- 1 — Good parts  
These machining operations are assessed as good parts and are used as reference machining operations for calculating the error limits.
- 2 — Mean of recordings
- 3 — Machining with exceeding the error limit  
This machining operation deviates heavily from the previous records. The machining operation exceeds the error limit and triggers the configured reactions.
- 4 — Static tolerance, starting from the mean
- 5 — Statistic tolerance from a multiple of the standard deviation  $\sigma$  of reference machining operations
- 6 — — Error limits  
When a machining operation exceeds the upper or lower error limit, the monitoring task triggers the configured reaction.

The error limits result from the total of the following values:

- 7 Statically extended range  
Mean evenly extended by the static tolerances  
The control does not display the lines of this range.
- 8 Tunnel width  
Statically extended range, extended by the statistical tolerances

### Display

In the **Display** procedure, the control displays the run of the selected signal of current machining. The control does not carry out any reactions, you can only check the record visually.

**Absolute**


In the **Absolute** procedure, the control monitors if the current machining is within the error limits. The error limits result from the range of reference machining operations and the defined tolerance. The tolerances depend on the signals of reference machining operations. You can define the tolerances as absolute fixed values or as relative percent values.

**Constant**

In the **Constant** procedure, the control monitors if the current machining is within the defined error limits. The error limits result from the defined tolerances which are independent of the signal. This makes the monitoring task monitor with this procedure starting from the first machining operation, and does not require any assessments of records.

Settings for parameterizing of monitoring tasks

When changing the monitoring task for the respective monitoring section, you can modify the parameterization of the monitoring tasks for the respective monitoring section.

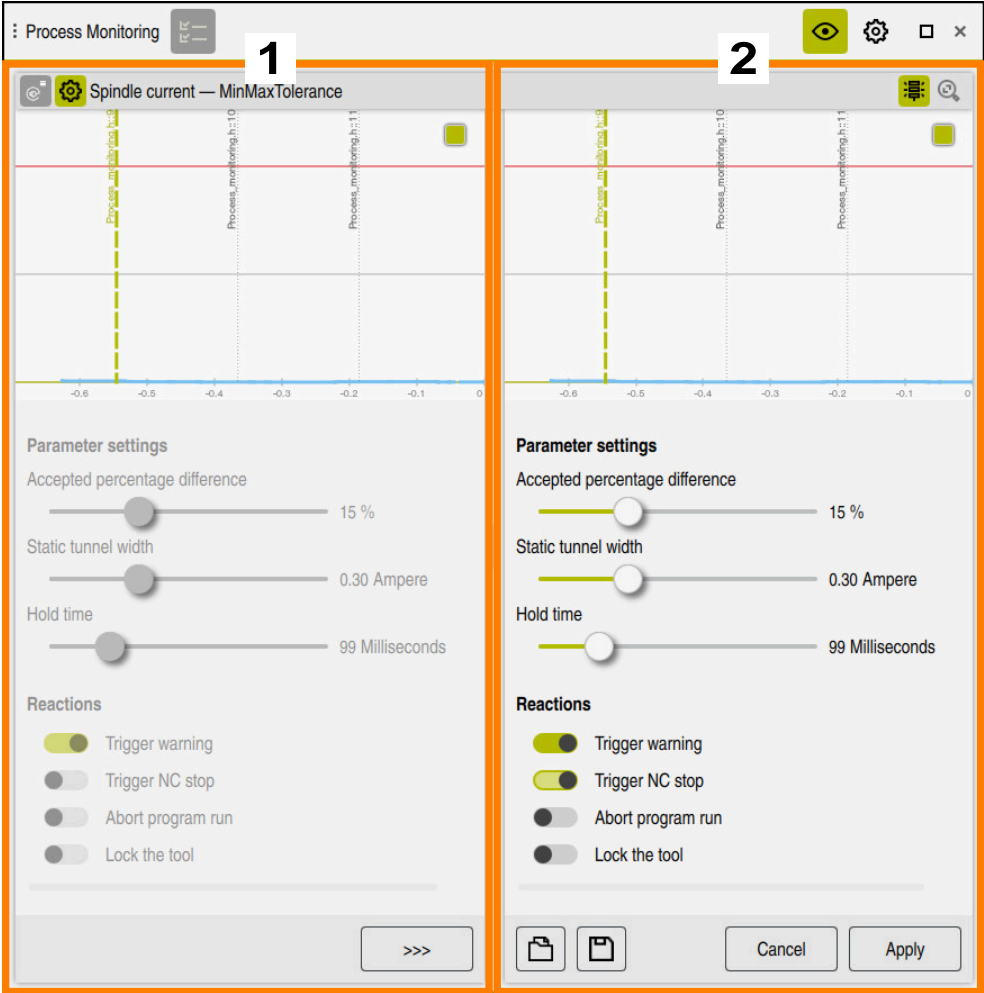



When selecting the settings of a monitoring task, the control displays two areas:

- 1 Parameterization of selected recording  
The control dims the parameterization that was active at the time of the selected recording.
- 2 Preview of current parameterization  
The control displays the current parameterization for the monitoring task. When changing the settings, the control displays which effects the changes have on the selected machining operation.  
When displaying the complete graph, the control displays the worst resulting quantity by means of the square color icon.

The settings of monitoring tasks contain the icons and buttons below:

Icon, button or shortcut	Meaning
>>>	Restore values from the left view
Cancel	Reject parameterization changes
Apply	Accept parameterization changes

Icon, button or shortcut	Meaning
	<b>Open</b> You can load an existing parameterization template for the selected monitoring task. The control offers only templates matching the selected monitoring task.
	<b>Save</b> You can save the parameterization of the current monitoring task as a template. After saving, you can use the parameterization templates even for other sections or in other NC programs.  You can save a maximum of ten parameterization templates. Existing parameterization templates can be overwritten or deleted.


## Reactions



Refer to your machine manual.  
The machine manufacturer can define further reactions.

If a signal exceeds the error limits for longer than the defined hold time, the monitoring task can execute one or more reactions.

You can choose from the following reactions, depending on the monitoring task:

Reaction	Meaning
<b>Trigger warning</b>	The control displays a warning in the notification menu. <b>Further information:</b> "Message menu on the information bar", Page 360
<b>Trigger NC stop</b>	The control stops the NC program. You can then check the machining status. If you find that there is no serious error, you can resume the NC program. The control reactivates process monitoring only when machining is stopped and the NC program is restarted.
<b>Abort program run</b>	The control stops the NC program. In this case, the NC program cannot be resumed.  <div>            The machine manufacturer can define the behavior of the control in connection with pallet machining in case a program is aborted (e.g., continue machining the workpieces on the next pallet).         </div>
<b>Lock the tool</b>	The control blocks the tool in the tool management. <b>Further information:</b> "Tool management ", Page 205





# 14

**Opening CAD files  
with CAD Viewer**

## 14.1 Fundamentals

### Application

**CAD Viewer** supports the following standard file types that can be opened directly in the control:

File type	Extension	Format
STEP	*.stp and *.step	■ AP 203 ■ AP 214
IGES	*.igs and *.iges	■ Version 5.3
DXF	*.dxf	■ R10 to 2015 ■ ASCII
STL	*.stl	■ Binary ■ ASCII

**CAD Viewer** runs as a separate application on the third desktop of the control.


### Related topics

- Creating 2D sketches on the control

**Further information:** User's Manual for Programming and Testing

## Description of function

### Screen layout

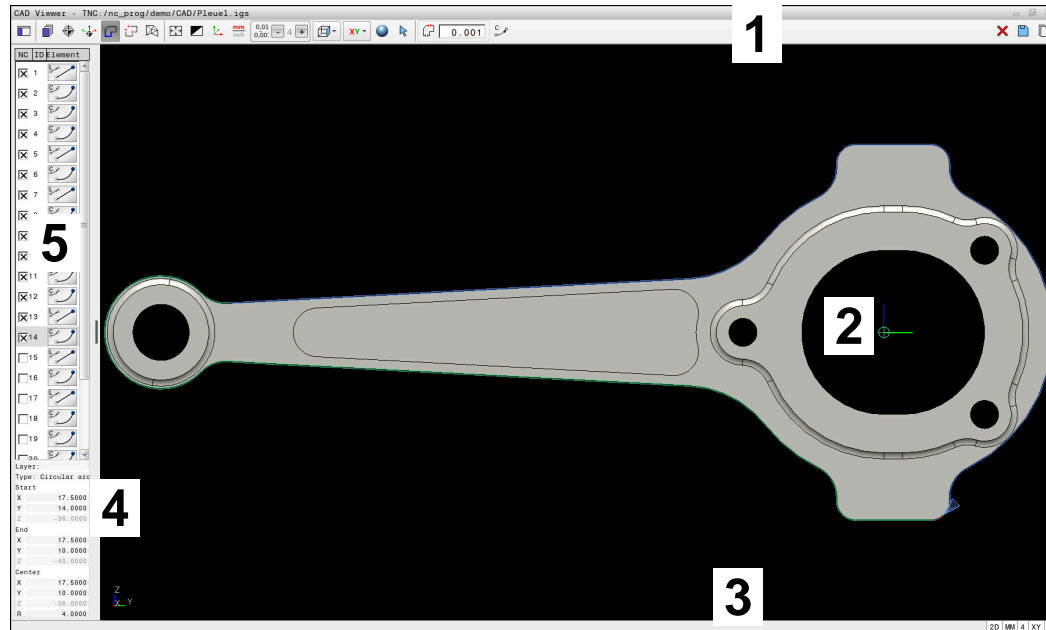

CAD file open in **CAD Viewer**

CAD Viewer consists of the following areas:

- 1 Menu bar  
**Further information:** "Menu bar icons", Page 336
- 2 Graphics area  
The CAD model is displayed in the graphics window.
- 3 Status bar  
The status bar contains the active settings.
- 4 Element information area  
**Further information:** "Element Information area", Page 337
- 5 List View area  
The List View area displays information on the active function (e.g., available layers or the position of the workpiece preset).

### Menu bar icons

The menu bar contains the following icons:

Icon	Meaning
	<b>Show sidebar</b> Show, enlarge, or hide the List View area
	<b>Display the layer</b> Display the layer(s) in the List View area <b>Further information:</b> "Layer", Page 338
	<b>Preset</b> Define the workpiece preset Workpiece preset has been defined Delete the defined workpiece preset <b>Further information:</b> "Workpiece preset in the CAD file", Page 339
	<b>Datum</b> Set the datum Datum has been set <b>Further information:</b> "Workpiece datum in the CAD file", Page 342
	<b>Contour</b> Select contour (#42 / #1-03-1) <b>Further information:</b> "Loading contours and positions to NC programs with CAD Import (#42 / #1-03-1)", Page 344
	<b>Positions</b> Select positions (#42 / #1-03-1) <b>Further information:</b> "Loading contours and positions to NC programs with CAD Import (#42 / #1-03-1)", Page 344
	<b>3D mesh</b> Create a 3D mesh (#152 / #1-04-1) <b>Further information:</b> "Generating STL files with 3D mesh (#152 / #1-04-1)", Page 351
	<b>Show all</b> Set the zoom to the largest possible view of the complete graphics
	<b>Inverted colors</b> Change the background color (black or white)
	Toggle between 2D and 3D modes
	Set the unit of measure (mm or inches) <b>CAD Viewer</b> performs all internal calculations in mm. If you select the inch unit of measure, the <b>CAD Viewer</b> converts all values to inches. <b>Further information:</b> "Loading contours and positions to NC programs with CAD Import (#42 / #1-03-1)", Page 344

Icon	Meaning
	<p><b>Number of decimal places</b></p> <p>Select the resolution. The resolution defines the number of decimal places and the number of positions for linearization.</p> <p><b>Further information:</b> "Loading contours and positions to NC programs with CAD Import (#42 / #1-03-1)", Page 344</p> <p>Default setting: 4 decimal places with <b>mm</b>, and 5 decimal places with <b>inch</b> as the unit of measure</p>
	<p><b>Set perspective</b></p> <p>Switch between various views of the model (e.g., <b>Top</b>)</p>
	<p><b>Axes</b></p> <p>Select the working plane:</p> <ul style="list-style-type: none"> <li>■ <b>XY</b></li> <li>■ <b>YZ</b></li> <li>■ <b>ZX</b></li> <li>■ <b>ZXØ</b></li> </ul> <p>In the <b>ZXØ</b> working plane, you can select turning contours (#50 / #4-03-1).</p> <p>If you take over a contour or position, the control outputs the NC program in the selected working plane.</p> <p><b>Further information:</b> "Loading contours and positions to NC programs with CAD Import (#42 / #1-03-1)", Page 344</p>
	<p>Toggle a 3D model between a solid model and a wire-frame model.</p>
	<p>"Select, add, or remove contour elements" mode</p>
	<div>  The icon shows the current mode. Clicking the icon activates the next mode.         </div>
	<p>Undo</p>
	<p><b>Delete entire list</b></p>
	<p><b>Save entire list content to a file</b></p>
	<p><b>Copy entire list contents to clipboard</b></p> <p>The control retains the content of the clipboard only as long as <b>CAD Viewer</b> is open.</p>

### Element Information area

In the Element Information area, the following information is displayed for the selected element of the CAD file:

- Associated layer
- Element type
- Point type:
  - Point coordinates
- Line type:

- Coordinates of the starting point
- Coordinates of the end point
- Circular arc or circle type:
  - Coordinates of the starting point
  - Coordinates of the end point
  - Coordinates of the center point
  - Radius

The control always shows the **X**, **Y**, and **Z** coordinates. In 2D mode, the Z coordinate is dimmed.

## Layer

CAD files usually contain multiple layers. The designer uses these layers to create groups of various types of elements, such as the actual workpiece contour, dimensions, auxiliary and design lines, hatching, and texts.

The CAD file to be processed must contain at least one layer. The control automatically moves all elements not assigned to a layer to the "anonymous" layer.

If the name of the layer is not shown completely in the List View area, you can use the **Show sidebar** icon to enlarge this area.

Use the **Display the layer** icon to display all the layers of the file in the List View area. Use the check box in front of the name to show and hide individual layers.

When you open a CAD file in **CAD Viewer**, all available layers are shown.

If you hide unnecessary layers, the graphic becomes clearer.

## Notes

- Before loading the file into the control, ensure that the name of the file contains only permitted characters.

**Further information:** User's Manual for Programming and Testing

- When you select a layer in the List View area, you can press the spacebar to show and hide the layer.
- **CAD Viewer** allows you to open CAD files consisting of any number of triangles.

## 14.2 Workpiece preset in the CAD file

### Application

The datum of the drawing in the CAD file is not always located in a manner that lets you use it as a workpiece preset. Therefore, the control provides a function with which you can shift the workpiece preset to a suitable location by clicking an element. You can also define the orientation of the coordinate system.

### Related topics

- Presets in the machine


**Further information:** "Presets in the machine", Page 172

## Description of function

When you select the **Preset** icon, the control displays the following information in the list view area:

- Distance between the defined preset and the drawing datum
- Orientation of the working plane

The control displays values not equal to 0 in orange.

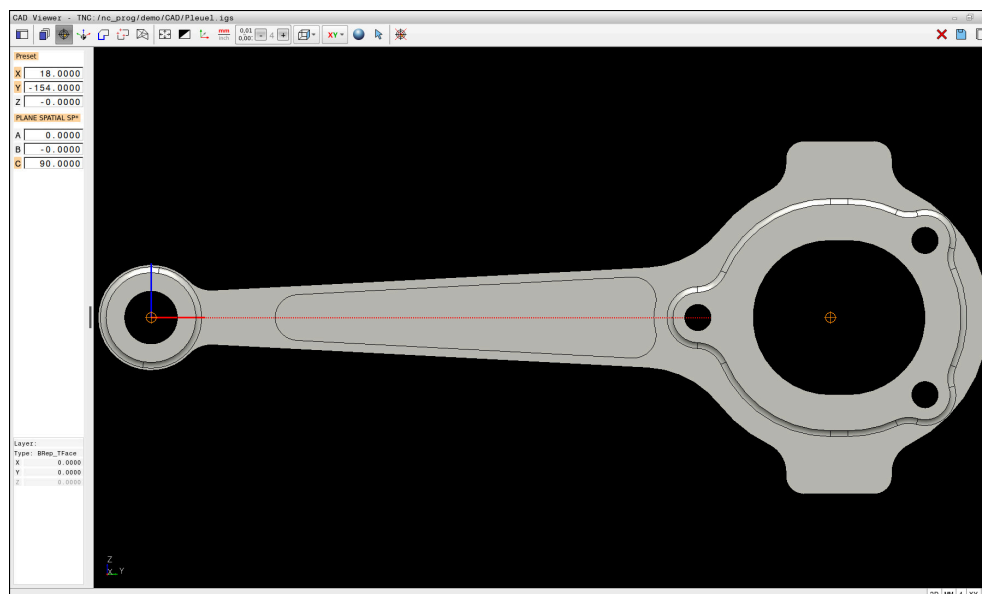

Workpiece preset in the CAD file

You can position the preset at the following locations:

- By direct numerical input in the List View area
- For lines:
  - Starting point
  - Midpoint
  - End point
- For circular arcs:
  - Starting point
  - Midpoint
  - End point
- For full circles:
  - At the quadrant transitions
  - At the center
- At the intersection between:
  - Two lines, even if the point of intersection is actually on the extension of one of the lines
  - Line and circular arc
  - Line and full circle
  - Two circles (regardless of whether a circular arc or a full circle)

If you have set a workpiece preset, the control displays the **Preset** icon in the menu bar with a yellow quadrant.

The preset and optional orientation are inserted in the NC program as a comment starting with **origin**.



```
4 ;origin = X... Y... Z...
```

```
5 ;origin_plane_spatial = SPA... SPB... SPC...
```

You can save the workpiece preset and workpiece datum information to a file or to the clipboard, even when the software option CAD Import (#42 / #1-03-1) is not available.



The control retains the content of the clipboard only as long as **CAD Viewer** is open.

You can change the preset even after you have selected the contour. The control does not calculate the actual contour data until you save the selected contour in a contour program.

### 14.2.1 Setting the workpiece preset or workpiece datum and orienting the coordinate system



- The following instructions apply when using a mouse. You can also perform these steps with touch gestures.  
**Further information:** "Common gestures for the touchscreen", Page 95
- The following instructions also apply to the workpiece datum. In this case, start by selecting the **Datum** icon.

#### Setting the workpiece preset or workpiece datum on an individual element

To set the workpiece preset on an individual element:



- ▶ Select **Preset**
- ▶ Position the cursor on the desired element
- ▶ If you are using a mouse, the control displays selectable presets for the element using gray icons.
- ▶ Click the icon at the desired position
- ▶ The control sets the workpiece preset to the selected position. The control turns the icon green.
- ▶ Orient the working plane, if required

### Setting the workpiece preset or workpiece datum at the intersection of two elements

You can set the workpiece preset at the intersection of lines, full circles, and arcs.

To set the workpiece preset at the intersection of two elements:



- ▶ Select **Preset**
- ▶ Click on the first element
- > The control highlights the element in color.
- ▶ Click on the second element
- > The control sets the workpiece preset at the point of intersection of the two elements. The control marks the workpiece preset with a green symbol.
- ▶ Orient the working plane, if required



- If there are several possible intersections, the control selects the intersection nearest the mouse-click on the second element.
- If two elements do not intersect directly, the control automatically calculates the intersection of their extensions.
- If the control cannot calculate an intersection, it deselects the previously selected element.

### Orienting the working plane

The following requirements must be met in order to orient the working plane:

- Preset has been defined
- There are elements next to the preset that can be used for the desired orientation

To orient the working plane:

- ▶ Select an element in the positive direction of the X axis
- > The control orients the X axis.
- > The control changes the **C** angle in the List View area.
- ▶ Select an element in the positive direction of the Y axis
- > The control orients the Y and Z axes.
- > The control changes the **A** and **C** angles in the List View area.

## 14.3 Workpiece datum in the CAD file

### Application

The workpiece preset is not always located in a manner that lets you machine the entire part. Therefore, the control provides a function to define a new datum and a working plane.

### Related topics

- Presets in the machine

**Further information:** "Presets in the machine", Page 172


## Description of function

When you select the **Datum** icon, the control displays the following information in the list view area:

- Distance between the datum that has been set and the workpiece preset
- Orientation of the working plane

You can apply a workpiece datum set in CAD Viewer and shift it, if required by entering values directly in the List View area.

The control displays values not equal to 0 in orange.

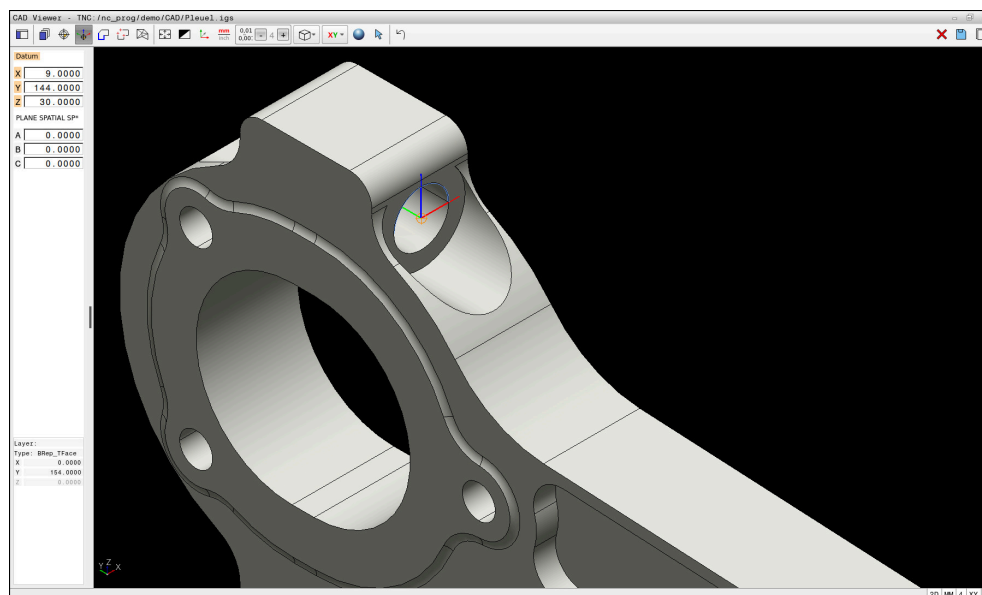

Workpiece datum for tilted machining

You can set the datum and the working plane orientation at the same locations as a preset.

**Further information:** "Workpiece preset in the CAD file", Page 339

If you have set a workpiece datum, the control displays the **Datum** icon in the menu bar with a yellow area.

**Further information:** "Setting the workpiece preset or workpiece datum and orienting the coordinate system", Page 341

The datum and its optional orientation can be inserted as NC block or comments in the NC program by using the **TRANS DATUM AXIS** function for the datum and the **PLANE SPATIAL** function for the orientation.

If you define only one datum and its orientation, then the control inserts the functions in the NC program as an NC block.

**4 TRANS DATUM AXIS X... Y... Z...**

**5 PLANE SPATIAL SPA... SPB... SPC... TURN MB MAX FMAX**

If you additionally select contours or points, then the control inserts the functions in the NC program as comments.

**4 ;TRANS DATUM AXIS X... Y... Z...**

**5 ;PLANE SPATIAL SPA... SPB... SPC... TURN MB MAX FMAX**

You can save the workpiece preset and workpiece datum information to a file or to the clipboard, even when the software option CAD Import (#42 / #1-03-1) is not available.



The control retains the content of the clipboard only as long as **CAD Viewer** is open.

## 14.4 Loading contours and positions to NC programs with CAD Import (#42 / #1-03-1)

### Application

You can open CAD files directly on the control to extract contours or machining positions from them. You can then store them as Klartext programs or as point files. Klartext programs acquired in this manner can also be run on older HEIDENHAIN controls, since these contour programs by default contain only **L** and **CC/C** blocks.

### Related topics

- Using point tables

**Further information:** User's Manual for Machining Cycles


### Requirement

- Software option CAD Import (#42 / #1-03-1)

### Description of function

To insert a selected contour or a selected machining position directly into an NC program, use the control's clipboard. Using the clipboard, you can even transfer the contents to additional software tools (e.g., **Leafpad** or **Gnumeric**).



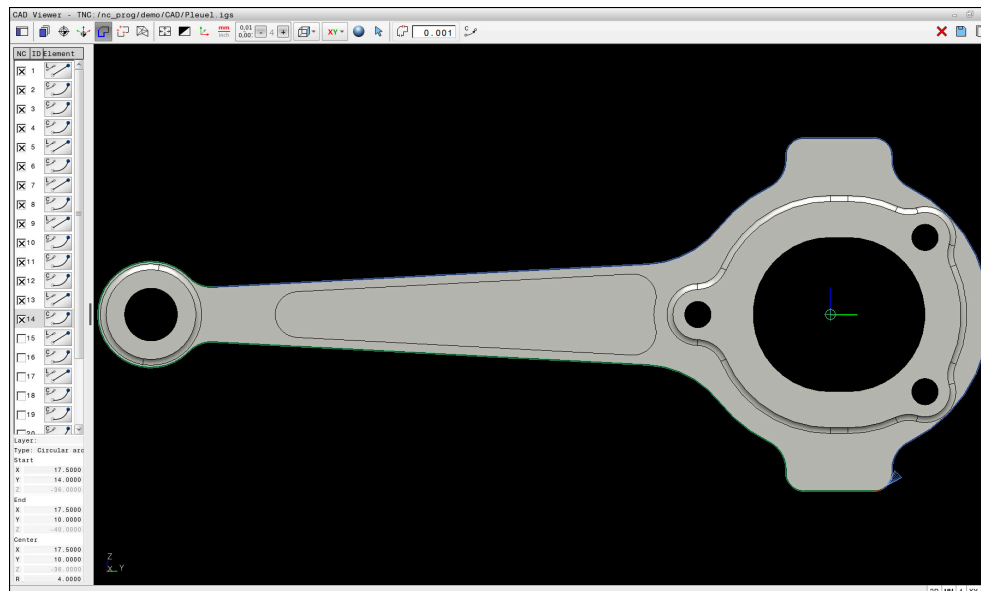



**Further information:** "Opening files with additional software", Page 645



CAD model with marked contour

## Icons in the CAD Import

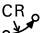With the CAD Import, the control shows the following additional functions in the menu bar:

Icon	Meaning
	<b>Set the transition tolerance</b> The tolerance specifies how far apart neighboring contour elements may be from each other. You can use the tolerance to compensate for inaccuracies that occurred during drawing creation. The default setting is 0.001 mm.
 	<b>C or CR</b> You can select whether the control will output circular contours <b>C</b> or <b>CR</b> in the NC program.
	<b>Show connections between two positions</b> The control hides and displays the tool paths between the positions.
	<b>Apply path optimization</b> The control optimizes the tool traverse movement between the machining positions. When you select the icon again, the control will discard the optimization.
	<b>Find circles according to diameter range. Load center coordinates to the position list</b> The control opens the <b>Find circle centers by diameter range</b> window. You can filter the displayed data by diameter or depth values.

## Applying contours

The following elements can be selected as a contour:

- Line segment
- Full circle
- Pitch circle
- Polyline
- Any curves (e.g., splines, ellipses)

## Linearization

**CAD Viewer** linearizes all of the contours that are not in the working plane.

During linearization, **CAD Viewer** subdivides a contour into individual segments. From these segments, CAD Import creates straight lines **L** and circular arcs **C** or **CR** that are as long as possible.

Thanks to linearization, it is also possible to import contours with CAD Import that cannot be programmed with the path functions of the control, such as splines.

The higher you define the resolution by specifying decimal places, the lower is the deviation from the imported contour.

**Further information:** "Screen layout", Page 335



You can prevent the linearization, for example of circles that are not in the working plane. Select the working plane in which the circle has been defined.

**Turning (#50 / #4-03-1)**

Using CAD Import, you can also import contours for turning (#50 / #4-03-1). Before selecting a turning contour, you must set the preset on the rotary axis. CAD Import saves turning contours with Z and X coordinates and outputs the X coordinates as diameter values. Any contour elements below the rotary axis cannot be selected and are highlighted in gray.

**Applying positions**

You can also use the CAD Import to save positions (e.g., for holes).

Three possibilities are available in the pattern generator for defining machining positions:

- Single selection
- Multiple selection within a range
- Multiple selection using search filters

**Further information:** "Selecting positions", Page 349

The following file types are available:

- Point table (.PNT)
- Klartext program (.H)

If you save the machining positions to a Klartext program, the control creates a separate linear block with a cycle call for every machining position (**L X... Y... Z... F MAX M99**).



**CAD Viewer** also recognizes circles as machining positions that consist of two semicircles.

**Multi-selection filter settings**

If you use the quick-selection function to mark positions, the **Find circle centers by diameter range** window opens. You can filter the diameter or depth values, referencing the workpiece datum, by means of the buttons below the displayed value. The control will only load the selected diameter or depth values.

The **Find circle centers by diameter range** window provides the following buttons:

Button	Meaning
<<	<ul style="list-style-type: none"> <li>■ The control shows the smallest diameter found.</li> <li>■ The control shows the smallest depth found.</li> </ul> <p>This filter is active by default.</p>
<<	<ul style="list-style-type: none"> <li>■ The control sets the filter for the largest diameter to the value selected for the smallest diameter.</li> <li>■ The control sets the filter for the largest depth to the value selected for the smallest depth.</li> </ul>
<	<ul style="list-style-type: none"> <li>■ The control shows the next smaller diameter found.</li> <li>■ The control shows the next smaller depth found.</li> </ul>
>	<ul style="list-style-type: none"> <li>■ The control shows the next larger diameter found.</li> <li>■ The control shows the next larger depth found.</li> </ul>
>>	<ul style="list-style-type: none"> <li>■ The control sets the filter for the smallest diameter to the value selected for the largest diameter.</li> <li>■ The control sets the filter for the smallest depth to the value selected for the largest depth.</li> </ul>
>>	<ul style="list-style-type: none"> <li>■ The control shows the largest diameter found.</li> <li>■ The control shows the largest depth found.</li> </ul> <p>This filter is active by default.</p>

**14.4.1 Selecting and saving a contour**

- The following instructions apply to the use of a mouse. You can also perform these steps with touch gestures.

**Further information:** "Common gestures for the touchscreen", Page 95

- Deselecting, deleting, and saving of elements works in the same way for applying contours and positions.

**Selecting a contour with existing contour elements**

To select and save a contour with existing contour elements:



- ▶ Select **Contour**
- ▶ Place the cursor on the first contour element
- The control shows the suggested direction of rotation as a dashed line.
- ▶ If necessary, move the cursor towards the more distant end point.
- The control changes the suggested direction of rotation.
- ▶ Select the contour element
- The selected contour element is displayed in blue and is marked in the List View area.
- Other contour elements are shown in green.



The control suggests the contour that deviates least from the suggested direction. To change the suggested contour path, you can select paths independently of the existing contour elements

- ▶ Select the last desired contour element
- All contour elements up to the selected element are shown in blue and are marked in the List View area.
- ▶ Select **Save entire list content to a file**
- The control opens the **Define file name for contour program** window.
- ▶ Enter the desired name
- ▶ Select the path to the storage location
- ▶ Select **Save**
- The selected contour is saved as an NC program.



- Alternatively, you can use the **Copy entire list contents to clipboard** icon to copy the selected contour to the clipboard and then paste it into an existing NC program.
- If you select an element with the CTRL key pressed, it is deselected for export.



### Selecting paths independent of existing contour elements

To select a path independent of existing contour elements:



- ▶ Select **Contour**



- ▶ Select **Select**
  - The icon changes, and the control activates the **Add** mode.
  - ▶ Place the cursor relative to the desired contour element
  - The control displays selectable points:
    - End point or center point of a line or curve
    - Quadrant transitions or center of a circle
    - Points of intersection between existing elements
  - ▶ Select the desired point
  - ▶ Select more contour elements



If the contour element to be extended or shortened is a straight line, the control will extend or shorten the contour element along the same line. If the contour element to be extended or shortened is a circular arc, the control will extend or shorten the contour element along the same arc.

### Saving a contour as a workpiece blank definition (#50 / #4-03-1)

For a workpiece blank definition in turning mode, a closed contour is required.

#### NOTICE

##### **Danger of collision!**

Closed contours must completely lie inside the workpiece blank definition. Otherwise, the system will follow closed contours also along the rotary axis when machining, causing collisions.

- ▶ Select or program only those contour elements that are actually required (for example, within the definition of a finished part).

To select a closed contour:



- ▶ Select **Contour**
  - ▶ Select all required contour elements
  - ▶ Select the starting point of the first element
  - The control closes the contour.

## 14.4.2 Selecting positions



- The following instructions apply to the use of a mouse. You can also perform these steps with touch gestures.  
**Further information:** "Common gestures for the touchscreen", Page 95
- Deselecting, deleting, and saving of elements works in the same way for applying contours and positions.  
**Further information:** "Selecting and saving a contour", Page 347

### Individual selection

To select individual positions (e.g., holes):



- ▶ Select **Positions**
- ▶ Position the cursor on the desired element
- The control shows the circumference and center point of the element in orange.
- ▶ Select the desired element
- The control highlights the selected element in blue and displays it in the List View area.

### Multiple selection within an area

To select multiple positions within an area:



- ▶ Select **Positions**
- ▶ Select **Select**
- The icon changes, and the control activates the **Add** mode.
- ▶ Drag a box around the area while holding down the left mouse button
- The control opens the **Find circle centers by diameter range** window. The window shows the identified diameter and depth values.
- ▶ Change the filter settings as needed
- ▶ Select **OK**
- The control loads all positions within the selected diameter and depth ranges into the List View area.
- The control shows the traverse distance between the positions.

### Multiple selection by search filter

To select multiple positions using a search filter:



- ▶ Select **Positions**
- ▶ Select **Find circles according to diameter range. Load center coordinates to the position list**
- The control opens the **Find circle centers by diameter range** window. The window shows the identified diameter and depth values.
- ▶ Change the filter settings as needed
- ▶ Select **OK**
- The control loads all positions within the selected diameter and depth ranges into the List View area.
- The control shows the traverse distance between the positions.

## Notes

- Set the correct unit of measure so that **CAD Viewer** shows the correct values.
- Ensure that the unit of measure used in the NC program matches that used in **CAD Viewer**. Elements that have been copied from **CAD Viewer** to the clipboard do not contain any information about the unit of measure.
- The control retains the content of the clipboard only as long as **CAD Viewer** is open.
- **CAD Viewer** also recognizes circles as machining positions that consist of two semicircles.
- The control also transfers two workpiece-blank definitions (**BLK FORM**) to the contour program. The first definition contains the dimensions of the entire CAD file. The second one, which is the active one, contains only the selected contour elements, so that an optimized size of the workpiece blank results.
- CAD Import outputs the radii of the circular arcs as comments. At the end of the generated NC blocks, CAD Import displays the smallest radius to help you select the most suitable tool.

## Notes on Contour Transfer

- If you double-click a layer in the List View area, the control switches to Contour Transfer mode and selects the first contour element that was drawn. The control highlights the other selectable elements of this contour in green. Especially in case of contours with many short elements, this procedure spares you the effort of running a manual search for the beginning of a contour.
- Select the first contour element such that approach without collision is possible.
- You can even select a contour if the designer has saved it on different layers.
- Specify the direction of rotation during contour selection so that it matches the desired machining direction.
- The contour paths available depend on the selectable contour elements that are shown in green. Without the green elements, the control will display all solutions available. To remove the proposed contour path, select the first green element by pressing the left mouse button while holding the **CTRL** key down.  
As an alternative, you can switch to the Remove mode:

—

## 14.5 Generating STL files with 3D mesh (#152 / #1-04-1)

### Application

With the **3D mesh** function, you generate STL files from 3D models. This allows you to repair defective fixture and tool holder files, for example, or to position STL files generated from the simulation for another machining operation.

### Related topics

- Fixture management
- Export the simulated workpiece as an STL file
- Using an STL file as workpiece blank

**Further information:** User's Manual for Programming and Testing

### Requirement


- Software option CAD Model Optimizer (#152 / #1-04-1)

### Description of function

When you select the **3D mesh** icon, the control changes to **3D mesh** mode. The control covers the 3D model displayed in **CAD Viewer** with a mesh of triangles.

The control simplifies the original model and removes errors, such as small holes in a solid or self-intersections of a surface.

You can save the result and use it for various control functions, for example as a workpiece blank with the **BLK FORM FILE** function.

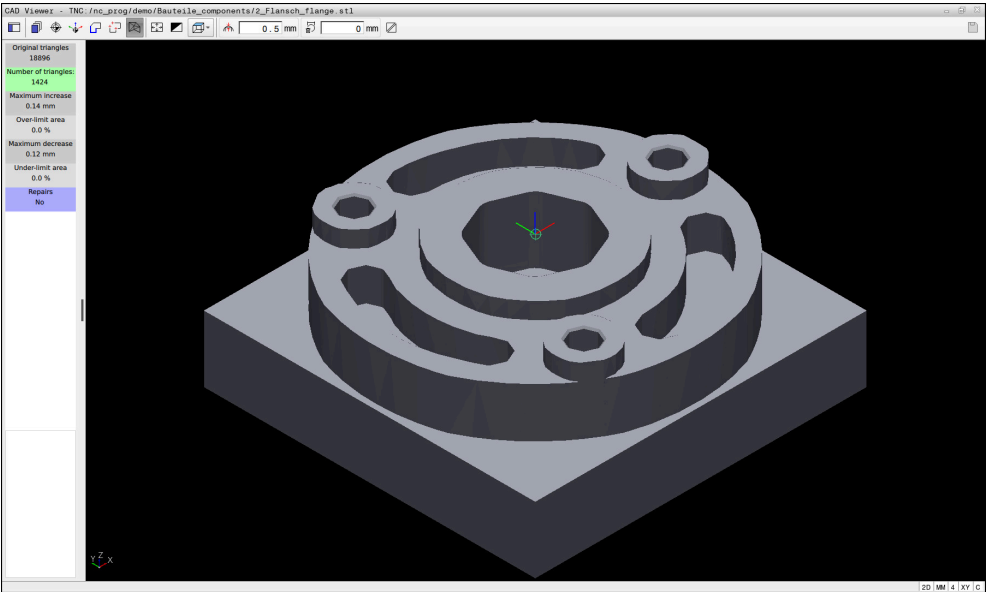

3D model in **3D mesh** mode

The simplified model or parts of it may be smaller or larger than the original model. The result depends on the quality of the original model and the settings selected in **3D mesh** mode.

The List View area shows the following information:

Option	Meaning
<b>Original triangles</b>	Number of triangles in the original model
<b>Number of triangles:</b>	Number of triangles with active settings in the simplified model
<div> <div><b>i</b></div> <div> <p>If this option is highlighted in green, the number of triangles is in the optimum range.</p> <p>You can further reduce the number of triangles using the available functions.</p> <p><b>Further information:</b> "Functions for the simplified model", Page 353</p> </div> </div>	
<b>Maximum increase</b>	Maximum increase of the triangle mesh
<b>Over-limit area</b>	Surface increase in percent compared to the original model
<b>Maximum decrease</b>	Maximum decrease of the triangle mesh compared to the original model
<b>Under-limit area</b>	Surface decrease in percent compared to the original model

Option	Meaning
<b>Repairs</b>	<p>Indicates whether the original model has been repaired or not. If it has been repaired, the control indicates the type of repair (e.g., <b>Hole Int Shells</b>).</p> <p>This indication consists of the following items:</p> <ul style="list-style-type: none"> <li>■ <b>Hole</b> <b>CAD Viewer</b> closed holes in the 3D model.</li> <li>■ <b>Int</b> <b>CAD Viewer</b> removed self-intersections.</li> <li>■ <b>Shells</b> <b>CAD Viewer</b> joined multiple separate solids.</li> </ul>

In order to use STL files for control functions, the saved files must meet the following requirements:






- Max. 20 000 triangles
- Triangular mesh forms a closed shell

The greater the number of triangles in an STL file, the greater the processing power required by the control for simulation.

### Functions for the simplified model

In order to reduce the number of triangles, you can define further settings for the simplified model.

**CAD Viewer** provides the following functions:

Icon	Meaning
	<p><b>Allowed simplification</b></p> <p>Use this function to simplify the output model by the specified tolerance. The higher the value, the more the surfaces may deviate from the original.</p>
	<p><b>Remove holes &lt;= diameter</b></p> <p>Use this function to remove holes and pockets up to the specified diameter from the original model.</p>
	<p><b>Only optimized mesh shown</b></p> <p>The control shows the simplified model only.</p>
	<p><b>Original is displayed</b></p> <p>The control shows the simplified model, superimposed with the original mesh from the original file. You can use this function to evaluate deviations.</p>
	<p><b>Save</b></p> <p>Use this function to save the simplified 3D model with the selected settings as an STL file.</p>

### 14.5.1 Positioning the 3D model for rear-face machining

To position an STL file for rear-face machining:

- ▶ Export the simulated workpiece as an STL file

**Further information:** User's Manual for Programming and Testing




- ▶ Select the **Files** operating mode

- ▶ Select the exported STL file
- ▶ The control opens the STL file in **CAD Viewer**.



- ▶ Select **Preset**
- ▶ The control displays information on the preset position in the List View area.
- ▶ Enter the value of the new preset in the **Preset** area (e.g., **Z-40**)
- ▶ Confirm your input
- ▶ Orient the coordinate system by specifying values under **PLANE SPATIAL SP\*** (e.g., **A+180** and **C+90**)
- ▶ Confirm your input

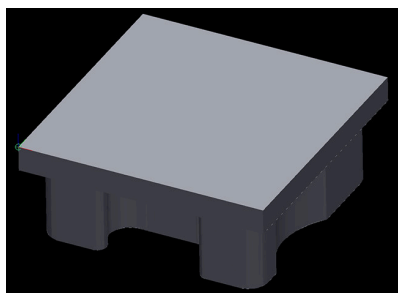

- ▶ Select **3D mesh**
- ▶ The control opens the **3D mesh** mode and simplifies the 3D model using the default settings.
- ▶ Further simplify the 3D model using the **3D mesh** mode functions, if required.

**Further information:** "Functions for the simplified model", Page 353



- ▶ Select **Save**
- ▶ The control opens the **Define file name for 3D mesh** window.
- ▶ Enter the desired name
- ▶ Select **Save**
- ▶ The control saves the STL file positioned for rear-face machining.



The resulting file can then be used for rear-face machining with the **BLK FORM FILE** function.

**Further information:** User's Manual for Programming and Testing

# 15

**User aids**

## 15.1 Virtual keyboard of the control bar

### Application

You can use the virtual keyboard for entering NC functions, letters, and numbers, and for navigation.

The virtual keyboard offers the following modes:

- NC input
- Text input
- Formula entry

### Description of function

The control opens NC input mode by default after the start procedure.


You can move the keyboard on the screen. The keyboard remains active, even when the operating mode is switched, until the keyboard is closed.

The control remembers the position and mode of the virtual keyboard until it is shut down.

The **Keyboard** workspace provides the same functions as the virtual keyboard.



## NC input areas

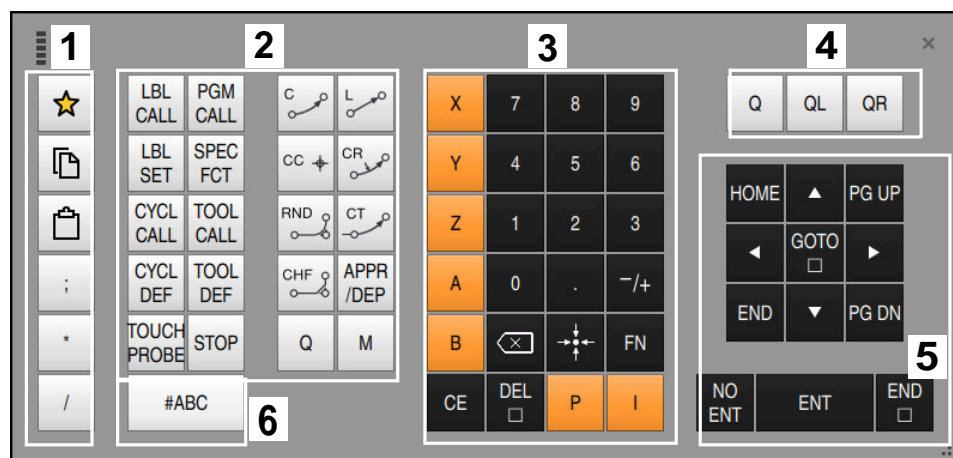

Virtual keyboard in NC input mode

NC input mode contains the following areas:


- 1 File functions
  - Define favorites
  - Copy
  - Paste
  - Add comment
  - Add structure item
  - Hide NC block
- 2 NC functions
- 3 Axis keys and numerical input
- 4 Q parameters
- 5 Navigation and dialog keys
- 6 Switch to text input



If you press the **Q** button in the NC functions area repeatedly, the control cycles through the syntax in the following sequence:

- **Q**
- **QL**
- **QR**

## Text input areas

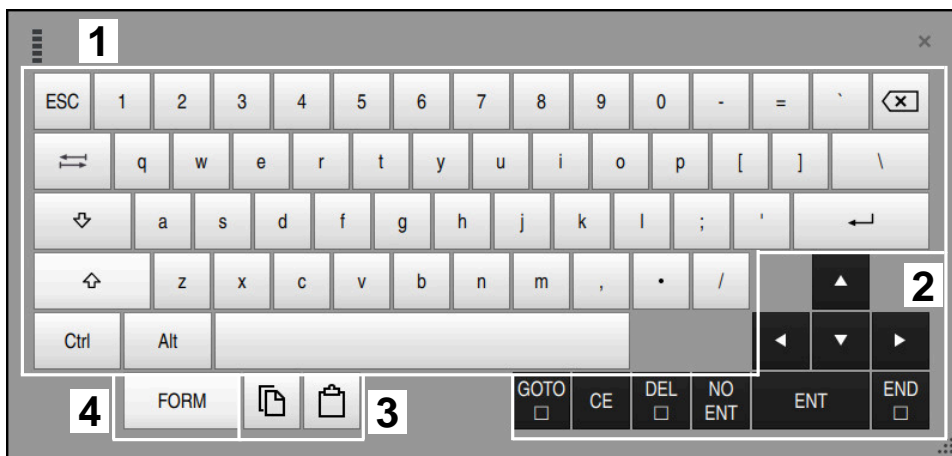


Virtual keyboard in text input mode

The text input contains the following areas:

- 1 Input
- 2 Navigation and dialog keys
- 3 Copying and pasting
- 4 Switch to formula input

## Formula input areas

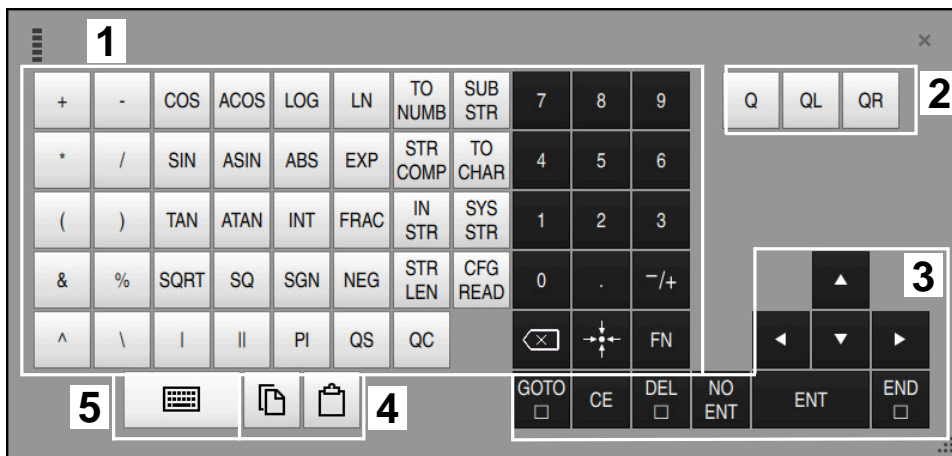

Virtual keyboard in formula input mode

The formula input contains the following areas:

- 1 Input
- 2 Q parameters
- 3 Navigation and dialog keys
- 4 Copying and pasting
- 5 Switch to NC input

### 15.1.1 Opening and closing the virtual keyboard

To open the virtual keyboard:



- ▶ Select the **virtual keyboard** on the control bar
- The control opens the virtual keyboard.

To close the virtual keyboard:



- ▶ Select the **virtual keyboard** when the virtual keyboard is open



- ▶ Or press **Close** in the virtual keyboard
- The control closes the virtual keyboard.









## 15.2 Message menu on the information bar

### Application

In the message menu of the information bar, the control shows pending errors and notes. When opened, the control displays detailed information about the messages.

### Description of function

The control uses the following symbols to differentiate between the types of messages:


Symbol	Message type	Meaning
	Error Question type	The control displays a dialog with several options you can select from.  You cannot clear this error message: you can only choose one of the possible responses. If necessary, the control continues the dialog until the cause or correction of the error has been clearly determined.
	Error Reset type	The control must be restarted. This message cannot be cleared.
	Error Emergency-stop type	The control performs an emergency stop. An error message can only be cleared after the cause has been eliminated.
	Error	To continue, you must clear this message. An error message can only be cleared after the cause has been eliminated.
	Warning	You can continue without clearing the message. Most warnings can be cleared at any time; in some cases, the cause has to be eliminated first.
	Information	You can continue without clearing the message. You can clear the information at any time.
	Note	You can continue without clearing the message. The control displays the note until you press the next valid key.
		No pending messages

The message menu is collapsed by default.

The control displays messages upon various events, for example:

- Logical errors in the NC program
- Impossible contour elements
- Improper touch-probe inserts
- Hardware updates

## Content



Collapsed message menu on the information bar


When the control displays a new message, the arrow to the left of the message blinks. Click or tap this arrow to confirm acknowledgment of the message; the control then minimizes the message.

The control displays the following information in the collapsed message menu:

- Message type
- Message
- Quantity of pending errors, warnings, and informational messages

## Detailed messages

If you tap or click the symbol or within the message, the control expands the message menu.

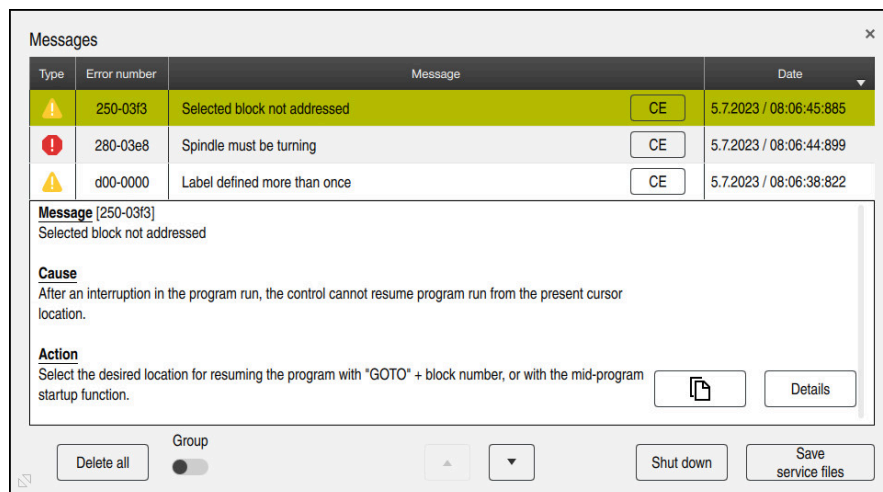

Expanded message menu with pending messages

The control displays all pending messages in chronological order.

The message menu shows the following information:

- Message type
- Error number
- Message
- Date
- Additional information (root cause, correction, information on the NC program)

## Deleting messages

Messages can be deleted in the following ways:

- **CE** key
- **CE** button in the message menu
- **Delete all** button in the message menu

## Details

Press the **Details** button to show or hide internal information about the message. This information is of importance in case servicing is necessary.

## Group

If you activate the **Group** toggle switch, the control displays all messages with the same error number in one row. This makes the list of messages shorter and easier to read.

Under the error number, the control displays the quantity of messages. Use **CE** to clear all messages of a group.

## Service file

Click the **Save service files** button to open the **Save service files** window.

In the **Save service files** window, you can create service files in the following ways:

- If an error occurs, you can create a service file manually.  
**Further information:** "Creating a service file manually", Page 362
- If an error occurs repeatedly, a service file can be created automatically by means of the error number. Once the respective error occurs, the control saves a service file.

**Further information:** "Creating a service file automatically", Page 363

Service files help service technicians in troubleshooting the problem. The control saves data that provide information about the current machine and operation status, such as active NC programs up to 10 MB, tool data, and keystroke logs.

The file name of each service file consists of a user-defined name and a timestamp.


If you create multiple service files with the same name, the control saves a maximum of five files and then deletes the file with the oldest timestamp, if necessary. Make a backup of the service files you created (e.g., by moving them to a different folder).

### 15.2.1 Creating a service file manually

To create a service file manually:



- ▶ Expand the message menu



- ▶ Select **Save service files**
- The control opens the **Save service file** window.
- ▶ Enter the file name



- ▶ Press **OK**
- The control saves the service file in the **TNC:\service** directory.





Using a toggle switch, you can define whether the control will save data from process monitoring (#168 / #5-01-1) for the current NC program in the service file.

### 15.2.2 Creating a service file automatically

You can specify up to five error numbers for which the control will automatically create a service file if one of these errors occurs.

To specify a new error number:

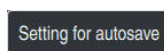

- ▶ Expand the message menu
- ▶ Select **Save service files**
  - > The control opens the **Save service file** window.
- ▶ Select **Setting for autosave**
  - > The control opens a table of error numbers.
  - ▶ Enter the desired error number
  - ▶ Enable the **Active** check box
  - > If the error occurs, the control automatically creates a service file.
  - ▶ Enter a comment, if applicable (e.g., to describe the problem)





# 16

**The MDI Application**

## Application

The **MDI** application allows you to execute individual NC blocks outside of the context of an NC program (e.g., **PLANE RESET**). When you press the **NC Start** key, the control will run the NC blocks separately.

You can also create an NC program step by step. The control remembers modally effective program information.

### Related topics

- Creating NC programs


**Further information:** User's Manual for Programming and Testing

- Running NC programs

**Further information:** "Program Run", Page 411

## Description of function

If you program using the millimeter unit of measurement, the control will use the NC program **\$mdi.h** by default. If you program using the inch unit of measurement, the control will use the NC program **\$mdi\_inch.h**.

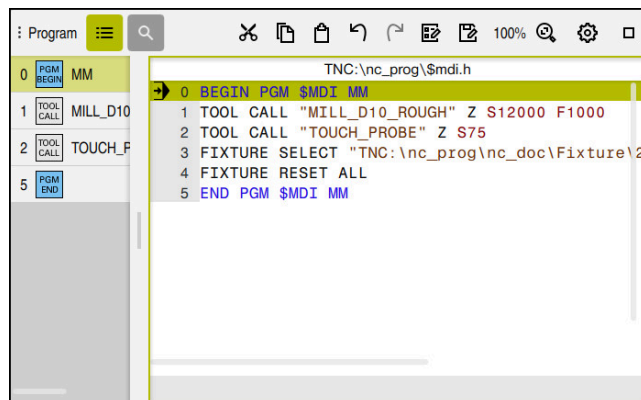

The **Program** workspace in the **MDI** application

The **MDI** application provides the following workspaces:

- **GPS** (#44 / #1-06-1)

**Further information:** "Global program settings (GPS) (#44 / #1-06-1)", Page 291

- **Help**

- **Positions**

**Further information:** "The Positions workspace", Page 121

- **Program**

**Further information:** User's Manual for Programming and Testing

- **Simulation**

**Further information:** User's Manual for Programming and Testing

- **Status**


**Further information:** "The Status workspace", Page 129

- **Keyboard**

**Further information:** "Virtual keyboard of the control bar", Page 356

## Icons and buttons

In the **MDI** application, the function bar provides the following buttons:

Icon or button	Meaning
	Execution cursor The execution cursor shows which NC block is currently being executed or is marked for execution.
<b>Klartext editor</b>	If this toggle switch is active, then you are using dialog-guided programming. If this toggle switch is not active, then you are programming in the text editor. <b>Further information:</b> User's Manual for Programming and Testing
<b>Insert NC function</b>	The control opens the <b>Insert NC function</b> window. <b>Further information:</b> User's Manual for Programming and Testing
<b>Q info</b>	The control opens the <b>Q parameter list</b> window, where you can see and edit the current values and descriptions of the variables. <b>Further information:</b> User's Manual for Programming and Testing
<b>GOTO block number</b>	Mark an NC block to be run without considering any previous NC blocks <b>Further information:</b> User's Manual for Programming and Testing
<b>/ Skip block Off/On</b>	Hide NC blocks with /. NC blocks hidden with a / character will be ignored during program run as soon as the <b>Skip block</b> toggle switch is active. <b>Further information:</b> User's Manual for Programming and Testing
<b>Skip block</b>	If the toggle switch is active, then the control does not execute any NC blocks dimmed with the / character. If the toggle switch is active, then the control dims the NC blocks to be skipped. <b>Further information:</b> User's Manual for Programming and Testing
<b>; Comment Off/On</b>	Insert or remove a ; character in front of an NC block. If an NC block begins with a ; character, then the block is a comment. <b>Further information:</b> User's Manual for Programming and Testing
<b>F LIMIT</b>	Use this function to activate a feed-rate limit and define its value. <b>Further information:</b> "Feed rate limit F LIMIT", Page 416
<b>F limited</b>	Use this option to activate or deactivate the feed-rate limit for functional safety (FS). Only on machines with functional safety (FS). <b>Further information:</b> "Feed-rate limiting with functional safety (FS)", Page 538
<b>ACC</b>	If this toggle switch is active, the control activates Active Chatter Control (ACC, option 145). <b>Further information:</b> "Active Chatter Control (ACC) (#145 / #2-30-1)", Page 290
<b>Tool Retract</b>	If the NC program is stopped during a thread cycle, you can retract the tool. <b>Further information:</b> User's Manual for Machining Cycles
<b>Edit</b>	The control opens the context menu. <b>Further information:</b> User's Manual for Programming and Testing
<b>Tools</b>	The control opens the <b>Tool management</b> application in the <b>Tables</b> operating mode. <b>Further information:</b> "Tool management ", Page 205

Icon or button	Meaning
<b>Internal stop</b>	<p>If an NC program is interrupted due to an error or a stop, the control activates this button.</p> <p>Use this button to abort program run.</p> <p><b>Further information:</b> "Interrupting, stopping or canceling program run", Page 417</p>
<b>Reset program</b>	<p>If you select <b>Internal stop</b>, the control activates this button.</p> <p>The control resets any modally active program information as well as the program run-time.</p>

### Modally effective program information

In the **MDI** application, you always execute NC blocks in **Single Block** mode. After the control has executed an NC block, the program run is considered to be interrupted.

**Further information:** "Interrupting, stopping or canceling program run", Page 417

The block numbers of all NC blocks that you have successively run are shown in green.

The control saves the following data in this state:

- The last tool that was called
- Current coordinate transformations (e.g., datum shift, rotation, mirroring)
- The coordinates of the circle center that was last defined

## Notes

### NOTICE

#### Danger of collision!

Certain manual interactions may lead to the control losing the modally effective program information (i.e., the contextual reference). Loss of this contextual reference may result in unexpected and undesirable movements. There is a risk of collision during the subsequent machining operation!

- ▶ Do not perform the following interactions:
    - Cursor movement to another NC block
    - The jump command **GOTO** to another NC block
    - Editing an NC block
    - Modifying the values of variables by using the **Q parameter list** window
    - Switching the operating modes
  - ▶ Restore the contextual reference by repeating the required NC blocks
- 
- In the **MDI** application, you can create and execute NC programs step by step. Then you can use **Save as** to save the current contents with a different file name.
  - The following functions are not available in the **MDI** application:
    - Calling of an NC program with **PGM CALL**
    - Test run in the **Simulation** workspace
    - **Manual traverse** and **Approach position** functions while program run is interrupted
    - **Block scan** function
  - The execution cursor is always displayed in the foreground. The execution cursor may cover or hide other icons.



# 17

**Touch Probes**

## 17.1 Setting up touch probes

### Application

The **Device configuration** window allows you to create and manage all the workpiece and tool touch probes of the control.

Touch probes with radio transmission can be created and managed only in the **Device configuration** window.

### Related topics

- Creating a workpiece touch probe with cable or infrared transmission by using the touch probe table

**Further information:** "Touch probe table tchprobe.tp", Page 478

- Creating a tool touch probe with cable or infrared transmission by using the machine parameter **CfgTT** (no. 122700)

**Further information:** "Machine parameters", Page 597

### Description of function


You open the **Device configuration** window in the **Machine Settings** group of the **Settings** application. Double-tap or double-click the **Set Up Touch Probes** menu item.

**Further information:** "The Settings Application", Page 541

Touch probes with radio transmission can be created and managed only in the **Device configuration** window.

In order for the control to recognize the touch probe with radio transmission, you will require an **SE 661** transceiver with EnDat interface.

You define the new values in the **Work data** area.

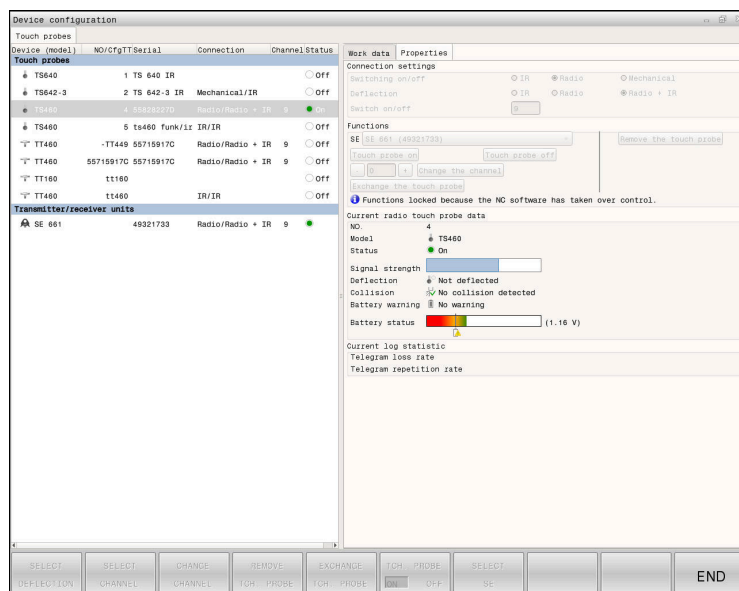

### Areas of the Device configuration window

#### The Touch probes area

In the **Touch probes** area, the control displays all of the defined workpiece and tool touch probes, as well as the transceiver units. All other areas provide detailed information about the selected entry.



### The Work data area

For a workpiece touch probe, the control displays the values from the touch-probe table in the **Work data** area.

For a tool touch probe, the control displays the values from the machine parameter **CfgTT** (no. 122700).

You can select and edit the displayed values. Under **Touch probes**, the control displays information about the active value (e.g., selection options). You can change the values of the tool touch probes only after entering the code number 123.

### The Properties area

In the **Properties** area, the control displays the connection data and diagnostic functions.

For touch probes with radio connection, the control displays the following information in **Current radio touch probe data**:

Display	Meaning
NO.	Number in the touch probe table
Type	Type of touch probe
Status	Touch probe active or inactive
Signal strength	Display of the signal strength in the bar graphic The control shows the currently best-known connection as a complete bar
Deflection	Stylus deflected or not deflected
Collision	Collision or no collision recognized
Battery status	Display of the battery quality If the charge is less than the displayed bar, then the control outputs a warning.

The **Switching on/off** connection setting is preset based on the type of touch probe. Under **Deflection**, you can select how the touch probe is to transmit the signal when probing.

Deflection	Meaning
IR	Infrared probe signal
Radio	Radio probe signal
Radio + IR	The control selects the probe signal



If you activate the touch probe's radio connection by using the connection setting **Switch on/off**, then the signal will be retained even after a tool change. You need to use this connection setting to deactivate the radio connection.

### Buttons

The control provides the following buttons:

Button	Function
<b>CREATE TS ENTRY</b>	Create a new workpiece touch probe You define the new values in the <b>Work data</b> area.
<b>CREATE TT ENTRY</b>	Create a new tool touch probe You define the new values in the <b>Work data</b> area.
<b>SELECT DEFLECTION</b>	Select the probe signal
<b>SELECT CHANNEL</b>	Select the radio channel Select the channel with the best radio transmission and pay attention to overlaps with other machines or wireless handwheels.
<b>CHANGE CHANNEL</b>	Change the radio channel
<b>REMOVE TCH. PROBE</b>	Delete the touch probe data The control deletes the entry from the <b>Device configuration</b> window and from the touch-probe table or the machine parameters.
<b>EXCHANGE TCH. PROBE</b>	Save a new touch probe in the current row The control automatically overwrites the serial number of the replaced touch probe with the new number.
<b>SELECT SE</b>	Select the SE transceiver
<b>SELECT IR POWER</b>	Select the strength of the infrared signal You only need to change the signal strength if there is interference.
<b>SELECT RADIO POWER</b>	Select the strength of the radio signal You only need to change the signal strength if there is interference.

### Note

In the machine parameter **CfgHardware** (no. 100102), the machine manufacturer defines whether the control will show or hide the touch probes in the **Device configuration** window. Refer to your machine manual.

# 18

**Touch Probe  
Functions in the  
Manual Operating  
Mode**

## 18.1 Fundamentals

### Application

The touch probe functions allow you to set presets on the workpiece, measure the workpiece, and determine and compensate for workpiece misalignment.

### Related topics

- Automatic touch probe cycles for the workpiece  
**Further information:** User's Manual for Measuring Cycles for Workpieces and Tools
- Preset table  
**Further information:** "Preset table \*.pr", Page 490
- Datum table  
**Further information:** User's Manual for Programming and Testing
- Reference systems  
**Further information:** "Reference systems", Page 222
- Preassigned variables  
**Further information:** User's Manual for Programming and Testing

### Requirements

- Calibrated workpiece touch probe  
**Further information:** "Calibrating the workpiece touch probe", Page 391


## Description of function

The control provides the following functions for setting up the machine in the **Manual** operating mode in the **Setup** application:

- Define the workpiece preset
- Determine and compensate for workpiece misalignment
- Calibrate the workpiece touch probe
- Calibrate the tool touch probe
- **Measure the tool**
- **Set up fixtures** (#140 / #5-03-2)  
**Further information:** "Integrating fixtures into collision monitoring (#140 / #5-03-2)", Page 260
- **Set up the workpiece** (#159 / #1-07-1)  
**Further information:** "Setting up the workpiece with graphical support (#159 / #1-07-1)", Page 398

Within the functions, the control provides the following probing methods:

- Manual probing method  
 You position and start individual probing processes manually within a touch probe function.  
**Further information:** "Setting a preset in a linear axis", Page 384
- Automatic probing method  
 You manually position the touch probe to the first probing point before the start of the probing routine and fill out a form with the individual parameters for the respective touch probe function. When you start the touch probe function, the control automatically positions and automatically performs probing.  
**Further information:** "Determining the circle center point of a stud using the automatic probing method ", Page 386

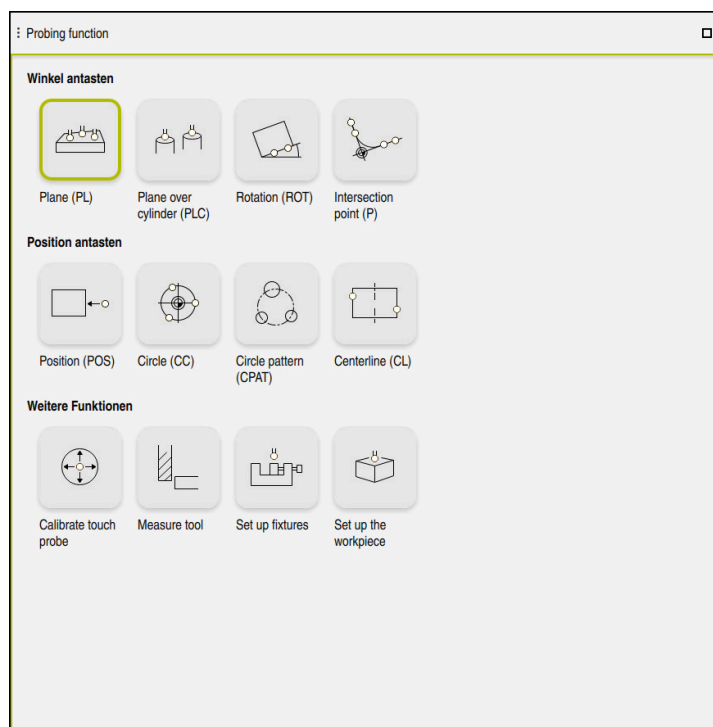





The **Probing function** workspace

## Overview

The touch probe functions are structured in the following groups:

### Probe the angle

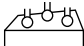The **Probe the angle** group contains the following touch probe functions:

Button	Function
<b>Plane (PL)</b> 	Use the <b>Plane (PL)</b> function to determine the solid angle of a plane. You then save the values in the preset table or align the plane.
<b>Plane over cylinder (PLC)</b> 	Use the <b>Plane over cylinder (PLC)</b> function to probe one or two cylinders, each at two different heights. The control calculates the solid angle of a plane from the points probed. You then save the values in the preset table or align the plane.
<b>Rotation (ROT)</b> 	Use the <b>Rotation (ROT)</b> function to determine the skew of a workpiece using a straight line. Then save the determined skew as a basic transformation or offset in the preset table. <b>Further information:</b> "Determining and compensating the rotation of a workpiece", Page 388
<b>Intersection point (P)</b> 	Use the <b>Intersection point (P)</b> function to probe four probing objects. The probing objects can be either positions or circles. The control determines the intersection of the axes and the skew of the workpiece from the objects that have been probed. You can set the intersection point as a preset. You can transfer the determined skew to the preset table as a basic transformation or as an offset.



The control interprets a basic transformation as a basic rotation, and an offset as a table rotation.





**Further information:** "Preset table \*.pr", Page 490

You can compensate for the workpiece misalignment by rotating the table only if the machine is designed with a rotary table axis that is oriented perpendicularly with respect to the workpiece coordinate system **W-CS**.

**Further information:** "Comparison of offset and 3D basic rotation", Page 409





### Probe the position

The **Probe the position** group contains the following touch probe functions:

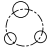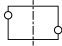Button	Function
<b>Position (POS)</b> 	You can use the <b>Position (POS)</b> function to probe a position in the X axis, Y axis or Z axis. <b>Further information:</b> "Setting a preset in a linear axis", Page 384
<b>Circle (CC)</b> 	The <b>Circle (CC)</b> function is used to determine the coordinates of a circle center point (e.g., for a hole or for a stud). <b>Further information:</b> "Determining the circle center point of a stud using the automatic probing method ", Page 386
<b>Circle pattern (CPAT)</b> 	The <b>Circle pattern (CPAT)</b> function is used to determine the center point coordinates of a circle pattern.
<b>Centerline (CL)</b> 	The <b>Centerline (CL)</b> function is used to determine the center point of a ridge or slot.

### The Additional functions group



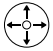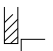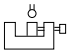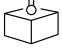


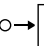


The **Additional functions** group contains the following touch probe functions:

Button	Function
<b>Calibrate touch probe</b> 	The <b>Calibrate touch probe</b> function is used to determine the length and radius of a workpiece touch probe. <b>Further information:</b> "Calibrating the workpiece touch probe", Page 391
<b>Measure tool</b> 	The <b>Measure tool</b> function allows you to measure tools by scratching. In this function, the control supports milling tools, drilling tools and turning tools. <b>Further information:</b> "Werkzeug vermessen mit Ankratzen", Page
<b>Set up fixtures</b> 	The <b>Set up fixtures</b> function is used to determine the position of a clamping device in the working space using a workpiece touch probe (#140 / #5-03-2). <b>Further information:</b> "Integrating fixtures into collision monitoring (#140 / #5-03-2)", Page 260
<b>Set up the workpiece</b> 	The <b>Set up the workpiece</b> function is used to determine the position of a workpiece in the working space using a workpiece touch probe (#159 / #1-07-1). <b>Further information:</b> "Setting up the workpiece with graphical support (#159 / #1-07-1)", Page 398

## Icons and buttons

### General icons and buttons in the touch probe functions



The following buttons are available, depending on the selected touch probe function:

Icon or button	Meaning
	<b>Exit probing</b>
	Select the workpiece preset and the pallet preset and edit the values if required <b>Further information:</b> "The Change the preset window", Page 383 <b>Further information:</b> "Preset table *.pr", Page 490
	Display help graphics for the selected touch probe function
	Select the probing direction
	Apply the actual position
	Manually approach and probe points on a straight surface
	Manually approach and probe points on a stud or in a hole
	Automatically approach and probe points on a stud or in a hole After the last touching process and if the opening angle contains the value 360°, the control positions the workpiece touch probe back to the position it had prior to starting the probing function.
<b>Tools</b>	The control opens the <b>Tool management</b> application in the <b>Tables</b> operating mode. <b>Further information:</b> "Tool management ", Page 205
<b>Internal stop</b>	If an NC program is interrupted due to an error or a stop, the control activates this button. Use this button to abort program run. <b>Further information:</b> "Interrupting, stopping or canceling program run", Page 417



**Symbols and buttons for calibration**

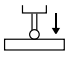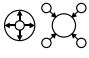


The control offers the following functions for calibrating a 3D touch probe:

Icon or button	Meaning
	Calibrating the length of a 3D touch probe
	Calibrating the radius of a 3D touch probe
<b>Apply calibration data</b>	Transferring values from the calibration process into tool management

**Further information:** "Calibrating the workpiece touch probe", Page 391

You can calibrate a 3D touch probe by using a calibration standard, such as a calibrating ring.

The control provides the following options:

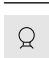Icon	Meaning
	Measure the radius and the center offset using a calibration ring
	Measure the radius and the center offset using a stud or a calibration pin
	Measure the radius and the center offset using a calibration sphere Optional 3D calibration of workpiece touch probe (#92 / #2-02-1) <b>Further information:</b> User's Manual for Programming and Testing <b>Further information:</b> "3D calibration (#92 / #2-02-1)", Page 392

**Buttons in the Working plane is inconsistent! window**

If the positions of the rotary axes do not match the tilting situation in the **3-D rotation** window, the control opens the **Working plane is inconsistent!** window.

The control offers the following functions in the **Working plane is inconsistent!** window:

Button	Meaning
<b>3-D ROT Apply status</b>	The <b>3-D ROT Apply status</b> function transfers the position of the rotary axes into the <b>3-D rotation</b> window. <b>Further information:</b> "The 3-D rotation window (#8 / #1-01-1)", Page 245
<b>3-D ROT Ignore status</b>	The <b>3-D ROT Ignore status</b> function makes the control calculate the probing results, assuming that the rotary axes are in their zero position.
<b>Align the rotary axes</b>	The <b>Align the rotary axes</b> function aligns the rotary axes to the active tilting situation in the <b>3-D rotation</b> window.

### Buttons for measured values

After executing a touch probe function, you select the desired control reaction.  
The control provides the following functions:

Button	Meaning
<b>Compensate the active preset</b>	The <b>Compensate the active preset</b> function transfers the measuring result into the active line of the preset table. <b>Further information:</b> "Preset table *.pr", Page 490
<b>Correct the datum</b>	The <b>Correct the datum</b> function transfers the measuring result into a desired line of the datum table. <b>Further information:</b> User's Manual for Programming and Testing
<b>Align rotary table</b>	The <b>Align rotary table</b> function aligns the rotary axes mechanically according to the measuring result.
<b>Correct the pallet reference point</b>	The <b>Correct the pallet reference point</b> function transfers the measuring result into the active line of the pallet preset table. <b>Further information:</b> User's Manual for Programming and Testing

### NOTICE

#### Danger of collision!

The control may feature an additional pallet preset table, depending on the machine. Values that the machine manufacturer defined in the pallet preset table take effect before values that you defined in the preset table. The control indicates in the **Positions** workspace whether a pallet preset is active and if yes, which one. Since the values of the pallet preset table are neither visible nor editable outside the **Setup** application, there is a risk of collision during any movement!



- ▶ Refer to the machine manufacturer's documentation
- ▶ Use pallet presets only in conjunction with pallets
- ▶ Change pallet presets only after discussion with the machine manufacturer
- ▶ Check the pallet preset in the **Setup** application before you start machining

## The Change the preset window

In the **Change the preset** window you can select a preset or edit the values of a preset.

**Further information:** "Preset management", Page 238

The **Change the preset** window provides the following buttons:

Icon or button	Meaning
	The control shows the preset table. <b>Further information:</b> User's Manual for Programming and Testing
	The control shows the pallet preset table. <b>Further information:</b> User's Manual for Programming and Testing
<b>Reset basic rotation</b>	The control resets the values from the columns <b>SPA</b> , <b>SPB</b> and <b>SPC</b> .
<b>Reset offsets</b>	The control resets the values from the columns <b>A_OFFS</b> , <b>B_OFFS</b> and <b>C_OFFS</b> .
<b>Apply changes and delete existing probe objects</b>	The control activates the selected preset and rejects the touch points used so far. Then the control closes the window.
<b>Apply</b>	The control saves the changes and the selected preset. Then the control closes the window.
<b>Reset</b>	The control cancels the changes and restores the initial condition.
<b>Cancel</b>	The control closes the window without saving.



If you change a value, the control marks this value with a blue dot.

## NOTICE

### Danger of collision!

The control may feature an additional pallet preset table, depending on the machine. Values that the machine manufacturer defined in the pallet preset table take effect before values that you defined in the preset table. The control indicates in the **Positions** workspace whether a pallet preset is active and if yes, which one. Since the values of the pallet preset table are neither visible nor editable outside the **Setup** application, there is a risk of collision during any movement!

- ▶ Refer to the machine manufacturer's documentation
- ▶ Use pallet presets only in conjunction with pallets
- ▶ Change pallet presets only after discussion with the machine manufacturer
- ▶ Check the pallet preset in the **Setup** application before you start machining

## Log file of touch probe cycles

After executing the respective touch-probe cycle, the control writes the measured values to the TCHPRMAN.html file.

You can check the readings of past measurements in the **TCHPRMAN.html** file.

If you have not defined a path in the machine parameter **FN16DefaultPath** (no. 102202), the control will store the TCHPRMAN.html file directly under **TNC:**.


If you run several touch probes cycles in a row, the control stores the measured values below each other.

### 18.1.1 Setting a preset in a linear axis

To probe the preset in any axis:



- ▶ Select the **Manual** operating mode



- ▶ Call the workpiece touch probe as a tool
- ▶ Select the **Setup** application
- ▶ Select the **Position (POS)** touch probe function
- > The control opens the **Position (POS)** touch probe function.



- ▶ Select **Change the preset**
- > The control opens the **Change the preset** window.
- ▶ Select the desired row of the preset table
- > The control highlights the selected line in green.



- ▶ Press **Apply**
- > The control activates the selected line as the workpiece preset.
- ▶ Use the axis keys to position the workpiece touch probe at the desired probing position (e.g., above the workpiece in the workspace)



- ▶ Select the probing direction (e.g., **Z-**)



- ▶ Press the **NC start** key
- > The control performs the probing process and then automatically retracts the workpiece touch probe to the starting point.
- > The control shows the measurement results.
- ▶ In the **Nominal value** area, enter the new preset of the probed axis (e.g., **1**)

Compensate the  
active preset




- Select **Compensate the active preset**
- The control enters the defined nominal value in the preset table.
- The control marks the row with an icon.



If you use the **Correct the datum** function, the control also marks this row with an icon.  
When you have completed the probing process in the first axis, you can probe up to two additional axes using the **Position (POS)** probing function.



- Select **Exit probing**
- The control closes the **Position (POS)** probing function.

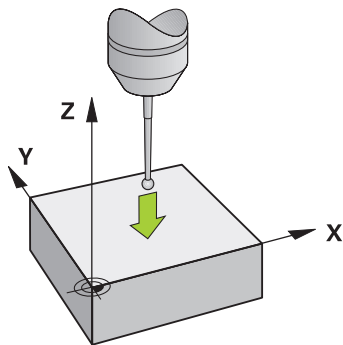

### 18.1.2 Determining the circle center point of a stud using the automatic probing method

To probe a circle center point:



- ▶ Select the **Manual** operating mode

- ▶ Call the workpiece touch probe as a tool

**Further information:** "The Manual operation application", Page 162



- ▶ Select the **Setup** application

- ▶ Select **Circle (CC)**

- ▶ The control opens the **Circle (CC)** probing function.

- ▶ If necessary, select another preset for the probing process



- ▶ Select measuring method **A**



- ▶ Select **Type of contour** (e.g., stud)

- ▶ Enter **Diameter** (e.g., 60 mm)

- ▶ Enter **Safety clearance (min. value = SET\_UP)** if required



The control suggests the total of the value in the **SET\_UP** column of the touch probe table and the ball tip radius as a safety distance.

- ▶ Enter **Starting angle** (e.g.,  $-180^\circ$ )

- ▶ Enter **Angular length** (e.g.,  $360^\circ$ )

- ▶ Position the 3D touch probe at the desired probing position next to the workpiece and below the workpiece surface

- ▶ Select the probing direction (e.g., **X+**)

- ▶ Turn the feed rate potentiometer to zero

- ▶ Press the **NC start** key



- ▶ Slowly turn on the feed rate potentiometer

- ▶ The control executes the touch probe function based on the data entered.

- ▶ The control shows the measurement results.

- ▶ In the **Nominal value** area, enter the new preset of the scanned axes (e.g., **0**)

Compensate the  
active preset




- ▶ Select **Compensate the active preset**
- The control sets the preset to the entered nominal value.
- The control marks the row with an icon.



If you use the **Correct the datum** function, the control also marks this row with an icon.



- ▶ Select **Exit probing**
- The control closes the **Circle (CC)** probing function.

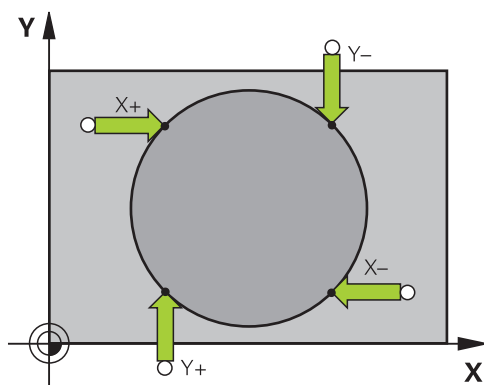

### 18.1.3 Determining and compensating the rotation of a workpiece

To probe the rotation of a workpiece:



- ▶ Select the **Manual** operating mode



- ▶ Call the 3D touch probe as a tool

- ▶ Select the **Setup** application

- ▶ Select **Rotation (ROT)**

- ▶ The control opens the **Rotation (ROT)** probing function.

- ▶ If necessary, select another preset for the probing process



- ▶ Position the 3D touch probe at the desired probing position in the workspace

- ▶ Select the probing direction (e.g., **Y+**)



- ▶ Press the **NC start** key


- ▶ The control executes the first probing process and limits the subsequently selectable probing directions.

- ▶ Position the 3D touch probe at the second probing position in the workspace



- ▶ Press the **NC start** key

- ▶ The control executes the probing process and then shows the measurement results.



- ▶ Select **Compensate the active preset**

- ▶ The control transfers the determined basic rotation to the **SPC** column of the active line of the preset table.

- ▶ The control marks the row with an icon.




Depending on the tool axis, the measurement result can also be written to another column of the preset table (e.g., **SPA**).



- ▶ Select **Exit probing**

- ▶ The control closes the **Rotation (ROT)** probing function.

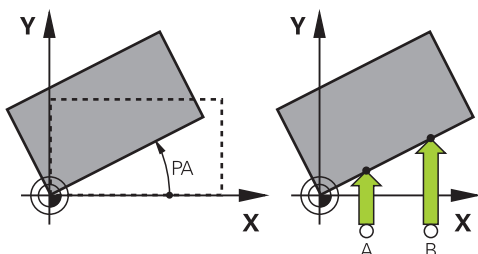



### 18.1.4 Using touch probe functions with mechanical probes or dial gages

If your machine does not have an electronic 3D touch probe, you can use all manual touch probe functions with manual probing methods with mechanical buttons or with scratching.

For this, the control provides the **Accept position** button.

To determine a basic rotation with a mechanical probe:



- ▶ Select the **Manual** operating mode



- ▶ Insert the tool, such as an analog 3D probe or feeler lever gage
- ▶ Select the **Setup** application
- ▶ Select the **Rotation (ROT)** probing function




- ▶ Select the probing direction (e.g., **Y+**)
- ▶ Move the mechanical probe to the first position to be captured by the control.



- ▶ Select **Accept position**
  - > The control saves the current position.
- ▶ Move the mechanical probe to the next position to be captured by the control.



- ▶ Select **Accept position**
  - > The control saves the current position.

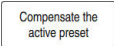

- ▶ Select **Compensate the active preset**
  - > The control transfers the determined basic rotation to the active line of the preset table.
- > The control marks the row with an icon.



The determined angles have different effects depending on whether they are transferred as an offset or as a basic rotation to the corresponding table.

**Further information:** "Comparison of offset and 3D basic rotation", Page 409



- ▶ Select **Exit probing**
  - > The control closes the **Rotation (ROT)** probing function.

## Notes

- If you use a non-contacting tool touch probe (such as a laser touch probe), then you are using touch-probe functions from a third-party supplier. Refer to your machine manual.
- The accessibility of the pallet preset table in the touch-probe functions depends on the machine manufacturer's configuration. Refer to your machine manual.
- The use of touch-probe functions deactivates the Global Program Settings (GPS) (#44 / #1-06-1) temporarily.

**Further information:** "Global program settings (GPS) (#44 / #1-06-1)", Page 291

- You can use the manual touch-probe functions only with restrictions in turning mode (#50 / #4-03-1).
- You must calibrate the touch probe separately in turning mode. The factory default setting of the worktable may vary between milling mode and turning mode, which is why you must calibrate the touch probe without any center offset in turning mode. You can create a tool index for storing the additionally calibrated tool data in the same tool.

**Further information:** "Indexed tool", Page 182

- When probing while the guard door is open and spindle orientation to probing direction is active, the number of spindle revolutions is limited. When the maximum permitted number of spindle revolutions is reached, the direction of spindle rotation changes and the control may no longer orient the spindle on the shortest path.
- If you try to set a preset in a locked axis, the control will issue either a warning or an error message, depending on what the machine manufacturer has defined.
- When writing into an empty line of the preset table, the control automatically fills the other columns with values. To define a preset completely, you must determine the values in all axes and write them into the preset table.
- If no tool touch probe is inserted, the actual position can be captured with **NC START**. The control displays a warning that no probing movement is carried out in that case.
- Recalibrate the workpiece touch probe in the cases below:
  - Initial configuration
  - Broken stylus
  - Stylus replacement
  - Change in the probe feed rate
  - Irregularities caused, for example, when the machine heats up
  - Change of active tool axis
- If the touch point is not reached during the touching process, the control will display a warning. The probing process can be continued with **NC Start**.

## Definition

### Spindle tracking

If the **Track** parameter in the touch probe table is active, the control orients the workpiece probing system so that the same position is always used for probing. By deflecting in the same direction, you can reduce the measurement error to the repeatability of the workpiece probing system. This behavior is called spindle tracking.

## 18.2 Calibrating the workpiece touch probe

### Application


The touch probe must be calibrated in order to enable determining precisely the actual switching point of a 3D touch probe. Otherwise, the control cannot ascertain exact measuring results.

During 3D calibration, the angle-dependent deflection behavior of a workpiece touch probe is determined in any probing direction (#92 / #2-02-1). Even if there is no exact radial or axial deflection of the workpiece touch probe, you will obtain precise measuring results with the 3D calibration.

### Related topics

- Calibrate the workpiece touch probe automatically  
**Further information:** User's Manual for Measuring Cycles for Workpieces and Tools
- Touch probe table  
**Further information:** "Touch probe table tchprobe.tp", Page 478
- Tool angle-dependent 3D radius compensation (#92 / #2-02-1)  
**Further information:** User's Manual for Programming and Testing

### Description of function

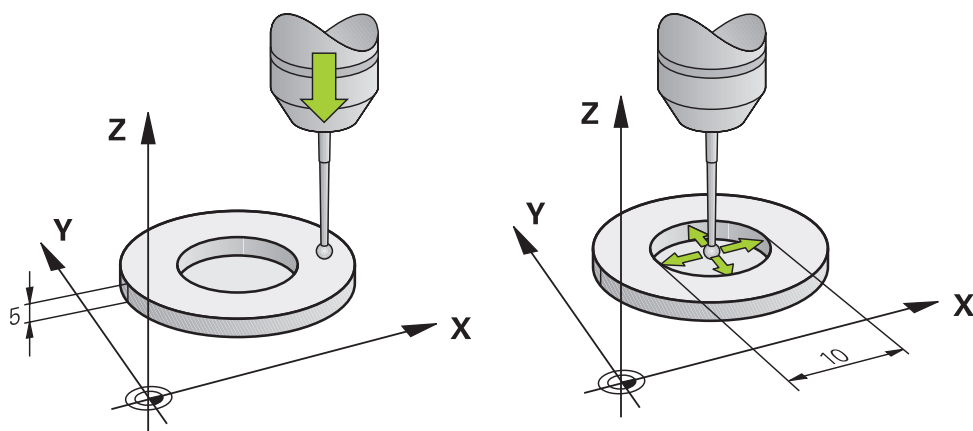

During calibration, the control finds the effective length of the stylus and the effective radius of the ball tip. To calibrate the 3D touch probe, clamp a ring gauge or a stud of known height and known radius to the machine table.

The effective length of the workpiece touch probe refers to the tool carrier preset.

**Further information:** "Tool carrier reference point", Page 177

You can calibrate the workpiece touch probe with various tools. For example, the workpiece touch probe can be calibrated using an overmilled surface in length and a calibration ring in the radius. This creates a reference between the workpiece touch probe and the tools in the spindle. In this procedure, measured tools and the calibrated workpiece touch probe correspond using the tool presetting device.

### Calibrating an L-shaped stylus

Before you calibrate an L-shaped stylus you first must define the parameters in the touch probe table. Based on these approximate values, the control can align the touch probe during the calibration and determine the actual values.

At first, define the following parameters in the touch probe table:

Parameter	Value to be defined
<b>CAL_OF1</b>	Length of extension The extension is the angled length of the L-shaped stylus.
<b>CAL_OF2</b>	0
<b>CAL_ANG</b>	Spindle angle at which the extension is parallel to the main axis For this, manually position the extension in the direction of the main axis and read the value from the position display.

After the calibration, the control overwrites the previously defined values in the touch probe table with the determined values.

**Further information:** "Touch probe table tchprobe.tp", Page 478

When calibrating the length, the control aligns the touch probe with the calibration angle defined in the **CAL\_ANG** column.


While calibrating the touch probe, ensure that the feed rate override is 100%. That way you can always use the same feed rate for the subsequent probing processes as was used for the calibration. Hence, you can exclude inaccuracies during the probing caused by modified feed rates.

### 3D calibration (#92 / #2-02-1)

In addition to calibrating with a calibration sphere, the control also enables the touch probe to be calibrated dependent on the angle. For this purpose the control probes the calibration sphere in a quarter circle in the perpendicular. The 3D calibration data specifies the deflection behavior of the touch probe in any probing direction.

The control saves the deviations in a compensation value table **\*.3DTC** in the folder **TNC:\system\3D-ToolComp**.

The control creates a specific table for each calibrated touch probe. In the tool table the **DR2TABLE** column is automatically referenced to this.

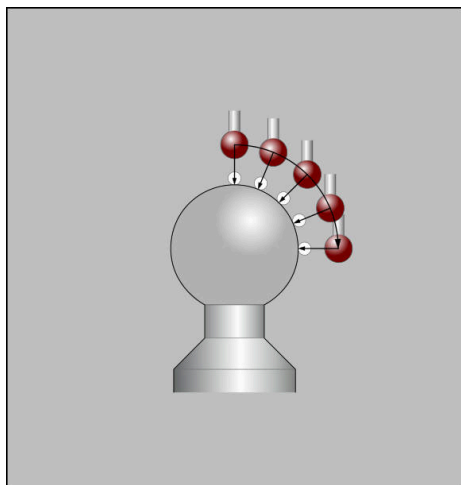

3D calibration

**Reversal measurement**

When calibrating the ball-tip radius, the control executes an automatic probing routine. In the first run the control finds the midpoint of the calibration ring or pin (approximate measurement) and positions the touch probe in the center. Then, in the actual calibration process (fine measurement), the radius of the ball tip is ascertained. If the touch probe allows probing from opposite orientations, the center offset is determined during another cycle.

HEIDENHAIN touch probes are predefined as to whether or how a touch probe can be oriented. Other touch probes are configured by the machine manufacturer.

When calibrating the radius, up to three circular measurements can be taken depending on the possible orientation of the workpiece touch probe. The first two circular measurements determine the center offset of the workpiece touch probe. The third circular measurement determines the effective stylus tip radius. If orientation of the spindle is not possible or only a certain orientation is possible due to the workpiece touch probe, circular measurements are omitted.

### 18.2.1 Calibrating the length of the workpiece touch probe

To calibrate a workpiece touch probe using an overmilled surface in length:

- ▶ Measure the end milling cutter on the tool presetting device
- ▶ Store the measured end milling cutter in the tool magazine of the machine
- ▶ Enter the tool data of the end milling cutter in tool management
- ▶ Clamp the workpiece blank



- ▶ Select the **Manual** operating mode

- ▶ Replace the end milling cutter in the machine
- ▶ Switch on spindle (e.g., with **M3**)
- ▶ Use the handwheel to scratch the workpiece blank

**Further information:** "Setting a preset with milling cutters", Page 239

- ▶ Set preset in the tool axis (e.g., with **Z**)
- ▶ Position the end milling cutter next to the workpiece blank
- ▶ Set a small value in the tool axis (e.g., **-0.5 mm**)
- ▶ Overmill the workpiece blank using the handwheel
- ▶ Set the preset again in the tool axis (e.g., with **Z=0**)
- ▶ Switch off spindle (e.g., with **M5**)
- ▶ Replace the tool touch probe
- ▶ Select the **Setup** application
- ▶ Select **Calibrate touch probe**




- ▶ Select the **Length calibration** measurement method
- The control displays the current calibration data.
- ▶ Enter the reference surface position (e.g., with **0**)
- ▶ Position the workpiece touch probe close to the surface of the overmilled area



Check that the area to be probed is flat and free of chips before you start the touch probe function.



- ▶ Press the **NC Start** key
- The control performs the probing process and then automatically retracts the workpiece touch probe to the starting point.
- ▶ Check results



- ▶ Select **Apply calibration data**
- The control transfers the calibrated length of the 3D touch probe to the tool table.



- ▶ Select **Exit probing**
- The control closes the **Calibrate touch probe** function.

## 18.2.2 Calibrating the radius of the workpiece touch probe

To calibrate a workpiece touch probe using a setting ring in the radius:

- ▶ Clamp the setting ring on the machine table (e.g., with clamps)



- ▶ Select the **Manual** operating mode
- ▶ Position the 3D touch probe in the hole of the setting ring



Make sure that the stylus tip is completely recessed into the calibration ring. This causes the control to probe with the largest point of the stylus tip.



- ▶ Select the **Setup** application
- ▶ Select **Calibrate touch probe**




- ▶ Select **Radius** measurement method



- ▶ Select **Setting ring** calibration standard



- ▶ Enter the diameter of the ring gauge
- ▶ Enter the start angle
- ▶ Enter the number of touch points
- ▶ Press the **NC Start** key
- > The 3D touch probe probes all required touch points in an automatic probing routine. The control calculates the effective stylus tip radius. If probing from opposite orientations is possible, the control calculates the center offset.



- ▶ Check results
- ▶ Select **Apply calibration data**
- > The control stores the calibrated radius of the 3D touch probe in the tool table.



- ▶ Select **Exit probing**
- > The control closes the **Calibrate touch probe** function.

### 18.2.3 3D calibration of workpiece touch probe (#92 / #2-02-1)

To calibrate a workpiece touch probe using a calibration sphere in the radius:

- ▶ Clamp the setting ring on the machine table (e.g., with clamps)



- ▶ Select the **Manual** operating mode
- ▶ Position the workpiece touch probe centrally above the sphere
- ▶ Select the **Setup** application
- ▶ Select **Calibrate touch probe**



- ▶ Select **Radius** measurement method




- ▶ Select the **Calibration sphere** calibration standard

- ▶ Enter the diameter of the sphere
- ▶ Enter the start angle
- ▶ Enter the number of touch points



- ▶ Press the **NC Start** key
- > The 3D touch probe probes all required touch points in an automatic probing routine. The control calculates the effective stylus tip radius. If probing from opposite orientations is possible, the control calculates the center offset.

- ▶ Check results




- ▶ Select **Apply calibration data**
- > The control stores the calibrated radius of the 3D touch probe in the tool table.
- > The control shows the **3D calibration** measurement method.
- ▶ Select the **3D calibration** measurement method



- ▶ Enter the number of touch points



- ▶ Press the **NC Start** key
- > The 3D touch probe probes all required touch points in an automatic probing routine.



- ▶ Select **Apply calibration data**
- > The control saves the deviations in a compensation value table under **TNC:\system\3D-ToolComp**.



- ▶ Select **Exit probing**
- > The control closes the **Calibrate touch probe** function.



### Instructions for calibration

- In order to be able to determine ball-tip center misalignment, the control needs to be specially prepared by the machine manufacturer.
- If you press the **OK** button after the calibration process, the control accepts the calibration values for the active touch probe. The updated tool data then becomes immediately effective, and it is not necessary to repeat the tool call.
- HEIDENHAIN guarantees the proper operation of the touch probe cycles only in conjunction with HEIDENHAIN touch probes.
- If you want to calibrate using the outside of an object, you need to pre-position the touch probe above the center of the calibration sphere or calibration pin. Ensure that the probing points can be approached without collisions.
- The control saves the effective length and effective radius of the touch probe in the tool table. The control saves the touch probe center offset in the touch probe table. The control uses the **TP\_NO** parameter to link the data from the touch probe table with the data from the tool table.

**Further information:** "Touch probe table tchprobe.tp", Page 478

## 18.3 Setting up the workpiece with graphical support (#159 / #1-07-1)

### Application

Use the **Set up the workpiece** function to determine the position and misalignment of a workpiece with only one touch-probe function and save it as a workpiece preset. During setup, you can probe curved surfaces.

The control supports you additionally by showing the setup situation and possible touch points in the **Simulation** workspace by means of a 3D model.

### Related topics

- Touch-probe functions in the **Setup** application  
**Further information:** "Touch Probe Functions in the Manual Operating Mode", Page 375
- Generating an STL file of a workpiece  
**Further information:** User's Manual for Programming and Testing
- **Simulation** workspace  
**Further information:** User's Manual for Programming and Testing
- Setting fixtures with graphical support (#140 / #5-03-2)  
**Further information:** "Integrating fixtures into collision monitoring (#140 / #5-03-2)", Page 260

### Requirements

- Graphically supported setup software option (#159 / #1-07-1)
- Touch probe properly defined in the tool management:
  - Spherical radius in the **R2** column
  - If probing on inclined surfaces, the spindle tracking in the **TRACK** column needs to be active**Further information:** "Tool data for touch probes", Page 203
- Workpiece touch probe calibrated  
When probing on inclined surfaces, a 3D calibration of the workpiece touch probe needs to be performed (#92 / #2-02-1).  
**Further information:** "Calibrating the workpiece touch probe", Page 391
- 3D model of the workpiece as STL file  
The STL file may contain up to 300,000 triangles. The more the 3D model corresponds to the actual workpiece, the higher the possible workpiece setup accuracy.  
If required, optimize the 3D model with the **3D mesh** (#152 / #1-04-1) function.  
**Further information:** User's Manual for Programming and Testing

## Description of function

The **Set up the workpiece** function is available as a touch probe function in the **Setup** application of the **Manual** operating mode.

The scope of the **Set up the workpiece** function depends on the Extended Functions Group 1 (#8 / #1-01-1) and Extended Functions Group 2 (#9 / #4-01-1) software options as follows:

- Both software options enabled:  
You can tilt before setting up and incline the tool while setting up in order to probe even complex workpieces (e.g., shaped parts).
- Only Extended Functions Group 1 (#8 / #1-01-1) enabled:  
You can tilt before setting up. The working plane must be consistent. If you move the rotary axes between the touch points, the control will display an error message.



If the current coordinates of the rotary axes and the defined tilt angles (**3D ROT** window) match, the working plane is consistent.


- None of the two software options is enabled:  
You cannot tilt before setting up. If you move the rotary axes between the touch points, the control will display an error message.

**Further information:** "Tilting the working plane (#8 / #1-01-1)", Page 243

**Further information:** User's Manual for Programming and Testing

## Extension of the Simulation workspace

In addition to the **Probing function** workspace, the **Simulation** workspace offers graphical support for setting up the workpiece.

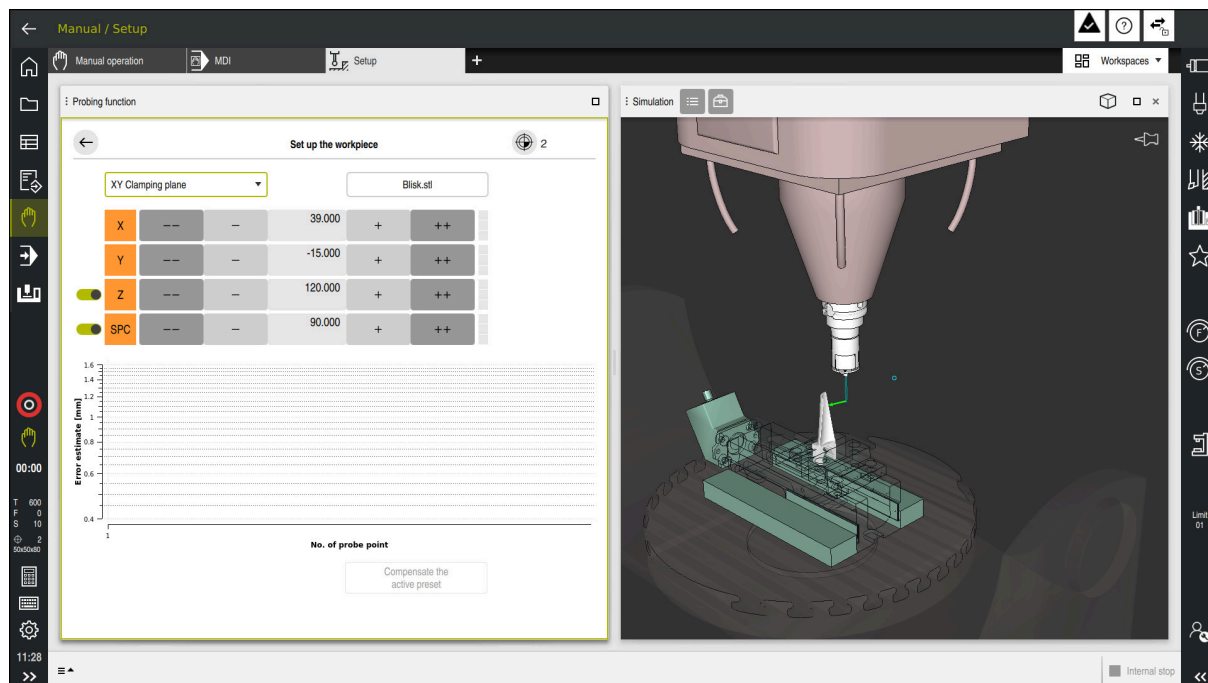

The **Set up the workpiece** function with the **Simulation** workspace open

When the **Set up the workpiece** function is active, the **Simulation** workspace displays the content below:

- Current position of workpiece as viewed by the control
- Probed points on the workpiece
- Possible direction of probing by means of an arrow:
  - No arrow  
Probing is not possible. The workpiece touch probe is too distant from the workpiece or the workpiece touch probe is positioned within the workpiece, as seen by the control.

In this case you can correct the position of the 3D model in the simulation, if required.

- Red arrow  
Probing in the direction of the arrow is not possible.













Probing on edges, corners or heavily curved workpiece areas fails to deliver precise measuring results. This is why the control blocks probing in these areas.

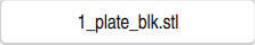- Yellow arrow  
Probing in the direction of the arrow is possible to a limited extent. The probing is performed in a deselected direction or could cause collisions.
- Green arrow  
Probing in the direction of the arrow is possible.

## Icons and buttons

The **Set up the workpiece** function contains the following icons and buttons:

Icon or button	Meaning
	<p>Open the <b>Change the preset</b> window</p> <p>You can select the workpiece preset and the pallet preset and edit values if required.</p> <div>  After the first point has been probed, the control dims the icon.         </div>
<b>XY Clamping plane</b>	<p>Use this selection menu to define the probing mode. Depending on the probing mode, the control displays the respective axis directions and spatial angles.</p> <p><b>Further information:</b> "Probing mode", Page 402</p>
	File name of 3D model
	<p>Shifts the position of the virtual workpiece by 10 mm or 10° in the negative axis direction</p> <div>  Shifts the workpiece in mm in a linear axis and in degrees in a rotary axis.         </div>
	Shifts the position of the virtual workpiece by 1 mm or 1° in the negative axis direction
	<ul style="list-style-type: none"> <li>■ Enter the position of the virtual workpiece directly</li> <li>■ Value and estimated accuracy of the value after the probing</li> </ul>
	Shifts the position of the virtual workpiece by 1 mm or 1° in the positive axis direction
	Shifts the position of the virtual workpiece by 10 mm or 10° in the positive axis direction
	<p>Status of direction</p> <p>The control displays the following colors:</p> <ul style="list-style-type: none"> <li>■ Gray The axis direction is deselected in this setup process and is not considered.</li> <li>■ White No touch points have been determined yet.</li> <li>■ Red The control cannot locate the workpiece position in this axis direction.</li> <li>■ Yellow The position of the workpiece in this axis already contains information. The information is not meaningful yet.</li> <li>■ Green The control can locate the workpiece position in this axis direction.</li> </ul>
<b>Compensate the active preset</b>	The control saves the determined values in the active row of the preset table.

## Probing mode

The following modes for probing the workpiece are available to you:

- **XY Clamping plane**  
X, Y and Z axis directions as well as spatial angle **SPC**
- **XZ Clamping plane**  
X, Y and Z axis directions as well as spatial angle **SPB**
- **YZ Clamping plane**  
X, Y and Z axis directions as well as spatial angle **SPA**
- **6D**  
X, Y and Z axis directions as well as spatial angles **SPA, SPB** and **SPC**

Depending on the probing mode, the control displays the respective axis directions and spatial angles. In the **XY**, **XZ** and **YZ** clamping planes a toggle switch allows you to deselect the respective tool axis and spatial angle, if required. The control will not take deselected axis directions into account in the setup process and positions the workpiece by considering the remaining axis directions only.

HEIDENHAIN recommends executing the setup process as follows:

- 1 Pre-position a 3D model in the machine's working space  
At this point in time, the control does not know the precise position of the workpiece, but of the workpiece touch probe. Pre-positioning the 3D model in accordance with the position of the workpiece touch probe produces values close to the position of the real workpiece.
- 2 Set the first touch points in the **X**, **Y** and **Z** axis directions  
If the control can determine the position in one axis direction, it will change the status of that axis to green.
- 3 Determine the spatial angle by setting further touch points  
To achieve maximum accuracy when probing the spatial angles, the touch points should be as far apart from one another as possible.
- 4 Increase the accuracies by additional check points  
Additional check points at the end of the measuring process improve the matching accuracy and minimize the misalignment between the 3D model and the real workpiece. Perform as many probing processes as necessary until the control displays the desired accuracy beneath the current value.

The error estimate diagram shows for each touch point the approximate distance of the 3D model from the real workpiece.

**Further information:** "Error estimate diagram", Page 403

## Error estimate diagram


Every additional touch point gradually restricts the possible positioning of the workpiece and puts the 3D model closer to the actual position in the machine.

The error estimate diagram shows the estimated value of the distance of the 3D model from the real workpiece. For this purpose, the control considers not only the touch points, but the whole workpiece.

When the error estimate diagram shows green circles and the desired accuracy, the setup process will be complete.

The following factors influence the accuracy that can be achieved when measuring workpieces:

- Accuracy of workpiece touch probe
- Accuracy of the machine kinematic configuration
- Deviations of the 3D model from the real workpiece
- Condition of the actual workpiece (e.g., unmachined areas)

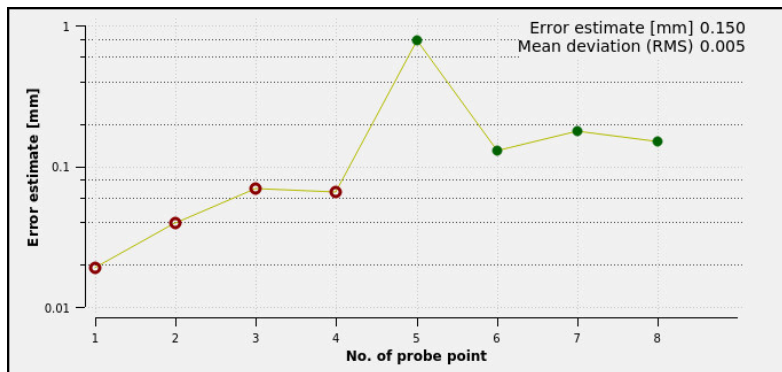

Error estimate diagram in the **Set up the workpiece** function

The error estimate diagram of the **Set up the workpiece** function shows the following information:

- **Mean deviation (RMS)**  
This area shows the average distance of the real workpiece from the 3D model in mm.
- **Error estimate [mm]**  
This axis shows the course of the error estimate based on the individual touch points. The control shows red circles until it can determine all axis directions. From then on the control will show green circles.
- **No. of probe point**  
This axis shows the numbers of the individual probing points.

### 18.3.1 Setting up the workpiece

Use the **Set up the workpiece** function to set the preset:

- ▶ Affix a real workpiece in the machine's working space



- ▶ Select the **Manual** operating mode
- ▶ Insert the workpiece touch probe
- ▶ Manually position the workpiece touch probe above the workpiece at a notable point (e.g., a corner)



This step makes the subsequent steps easier.



Open



Apply

++

- ▶ Select the **Setup** application
- ▶ Select **Set up the workpiece**
- ▶ The control opens the **Set up the workpiece** menu.
- ▶ Select a 3D model matching the real workpiece
- ▶ Select **Open**
- ▶ The control opens the selected 3D model in the simulation.
- ▶ If necessary, open the **Change the preset** window
- ▶ Select a new preset if necessary
- ▶ Select the **Apply** function if necessary
- ▶ Pre-position the 3D model by using the buttons for the individual axis directions within the virtual working space of the machine



For pre-positioning the workpiece, use the workpiece touch probe as a point of reference.  
Even during the setup process, the shift functions are available for correcting the fixture position manually.  
Then, probe a new point.

- ▶ Specify the probing mode (e.g., **XY Clamping plane**)
- ▶ Position the workpiece touch probe until the control shows a green arrow pointing downward



As the 3D model is only pre-positioned at this point in time, the green arrow cannot provide any reliable information about whether the desired surface of the workpiece will actually be probed. Check if the workpiece position in the simulation and in the machine match each other and if probing in the direction of the arrow is possible on the machine.  
Do not probe directly near edges, chamfers and roundings.



- ▶ Press the **NC Start** key
- ▶ The control probes in the direction of the arrow.
- ▶ The control displays the status of the **Z** axis in green and shifts the workpiece to the probed position. The control marks the probed position with a point in the simulation.



- ▶ Repeat this process in axis directions **X+** and **Y+**
- ▶ The control changes the status of the axes to green.
- ▶ Probe another point in axis direction **Y+** for the basic rotation
- ▶ The control changes the status of the **SPC** spatial angle to green.
- ▶ Probe the check point in axis direction **X-**
- ▶ Select **Compensate the active preset**
- ▶ The control saves the determined values in the active row of the preset table.
- ▶ Exit the **Set up the workpiece** function

Compensate the active preset



## Notes

### NOTICE

#### Danger of collision!

To probe the clamping situation in the machine exactly, the workpiece touch probe must be properly calibrated and the value **R2** properly defined in the tool management. Otherwise, incorrect tool data of the workpiece touch probe may cause inaccurate measurement and possibly a collision.

- ▶ Calibrate the workpiece touch probe at regular intervals
- ▶ Enter parameter **R2** in the tool management

- The control cannot identify modeling differences between the 3D model and the workpiece.
- Collisions might be more easily detected, if a tool carrier is assigned to the workpiece touch probe.
- HEIDENHAIN recommends probing check points for one axis direction on both sides of the workpiece. As a result, the control will correct the position of the 3D model in the simulation uniformly.

## 18.4 Measuring the tool by scratching

### Application

Not all machines are equipped with a tool touch probe for measuring a tool. The **Tool measured** touch probe function enables determining the tool dimensions by scratching a workpiece.

### Related topics

- Touch probe functions in the **Setup** application  
**Further information:** "Touch Probe Functions in the Manual Operating Mode", Page 375
- Measuring the tool automatically with cycles  
**Further information:** User's Manual for Measuring Cycles for Workpieces and Tools

### Description of function

You do not use a 3D touch probe for scratching, but the tool to be measured. In the scratching process, approach the tool carefully to a workpiece surface until you can see a thin chip being removed. The handwheel allows obtaining a higher accuracy.

In the **X** or **Y** probing directions, the tool radius can be determined. When selecting probing direction **Z**, the tool length is measured.

### Buttons in the Measure the tool function

The control offers the following options for writing the measured radius or length values into the tool table:

Button	Meaning
Write basic values	The control transfers the values into columns <b>R</b> or <b>L</b> . The control resets existing delta values in columns <b>DR</b> or <b>DL</b> .
Write delta values	The control enters the delta values in columns <b>DR</b> or <b>DL</b> .

**Further information:** "Tool tables", Page 451

### 18.4.1 Tool measurement by scratching


The dimensions of an end mill can be determined by using the **Tool measured** function as follows:



- ▶ Select the **Manual** operating mode
- ▶ Set the workpiece preset if required



Position the workpiece preset on the surfaces to be scratched in order to obtain a clear reference.



- ▶ Insert the tool to be measured
- ▶ Define the speed if required
- ▶ Start the tool spindle
- ▶ Select the **Setup** application
- ▶ Select the **Measure tool** probing function
- ▶ Scratch the workpiece in the desired axis direction (e.g., **X+**)
- ▶ Select the associated probing direction **X+**
- ▶ Select **actual position capture**
  - > The control transfers the actual X axis position into the **Actual value** column.
  - > The control shows the measurement results.
- ▶ Enter a **Nominal value** (e.g., **0**)
- ▶ Select **Write basic values**
  - > The control transfers the value into column **R** of the tool table.
  - > The control resets the existing delta value in the **DR** column.



When selecting **Write delta values**, the control will enter only one delta value in column **DR**.



- ▶ Scratch another axis direction if required (e.g., **Z-**)
- ▶ Select **Exit probing**
  - > The control closes the **Measure tool** probing function.

## 18.5 Suppressing touch probe monitoring

### Application

If you move a workpiece touch probe too close to the workpiece, you can accidentally deflect the workpiece touch probe. You cannot retract a deflected workpiece touch probe in the monitored state. You can retract a deflected workpiece touch probe by suppressing touch probe monitoring.

### Description of function

If the control does not receive a stable signal from the probe, the button displays **Suppress touch probe monitoring**.

As long as touch-probe monitoring is switched off, the control displays the error message **The touch probe monitor is deactivated for 30 seconds**. This error message remains active only for 30 seconds.

### 18.5.1 Deactivating touch probe monitoring

To deactivate touch probe monitoring:



- ▶ Select the **Manual** operating mode
- ▶ Select **Suppress touch probe monitoring**
- ▶ The control disables touch-probe monitoring for 30 seconds.
- ▶ If required, move the touch probe so that the control receives a stable signal from it.

### Notes

#### NOTICE

##### Danger of collision!

While touch-probe monitoring is deactivated, the control will not perform collision checking. Thus, you must ensure that the touch probe can be positioned safely. There is a risk of collision if you choose the wrong direction of traverse!

- ▶ Carefully move the axes in the **Manual** operating mode


If the touch probe sends a stable signal within the 30 seconds, then touch-probe monitoring reactivates itself automatically and the error message is cleared.

## 18.6 Comparison of offset and 3D basic rotation

The following example shows how the two functions differ.

### Offset

Initial state

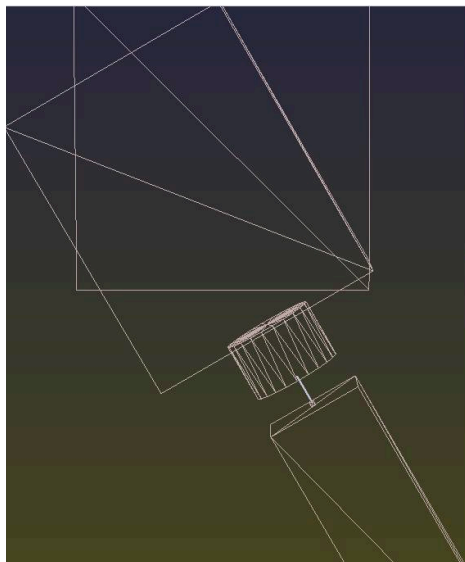


Position display:

- Actual position
- **B** = 0
- **C** = 0

Preset table:


- **SPB** = 0
- **B\_OFFS** = -30
- **C\_OFFS** = +0

Movement in +Z without tilting

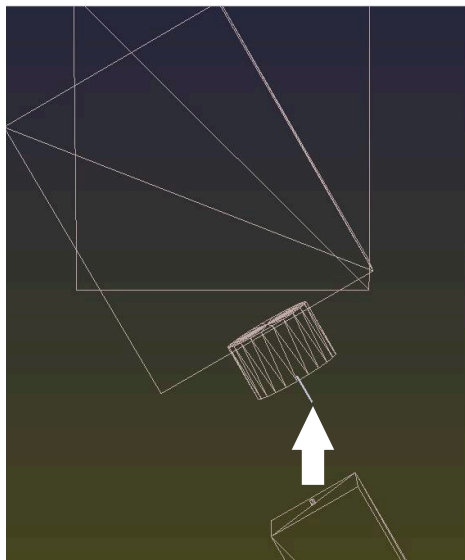

### 3D basic rotation

Initial state

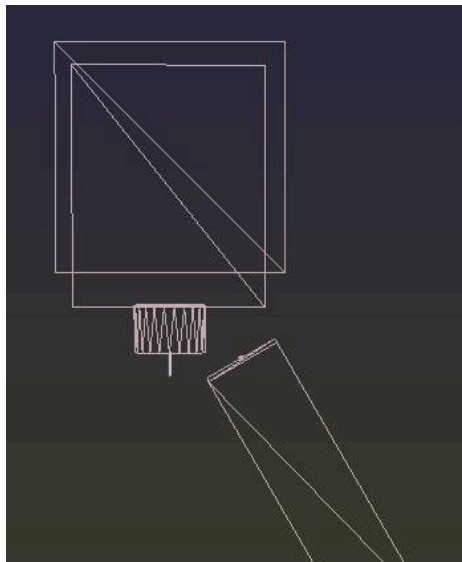


Position display:

- Actual position
- **B** = 0
- **C** = 0

Preset table:

- **SPB** = -30
- **B\_OFFS** = +0
- **C\_OFFS** = +0


Movement in +Z without tilting

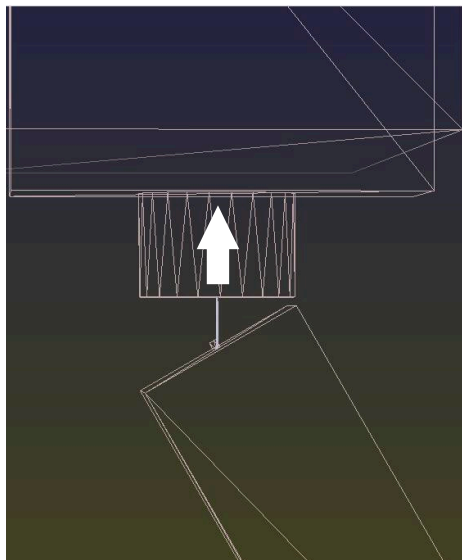

### Offset

Movement in +Z with tilting

**PLANE SPATIAL** with **SPA+0 SPB+0 SPC+0**

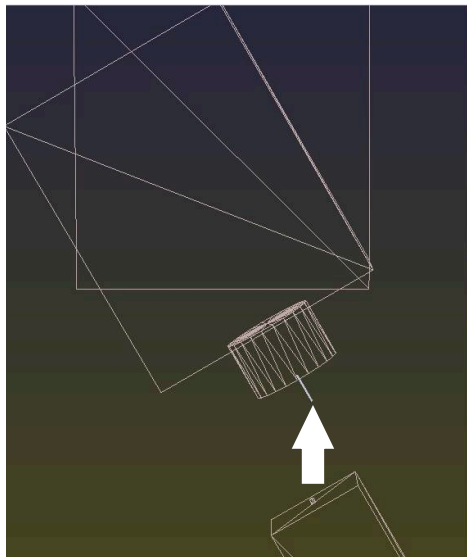


> The orientation **is not correct!**

### 3D basic rotation

Movement in +Z with tilting

**PLANE SPATIAL** with **SPA+0 SPB+0 SPC+0**

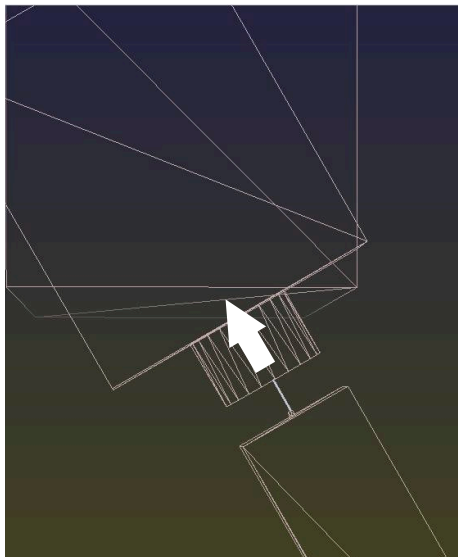

> The orientation is correct!  
> The next machining step will be **correct.**



HEIDENHAIN recommends using 3D basic rotation because of its greater flexibility.

# 19

**Program Run**

## 19.1 The Program Run operating mode

### 19.1.1 Fundamentals

#### Application

In the **Program Run** operating mode you produce workpieces by having the control execute NC programs either one block at a time or in full sequence.

You also execute pallet tables in this operating mode.

#### Related topics

- Executing individual NC blocks in the **MDI** application  
**Further information:** "The MDI Application ", Page 365
- Creating NC programs  
**Further information:** User's Manual for Programming and Testing
- Pallet tables  
**Further information:** User's Manual for Programming and Testing

#### NOTICE

##### Caution: Danger due to manipulated data!

If you execute NC programs directly from a network drive or a USB device, you have no control over whether the NC program has been changed or manipulated. In addition, the network speed can slow down the execution of the NC program. Undesirable machine movements or collisions may result.

- Copy the NC program and all called files to the **TNC:** drive

#### NOTICE

##### Danger of collision!

When you edit NC programs outside the **Program** workspace, you have no control over whether the control will identify the changes. Undesirable machine movements or collisions may result.

- Edit NC programs in the **Program** workspace only



## Description of function



The following information also applies to pallet tables and job lists.

When you select a new NC program or when an NC program has been completely executed, the cursor is at the beginning of the program.

If you want to start machining at a different NC block, you first need to select the desired NC block by using the **Block scan** function.

**Further information:** "Block scan for mid-program startup", Page 423

By default, the control runs NC programs in Full Sequence mode after the **NC Start** key has been pressed. In this mode, the control runs an NC program continuously up to its end, or up to a manual or programmed interruption.

In **Single Block** mode you execute each NC block separately by pressing the **NC Start** key.

The control shows the status of the machining process with the **Control-in-operation** icon in the status overview.

**Further information:** "Status overview on the TNC bar", Page 127

The **Program Run** operating mode provides the following workspaces:



- **GPS** (#44 / #1-06-1)  
**Further information:** "Global program settings (GPS) (#44 / #1-06-1)", Page 291
- **Positions**  
**Further information:** "The Positions workspace", Page 121
- **Program**  
**Further information:** User's Manual for Programming and Testing
- **Simulation**  
**Further information:** User's Manual for Programming and Testing
- **Status**  
**Further information:** "The Status workspace", Page 129
- **Process Monitoring** (#168 / #5-01-1)  
**Further information:** User's Manual for Programming and Testing

When opening a pallet table, the control displays the **Job list** workspace. You cannot modify this workspace.

**Further information:** User's Manual for Programming and Testing

## Icons and buttons

The **Program Run** operating mode contains the following icons and buttons:

Icon or button	Meaning
	<b>Open file</b> <b>Open file</b> allows you to open a file, such as an NC program. When you open a file, the control closes the file that was already open.
	Execution cursor The execution cursor shows which NC block is currently being executed or is marked for execution.
<b>Single Block</b>	If this toggle switch is active, then you run each NC block separately with the <b>NC start</b> key. If Single Block mode is selected, then the operating mode's icon in the control bar changes.
<b>Q info</b>	The control opens the <b>Q parameter list</b> window, where you can see and edit the current values and descriptions of the variables. <b>Further information:</b> User's Manual for Programming and Testing
<b>Compensation tables</b>	The control opens a selection menu with the following tables: <ul style="list-style-type: none"> <li>■ <b>D</b></li> <li>■ <b>T-CS</b></li> <li>■ <b>WPL-CS</b></li> </ul> <b>Further information:</b> "Compensation during program run", Page 432
<b>GOTO Cursor</b>	The control marks the table row currently selected for execution. Active only if a pallet table is open (option 22) <b>Further information:</b> User's Manual for Programming and Testing
<b>F limited</b>	Use this option to activate or deactivate the feed-rate limit for functional safety (FS). Only on machines with functional safety (FS). <b>Further information:</b> "Feed-rate limiting with functional safety (FS)", Page 538
<b>AFC</b>	Use this option to activate or deactivate Adaptive Feed Control (AFC, option 45). <b>Further information:</b> "The AFC toggle switch in the Program Run operating mode", Page 285
<b>AFC settings</b>	The control opens a selection menu with the following tables for AFC (option 45): <ul style="list-style-type: none"> <li>■ <b>AFC.TAB</b> for AFC basic settings</li> <li>■ <b>AFC.DEP</b> settings file for teach-in cuts of the active NC program</li> <li>■ <b>AFC2.DEP</b> log file of the active NC program</li> </ul> <b>Further information:</b> "Adaptive feed control (AFC) (#45 / #2-31-1)", Page 280
<b>ACC</b>	If this toggle switch is active, the control activates Active Chatter Control (ACC, option 145). <b>Further information:</b> "Active Chatter Control (ACC) (#145 / #2-30-1)", Page 290
<b>F LIMIT</b>	Use this function to activate a feed-rate limit and define its value. <b>Further information:</b> "Feed rate limit F LIMIT", Page 416

Icon or button	Meaning
<b>Breakpoints</b>	<p>If you select this button, the control opens the <b>Breakpoints</b> window with the following options for selection:</p> <ul style="list-style-type: none"> <li>■ <b>Permit start with override</b> If the toggle switch is active, then you can continue the NC program after a conditional stop with the Override Controller. <b>Further information:</b> "The Program run options window", Page 524</li> <li>■ <b>Feed F LIMIT</b> Use this function to activate a feed-rate limit and define its value. <b>Further information:</b> "Feed rate limit F LIMIT", Page 416</li> <li>■ <b>Perform conditional stop</b> The control provides the following breakpoints: <ul style="list-style-type: none"> <li>■ <b>Before switch to rapid traverse</b></li> <li>■ <b>Before switch to feed rate</b></li> <li>■ <b>Between two rapid traverses</b></li> <li>■ <b>Before tool call</b></li> <li>■ <b>Before tilting the working plane</b></li> <li>■ <b>Before cycle call</b></li> <li>■ <b>In cycle call</b></li> </ul> <b>Further information:</b> "Breakpoints", Page 525</li> <li>■ <b>Skip block</b> If the toggle switch is active, then the control does not execute any NC blocks dimmed with the / character. If the toggle switch is active, then the dims the NC blocks to be skipped. <b>Further information:</b> User's Manual for Programming and Testing</li> <li>■ <b>Pause at M1</b> If the toggle switch is active, then the control stops the execution at every NC block with <b>M1</b>. If the toggle switch is inactive, then the control dims the <b>M1</b> syntax element. <b>Further information:</b> User's Manual for Programming and Testing</li> </ul>
<b>Skip block</b>	<p>If the toggle switch is active, then the control does not execute any NC blocks dimmed with the / character.</p> <p>If the toggle switch is active, then the dims the NC blocks to be skipped.</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p>
<b>Pause at M1</b>	<p>If the toggle switch is active, then the control stops the execution at every NC block with <b>M1</b>.</p> <p>If the toggle switch is inactive, then the control dims the <b>M1</b> syntax element.</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p>
<b>GOTO block number</b>	<p>Mark an NC block to be run without considering any previous NC blocks</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p>
<b>Manual traverse</b>	<p>While a program run is interrupted, you can move the axes manually.</p> <p>If <b>Manual traverse</b> is active, then the operating mode's icon in the control bar changes.</p> <p><b>Further information:</b> "Manual traverse during an interruption", Page 422</p>
<b>Edit</b>	<p>If this toggle switch is active, then you can edit the pallet table.</p> <p>Active only if a pallet table is open</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p>

Icon or button	Meaning
<b>3D ROT</b>	While a program run is interrupted, you can move the axes manually in the tilted working plane (option 8). <b>Further information:</b> "Manual traverse during an interruption", Page 422
<b>Approach position</b>	Return to contour after manual traverse of the machine axes during an interruption <b>Further information:</b> "Returning to the contour", Page 430
<b>Block scan</b>	The <b>Block scan</b> function allows you to start program run at any desired NC block. The control takes the preceding parts of the NC program up to this NC block into account mathematically; for example, whether the spindle was switched on with <b>M3</b> . <b>Further information:</b> "Block scan for mid-program startup", Page 423
<b>Open in the editor</b>	The control opens the active NC program in the <b>Editor</b> operating mode, even if it is a called NC program. Active only if an NC program is open <b>Further information:</b> User's Manual for Programming and Testing
<b>Internal stop</b>	If an NC program is interrupted due to an error or a stop, the control activates this button. Use this button to abort program run.
<b>Reset program</b>	If you select <b>Internal stop</b> , the control activates this button. The control places the cursor back to the beginning of the program and resets any modally active program information as well as the program run-time.

### Feed rate limit F LIMIT

The **F LIMIT** button allows you to reduce the feed rate for all operating modes. The reduction applies to all rapid traverse and feed rate movements. The value you have entered remains active across power cycles.

The **F LIMIT** button is available in the **MDI** application and in **Editor** operating mode. When you select the **F LIMIT** button in the function bar, the control will open the **Feed rate F LIMIT** window.

If a feed rate limit is active, the control highlights the **F LIMIT** button in color and displays the defined value. In the **Positions** and **Status** workspaces, the feed rate is displayed in orange.

**Further information:** "Statusanzeigen", Page

You deactivate the feed rate limit by entering a value of 0 in the **Feed rate F LIMIT** window.

### Interrupting, stopping or canceling program run

There are several ways to stop a program run:

- Interrupt program run (e.g., with the miscellaneous function **M0**)
- Stop the program run (e.g., with the **NC Stop** key)
- Cancel the program run (e.g., with the **NC stop** key and the **Internal stop** button)
- Terminate program run (e.g., with the miscellaneous functions **M2** or **M30**)

Upon major errors, the control automatically aborts program run (e.g., during a cycle call with stationary spindle).

**Further information:** "Message menu on the information bar", Page 360

If you run your NC program in **Single Block** mode or in the **MDI** application, the control will switch to the interrupted state after the execution of each NC block.

The control shows the current program run status with the **Control-in-operation** icon.

**Further information:** "Status overview on the TNC bar", Page 127

Below are some of the functions you can execute in an interrupted or canceled state:

- Selecting an operating mode
- Manual traverse of axes
- Checking Q parameters and changing these if necessary using the **Q INFO** function
- Changing the setting for the optional programmed interruption with **M1**
- Changing the setting for the programmed skipping of NC blocks with **/**

### NOTICE

#### Danger of collision!

Certain manual interactions may lead to the control losing the modally effective program information (i.e., the contextual reference). Loss of this contextual reference may result in unexpected and undesirable movements. There is a risk of collision during the subsequent machining operation!

- ▶ Do not perform the following interactions:
  - Cursor movement to another NC block
  - The jump command **GOTO** to another NC block
  - Editing an NC block
  - Modifying the values of variables by using the **Q parameter list** window
  - Switching the operating modes
- ▶ Restore the contextual reference by repeating the required NC blocks

### Programmed interruptions

You can set interruptions directly in the NC program. The control interrupts the program run in the NC block containing one of the following inputs:

- Programmed stop **STOP** (with and without miscellaneous function)
- Programmed stop **M0**
- Conditional stop **M1**

**Resuming program run**

After stopping the program with the **NC Stop** key or a programmed interruption, you can resume program run by pressing the **NC Start** key.

After canceling the program run with an **Internal stop**, you must start the program run at the beginning of the NC program or use the **Block scan** function.

After an interruption of the program run within a subprogram or program section repeat, you need to use the **Block scan** function for mid-program startup.

**Further information:** "Block scan for mid-program startup", Page 423

**Modally effective program information**

The control saves the following data during a program interruption:

- The last tool that was called
- Current coordinate transformations (e.g., datum shift, rotation, mirroring)
- The coordinates of the circle center that was last defined

The control uses the stored data for returning the tool to the contour (**Approach position** button).

**Further information:** "Returning to the contour", Page 430



The saved data remains active until it is reset (e.g., by selecting a program).

## Notes

### NOTICE

#### Danger of collision!

Program cancellation, manual intervention, forgotten resetting of NC functions or transformations can lead to the control performing unexpected or undesirable movements. This can lead to workpiece damage or collision.

- ▶ Rescind all programmed NC functions and transformations within the NC program
  - ▶ Run a simulation before executing an NC program
  - ▶ Check both the general as well as the additional status display for NC functions and transformations, such as an active basic rotation, before executing an NC program
  - ▶ Carefully verify the NC program in **Single Block** mode
- In the **Program Run** operating mode, the control marks active files with the status **M**, such as a selected NC program or tables. If you open such a file in another operating mode, the controls shows the status on the tab of the application bar.
  - When positioning an axis, the control checks whether the defined speed has been reached. The control does not check the speed in positioning blocks where **FMAX** is the feed rate.
  - You can adjust the feed rate and the spindle speed during program run with the potentiometers.
  - If you modify the workpiece preset during a program run interruption, you must re-select the NC block to resume.  
**Further information:** "Block scan for mid-program startup", Page 423
  - HEIDENHAIN recommends switching the spindle on with **M3** or **M4** after every tool call. That way you avoid problems during program run, such as when restarting after an interruption.
  - The settings in the **GPS** workspace have an effect on the program run, such as handwheel superimpositioning (#44 / #1-06-1).  
**Further information:** "Global program settings (GPS) (#44 / #1-06-1)", Page 291
  - The execution cursor is always displayed in the foreground. The execution cursor may cover or hide other icons.

## Definitions

Abbreviation	Definition
<b>GPS</b> (global program settings)	Global program settings
<b>ACC</b> (active chatter control)	Active Chatter Control

### 19.1.2 Navigation path in the Program workspace

#### Application

If you execute an NC program or a pallet table or if you test it in the opened **Simulation** workspace, the control will display a navigation path in the file information bar of the **Program** workspace.

The control displays the names of all the NC programs used in the navigation path and opens the contents of all NC programs in the workspace. This makes it easier to keep an overview of the execution when calling programs and allows navigating between the NC programs when the program run is interrupted.

#### Related topics

- Program call  
**Further information:** User's Manual for Programming and Testing
- **Program** workspace  
**Further information:** User's Manual for Programming and Testing
- **Simulation** workspace  
**Further information:** User's Manual for Programming and Testing
- Interrupted program run  
**Further information:** "Interrupting, stopping or canceling program run",  
Page 417

#### Requirement

- The **Program** and **Simulation** workspaces are both opened  
In the **Editor** operating mode you need both workspaces to use the function.




## Description of function

The control shows the name of the NC program as a path element in the file information bar. As soon as the control calls a different NC program, the control adds a new path element with the name of the called NC program to the bar.

Additionally, the control displays the contents of the called NC program in a new pane in the **Program** workspace. The control displays as many NC programs side by side as the size of the workspace permits. If necessary, newly opened NC programs will cover previously opened NC programs. The control displays the covered NC programs in a narrow band at the left edge of the workspace.

When execution is interrupted, you can navigate between the NC programs. When you select the path element of an NC program, the control opens the content.

When you select the last path element, the control automatically marks the active NC block with the execution cursor. When you press the **NC Start** key, the control resumes execution of the NC program from this position.

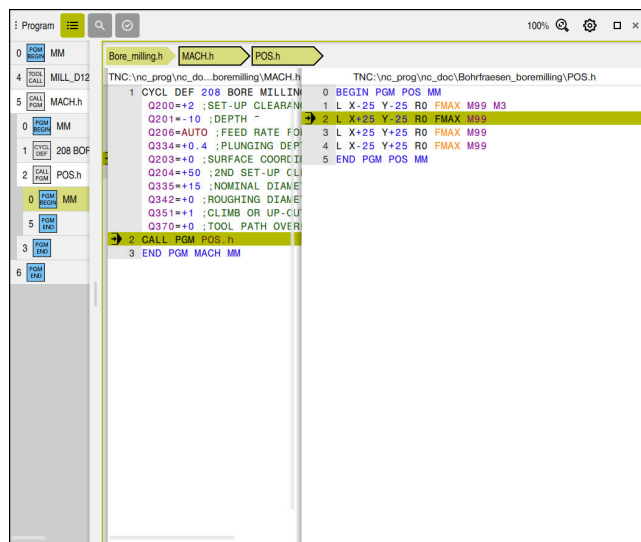

Called NC programs in the **Program** workspace in the **Program Run** operating mode

## Depiction of path elements

The control displays the path elements of the navigation path as follows:

Format	Meaning
Black frame	The NC program is visible in the <b>Program</b> workspace and is not covered by other NC programs.
Highlighted in green	The NC program at the current cursor position is active or is considered for program run. If, for example, the cursor is positioned in the called NC program, the calling NC program will be considered for program run.
Highlighted in gray	The NC program is active for execution but will not be considered for program run at the current cursor position. If, for example, you stop the execution and navigate into the calling NC program, the control displays the path element of the called NC program in gray.

## Note

In the **Program Run** operating mode, the **Structure** column contains all structuring items, even those of the called NC programs. The control indents the structure of the called NC programs.

The structure items allow you to navigate into every NC program. The control displays the associated NC programs in the **Program** workspace. The navigation path always remains at the current point of execution.

**Further information:** User's Manual for Programming and Testing

### 19.1.3 Manual traverse during an interruption

#### Application

During a program run interruption you can move the machine axes manually.

The **Tilt the working plane (3D ROT)** window allows selecting the reference system in which you move the axes (#8 / #1-01-1).

#### Related topics

- Manual traverse of machine axes

**Further information:** "Moving the machine axes", Page 163

- Tilting the working plane manually (#8 / #1-01-1)





**Further information:** User's Manual for Programming and Testing

#### Description of function

When you select **Manual traverse**, you can move the axes with the axis keys of the control.

**Further information:** "Using axis keys to move the axes ", Page 164

In the **Tilt the working plane (3D ROT)** window, you can select the following functions:

Icon	Function	Meaning
	<b>M-CS machine</b>	Traversing in the machine coordinate system <b>M-CS</b> <b>Further information:</b> "Machine coordinate system M-CS", Page 224
	<b>W-CS workpiece</b>	Traversing in the workpiece coordinate system <b>W-CS</b> <b>Further information:</b> "Workpiece coordinate system W-CS", Page 229
	<b>WPL-CS working plane</b>	Traversing in the working plane coordinate system <b>WPL-CS</b> <b>Further information:</b> "Working plane coordinate system WPL-CS", Page 231
	<b>T-CS tool</b>	Traversing in the tool coordinate system <b>T-CS</b> <b>Further information:</b> "Working plane coordinate system WPL-CS", Page 231

When you select one of the functions, the control will display the associated icon in the **Positions** workspace. The control additionally shows the active coordinate system on the **3D ROT** button.

If **Manual traverse** is active, then the operating mode's icon in the control bar changes.

## Notes

### NOTICE

#### **Danger of collision!**

During a program interruption, you can move the axes manually (e.g., in order to retract from a hole when the working plane is tilted). Selecting an incorrect **3D ROT** setting or moving the tool in the wrong direction involves risk of collision!

- ▶ It is better to use the **T-CS** function
- ▶ Check the direction of movement
- ▶ Move at slow feed rate

- On some machines, you may have to press the **NC Start** key while **Manual traverse** is active in order to enable the axis keys.

Refer to your machine manual.

## 19.1.4 Block scan for mid-program startup

### Application

The **BLOCK SCAN** function allows you to start an NC program at any desired NC block. The control factors workpiece machining up to this NC block into the calculations. For example, the control will switch on the spindle before the start.

### Related topics

- Creating NC programs  
**Further information:** User's Manual for Programming and Testing
- Pallet tables and job lists  
**Further information:** User's Manual for Programming and Testing

### Requirement

- The function must be enabled by your machine manufacturer.  
The **Block scan** function must be enabled and configured by your machine manufacturer.

## Description of function

If the NC program was interrupted under the following conditions, the control saves the interruption point:

- The **Internal stop** button
- Emergency stop
- Power failure


If, while restarting, the control finds a saved point of interruption, then it outputs a message. You can then execute a block scan directly to the point of interruption. The control displays the message when you switch to **Program Run** operating mode for the first time.

You have the following options for a block scan:

- Block scan in the main program, with repetitions if necessary  
**Further information:** "Performing a single-level block scan", Page 426
- Multi-level block scan in subprograms and touch probe cycles  
**Further information:** "Performing a multi-level block scan", Page 427
- Block scan in a point table  
**Further information:** "Block scan in point tables", Page 428
- Block scan in pallet programs  
**Further information:** "Block scan in pallet tables", Page 429

At the start of the block scan, the control resets the data, as with a selection of a new NC program. During the block scan you can activate or deactivate **Single Block** mode.

The Block scan window

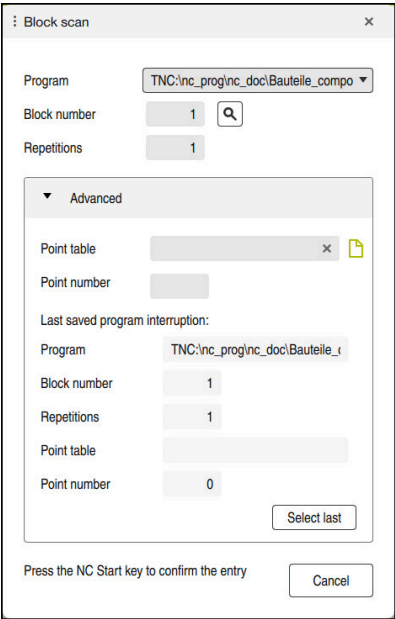

The **Block scan** window with saved interruption point and open **Point table** area

The **Block scan** window provides the following data:

Row	Meaning
Pallet number	Row number in the pallet table
Program	Path of the active NC program
Block number	Number of the NC block at which program run should start Use the <b>search</b> icon to select the NC block in the NC program.
Repetitions	Number of the repetition for mid-program startup if the desired NC block is located within a program-section repeat.
Last pallet number	Pallet number that is active at the time of interruption Select the interruption point by using the <b>Select last</b> button.
Last program	Path of the NC program that is active at the time of interruption Select the interruption point by using the <b>Select last</b> button.
Last block	Number of the NC block that was active at the time of interruption Select the interruption point by using the <b>Select last</b> button.
Point file	Path of the point table In the <b>Point table</b> area
Point number	Row in the point table In the <b>Point table</b> area

## Performing a single-level block scan

To start in an NC program by using a single-level block scan:



- ▶ Select the **Program Run** operating mode



- ▶ Select **Block scan**
- The control opens the **Block scan** window. The fields **Program**, **Block number** and **Repetitions** contain the current values.
- ▶ Enter the **Program** as needed
- ▶ Enter the **Block number**
- ▶ Enter the **Repetitions** as needed
- ▶ If required, use **Select last** to start at a saved interruption point



- ▶ Press the **NC Start** key
- The control starts the block scan and calculates up to the entered NC block.
- If you have changed the machine status, the control displays the **Restore machine status** window.



- ▶ Press the **NC Start** key
- The control restores the machine status (e.g., **TOOL CALL** or M functions).
- If you have changed the axis positions, the control displays the **Axis sequence for return to contour:** window.



- ▶ Press the **NC Start** key
- Using the displayed positioning logic, the control moves to the required positions.



You can also position the axes individually in a self-selected sequence.

**Further information:** "Positioning the axes in a self-selected sequence", Page 431



- ▶ Press the **NC Start** key
- The control resumes execution of the NC program.

## Performing a multi-level block scan

If you, for example, start in a subprogram that is called several times by the main program, then use the multi-level block scan. For this, you first go to the desired subprogram call and then continue the block scan. The same procedure is used for called NC programs.

To start in an NC program by using a multi-level block scan:



- ▶ Select the **Program Run** operating mode



- ▶ Select **Block scan**
- ▶ The control opens the **Block scan** window. The fields **Program**, **Block number** and **Repetitions** contain the current values.

- ▶ Perform a block scan to the first start-up point:

**Further information:** "Performing a single-level block scan", Page 426



- ▶ Activate the **Single Block** toggle switch as needed



- ▶ Press the **NC Start** key to execute individual NC blocks as needed



- ▶ Select **Continue block scan**



- ▶ Define the NC block for mid-program startup

- ▶ Press the **NC Start** key

- ▶ The control starts the block scan and calculates up to the entered NC block.

- ▶ If you have changed the machine status, the control displays the **Restore machine status** window.



- ▶ Press the **NC Start** key

- ▶ The control restores the machine status (e.g., **TOOL CALL** or M functions).

- ▶ If you have changed the axis positions, the control displays the **Axis sequence for return to contour:** window.



- ▶ Press the **NC Start** key

- ▶ Using the displayed positioning logic, the control moves to the required positions.



You can also position the axes individually in a self-selected sequence.

**Further information:** "Positioning the axes in a self-selected sequence", Page 431



- ▶ Select **Continue block scan** again as needed

- ▶ Repeat the steps



- ▶ Press the **NC Start** key

- ▶ The control resumes execution of the NC program.

## Block scan in point tables

To start in a point table:



- ▶ Select the **Program Run** operating mode



- ▶ Select **Block scan**
- The control opens the **Block scan** window. The fields **Program**, **Block number** and **Repetitions** contain the current values.

- ▶ Select **Point table**

- The control opens the **Point table** area.

- ▶ **Point file:** Enter the path of the point table

- ▶ **Point number:** Select the row number of the point table for mid-program startup



- ▶ Press the **NC Start** key

- The control starts the block scan and calculates up to the entered NC block.

- If you have changed the machine status, the control displays the **Restore machine status** window.



- ▶ Press the **NC Start** key

- The control restores the machine status (e.g., **TOOL CALL** or M functions).

- If you have changed the axis positions, the control displays the **Axis sequence for return to contour:** window.



- ▶ Press the **NC Start** key

- Using the displayed positioning logic, the control moves to the required positions.



You can also position the axes individually in a self-selected sequence.

**Further information:** "Positioning the axes in a self-selected sequence", Page 431



If you would like to use the block scan function to start in a point pattern, then use the same procedure. Define the desired point for mid-program startup in the **Point number** field. The first point in the point pattern has the number 0.

**Further information:** User's Manual for Machining Cycles



## Block scan in pallet tables


To start in a pallet table:



- ▶ Select the **Program Run** operating mode



- ▶ Select **Block scan**
- The control opens the **Block scan** window.
- ▶ **Pallet number:** Enter the row number of the pallet table
- ▶ Enter the **Program** as needed
- ▶ Enter the **Block number**
- ▶ Enter the **Repetitions** as needed
- ▶ If required, use **Select last** to start at a saved interruption point



- ▶ Press the **NC Start** key
- The control starts the block scan and calculates up to the entered NC block.
- If you have changed the machine status, the control displays the **Restore machine status** window.



- ▶ Press the **NC Start** key
- The control restores the machine status (e.g., **TOOL CALL** or M functions).
- If you have changed the axis positions, the control displays the **Axis sequence for return to contour:** window.



- ▶ Press the **NC Start** key
- Using the displayed positioning logic, the control moves to the required positions.



You can also position the axes individually in a self-selected sequence.

**Further information:** "Positioning the axes in a self-selected sequence", Page 431



If the program run of a pallet table has been canceled, the control will suggest the most recently selected NC block of the most recently executed NC program as a point of interruption.

## Notes

### NOTICE

#### Danger of collision!

If you select an NC block in program run using the **GOTO** function and then execute the NC program, the control ignores all previously programmed NC functions (e.g., transformations). This means that there is a risk of collision during subsequent traversing movements!

- ▶ Use **GOTO** only when programming and testing NC programs
- ▶ Only use **Block scan** when executing NC programs

### NOTICE

#### Danger of collision!

The **Block scan** function skips over the programmed touch probe cycles. As a result, the result parameters contain no values or, possibly, incorrect values. If the subsequent machining operation uses these result parameters, then there is a risk of collision!

- ▶ Use the **Block scan** function in multiple steps

- The control only displays the dialogs required by the process in the pop-up window.
- If you use the block scan to start in a pallet table, the control will always execute the chosen row in the pallet table as a workpiece-oriented process. After the pallet table line selected in the **Block scan**, the control resumes machining according to the defined machining method.  
**Further information:** User's Manual for Programming and Testing
- Even after an internal stop, the control shows the number of repetitions on the **LBL** tab of the **Status** workspace.  
**Further information:** "LBL tab", Page 134
- The **Block scan** function must not be used in conjunction with the following functions:
  - Touch probe cycles **0**, **1**, **3**, and **4** during the block scan search phase
- HEIDENHAIN recommends switching the spindle on with **M3** or **M4** after every tool call. That way you avoid problems during program run, such as when restarting after an interruption.

## 19.1.5 Returning to the contour

### Application

With the **RESTORE POSITION** function, the control moves the tool to the workpiece contour in the following situations:

- Return to the contour after the machine axes were moved during a program interruption that was not performed with the **INTERNAL STOP** function.
- Return to the contour after a block scan (e.g., after an interruption with **INTERNAL STOP**)
- Depending on the machine, if the position of an axis has changed after the control loop has been opened during a program interruption

### Related topics


- Manual traverse during program run interruptions  
**Further information:** "Manual traverse during an interruption", Page 422
- The **Block scan** function  
**Further information:** "Block scan for mid-program startup", Page 423

### Description of function

If you have selected the **Manual traverse** button, this button will change to **Approach position**.

When you select **Approach position**, the control will open the **Axis sequence for return to contour:** window.

### The Axis sequence for return to contour: window

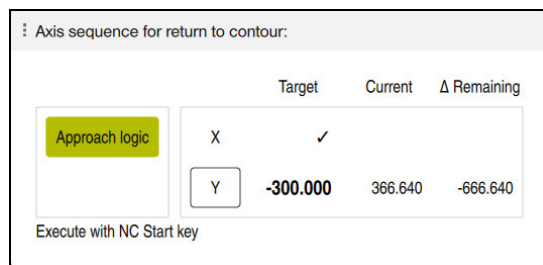

The **Axis sequence for return to contour:** window

In the **Axis sequence for return to contour:** window, the control displays all of the axes that are not yet located at the correct position for program execution.

The control suggests a positioning logic for the sequence of the traversing movements. If the tool is located in the tool axis below the position to be approached, then the control offers the tool axis as the first traverse direction. You can also traverse the axes in a self-selected sequence.

**Further information:** "Positioning the axes in a self-selected sequence", Page 431

If manual axes are included in the axes to be returned to the contour, then the control will not suggest a positioning logic. As soon as you have correctly positioned the manual axis, the control will suggest a positioning logic for the remaining axes.

**Further information:** "Positioning manual axes", Page 432

### Positioning the axes in a self-selected sequence

To position the axes in a self-selected sequence:



- ▶ Select **Approach position**
- The control displays the **Axis sequence for return to contour:** window and the axes to be positioned.
- ▶ Select the desired axis (e.g., **X**)
- ▶ Press the **NC Start** key
- The control moves the axis to the required position.
- When the axis has reached the correct position, the control shows a check mark for **Target**.
- ▶ Position the remaining axes
- When all axes have reached their positions, the control closes the window.

## Positioning manual axes

To position manual axes:

Approach position

- ▶ Select **Approach position**
- The control displays the **Axis sequence for return to contour:** window and the axes to be positioned.
- ▶ Select the manual axis (e.g., **W**)
- ▶ Position the manual axis to the value shown in the window
- When a manual axis with encoder has reached the position, the control automatically clears the value.
- ▶ Select **Axis in position**
- The control saves the position.

### Note

In the machine parameter **restoreAxis** (no. 200305), the machine manufacturer defines in which sequence of axes the control approaches the contour again.

### Definition

#### Manual axis

Manual axes are non-driven axes that need to be positioned by the machine operator.

## 19.2 Compensation during program run

### Application

During program run, you can open the selected compensation tables and the active datum table, and edit the values.

#### Related topics

- Using compensation tables  
**Further information:** User's Manual for Programming and Testing
- Editing compensation tables in the NC program  
**Further information:** User's Manual for Programming and Testing
- Contents and creation of compensation tables  
**Further information:** User's Manual for Programming and Testing
- Contents and creation of a datum table  
**Further information:** User's Manual for Programming and Testing
- Activating a datum table in the NC program  
**Further information:** User's Manual for Programming and Testing

### Description of function

The control opens the selected tables in the **Tables** operating mode.

The changed values do not take effect until the compensation or the datum has been activated again.

### 19.2.1 Opening tables from within the Program Run operating mode

To open the compensation tables from within the **Program Run** operating mode:

Compensation  
tables

- ▶ Select **Compensation tables**
- The control displays a selection menu.
- ▶ Select the desired table
  - **D**: Datum table
  - **T-CS**: Compensation table **\*.tco**
  - **WPL-CS**: Compensation table **\*.wco**
- The control opens the selected table in the **Tables** operating mode.

#### Notes

#### NOTICE

##### Danger of collision!

The control does not consider the changes made to a datum table or compensation table until the values have been saved. You need to activate the datum or compensation value in the NC program again; otherwise, the control will continue using the previous values.

- ▶ Make sure to confirm any changes made to the table immediately (e.g., by pressing the **ENT** key)
- ▶ Activate the datum or compensation value in the NC program again
- ▶ Carefully test the NC program after changing the table values

- When opening a table in the **Program Run** operating mode, the control will display the **M** status in the table tab. This status means that this table is active for the program run.
- The clipboard allows you to transfer axis positions from the position display to the datum table.

**Further information:** "Status overview on the TNC bar", Page 127

## 19.3 The Retract application

### Application

The **Retract** application allows you to disengage the tool from the workpiece after an interruption in power (e.g., retraction of a tap engaged in the workpiece).

You can also retract a tool when the working plane is tilted or retract an inclined tool.

### Requirement

- This application must be enabled by your machine manufacturer.  
The machine parameter **retractionMode** (no. 124101) allows the machine manufacturer to define whether the control will display the **Retract** toggle switch during start-up.

### Description of function

The **Retract** application provides the following workspaces:

- **Retract**  
**Further information:** "The Retract workspace", Page 435
- **Positions**  
**Further information:** "The Positions workspace", Page 121
- **Status**  
**Further information:** "The Status workspace", Page 129

The **Retract** application provides the following buttons in the function bar:

Button	Meaning
<b>Retract</b>	Retract the tool with the axis keys or the electronic handwheel
<b>End retraction</b>	Close the <b>Retract</b> application The control opens the <b>End retraction?</b> window and prompts you to answer a confirmation request.
<b>Start values</b>	Reset the entries in the <b>A</b> , <b>B</b> , <b>C</b> , and <b>Thread pitch</b> fields to their original values

You select the **Retract** application by using the **Retract** toggle switch if the following conditions apply during start-up:

- Power interrupted
- No control voltage for the relay
- The **Move to ref. point** application

If you have activated a feed rate limit before the power failure occurred, this feed rate limit will still be active. When you select the **Retract** button, the control will display a pop-up window: This window allows you to deactivate the feed rate limit.

**Further information:** "Feed rate limit F LIMIT", Page 416

## The Retract workspace

The **Retract** workspace provides the following contents:

Row	Meaning
<b>Traversing mode</b>	Traverse mode for retraction: <ul style="list-style-type: none"> <li>■ <b>Machine axes</b>: Move in the machine coordinate system <b>M-CS</b></li> <li>■ <b>Tilted system</b>: Move in the working plane coordinate system <b>WPL-CS</b> (#8 / #1-01-1)</li> <li>■ <b>Tool axis</b>: Move in the working plane coordinate system <b>T-CS</b> (#8 / #1-01-1)</li> <li>■ <b>Thread</b>: Move in the tool coordinate system <b>T-CS</b> with compensating movements of the spindle</li> </ul> <b>Further information:</b> "Reference systems", Page 222
<b>Kinematics</b>	Name of the active machine kinematics
<b>A, B, C</b>	Current position of the rotary axes Effective in the <b>Tilted system</b> traverse mode
<b>Thread pitch</b>	Thread pitch from the <b>PITCH</b> column of tool management Effective in the <b>Thread</b> traverse mode
<b>Direct. of rotation</b>	Direction of rotation of the thread-turning tool: <ul style="list-style-type: none"> <li>■ <b>Right-hand thread</b></li> <li>■ <b>Left-hand thread</b></li> </ul> Effective in the <b>Thread</b> traverse mode
<b>Coordinate system for handwheel superimposition</b>	Coordinate system in which handwheel superimpositioning takes effect Effective in the <b>Tool axis</b> traverse mode

The control selects the mode of traverse and the associated parameters automatically. If the traverse mode or the parameters have not been correctly preselected, you are able to reset them manually.

## Note

### NOTICE

#### Caution: Danger to the tool and workpiece!




A power failure during the machining operation can cause uncontrolled "coasting" or braking of the axes. In addition, if the tool was in effect prior to the power failure, then the axes cannot be referenced after the control has been restarted. For non-referenced axes, the control takes over the last saved axis values as the current position, which can deviate from the actual position. Thus, subsequent traverse movements do not correspond to the movements prior to the power failure. If the tool is still in effect during the traverse movements, then the tool and the workpiece can sustain damage through tension!

- ▶ Use a low feed rate
- ▶ Please keep in mind that the traverse range monitoring is not available for non-referenced axes

## Example

The power failed while a thread cutting cycle in the tilted working plane was being performed. You have to retract the tap:

- ▶ Switch on the power supply for control and machine
- > The control starts the operating system. This process may take several minutes.
- > The control displays the **Power interrupted** dialog in the **Start/Login** workspace



- ▶ Activate the **Retract** toggle switch
- ▶ Press **OK**
- > The control compiles the PLC program.
- ▶ Switch the machine control voltage on
- > The control checks the functioning of the emergency stop circuit
- > The control opens the **Retract** application and displays the **Assume position values?** window.
- ▶ Compare the displayed position values with the actual position values
- ▶ Select **OK**
- > The control closes the **Assume position values?** window
- ▶ Select the **Thread** traverse mode as needed
- ▶ Enter the thread pitch as needed
- ▶ Enter the direction of rotation as needed
- ▶ Select **Retract**
- ▶ Retract the tool with the axis keys or the handwheel
- ▶ Select **End retraction**
- > The control opens the **End retraction?** window and prompts you to answer a confirmation request.
- ▶ If the tool was correctly retracted, select **Yes**
- > The control closes the **End retraction?** window and the **Retract** application.



# 20

**Tables**

## 20.1 The Tables operating mode

### Application

In the **Tables** operating mode you can open various tables and edit them as necessary.

### Description of function

If you select **Add**, the control displays the **Quick selection new table** and **Open File** workspaces.

In the **Quick selection new table** workspace you can create a new table and open some tables directly.

**Further information:** User's Manual for Programming and Testing

In the **Open File** workspace, you can open an existing table or create a new table.

**Further information:** User's Manual for Programming and Testing

Multiple tables can be open at the same time. The control displays each table in a separate workspace.

If a table is selected for program run or simulation, the control shows the status **M** or **S** on the tab of the application. The status of the active application is highlighted in color and for the remaining applications in gray.

You can open the **Table** and **Form** workspaces in every application.

**Further information:** "The Table workspace", Page 442

**Further information:** "The Form workspace for tables", Page 448

You can select various functions by using the context menu (e.g., **Copy**).

**Further information:** User's Manual for Programming and Testing


## Buttons

In the **Tables** operating mode, the function bar contains the following buttons that can be used for any table:

Button	Meaning
<b>Undo</b>	The control undoes the last change.
<b>Redo</b>	The control restores the change that was undone.
<b>GOTO record</b>	The control opens the <b>GOTO jump instruction</b> window. The control jumps to the row number you have defined.
<b>Edit</b>	If the toggle switch is active, you can edit the table.
<b>Reset row</b>	The control resets all data contained in the row.
<b>Mark row</b>	The control marks the currently selected row.

Depending on the selected table, the control provides the following additional buttons in the function bar:

Button	Meaning
<b>Insert rows</b>	The control opens the <b>Insert rows</b> window where you can insert one or more new rows. If you enable the <b>Append</b> checkbox, the control will insert the rows after the last table row.
<b>Delete rows</b>	The control deletes the currently selected row.
<b>Insert tool</b>	The control opens the <b>Insert tool</b> window where you can define the following: <ul style="list-style-type: none"> <li>■ <b>Type:</b> <b>Further information:</b> "Tool types", Page 188</li> <li>■ <b>Line number (Tool number?)</b></li> <li>■ <b>Number of rows</b></li> <li>■ <b>Index</b> <b>Further information:</b> "Indexed tool", Page 182</li> <li>■ <b>Append</b> Append rows at the end of the table <b>Further information:</b> "Tool management ", Page 205</li> </ul>
<b>Delete tool</b>	The control deletes the tool selected in the tool management. You cannot delete any tools that have been entered into the pocket table. The button is dimmed. <b>Further information:</b> "Tool management ", Page 205
<b>Import</b>	The control imports tool data. <b>Further information:</b> "Importing tool data", Page 207
<b>Inspect</b>	The control inspects a tool.
<b>Unload</b>	The control unloads a tool.
<b>Load</b>	The controls loads a tool.
<b>Activate the preset</b>	The control activates the currently selected row of the preset table as preset. <b>Further information:</b> "Preset table *.pr", Page 490
<b>Lock record</b>	The control locks the currently selected row of the preset table and thus protects the contents from changes. <b>Further information:</b> "Write-protection for table rows", Page 495



Refer to your machine manual.  
If necessary, the machine manufacturer adapts the buttons.


20.1.1 Editing the contents of tables

To edit the contents of a table:


- ▶ Select the desired table cell



- ▶ Enable **Editing**
  - > The control enables the values for editing.



To edit the contents of a table, you can also double-tap or double-click the table cell. The control displays the **Editing disabled. Enable?** window. You can enable the values for editing or abort the process.



If the **Editing** toggle switch is enabled, you can edit the contents both in the **Table** workspace and in the **Form** workspace.


Notes

- The control enables you to transfer tables from previous controls to the TNC7 and to adapt them automatically, if needed.
- When you open a table where columns are missing, for example in case of a tool table from a previous control, the control will display the **Incomplete table layout** window.

When you create a new table in the file manager, the table does not contain information on the required columns yet. When you open the table for the first time, the **Incomplete table layout** window will open in the **Tables** operating mode.

In the **Incomplete table layout** window, a selection menu allows you to select a table template. The control shows which table columns are added or removed, if applicable.

- If you, for example, have processed tables in a text editor, the control offers the **Update TAB / PGM** function. Use this function to complete an incorrect table format.



Edit tables only by using the table editor in the **Tables** operating mode to avoid errors (e.g., format errors).

- Refer to your machine manual.  
Using the optional machine parameter **CfgTableCellCheck** (no. 141300), the machine manufacturer can define rules for table columns. This machine parameter allows to define columns as required fields or to reset them automatically to a default value. If a rule is violated, the control displays a note icon.

20.2 The Create new table window


Application

You can create tables using the **Create new table** window in the **Quick selection new table** workspace.

### Related topics

- The **Quick selection new table** workspace  
**Further information:** User's Manual for Programming and Testing
- Available file types for tables  
**Further information:** User's Manual for Programming and Testing

### Description of function

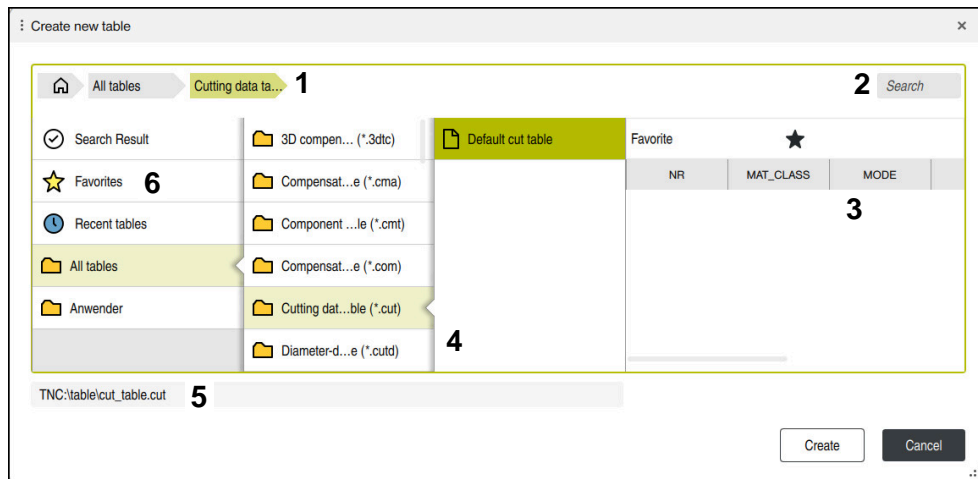

The **Create new table** window

The **Create new table** window shows the following areas:

- 1 Navigation path  
 In the navigation path the control shows the position of the current folder in the folder structure. Use the individual elements of the navigation path to move to a higher folder level.
- 2 Searching  
 You can search for any strings. The control displays the results under **Search Result**.
- 3 The control shows the following information and functions:
  - Add or remove a favorite
  - Preview
- 4 Content columns  
 The control shows a folder and the available prototypes for each table type.
- 5 Path of the table to be created
- 6 Navigation column  
 The navigation column contains the following areas:
  - **Search Result**
  - **Favorites**  
 The control displays all folders and prototypes that you have marked as favorites.
  - **Last functions**  
 The control shows the eleven most recently used prototypes.
  - **All functions**  
 The control shows all available table types in the folder structure.

Notes

- The names of tables and table columns must start with a letter and must not contain an arithmetic operator (e.g., +). Due to SQL commands, these characters can cause problems when data are input or read.
- With the optional machine parameter **CfgTableCreate** (no. 140900), the machine manufacturer can provide additional areas in the navigation column (e.g., tables for the user).
- With the optional machine parameter **dialogText** (no. 105506), the machine manufacturer can define other names for the table types (e.g., tool table instead of **t**).

20.3 The Table workspace

Application

In the **Table** workspace, the control shows the contents of a table. The control displays a column with filters and a search function on the left side of some tables.

Description of function

The screenshot shows the 'Table' workspace interface. On the left is a navigation pane with a search bar and a list of tool categories: 'all tools', 'tools in magazines', 'all tool types', 'milling tools', 'drilling tools', 'tapping tools', 'threadmilling tools', 'turning tools', 'touchprobes', 'dressing tools', 'grinding tools', and 'undefined tools'. Below these are 'All', 'R=10', and 'R=8' with edit and delete icons. At the bottom of the pane is a 'Search results' section. The main area displays a table with columns 'T', 'MAGAZIN', 'P', and 'NAME'. The table contains 15 rows of tool data, with row 6 (index 6) highlighted. Below the table, there are input fields for 'Tool name?' and 'Text width 32'.


T	MAGAZIN	P	NAME
0			NULLWERKZEUG
1	Main	1.1	MILL_D2_ROUGH
2	Main	1.2	MILL_D4_ROUGH
3	Main	1.3	MILL_D6_ROUGH
4	Main	1.4	MILL_D8_ROUGH
5	Main	1.5	MILL_D10_ROUGH
6	Spindle	0.0	MILL_D12_ROUGH
7	Main	1.7	MILL_D14_ROUGH
8	Main	1.8	MILL_D16_ROUGH
9	Main	1.9	MILL_D18_ROUGH
10	Main	1.10	MILL_D20_ROUGH
11	Main	1.11	MILL_D22_ROUGH
12	Main	1.12	MILL_D24_ROUGH
13	Main	1.13	MILL_D26_ROUGH
14	Main	1.14	MILL_D28_ROUGH

The **Table** workspace

In the Tables operating mode, the **Table** workspace is open in every application by default.

The control displays the name and path of the file above the header of the table. When you select the title of a column, the control will sort the table contents by this column.







If the table allows it, you can also edit the table contents in this workspace.



Refer to your machine manual.  
If necessary, the machine manufacturer adapts the contents displayed (e.g., the titles of table columns).

## Icons and shortcuts

The **Table** workspace contains the following icons or shortcuts:

Icon or shortcut	Meaning
	Open or close the <b>Filter</b> column <b>Further information:</b> "The Filter column in the Table workspace", Page 443
 CTRL + F	Open or close the <b>Search</b> column <b>Further information:</b> "The Search column in the Table workspace", Page 446
	Enable or disable <b>Change column width</b>
	<b>Edit table characteristics</b> <b>Further information:</b> User's Manual for Programming and Testing
100%	Current size of the content Open or close the <b>Scaling</b> selection menu
	<b>Reset scaling</b> Set the font size of the table to 100%
	Open or close settings in the <b>Tables</b> window <b>Further information:</b> "Settings in the Table workspace", Page 446
CTRL + A	Mark all rows
CTRL+SPACE	Mark the active row or end the marking function
SHIFT + UP	Additionally mark the row above
SHIFT + DOWN	Additionally mark the row below

## The Filter column in the Table workspace

You can filter the following table types:

- **Tool management**
- **Pocket table**
- **Presets**
- **Tool table**

When you tap or click a filter once, the control activates the selected filter in addition to the currently active filters. When you double-tap or double-click a filter, the control activates only the selected filter and deactivates all other filters.

Filtering in the Tool management

The control provides the following default filters in the **Tool management**:

- **All tools**
- **Magazine tools**

According to the selection of **All tools** or **Magazine tools**, the control additionally offers the following default filters in the filter column:

- **All types**
- **Milling cutters**
- **Drills**
- **Taps**
- **Thread cutters**
- **Lathe tools** (#50 / #4-03-1)
- **Touch probes**
- **Dressing tools** (#156 / #4-04-1)
- **Grinding tools** (#156 / #4-04-1)
- **Undefined tools**

Filtering in the Pocket table

The control provides the following default filters in the **Pocket table**:

- **all pockets**
- **spindle**
- **main magazine**
- **empty pockets**
- **occupied pockets**

Filtering in the Presets table



The control provides the following default filters in the **Presets** table:

- **Base transformations**
- **Offsets**
- **SHOW ALL**


User-defined filters

You can additionally create user-defined filters.

The control provides the following icons for each user-defined filter:

Icon	Meaning
	<p>If you click <b>Edit</b>, the control opens the <b>Search</b> column.</p> <p>You can edit and save the selected filter or save a filter under a new name.</p> <p><b>Further information:</b> "The Search column in the Table workspace", Page 446</p>
	<p>You can delete the selected filter.</p>

If you want to deactivate the user-defined filters, you have to double-tap or double-click the **All** filter.



Refer to your machine manual.

This User's Manual describes the basic functions of the control. The machine manufacturer can adapt, enhance or restrict the control functions to the machine.



**Logical connective operations between requirements and filters**

The control connects the filters as follows:

- AND operation for several requirements within one filter

You create, for example, a user-defined filter that contains the requirements **R = 8** and **L > 150**. The control filters the table rows when you activate this filter. The control displays only the table rows that meet both requirements at the same time.

- OR operation between filters of the same type

When you activate the default filters **Milling cutters** and **Lathe tools**, for example, the control filters the table rows. The control displays only the table rows that meet at least one of the requirements. The table row must contain either a milling cutter or a turning tool.

- AND operation between filters of different types

You create, for example, a user-defined filter that contains the requirement **R > 8**. When you activate this filter and the default filter **Milling cutters**, the control filters the table rows. The control displays only the table rows that meet both requirements at the same time.

The Search column in the Table workspace

You can search the following table types:

- Tool management
- Pocket table
- Presets
- Tool table

You can define multiple search conditions in the search function.

Each condition includes the following information:

- Table column, such as **T** or **NAME**  
Use the **Search in** selection menu to select the column.
- Operator if applicable (e.g., **Contains** or **Equal to (=)**)  
Use the **Operator** selection menu to select the operator.
- Search term in the **Search for** input field



If you search the columns using predefined selection values, the control offers a selection menu instead of the input field.

The control provides the following buttons:

Button	Meaning
+	Use <b>Add</b> to add several conditions. The conditions will have a combined effect when you perform the search.  You can save several conditions in a user-defined filter.
Search	The control searches the table.
Reset	The control resets the entered conditions and removes any additional conditions.
Save	You can save the entered conditions as a filter. You can assign any name to the filter.



Refer to your machine manual.  
This User's Manual describes the basic functions of the control. The machine manufacturer can adapt, enhance or restrict the control functions to the machine.

Settings in the Table workspace

In the **Tables** window, you can influence the contents shown in the **Table** workspace.

The **Tables** window consists of the following areas:


- General
- Column sequence

The General area

The setting selected in the **General** area is modally effective.

If the **Synchronize table and form** toggle switch is active, the cursor will move synchronously. If, for example, you select a different table column in the **Table** workspace, the control moves the cursor synchronously in the **Form** workspace.

The Column sequence area

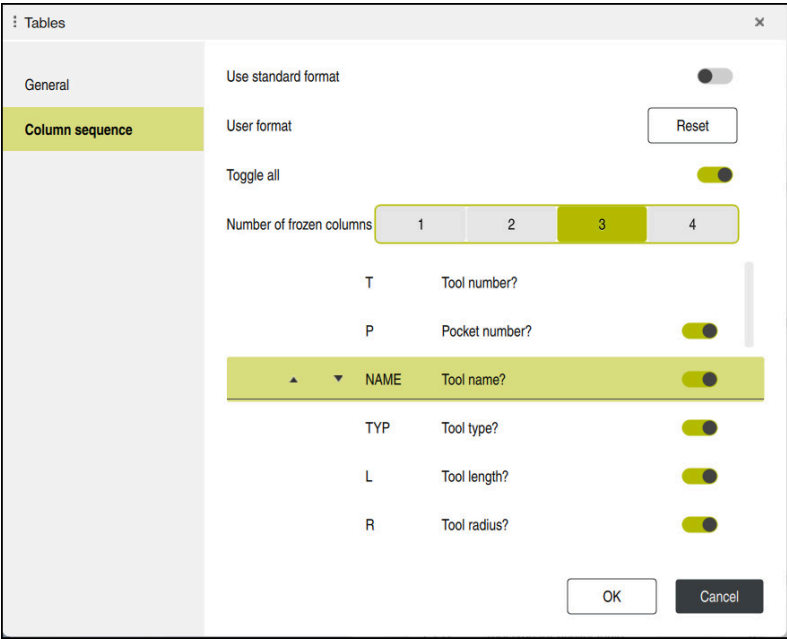

The **Tables** window

The **Column sequence** area contains the following settings:

Setting	Meaning
Use standard format	If you activate the toggle switch, the control shows all table columns, indicating them in the standard sequence. If you deactivate the toggle switch, the control restores the previous setting.
User format	If you select the <b>Reset</b> button, the control resets the adaptations to the settings of the standard format.
Toggle all	If you activate the toggle switch, the control shows all table columns. If you deactivate the toggle switch, the control hides all table columns. The first column in each table cannot be hidden.
Number of frozen columns	You define how many table columns the control freezes at the left table edge. You can freeze up to four table columns. These table columns will remain visible even when you navigate further to the right within the table.
Columns of the currently opened table	The control displays all table columns below each other. Use the toggle switches to separately hide or show each table column. The control displays a line below the selected number of frozen columns. When you select a table column, the control displays up and down arrows. Use these arrows to change the sequence of the columns. The respective first column in the table cannot be shifted.

The settings in the **Column sequence** area only apply to the currently opened table.

## 20.4 The Form workspace for tables

### Application

In the **Form** workspace, the control shows all contents of a selected table row. Depending on the table, you can edit the values in the form.

### Description of function




The **Form** workspace in the **Favorites** view

The control displays the following information for each parameter:

- Icon of the parameter, if applicable
- Parameter name
- Unit of measure as needed
- Parameter description
- Current value







The control displays the contents of specific tables in groups within the **Form** workspace.



Refer to your machine manual.  
If necessary, the machine manufacturer adapts the contents displayed (e.g., the titles of table columns).


## Buttons and icons

The **Form** workspace contains the following buttons, icons or shortcuts:

Buttons, icons or shortcuts	Meaning
 SHIFT + UP  SHIFT + DOWN	<b>Navigate</b> Navigate between table rows
	<b>Configure the layout</b> You can make the following layout adaptations: <ul style="list-style-type: none"> <li>■ Add or remove areas to the <b>Favorites</b> view</li> <li>■ Rearrange areas using the gripper</li> <li>■ Add or remove columns</li> </ul>
<b>Favorites</b>	In this view, the control shows the areas that are marked as favorites. You can create a user-defined view using the favorites.
<b>All</b>	In this view the control shows all areas.
	<b>Settings</b> <ul style="list-style-type: none"> <li>■ Open the settings in the <b>Tables</b> window  <b>Further information:</b> "Settings in the Form workspace", Page 450</li> <li>■ Change the size of the graphic in the <b>Tool Icon</b> area</li> </ul>
	<b>Add</b> The control only shows this icon when you are adapting the layout. With this icon you can add the following elements: <ul style="list-style-type: none"> <li>■ Column                You can divide the workspace into several columns.  <b>Further information:</b> "Adding a column in the workspace", Page 450</li> <li>■ Area                In the <b>Favorites</b> view you can add another area.</li> </ul>
	<b>Remove</b> The control only shows this icon when you are adapting the layout. You can delete an empty column with this icon.



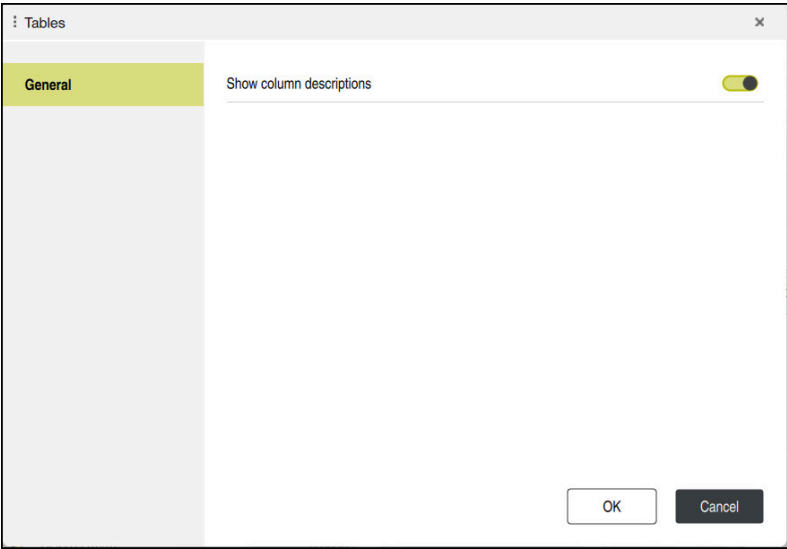

Settings in the Form workspace

In the **Tables** window, you can select whether the control will show the parameter descriptions. The selected setting is modally effective.



20.4.1 Adding a column in the workspace

To add a column:

- 
  - ▶ Select **Configure the layout**
  - The control enables all functions for adapting the layout of the workspace.
- 
  - ▶ In the workspace, swipe to the left
  - ▶ Select **Add**
  - The control adds a new column.
- 
  - ▶ Move the areas if required
- 
  - ▶ Select **Configure the layout**
  - The control saves your changes.

Notes

- The control displays an icon of the selected tool type in the **Tool Icon** area.
- For turning tools the icons also take into account the tool orientation and show where the relevant tool data will be in effect (#50 / #4-03-1).  
**Further information:** "Tool types", Page 188
- The control displays help graphics on how the parameters for grinding tools will be in effect (#156 / #4-04-1).  
**Further information:** User's Manual for Programming and Testing

## 20.5 Tool tables

### 20.5.1 Overview

This chapter describes the tool tables of the control.

- Tool table **tool.t**

**Further information:** "Tool table tool.t", Page 451

- Turning tool table **toolturn.trn** (#50 / #4-03-1)

**Further information:** "Turning tool table toolturn.trn (#50 / #4-03-1)", Page 461

- Grinding tool table **toolgrind.grd** (#156 / #4-04-1)

**Further information:** "Grinding tool table toolgrind.grd (#156 / #4-04-1)", Page 466

- Dressing tool table **tooldress.drs** (#156 / #4-04-1)

**Further information:** "Dressing tool table tooldress.drs (#156 / #4-04-1)", Page 475

- Touch probe table **tchprobe.tp**

**Further information:** "Touch probe table tchprobe.tp", Page 478

You can edit the tools, except for the touch probes, in tool management only.

**Further information:** "Tool management ", Page 205

### 20.5.2 Tool table tool.t

#### Application

The tool table **tool.t** contains the data specific to drilling and milling tools. The tool table also contains all tool data that are independent of the technology, such as the tool life **CUR\_TIME**.

#### Related topics

- Editing tool data in tool management

**Further information:** "Tool management ", Page 205

- Tool data required for milling or drilling tools

**Further information:** "Tool data for milling and drilling tools", Page 192

#### Description of function




The file name of the tool table is **tool.t** and this table must be stored in the folder **TNC:\table**.



The **tool.t** tool table provides the following parameters:








Parameter	Meaning
<b>T</b>	<p><b>Tool number?</b></p> <p>Row number in the tool table</p> <p>The tool number allows you to identify each tool unambiguously (e.g., for calling a tool).</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p> <p>You can define an index after the period.</p> <p><b>Further information:</b> "Indexed tool", Page 182</p> <p>This parameter applies to all tools, regardless of technology.</p> <p>Input: <b>0.0...32767.9</b></p>




Parameter	Meaning
NAME	<p><b>Tool name?</b></p> <p>The tool name identifies a tool, for example when calling it.</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p> <p>You can define an index after the period.</p> <p><b>Further information:</b> "Indexed tool", Page 182</p> <p>This parameter applies to all tools, regardless of technology.</p> <p>Input: <b>Text width 32</b></p>
L	<p><b>Tool length?</b></p> <p>Length of tool, with respect to the tool carrier reference point</p> <p><b>Further information:</b> "Tool carrier reference point", Page 177</p> <p>Input: <b>-99999.9999...+99999.9999</b></p>
R	<p><b>Tool radius?</b></p> <p>Tool radius, with respect to the tool carrier reference point</p> <p><b>Further information:</b> "Tool carrier reference point", Page 177</p> <p>Input: <b>-99999.9999...+99999.9999</b></p>
R2	<p><b>Tool radius 2?</b></p> <p>Corner radius for the exact definition of the tool for three-dimensional radius compensation, graphic representation and collision monitoring of, for example, ball-nose cutters or toroid cutters.</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p> <p>Input: <b>-99999.9999...+99999.9999</b></p>
DL	<p><b>Tool length oversize?</b></p> <p>Delta value of tool length as a compensation value in connection with touch probe cycles. The control enters compensation values automatically after measuring the workpiece.</p> <p><b>Further information:</b> User's Manual for Measuring Cycles for Workpieces and Tools</p> <p>Is added to the parameter <b>L</b></p> <p>Input: <b>-999.9999...+999.9999</b></p>
DR	<p><b>Tool radius oversize?</b></p> <p>Delta value of tool radius as a compensation value in connection with touch probe cycles. The control enters compensation values automatically after measuring the workpiece.</p> <p><b>Further information:</b> User's Manual for Measuring Cycles for Workpieces and Tools</p> <p>Is added to parameter <b>R</b></p> <p>Input: <b>-999.9999...+999.9999</b></p>
DR2	<p><b>Tool radius oversize 2?</b></p> <p>Delta value of tool radius 2 as a compensation value in connection with touch probe cycles. The control enters compensation values automatically after measuring the workpiece.</p> <p><b>Further information:</b> User's Manual for Measuring Cycles for Workpieces and Tools</p> <p>Is added to parameter <b>R2</b></p> <p>Input: <b>-999.9999...+999.9999</b></p>




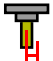






Parameter	Meaning
<b>TL</b> 	<b>Tool locked?</b> Tool is enabled or locked for machining: <ul style="list-style-type: none"> <li>■ No value entered: Enabled</li> <li>■ <b>L</b>: Locked</li> </ul> The control locks the tool after exceeding maximum tool age <b>TIME1</b> , maximum tool age 2 <b>TIME2</b> or after exceeding one of the parameters for automatic tool measurement. This parameter applies to all tools, regardless of technology. Selection by means of a selection window Input: No value, <b>L</b>
<b>RT</b> 	<b>Replacement tool?</b> Number of the replacement tool If the control calls a tool in a TOOL CALL and the tool is not available or locked, the control inserts the replacement tool. If <b>M101</b> is active and the current tool age <b>CUR_TIME</b> exceeds the <b>TIME2</b> value, the control locks the tool and inserts the replacement tool at a suitable location. <b>Further information:</b> User's Manual for Programming and Testing If the replacement tool is not available or locked, the control inserts the replacement tool of the replacement tool. You can define an index after the period. <b>Further information:</b> "Indexed tool", Page 182 If you define the value 0, the control will not use a replacement tool. This parameter applies to all tools, regardless of technology. Selection by means of a selection window Input: <b>0.0...32767.9</b>
<b>TIME1</b> 	<b>Maximum tool age?</b> Maximum tool age in minutes If the current tool age <b>CUR_TIME</b> exceeds the <b>TIME1</b> value, the control locks the tool and displays an error message when the tool is called the next time. The behavior depends on the machine. Refer to your machine manual. This parameter applies to all tools, regardless of technology. Input: <b>0...99999</b>




Parameter	Meaning
<b>TIME2</b> 	<p><b>Max. tool age for TOOL CALL?</b></p> <p>Maximum tool age 2 in minutes</p> <p>The control inserts a replacement tool in the cases below:</p> <ul style="list-style-type: none"> <li>■ When the current tool age <b>CUR_TIME</b> exceeds the <b>TIME2</b> value, the control locks the tool. The control no longer inserts the tool when the tool is called. If a replacement tool <b>RT</b> is defined and available in the magazine, the control inserts the replacement tool. If no replacement tool is available, the control will display an error message.</li> <li>■ If <b>M101</b> is active and the current tool age <b>CUR_TIME</b> exceeds the <b>TIME2</b> value, the control locks the tool and inserts the replacement tool <b>RT</b> at a suitable location.</li> </ul> <p><b>Further information:</b> User's Manual for Programming and Testing</p> <p>The behavior depends on the machine. Refer to your machine manual.</p> <p>This parameter applies to all tools, regardless of technology.</p> <p>Input: <b>0...99999</b></p>
<b>CUR_TIME</b> 	<p><b>Current tool age?</b></p> <p>The current tool age equals the time during which the tool is cutting a workpiece. The tool is cutting a workpiece when the spindle is switched on and the control moves the tool at the machining feed rate. The control counts this time automatically and enters the current tool age in minutes.</p> <p>You can edit the tool age of an active tool during program run after you have inserted an indexable insert, for example. The control will directly apply the value to tool life monitoring.</p> <p>The control updates the value cyclically during NC program run, as well as during a tool call and at the end of the program.</p> <p>This parameter applies to all tools, regardless of technology.</p> <p>Input: <b>0...99999.99</b></p>
<b>TYP</b>	<p><b>Tool type?</b></p> <p>Depending on the selected tool type, the control displays the suitable tool parameters in the <b>Form</b> workspace of the tool management.</p> <p><b>Further information:</b> "Tool types", Page 188</p> <p><b>Further information:</b> "Tool management ", Page 205</p> <p>This parameter applies to all tools, regardless of technology.</p> <p>Selection by means of a selection window</p> <p>Input: <b>MILL, MILL_R, MILL_F, MILL_FACE, BALL, TORUS, MILL_CHAMFER, DRILL, TAP, CENT, TURN, TCHP, REAM, CSINK, TSINK BOR, BCKBOR, GF, GSF, EP, WSP, BGF, ZBGF, GRIND, and DRESS</b></p>
<b>DOC</b>	<p><b>Tool description</b></p> <p>This parameter applies to all tools, regardless of technology.</p> <p>Input: <b>Text width 32</b></p>
<b>PLC</b>	<p><b>PLC status?</b></p> <p>Tool information for the PLC</p> <p>Refer to your machine manual.</p> <p>This parameter applies to all tools, regardless of technology.</p> <p>Entry: <b>%00000000...%11111111</b></p>




Parameter	Meaning
<b>LCUTS</b> 	<b>Tooth length in the tool axis?</b> Length of cutting edge for exact definition of the tool for graphical simulation, automatic calculation within cycles and collision monitoring. Input: <b>-99999.9999...+99999.9999</b>
<b>LU</b> 	<b>Usable length of the tool?</b> Usable length of the tool for exact definition of the tool for graphical simulation, automatic calculation within cycles and collision monitoring (e.g., of necks of end mills). Input: <b>0.0000...999.9999</b>
<b>RN</b> 	<b>Neck radius of the tool?</b> Neck radius for the exact definition of the tool for graphic simulation and collision monitoring of, for example, necks of end mills or side milling cutters. The tool can contain a neck radius <b>RN</b> only if the useful length <b>LU</b> is longer than the <b>LCUTS</b> length of the cutting edge. Input: <b>0.0000...999.9999</b>
<b>ANGLE</b> 	<b>Maximum plunge angle?</b> Maximum plunge angle of the tool for reciprocating plunge-cutting in the cycles. Input: <b>-360.00...+360.00</b>
<b>CUT</b> 	<b>Number of teeth?</b> Number of teeth of the tool for automatic tool measurement or cutting data calculation. <b>Further information:</b> User's Manual for Measuring Cycles for Workpieces and Tools <b>Further information:</b> User's Manual for Programming and Testing This parameter applies to the following tools, regardless of technology: <ul style="list-style-type: none"> <li>■ Milling and drilling tools</li> <li>■ Turning tools (#50 / #4-03-1)</li> </ul> Input: <b>0...99</b>
<b>TMAT</b> 	<b>Tool material?</b> Tool material from the tool material table <b>TMAT.tab</b> for cutting data calculation. <b>Further information:</b> User's Manual for Programming and Testing Selection by means of a selection window Input: <b>Text width 32</b>
<b>CUTDATA</b> 	<b>Cutting data table?</b> Select the cutting data table with the <b>*.cut</b> or <b>*.cutd</b> file extension for cutting data calculation. <b>Further information:</b> User's Manual for Programming and Testing Selection by means of a selection window Entry: <b>Text width 20</b>

Parameter	Meaning
<div>LTOL</div> <div></div>	<p><b>Wear tolerance: length?</b></p> <p>Permitted tool length deviation in wear detection for automatic tool measurement.</p> <p><b>Further information:</b> User's Manual for Measuring Cycles for Workpieces and Tools</p> <p>If the entered value is exceeded, the control locks the tool in column <b>TL</b>.</p> <p>This parameter applies to the following tools, regardless of technology:</p> <ul style="list-style-type: none"><li>■ Milling and drilling tools</li><li>■ Turning tools (#50 / #4-03-1)</li></ul> <p>Input: <b>0.0000...5.0000</b></p>
<div>RTOL</div> <div></div>	<p><b>Wear tolerance: radius?</b></p> <p>Permitted tool radius deviation in wear detection for automatic tool measurement.</p> <p><b>Further information:</b> User's Manual for Measuring Cycles for Workpieces and Tools</p> <p>If the entered value is exceeded, the control locks the tool in column <b>TL</b>.</p> <p>This parameter applies to the following tools, regardless of technology:</p> <ul style="list-style-type: none"><li>■ Milling and drilling tools</li><li>■ Turning tools (#50 / #4-03-1)</li></ul> <p>Input: <b>0.0000...5.0000</b></p>
<div>R2TOL</div>	<p><b>Wear tolerance: Radius 2?</b></p> <p>Permitted tool radius 2 deviation in wear detection for automatic tool measurement.</p> <p><b>Further information:</b> User's Manual for Measuring Cycles for Workpieces and Tools</p> <p>If the entered value is exceeded, the control locks the tool in column <b>TL</b>.</p> <p>This parameter applies to the following tools, regardless of technology:</p> <ul style="list-style-type: none"><li>■ Milling and drilling tools</li><li>■ Turning tools (#50 / #4-03-1)</li></ul> <p>Input: <b>0...9.9999</b></p>
<div>DIRECT</div> <div></div>	<p><b>Cutting direction?</b></p> <p>Cutting direction of the tool for automatic tool measurement with a rotating tool:</p> <ul style="list-style-type: none"><li>■ -: <b>M3</b></li><li>■ +: <b>M4</b></li></ul> <p><b>Further information:</b> User's Manual for Measuring Cycles for Workpieces and Tools</p> <p>This parameter applies to the following tools, regardless of technology:</p> <ul style="list-style-type: none"><li>■ Milling and drilling tools</li><li>■ Turning tools (#50 / #4-03-1)</li></ul> <p>Input: -, +</p>

Parameter	Meaning
<b>R-OFFS</b> 	<b>Tool offset: radius?</b> Position of tool upon length measurement, offset between the center of the tool touch probe and the tool center for automatic tool measurement. <b>Further information:</b> User's Manual for Measuring Cycles for Workpieces and Tools This parameter applies to the following tools, regardless of technology: <ul style="list-style-type: none"> <li>■ Milling and drilling tools</li> <li>■ Turning tools (#50 / #4-03-1)</li> </ul> Input: <b>-99999.9999...+99999.9999</b>
<b>L-OFFS</b> 	<b>Tool offset: length?</b> Position of tool upon radius measurement, distance between the top edge of the tool touch probe and the tool tip for automatic tool measurement. <b>Further information:</b> User's Manual for Measuring Cycles for Workpieces and Tools Is added to the machine parameter <b>offsetToolAxis</b> (no. 122707) This parameter applies to the following tools, regardless of technology: <ul style="list-style-type: none"> <li>■ Milling and drilling tools</li> <li>■ Turning tools (#50 / #4-03-1)</li> </ul> Input: <b>-99999.9999...+99999.9999</b>
<b>LBREAK</b> 	<b>Breakage tolerance: length?</b> Permitted tool length deviation in breakage detection for automatic tool measurement. <b>Further information:</b> User's Manual for Measuring Cycles for Workpieces and Tools If the entered value is exceeded, the control locks the tool in column <b>TL</b> . This parameter applies to the following tools, regardless of technology: <ul style="list-style-type: none"> <li>■ Milling and drilling tools</li> <li>■ Turning tools (#50 / #4-03-1)</li> </ul> Input: <b>0.0000...9.0000</b>
<b>RBREAK</b> 	<b>Breakage tolerance: radius?</b> Permitted tool radius deviation in breakage detection for automatic tool measurement. <b>Further information:</b> User's Manual for Measuring Cycles for Workpieces and Tools If the entered value is exceeded, the control locks the tool in column <b>TL</b> . This parameter applies to the following tools, regardless of technology: <ul style="list-style-type: none"> <li>■ Milling and drilling tools</li> <li>■ Turning tools (#50 / #4-03-1)</li> </ul> Input: <b>0.0000...9.0000</b>
<b>NMAX</b> 	<b>Maximum speed [rpm]</b> Limitation of spindle speed for the programmed value including control by the potentiometer. Input: <b>0...999999</b>

Parameter	Meaning
<b>LIFTOFF</b> 	<b>Lift-off allowed?</b> Allow automatic tool lift-off with active <b>M148</b> or <b>FUNCTION LIFTOFF</b> : <ul style="list-style-type: none"> <li>■ <b>Y</b>: Activate <b>LIFTOFF</b></li> <li>■ <b>N</b>: Deactivate <b>LIFTOFF</b></li> </ul> <b>Further information:</b> User's Manual for Programming and Testing Selection by means of a selection window Input: <b>Y, N</b>
<b>TP_NO</b>	<b>Number of the touch probe</b> Number of touch probe in the touch probe table <b>tchprobe.tp</b> <b>Further information:</b> "Touch probe table tchprobe.tp", Page 478 Input: <b>0...99</b>
<b>T-ANGLE</b> 	<b>Point angle</b> Point angle of the tool for exact definition of the tool for graphical simulation, automatic calculation within cycles and collision monitoring of drills, for example. <b>Further information:</b> User's Manual for Machining Cycles Input: <b>-180...+180</b>
<b>LAST_USE</b> 	<b>Date/time of last tool usage</b> The time at which the tool was last used The control updates the value cyclically during NC program run, as well as during a tool call and at the end of the program. This parameter applies to all tools, regardless of technology. Input: <b>00:00:00 01.01.1971...23:59:59 31.12.2030</b>
<b>PTYP</b>	<b>Tool type for pocket table?</b> Tool type for evaluation in the pocket table <b>Further information:</b> "Pocket table tool_p.tch", Page 482 Refer to your machine manual. This parameter applies to all tools, regardless of technology. Input: <b>0...99</b>
<b>AFC</b>	<b>Feedback-control strategy</b> Control setting for adaptive feed control (AFC (#45 / #2-31-1)) from the <b>AFC.tab</b> table <b>Further information:</b> "Adaptive feed control (AFC) (#45 / #2-31-1)", Page 280 Selection by means of a selection window Entry: <b>Text width 10</b>
<b>ACC</b>	<b>ACC active?</b> Activate or deactivate active chatter control (ACC (#145 / #2-30-1)): <ul style="list-style-type: none"> <li>■ <b>Y</b>: Activate</li> <li>■ <b>N</b>: Deactivate</li> </ul> <b>Further information:</b> "Active Chatter Control (ACC) (#145 / #2-30-1)", Page 290 Selection by means of a selection window Input: <b>Y, N</b>

Parameter	Meaning
<b>PITCH</b> 	<b>Tool thread pitch?</b> Thread pitch of the tool for automatic calculations within cycles. A positive sign means a right-hand thread. <b>Further information:</b> User's Manual for Machining Cycles Input: <b>-9.9999...+9.9999</b>
<b>AFC-LOAD</b>	<b>Reference power for AFC [%]</b> Tool-dependent reference power for AFC (#45 / #2-31-1). The input in percent refers to the rated spindle power. The control immediately uses the value given for feedback control, meaning a teach-in cut is dropped. Calculate the value beforehand with a teach-in step. <b>Further information:</b> "AFC teach-in cut", Page 286 Input: <b>1.0...100.0</b>
<b>AFC-OVLD1</b>	<b>AFC overload warning level [%]</b> Cut-related tool wear monitoring for AFC (#45 / #2-31-1). The input in percent refers to the reference power. The value 0 deactivates the monitoring function. An empty field has no effect. <b>Further information:</b> "Monitoring tool wear and tool load", Page 288 Input: <b>0.0...100.0</b>
<b>AFC-OVL2</b>	<b>AFC overload switch-off level [%]</b> Cut-related tool load monitoring for AFC (#45 / #2-31-1). The input in percent refers to the reference power. The value 0 deactivates the monitoring function. An empty field has no effect. If this column contains a value, the control will ignore the column <b>AFC-OVLD1</b> . <b>Further information:</b> "Monitoring tool wear and tool load", Page 288 Input: <b>0.0...100.0</b>
<b>KINEMATIC</b> 	<b>Tool-carrier kinematics</b> Assigning a tool carrier for exact definition of the tool for graphical simulation and collision monitoring. <b>Further information:</b> "Tool carrier management", Page 209 Selection by means of a selection window This parameter applies to all tools, regardless of technology. Entry: <b>Text width 20</b>
<b>TSHAPE</b> 	<b>3D tool model</b> Assigning a 3D model for exact definition of the tool for graphical simulation and collision monitoring. <b>Further information:</b> "Tool model (#140 / #5-03-2)", Page 213 Selection by means of a selection window Input: <b>Text width 50</b>
<b>DR2TABLE</b>	<b>Compensation val. table for DR2</b> Assigning a compensation value table <b>*.3drc</b> for 3D tool radius compensation depending on the contact angle (#92 / #2-02-1). This allows the control to compensate for inaccuracies in the shape of a ball-nose cutter or the deflection behavior of a touch probe, for example. <b>Further information:</b> User's Manual for Programming and Testing Selection by means of a selection window Entry: <b>Text width 16</b>

Parameter	Meaning
<div><b>OVRTIME</b></div> <div></div>	<div><b>Tool life expired</b></div> <p>Time in minutes during which the tool may be used beyond the tool life defined in column <b>TIME2</b>.</p> <p>The machine manufacturer defines the function of this parameter. The machine manufacturer defines how the control will use the parameter when searching for tool names. Refer to your machine manual.</p> <p>This parameter applies to all tools, regardless of technology.</p> <p>Input: <b>0...99</b></p>
<div><b>RCUTS</b></div> <div></div>	<div><b>Width of the indexable insert</b></div> <p>Front-face width of cutting edge for exact definition of the tool for graphical simulation, automatic calculation within cycles and collision monitoring (e.g., for indexable inserts).</p> <p>Input: <b>0...99999.9999</b></p>
<div><b>DB_ID</b></div>	<div><b>ID for central tool management</b></div> <p>The database-ID allows you to identify a tool (e.g., within a tool management system by using client applications).</p> <p><b>Further information:</b> "Database ID", Page 182</p> <p>For indexed tools, HEIDENHAIN recommends that you assign the database ID to the main tool.</p> <p><b>Further information:</b> "Indexed tool", Page 182</p> <p>This parameter applies to all tools, regardless of technology.</p> <p>Input: <b>Text width 40</b></p>
<div><b>R_TIP</b></div> <div></div>	<div><b>Radius at the tip</b></div> <p>Radius at the tool tip for exact definition of the tool for graphical simulation, automatic calculation within cycles and collision monitoring of tools such as countersinks.</p> <p>Input: <b>0.0000...999.9999</b></p>



## Notes

- Use the machine parameter **unitOfMeasure** (no. 101101) to define inches as the unit of measure. This does not automatically change the unit of measure in the tool table!

**Further information:** "Creating a tool table in inches", Page 482

- If you want to archive tool tables or use them for simulation, save them with different file names and the corresponding file extension.
- The control shows delta values from the tool management graphically in the simulation. For delta values from the NC program or from compensation tables, the control changes only the position of the tool in the simulation.
- Assign unique tool names!

If you define identical tool names for multiple tools, the control will look for the tool in the following sequence:

- Tool that is in the spindle
- Tool that is in the magazine



Refer to your machine manual.

If there are multiple magazines, the machine manufacturer can specify the search sequence of the tools in the magazines.

- Tool that is defined in the tool table but is currently not in the magazine

If the control, for example, finds multiple available tools in the tool magazine, it inserts the tool with the least remaining tool life.

- In the machine parameter **offsetToolAxis** (no. 122707), the machine manufacturer defines the distance between the upper edge of the tool touch probe and the tool tip.

The parameter **L-OFFS** is added to this defined distance.

- In the machine parameter **zeroCutToolMeasure** (no. 122724), the machine manufacturer defines whether the control takes the parameter **R-OFFS** into account for automatic tool measurement.

### 20.5.3 Turning tool table toolturn.trn (#50 / #4-03-1)

#### Application

The turning tool table **toolturn.trn** contains the data specific to turning tools.

#### Related topics

- Editing tool data in tool management  
**Further information:** "Tool management ", Page 205
- Tool data required for turning tools  
**Further information:** "Tool data for turning tools (#50 / #4-03-1)", Page 194
- Milling-turning operations on the control  
**Further information:** User's Manual for Programming and Testing
- General tool data, regardless of the technology  
**Further information:** "Tool table tool.t", Page 451





#### Requirements





- Software option Mill Turning (#50 / #4-03-1)
- Turning tool is defined in **TYP** column of tool management  
**Further information:** "Tool types", Page 188







### Description of function







The file name of the turning tool table is **toolturn.trn** and this table must be stored in the folder **TNC:\table**.

The **toolturn.trn** turning tool table provides the following parameters:

Parameter	Meaning
T	<p>Row number in the turning tool table</p> <p>The tool number allows you to identify each tool unambiguously (e.g., for calling a tool).</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p> <p>You can define an index after the period.</p> <p><b>Further information:</b> "Indexed tool", Page 182</p> <p>The row number must match the tool number in the <b>tool.t</b> tool table.</p> <p>Input: <b>0.0...32767.9</b></p>
NAME	<p><b>Tool name?</b></p> <p>The tool name identifies a tool, for example when calling it.</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p> <p>You can define an index after the period.</p> <p><b>Further information:</b> "Indexed tool", Page 182</p> <p>Input: <b>Text width 32</b></p>
ZL 	<p><b>Tool length 1?</b></p> <p>Length of the tool in the Z direction, with respect to the tool carrier preset</p> <p><b>Further information:</b> "Tool carrier reference point", Page 177</p> <p>Input: <b>-99999.9999...+99999.9999</b></p>
XL 	<p><b>Tool length 2?</b></p> <p>Length of the tool in the X direction, with respect to the tool carrier preset</p> <p><b>Further information:</b> "Tool carrier reference point", Page 177</p> <p>Input: <b>-99999.9999...+99999.9999</b></p>
YL 	<p><b>Tool length 3?</b></p> <p>Length of the tool in the Y direction, with respect to the tool carrier preset</p> <p><b>Further information:</b> "Tool carrier reference point", Page 177</p> <p>Input: <b>-99999.9999...+99999.9999</b></p>
DZL 	<p><b>Oversize in tool length 1?</b></p> <p>Delta value of tool length 1 as a compensation value in connection with touch probe cycles. The control enters compensation values automatically after measuring the workpiece.</p> <p><b>Further information:</b> User's Manual for Measuring Cycles for Workpieces and Tools</p> <p>Is added to the parameter <b>ZL</b></p> <p>Input: <b>-99999.9999...+99999.9999</b></p>

Parameter	Meaning
<b>DXL</b> 	<b>Oversize in tool length 2?</b> Delta value of tool length 2 as a compensation value in connection with touch probe cycles. The control enters compensation values automatically after measuring the workpiece. <b>Further information:</b> User's Manual for Measuring Cycles for Workpieces and Tools Is added to the parameter <b>XL</b> Input: <b>-99999.9999...+99999.9999</b>
<b>DYL</b> 	<b>Tool length oversize 3?</b> Delta value of tool length 3 as a compensation value in connection with touch probe cycles. The control enters compensation values automatically after measuring the workpiece. <b>Further information:</b> User's Manual for Measuring Cycles for Workpieces and Tools Is added to the parameter <b>YL</b> Input: <b>-99999.9999...+99999.9999</b>
<b>RS</b> 	<b>Cutting edge radius?</b> The control takes into account the cutter radius for tool tip radius compensation. <b>Further information:</b> User's Manual for Programming and Testing In turning cycles, the control takes into account the cutter geometry to prevent damage to the defined contour. If the contour cannot be machined completely, the control will display a warning. <b>Further information:</b> User's Manual for Machining Cycles For the cutter geometry, the control also considers the parameters <b>TO</b> , <b>T-ANGLE</b> , and <b>P-ANGLE</b> . Input: <b>0...99999.9999</b>
<b>DRS</b> 	<b>Cutter radius oversize?</b> Delta value of cutter radius as a compensation value in connection with touch probe cycles. The control enters compensation values automatically after measuring the workpiece. <b>Further information:</b> User's Manual for Measuring Cycles for Workpieces and Tools Is added to the parameter <b>RS</b> Input: <b>-999.9999...+999.9999</b>

Parameter	Meaning
<div>TO</div> <div></div>	<p><b>Tool orientation?</b></p> <p>From the tool orientation, the control determines the position of the tool tip and, depending on the selected tool type, additional information such as the tool angle direction. This information is necessary, for example, for calculating the cutter radius compensation, milling cutter radius compensation, plunge angle, etc.</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p> <div> Refer to your machine manual. The control displays the tool orientations that are possible for each tool type. The machine manufacturer can change this assignment.</div> <p>In turning cycles, the control takes into account the cutter geometry to prevent damage to the defined contour. If the contour cannot be machined completely, the control will display a warning.</p> <p><b>Further information:</b> User's Manual for Machining Cycles</p> <p>For the cutter geometry, the control also considers the parameters <b>RS</b>, <b>T-ANGLE</b>, and <b>P-ANGLE</b>.</p> <p>Input: <b>1...19</b></p>
<div>SPB-INSERT</div> <div></div>	<p><b>Angular offset?</b></p> <p>Angular offset for recessing and threading tools, spatial angle B</p> <p>Input: <b>-90.0...+90.0</b></p>
<div>ORI</div> <div></div>	<p><b>Angle of spindle orientation?</b></p> <p>Angle of tool spindle for aligning the turning tool</p> <p>Input: <b>-360.000...+360.000</b></p>
<div>T-ANGLE</div> <div></div>	<p><b>Tool angle</b></p> <p>In turning cycles, the control takes into account the cutter geometry to prevent damage to the defined contour. If the contour cannot be machined completely, the control will display a warning.</p> <p><b>Further information:</b> User's Manual for Machining Cycles</p> <p>For the cutter geometry, the control also considers the parameters <b>RS</b>, <b>TO</b>, and <b>P-ANGLE</b>.</p> <p>Input: <b>0...179.999</b></p>
<div>P-ANGLE</div> <div></div>	<p><b>Point angle</b></p> <p>In turning cycles, the control takes into account the cutter geometry to prevent damage to the defined contour. If the contour cannot be machined completely, the control will display a warning.</p> <p><b>Further information:</b> User's Manual for Machining Cycles</p> <p>For the cutter geometry, the control also considers the parameters <b>RS</b>, <b>TO</b>, and <b>T-ANGLE</b>.</p> <p>Input: <b>0...179.999</b></p>

Parameter	Meaning
<b>CUTLENGTH</b>  	<b>Cutting length of recessing tool</b> Length of the cutting edge of a turning or recessing tool The control monitors the length of the cutting edge in the turning cycles. If the cutting depth programmed in the turning cycle is greater than the length of the cutting edge defined in the tool table, then the control will display a warning and will automatically reduce the cutting depth. <b>Further information:</b> User's Manual for Machining Cycles Input: <b>0...99999.9999</b>
<b>CUTWIDTH</b>  	<b>Width of recessing tool</b> The control uses the width of a recessing tool for calculations within cycles. <b>Further information:</b> User's Manual for Machining Cycles Input: <b>0...99999.9999</b>
<b>DCW</b> 	<b>Oversize f. recessing tool width</b> Delta value of recessing tool width as a compensation value in connection with touch probe cycles. The control enters compensation values automatically after measuring the workpiece. <b>Further information:</b> User's Manual for Measuring Cycles for Workpieces and Tools Is added to parameter <b>CUTWIDTH</b> Input: <b>-99999.9999...+99999.9999</b>
<b>TYPE</b> 	<b>Type of turning tool</b> Depending on the selected turning tool type, the control displays the suitable tool parameters in the <b>Form</b> workspace of the tool management. <b>Further information:</b> "Turning tool types (#50 / #4-03-1)", Page 190 <b>Further information:</b> "Tool management ", Page 205 Selection by means of a selection window Input: <b>ROUGH, FINISH, THREAD, RECESS, BUTTON, and RECTURN</b>
<b>WPL-DX-DIAM</b>	<b>Compensation value for the workpiece diameter</b> Compensation value for the workpiece diameter with respect to the working plane coordinate system ( <b>WPL CS</b> ). <b>Further information:</b> "Working plane coordinate system WPL-CS", Page 231 Input: <b>-99999.9999...+99999.9999</b>
<b>WPL-DZL</b>	<b>Compensation value for the workpiece length</b> Compensation value for the workpiece length with respect to the working plane coordinate system ( <b>WPL CS</b> ). <b>Further information:</b> "Working plane coordinate system WPL-CS", Page 231 Input: <b>-99999.9999...+99999.9999</b>

## Notes

- The control shows delta values from the tool management graphically in the simulation. For delta values from the NC program or from compensation tables, the control changes only the position of the tool in the simulation.
- Geometry values from the tool table **tool.t**, such as length **L** or radius **R**, are not effective with turning tools.
- Assign unique tool names!

If you define identical tool names for multiple tools, the control will look for the tool in the following sequence:

- Tool that is in the spindle
- Tool that is in the magazine



Refer to your machine manual.

If there are multiple magazines, the machine manufacturer can specify the search sequence of the tools in the magazines.

- Tool that is defined in the tool table but is currently not in the magazine

If the control, for example, finds multiple available tools in the tool magazine, it inserts the tool with the least remaining tool life.

- If you want to archive tool tables or use them for simulation, save them with different file names and the corresponding file extension.
- Use the machine parameter **unitOfMeasure** (no. 101101) to define inches as the unit of measure. This does not automatically change the unit of measure in the tool table!

**Further information:** "Creating a tool table in inches", Page 482

- The columns **WPL-DX-DIAM** and **WPL-DZL** are deactivated in the default configuration.

In the machine parameter **columnKeys** (no. 105501), the machine manufacturer activates the columns **WPL-DX-DIAM** and **WPL-DZL**. The names of the columns may be different, however.

### 20.5.4 Grinding tool table toolgrind.grd (#156 / #4-04-1)

#### Application

The grinding tool table **toolgrind.grd** contains the data specific to grinding tools.

#### Related topics

- Editing tool data in tool management  
**Further information:** "Tool management ", Page 205
- Tool data required for grinding tools  
**Further information:** "Tool data for grinding tools (#156 / #4-04-1)", Page 196
- Grinding operations on milling machines  
**Further information:** User's Manual for Programming and Testing
- Tool table for dressing tools  
**Further information:** "Dressing tool table tooldress.drs (#156 / #4-04-1)", Page 475
- General tool data, regardless of the technology  
**Further information:** "Tool table tool.t", Page 451

## Requirements

- Software option Jig Grinding (#156 / #4-04-1)
- Grinding tool is defined in the **TYPE** column of tool management

**Further information:** "Tool types", Page 188

## Description of function

### NOTICE

#### Danger of collision!

In the tool management form, the control displays only the parameters relevant to the selected tool type. The tool tables contain locked parameters that are for internal consideration only. If you edit these additional parameters manually, tool data might no longer correctly match each other. There is a risk of collisions during subsequent movements!

- ▶ Edit the tools in the tool management form

### NOTICE

#### Danger of collision!

The control differentiates between freely editable and locked parameters. The control writes to the locked parameters and uses these parameters for internal consideration. You must not manipulate these parameters. If you manipulate the locked parameters, tool data might no longer correctly match each other. There is a risk of collisions during subsequent movements!







- ▶ Edit only freely editable tool management parameters
- ▶ Comply with the information about locked parameters in the tool data overview table

**Further information:** "Tool data for grinding tools (#156 / #4-04-1)", Page 196







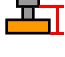
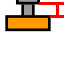
The file name of the grinding tool table is **toolgrind.grd** and this table must be stored in the folder **TNC:\table**.







The **toolgrind.grd** grinding tool table provides the following parameters:

Parameter	Meaning
<b>T</b>	<p><b>Tool number</b></p> <p>Row number in the grinding tool table</p> <p>The tool number allows you to identify each tool unambiguously (e.g., for calling a tool).</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p> <p>You can define an index after the period.</p> <p><b>Further information:</b> "Indexed tool", Page 182</p> <p>The row number must match the tool number in the <b>tool.t</b> tool table</p> <p>Input: <b>0...32767</b></p>

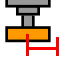
Parameter	Meaning
NAME	<p><b>Name of grinding wheel</b></p> <p>The tool name identifies a tool, for example when calling it.</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p> <p>You can define an index after the period.</p> <p><b>Further information:</b> "Indexed tool", Page 182</p> <p>Input: <b>Text width 32</b></p>
TYPE 	<p><b>Type of grinding wheel</b></p> <p>Depending on the selected grinding tool type, the control displays the suitable tool parameters in the <b>Form</b> workspace of the tool management.</p> <p><b>Further information:</b> "Grinding tool types (#156 / #4-04-1)", Page 190</p> <p><b>Further information:</b> "Tool management ", Page 205</p> <p>Selection by means of a selection window</p> <p>Input: <b>GRIND_PIN, GRIND_CONE, GRIND_CUP, GRIND_CYLINDER, GRIND_ANGULAR and GRIND_FACE</b></p>
R-OVR 	<p><b>Radius of grinding wheel</b></p> <p>Outermost radius of grinding tool</p> <p>After initial dressing, you will no longer be allowed to edit this parameter.</p> <p><b>Further information:</b> User's Manual for Machining Cycles</p> <p>Input: <b>0.000000...999.999999</b></p>
L-OVR 	<p><b>Overhang of grinding wheel</b></p> <p>Length up to the outermost radius of the grinding tool, with respect to the tool carrier reference point</p> <p>After initial dressing, you will no longer be allowed to edit this parameter.</p> <p><b>Further information:</b> User's Manual for Machining Cycles</p> <p>Input: <b>0.000000...999.999999</b></p>
LO 	<p><b>Overall length</b></p> <p>Absolute length of the grinding tool, with respect to the tool carrier reference point</p> <p>After initial dressing, you will no longer be allowed to edit this parameter.</p> <p><b>Further information:</b> User's Manual for Machining Cycles</p> <p>Input: <b>0.000000...999.999999</b></p>
LI 	<p><b>Length to the inner edge</b></p> <p>Length up to the inner edge, with respect to the tool carrier reference point</p> <p>After initial dressing, you will no longer be allowed to edit this parameter.</p> <p><b>Further information:</b> User's Manual for Machining Cycles</p> <p>Input: <b>0.000000...999.999999</b></p>
B 	<p><b>Width</b></p> <p>Width of the grinding tool</p> <p>After initial dressing, you will no longer be allowed to edit this parameter.</p> <p><b>Further information:</b> User's Manual for Machining Cycles</p> <p>Input: <b>0.000000...999.999999</b></p>

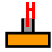

Parameter	Meaning
<b>G</b> 	<b>Depth</b> Depth of grinding wheel After initial dressing, you will no longer be allowed to edit this parameter. <b>Further information:</b> User's Manual for Machining Cycles Input: <b>0.000000...999.999999</b>
<b>ALPHA</b>	<b>Angle for the slant</b> After initial dressing, you will no longer be allowed to edit this parameter. <b>Further information:</b> User's Manual for Machining Cycles Input: <b>0.00000...90.00000</b>
<b>GAMMA</b>	<b>Angle for the corner</b> After initial dressing, you will no longer be allowed to edit this parameter. <b>Further information:</b> User's Manual for Machining Cycles Input: <b>45.00000...180.00000</b>
<b>RV</b> 	<b>Radius at the edge for L-OVR</b> After initial dressing, you will no longer be allowed to edit this parameter. <b>Further information:</b> User's Manual for Machining Cycles Input: <b>0.00000...999.99999</b>
<b>RV1</b> 	<b>Radius at the edge for LO</b> After initial dressing, you will no longer be allowed to edit this parameter. <b>Further information:</b> User's Manual for Machining Cycles Input: <b>0.00000...999.99999</b>
<b>RV2</b> 	<b>Radius at the edge for LI</b> After initial dressing, you will no longer be allowed to edit this parameter. <b>Further information:</b> User's Manual for Machining Cycles Input: <b>0.00000...999.99999</b>
<b>dR-OVR</b> 	<b>Compensation of the radius</b> Delta value of the radius for tool compensation Is added to the parameter <b>R-OVR</b> Input: <b>-999.999999...+999.999999</b>
<b>dL-OVR</b> 	<b>Compensation of the overhang</b> Delta value of the overhang for tool compensation Is added to the parameter <b>L-OVR</b> Input: <b>-999.999999...+999.999999</b>
<b>dLO</b> 	<b>Compensation of the total length</b> Delta value of the total length for tool compensation Is added to the parameter <b>LO</b> Input: <b>-999.999999...+999.999999</b>
<b>dLI</b> 	<b>Compensation of the length to the inner edge</b> Delta value of the length up to the inner edge for tool compensation Is added to the parameter <b>LI</b> Input: <b>-999.999999...+999.999999</b>

Parameter	Meaning
<b>R_SHAFT</b> 	<b>Radius of the tool shank</b> Input: 0.00000...999.99999
<b>R_MIN</b> 	<b>Min. permissible radius</b> If, after dressing, the actual radius is below the minimum permissible radius defined here, the control will display an error message. Input: 0.00000...999.99999
<b>B_MIN</b> 	<b>Min. permissible width</b> If, after dressing, the actual width is below the minimum permissible width defined here, the control will display an error message. Input: 0.00000...999.99999
<b>V_MAX</b> 	<b>Maximum permissible cutting speed</b> Cutting speed limit This value cannot be exceeded by programming a higher value or by using the potentiometer. Input: 0.000...999.999
<b>V</b>	<b>Current cutting speed</b> Currently no function Input: 0.000...999.999
<b>W</b>	<b>Tilt angle</b> Currently no function Input: -90.00000...90.0000
<b>W_TYPE</b>	<b>Tilted toward inner or outer edge</b> Currently no function Input: -1, 0, +1
<b>KIND</b>	<b>Type of machining (internal/external grinding)</b> Currently no function Input: 0, 1
<b>HW</b>	<b>Wheel has a relief cut</b> Currently no function Input: 0, 1
<b>HWA</b> 	<b>Angle for relief cut on the outer edge</b> Input: 0.00000...45.00000
<b>HWI</b> 	<b>Angle for relief cut on the inner edge</b> Input: 0.00000...45.00000
<b>INIT_D_OK</b>	<b>Initial dressing performed</b> Initial dressing is the first dressing operation performed on the grinding wheel. Currently no function Input: 0, 1

Parameter	Meaning
INIT_D_PNR	<b>Dresser location for initial dressing</b> Dressing location used for initial dressing Input: <b>0...9999</b>
INIT_D_DNR	<b>Dresser number for initial dressing</b> Number of the dresser used for initial dressing Input: <b>0...32767</b>
MESS_OK	<b>Measure the grinding wheel</b> The control uses this parameter only if <b>Dressing tool with wear, COR_TYPE_DRESSTOOL</b> has been selected in parameter <b>COR_TYPE</b> . Input: <b>0, 1</b>
STATE	<b>Setup status</b> Currently no function Input: <b>%0000000000000000...%1111111111111111</b>
A_NR_D	<b>Dresser number (diameter dressing)</b> The control uses this parameter only if <b>Dressing tool with wear, COR_TYPE_DRESSTOOL</b> has been selected in parameter <b>COR_TYPE</b> . Tool number of the dresser being used Corresponds to the <b>T_DRESS</b> parameter in the tool management Input: <b>0...32767</b>
A_NR_A	<b>Dresser number (outer edge dressing)</b> Currently no function Input: <b>0...32767</b>
A_NR_I	<b>Dresser number (inner edge dressing)</b> Currently no function Input: <b>0...32767</b>
DRESS_N_D 	<b>Dressing counter for diameter (specification)</b> Currently no function Input: <b>0...999</b>
DRESS_N_A 	<b>Dressing counter for outer edge (specification)</b> Currently no function Input: <b>0...999</b>
DRESS_N_I 	<b>Dressing counter for inner edge (specification)</b> Currently no function Input: <b>0...999</b>
DRESS_N_D_ACT 	<b>Current dressing counter of the diameter</b> Currently no function Input: <b>0...999</b>
DRESS_N_A_ACT 	<b>Current dressing counter of the outer edge</b> Currently no function Input: <b>0...999</b>

Parameter	Meaning
DRESS_N_I_ACT	<b>Current dressing counter of the inner edge</b> Currently no function Input: <b>0...999</b>
AD	 <b>Retraction amount at the diameter</b> The control uses this parameter when using a cycle for dressing. <b>Further information:</b> User's Manual for Machining Cycles Input: <b>0.00000...999.99999</b>
AA	 <b>Retraction amount at the outer edge</b> The control uses this parameter when using a cycle for dressing. <b>Further information:</b> User's Manual for Machining Cycles Input: <b>0.00000...999.99999</b>
AI	 <b>Retraction amount at the inner edge</b> The control uses this parameter when using a cycle for dressing. <b>Further information:</b> User's Manual for Machining Cycles Input: <b>0.00000...999.99999</b>
FORM	<b>Wheel shape</b> Currently no function Input: <b>0.00...99.99</b>
A_PL	<b>Chamfer length at outside</b> Currently no function Input: <b>0.00000...999.99999</b>
A_PW	<b>Chamfer angle at outside</b> Currently no function Input: <b>0.00000...89.99999</b>
A_R1	<b>Corner radius at outside</b> Currently no function Input: <b>0.00000...999.99999</b>
A_L	<b>Length of outside</b> Currently no function Input: <b>0.00000...999.99999</b>
A_HL	<b>Length of relief cut, wheel depth at outside</b> Currently no function Input: <b>0.00000...999.99999</b>
A_HW	<b>Angle of relief cut at outside</b> Currently no function Input: <b>0.00000...45.00000</b>
A_S	<b>Side depth at outside</b> Currently no function Input: <b>0.00000...999.99999</b>
A_R2	<b>Angle of departure at outside</b> Currently no function Input: <b>0.00000...999.99999</b>

Parameter	Meaning
A_G	<b>Reserve at outside</b> Currently no function Input: <b>0.00000...999.99999</b>
I_PL	<b>Chamfer length at inside</b> Currently no function Input: <b>0.00000...999.99999</b>
I_PW	<b>Chamfer angle at inside</b> Currently no function Input: <b>0.00000...89.99999</b>
I_R1	<b>Corner radius at inside</b> Currently no function Input: <b>0.00000...999.99999</b>
I_L	<b>Length of inside</b> Currently no function Input: <b>0.00000...999.99999</b>
I_HL	<b>Length of relief cut, wheel depth at inside</b> Currently no function Input: <b>0.00000...999.99999</b>
I_HW	<b>Angle of relief cut at inside</b> Currently no function Input: <b>0.00000...45.00000</b>
I_S	<b>Side depth at inside</b> Currently no function Input: <b>0.00000...999.99999</b>
I_R2	<b>Angle of departure at inside</b> Currently no function Input: <b>0.00000...999.99999</b>
I_G	<b>Reserve at inside</b> Currently no function Input: <b>0.00000...999.99999</b>
COR_ANG	<b>Inclination angle of dressing tool</b> Currently no function Input: <b>0.00000...360.00000</b>
COR_TYPE	<b>Selection of compensation method</b> You can choose between the following compensation methods: <ul style="list-style-type: none"> <li>■ <b>Grinding wheel with compensation, COR_TYPE_GRINDTOOL</b> Compensation method with material removal at grinding tool <b>Further information:</b> User's Manual for Programming and Testing</li> <li>■ <b>Dressing tool with wear, COR_TYPE_DRESSTOOL</b> Compensation method with material removal at dressing tool Selection by means of a selection window Input: <b>0, 1</b></li> </ul>

### Notes

- Geometry values from the tool table **tool.t**, such as length or radius, are not effective with grinding tools.
- When dressing a grinding tool, the tool must not be assigned a tool carrier kinematic model.
- Measure the grinding tool after dressing so that the control enters the correct delta values.
- Assign unique tool names!

If you define identical tool names for multiple tools, the control will look for the tool in the following sequence:

- Tool that is in the spindle
- Tool that is in the magazine



Refer to your machine manual.  
If there are multiple magazines, the machine manufacturer can specify the search sequence of the tools in the magazines.

- Tool that is defined in the tool table but is currently not in the magazine  
If the control, for example, finds multiple available tools in the tool magazine, it inserts the tool with the least remaining tool life.
- The control shows delta values from the tool management graphically in the simulation. For delta values from the NC program or from compensation tables, the control changes only the position of the tool in the simulation.
- If you want to archive tool tables or use them for simulation, save them with different file names and the corresponding file extension.
- Use the machine parameter **unitOfMeasure** (no. 101101) to define inches as the unit of measure. This does not automatically change the unit of measure in the tool table!

**Further information:** "Creating a tool table in inches", Page 482

### 20.5.5 Dressing tool table **tooldress.drs** (#156 / #4-04-1)

#### Application

The dressing tool table **tooldress.drs** contains the data specific to dressing tools.

#### Related topics

- Editing tool data in tool management  
**Further information:** "Tool management ", Page 205
- Tool data required for dressing tools  
**Further information:** "Tool data for dressing tools (#156 / #4-04-1)", Page 201
- Initial dressing  
**Further information:** User's Manual for Machining Cycles
- Grinding operations on milling machines  
**Further information:** User's Manual for Programming and Testing
- Tool table for grinding tools  
**Further information:** "Grinding tool table toolgrind.grd (#156 / #4-04-1)", Page 466
- General tool data, regardless of the technology  
**Further information:** "Tool table tool.t", Page 451

#### Requirements

- Software option Jig Grinding (#156 / #4-04-1)
- Dressing tool is defined in the **TYP** column of tool management  
**Further information:** "Tool types", Page 188










#### Description of function

The file name of the dressing tool table is **tooldress.drs** and this table must be stored in the folder **TNC:\table**.

The **tooldress.drs** dressing tool table provides the following parameters:

Parameter	Meaning
<b>T</b>	<p>Row number in the dressing tool table</p> <p>The tool number allows you to identify each tool unambiguously (e.g., for calling a tool).</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p> <p>You can define an index after the period.</p> <p><b>Further information:</b> "Indexed tool", Page 182</p> <p>The row number must match the tool number in the <b>tool.t</b> tool table.</p> <p>Input: <b>0.0...32767.9</b></p>
<b>NAME</b>	<p><b>Name of dressing tool</b></p> <p>The tool name identifies a tool, for example when calling it.</p> <p><b>Further information:</b> User's Manual for Programming and Testing</p> <p>You can define an index after the period.</p> <p><b>Further information:</b> "Indexed tool", Page 182</p> <p>Input: <b>Text width 32</b></p>
<b>ZL</b>	<p><b>Tool length 1</b></p> <p>Length of the tool in the Z direction, with respect to the tool carrier preset</p> <p><b>Further information:</b> "Tool carrier reference point", Page 177</p> <p>Input: <b>-99999.9999...+99999.9999</b></p>



Parameter	Meaning
<b>XL</b> 	<b>Tool length 2</b> Length of the tool in the X direction, with respect to the tool carrier preset <b>Further information:</b> "Tool carrier reference point", Page 177 Input: <b>-99999.9999...+99999.9999</b>
<b>YL</b> 	<b>Tool length 3</b> Length of the tool in the Y direction, with respect to the tool carrier preset <b>Further information:</b> "Tool carrier reference point", Page 177 Input: <b>-99999.9999...+99999.9999</b>
<b>DZL</b> 	<b>Tool length oversize 1</b> Delta value of tool length 1 for tool compensation Is added to the parameter <b>ZL</b> Input: <b>-99999.9999...+99999.9999</b>
<b>DXL</b> 	<b>Tool length oversize 2</b> Delta value of tool length 2 for tool compensation Is added to the parameter <b>XL</b> Input: <b>-99999.9999...+99999.9999</b>
<b>DYL</b> 	<b>Tool length oversize 3</b> Delta value of tool length 3 for tool compensation Is added to the parameter <b>YL</b> Input: <b>-99999.9999...+99999.9999</b>
<b>RS</b> 	<b>Tool tip radius</b> Input: <b>0.0000...99999.9999</b>
<b>DRS</b> 	<b>Cutter radius oversize</b> Delta value of the cutter radius for tool compensation Is added to the parameter <b>RS</b> Input: <b>-999.9999...+999.9999</b>
<b>TO</b> 	<b>Tool orientation</b> The control uses the tool orientation to determine the position of the tool's cutting edge. Input: <b>1...9</b>
<b>CUTWIDTH</b>	<b>Width of tool (plate, roll)</b> Tool width of the tool types <b>dressing plate</b> and <b>dressing roll</b> Input: <b>0.0000...99999.9999</b>
<b>TYPE</b> 	<b>Type of dressing tool</b> Depending on the selected dressing tool type, the control displays the suitable tool parameters in the <b>Form</b> workspace of the tool management. <b>Further information:</b> "Dressing tool types (#156 / #4-04-1)", Page 190 <b>Further information:</b> "Tool management ", Page 205 Selection by means of a selection window Input: <b>DRESS_FIX_RADIUS, HORNED, DRESS_ROT_RADIUS, DRESS_FIX_FLAT</b> and <b>DRESS_ROT_FLAT</b>



Parameter	Meaning
N-DRESS	<b>Speed of the tool (dressing spindle)</b> Shaft speed of a dressing spindle or dressing roll Input: <b>0.0000...99999.9999</b>

### Notes

- The dressing tool will not be mounted to the spindle. You need to mount the dressing tool manually to a pocket defined by the machine manufacturer. Additionally, you must define the tool in the pocket table.
- When dressing a grinding tool, the tool must not be assigned a tool carrier kinematic model.

**Further information:** "Pocket table tool\_p.tch", Page 482

- Geometry values from the tool table **tool.t**, such as length or radius, are not effective with dressing tools.
- Assign unique tool names!  
If you define identical tool names for multiple tools, the control will look for the tool in the following sequence:
  - Tool that is in the spindle
  - Tool that is in the magazine



Refer to your machine manual.

If there are multiple magazines, the machine manufacturer can specify the search sequence of the tools in the magazines.

- Tool that is defined in the tool table but is currently not in the magazine  
If the control, for example, finds multiple available tools in the tool magazine, it inserts the tool with the least remaining tool life.
- If you want to archive tool tables, save them with different file names and the corresponding file extension.
- Use the machine parameter **unitOfMeasure** (no. 101101) to define inches as the unit of measure. This does not automatically change the unit of measure in the tool table!

**Further information:** "Creating a tool table in inches", Page 482

### 20.5.6 Touch probe table `tchprobe.tp`

#### Application

The touch probe table `tchprobe.tp` defines the touch probe and data for the probing process, such as the probing feed rate. If you use several touch probes, you can save separate data for each touch probe.

#### Related topics

- Editing tool data in tool management  
**Further information:** "Tool management ", Page 205
- Touch probe functions  
**Further information:** "Touch Probe Functions in the Manual Operating Mode", Page 375
- Calibrating touch probe cycles for the workpiece touch probe  
**Further information:** User's Manual for Measuring Cycles for Workpieces and Tools
- Calibrating touch probe cycles for the tool touch probe  
**Further information:** User's Manual for Measuring Cycles for Workpieces and Tools
- Automatic touch probe cycles for the workpiece  
**Further information:** User's Manual for Measuring Cycles for Workpieces and Tools
- Automatic touch probe cycles for the tool  
**Further information:** User's Manual for Measuring Cycles for Workpieces and Tools
- Automatic touch probe cycles for measuring the kinematics  
**Further information:** User's Manual for Measuring Cycles for Workpieces and Tools

## Description of function

### NOTICE






#### Danger of collision!








The control cannot protect L-shaped styli from collisions using Dynamic Collision Monitoring DCM (#40 / #5-03-1). When using a touch probe with an L-shaped stylus there is a risk of collision!

- ▶ Carefully run in the NC program or program section in the **Program Run Single Block** operating mode
- ▶ Watch out for possible collisions!

The file name of the touch probe table is **tchprobe.tp** and this table must be stored in the folder **TNC:\table**.

The touch probe table **tchprobe.tp** provides the following parameters:

Parameter	Meaning
<b>NO</b>	<b>Sequential number of touch probe</b> You use this number to assign the touch probe to the data in the tool management column <b>TP_NO</b> . Input: <b>1...99</b>
<b>TYPE</b> 	<b>Selection of the touch probe?</b> <div style="border: 1px solid black; padding: 10px; margin-top: 10px;">  The following values are available for the TS 642 touch probe:           <ul style="list-style-type: none"> <li>■ <b>TS642-3</b>: The touch probe is activated by a conical switch. This mode is not supported.</li> <li>■ <b>TS642-6</b>: The touch probe is activated by an infrared signal. Select this mode.</li> </ul> </div> Input: <b>TS120, TS220, TS249, TS260, TS440, TS444, TS460, TS630, TS632, TS640, TS642-3, TS642-6, TS649, TS740, TS 760, KT130, OEM</b>
<b>CAL_OF1</b> 	<b>TS center misalignmt. ref. axis? [mm]</b> According to the selection of the <b>STYLUS</b> column, this parameter has the following function: <ul style="list-style-type: none"> <li>■ <b>SIMPLE</b>: Offset of the touch probe axis to the spindle axis in the main axis</li> <li>■ <b>L-TYPE</b>: Length of extension on an L-shaped stylus</li> </ul> Input: <b>-99999.9999...+99999.9999</b>
<b>CAL_OF2</b> 	<b>TS center misalignmt. aux. axis? [mm]</b> Offset of the touch probe axis to the spindle axis in the secondary axis Input: <b>-99999.9999...+99999.9999</b>
<b>CAL_ANG</b> 	<b>Spindle angle for calibration?</b> According to the selection of the <b>STYLUS</b> column, this parameter has the following function: <ul style="list-style-type: none"> <li>■ <b>SIMPLE</b>: Prior to calibrating or probing, the control orients the touch probe with this spindle angle (if possible).</li> <li>■ <b>L-TYPE</b>: The control orients the extension using the spindle angle. Prior to calibrating or probing, the control aligns the touch probe with the spindle orientation angle (if possible).</li> </ul> Input: <b>0.0000...359.9999</b>

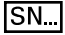Parameter	Meaning
<b>F</b> 	<b>Probing feed rate? [mm/min]</b> <p>In the machine parameter <b>maxTouchFeed</b> (no. 122602), the machine manufacturer defines the maximum probing feed rate.</p> <p>If <b>F</b> is greater than the maximum probing feed rate, then the maximum probing feed rate will be used.</p> <p>Input: <b>0...9999</b></p>
<b>FMAX</b> 	<b>Rapid traverse in probing cycle? [mm/min]</b> <p>Feed rate at which the control pre-positions the touch probe and positions it between the measuring points</p> <p>Input: <b>+10...+99999</b></p>
<b>DIST</b> 	<b>Maximum measuring range? [mm]</b> <p>If the stylus is not deflected in a probing process within the defined value, the control will display an error message.</p> <p>Input: <b>0.00100...99999.99999</b></p>
<b>SET_UP</b> 	<b>Set-up clearance? [mm]</b> <p>Distance of touch probe from the defined touch point when pre-positioning</p> <p>The smaller this value is, the more exactly you must define the touch point position. Safety clearances defined in the touch probe cycle are added to this value.</p> <p>Input: <b>0.00100...99999.99999</b></p>
<b>F_PREPOS</b> 	<b>Pre-position at rapid? ENT/NOENT</b> <p>Speed for pre-positioning:</p> <ul style="list-style-type: none"> <li>■ <b>FMAX_PROBE</b>: Pre-position at the speed from <b>FMAX</b></li> <li>■ <b>FMAX_MACHINE</b>: Pre-position at machine rapid traverse</li> </ul> <p>Input: <b>FMAX_PROBE, FMAX_MACHINE</b></p>
<b>TRACK</b> 	<b>Probe oriented? Yes=ENT/No=NOENT</b> <p>Orienting the infrared touch probe in each probing process:</p> <ul style="list-style-type: none"> <li>■ <b>ON</b>: The control orients the touch probe in the defined probing direction. In this way, the stylus is always deflected in the same direction, improving measuring accuracy.</li> <li>■ <b>OFF</b>: The control will not orient the touch probe.</li> </ul> <p>If you change the <b>TRACK</b> parameter, you must recalibrate the touch probe.</p> <p>Input: <b>ON, OFF</b></p>
<b>SERIAL</b> 	<b>Serial number?</b> <p>The control automatically edits this parameter of touch probes with an EnDat interface.</p> <p>Input: <b>Text width 15</b></p>
<b>REACTION</b>	<b>Reaction? EMERGSTOP=ENT/NCSTOP=NOENT</b> <p>As soon as touch probes with a collision protection adapter detect a collision, they react by resetting the ready signal.</p> <p>Reaction to resetting the ready signal:</p> <ul style="list-style-type: none"> <li>■ <b>NCSTOP</b>: Interrupt NC program</li> <li>■ <b>EMERGSTOP</b>: Emergency stop, quick braking of the axes</li> </ul> <p>Input: <b>NCSTOP, EMERGSTOP</b></p>

Parameter	Meaning
STYLUS	<b>Shape of the stylus</b> <ul style="list-style-type: none"> <li>■ <b>SIMPLE</b>: Straight stylus</li> <li>■ <b>L-TYPE</b>: L-shaped stylus</li> </ul>

## Editing the touch probe table


To edit the touch probe table:



- ▶ Select the **Tables** operating mode



- ▶ Select **Add**
- > The control opens the **Quick selection** and the **Open File** workspaces.



- ▶ Select the **tchprobe.tp** file in the **Open File** workspace













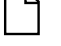



- ▶ Select **Open**
- > The control opens the **Touch probes** application.
- ▶ Activate **Edit**
- ▶ Select the desired value
- ▶ Edit the value


## Notes

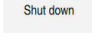- You can also edit the touch probe table values in the tool management.
- If you want to archive tool tables or use them for simulation, save them with different file names and the corresponding file extension.
- In the machine parameter **overrideForMeasure** (no. 122604), the machine manufacturer defines whether you will be allowed to change the feed rate with the feed-rate potentiometer during probing.

### 20.5.7 Creating a tool table in inches

To create a tool table in inches:

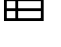-  ▶ Select the **Manual** operating mode
-  ▶ Select **T**
-  ▶ Select the tool **T0**
-  ▶ Press the **NC Start** key
  - The control removes the current tool and does not insert a new tool.
-  ▶ Restart the control
-  ▶ Do not acknowledge **Power interrupted**
-  ▶ Select the **Files** operating mode
  - ▶ Open the **TNC:\table** folder
  - ▶ Rename the original file (e.g., **tool.t** as **tool\_mm.t**)
-  ▶ Select the **Tables** operating mode
-  ▶ Select **Create new table**
  - The control opens the **Create new table** window.
-  ▶ Select a folder with the corresponding table type (e.g., **t**)
-  ▶ Select the desired prototype
  - ▶ Select a path
  - The control opens the **Save as** window.
  - ▶ Select the **table** folder
  - ▶ Enter a name (e.g., **tool**)
  - ▶ Select **Create** twice
  - The control opens the **Tool table** tab in the **Tables** operating mode.
-  ▶ Restart the control
-  ▶ Acknowledge **Power interrupted** with the **CE** key
-  ▶ Select the **Tool table** tab in the **Tables** operating mode
  - The control uses the newly created table as a tool table.

 To use the **Tool management** application you have to create all existing tool tables in inches.

## 20.6 Pocket table tool\_p.tch

### Application

The **tool\_p.tch** pocket table provides the pocket assignment of the tool magazine. The control needs the pocket table in order to change the tool.

**Related topics**

- Tool call

**Further information:** User's Manual for Programming and Testing

- Tool table

**Further information:** "Tool table tool.t", Page 451

**Requirement**

- The tool is defined in the tool management.

**Further information:** "Tool management ", Page 205

**Description of function**

The file name of the pocket table is **tool\_p.tch** and this table must be stored in the folder **TNC:\table**.

The **tool\_p.tch** pocket table provides the following parameters:

Parameter	Meaning
<b>P</b>	<b>Pocket number?</b> Pocket number of the tool in the tool magazine Input: <b>0.0...99.9999</b>
<b>T</b>	<b>Tool number?</b> Row number of the tool from the tool table With the machine parameter <b>deleteLoadedTool</b> (no. 125301) you define whether you are allowed to edit the <b>T</b> column. The machine manufacturer enables this parameter. <b>Further information:</b> "Tool table tool.t", Page 451 Input: <b>1...99999</b>
<b>TNAME</b>	<b>Tool name?</b> Name of the tool from the tool table When you define the tool number, the control will automatically load the tool name. <b>Further information:</b> "Tool table tool.t", Page 451 Input: <b>Text width 32</b>
<b>RSV</b>	<b>Reserve pocket?</b> When a tool is in the spindle, the control reserves the pocket of this tool in the box magazine. To reserve the pocket for the tool: <ul style="list-style-type: none"> <li>■ No value entered: Pocket is not reserved</li> <li>■ <b>R</b>: Pocket is reserved</li> </ul> Input: No value, <b>R</b>
<b>ST</b>	<b>Special tool?</b> Define the tool as a special tool (e.g., with oversize tools): <ul style="list-style-type: none"> <li>■ No value entered: No special tool</li> <li>■ <b>S</b>: Special tool</li> </ul> Input: No value, <b>S</b>

Parameter	Meaning
<b>F</b>	<b>Fixed pocket?</b> Always return the tool to the same pocket in the tool magazine (e.g., with special tools) To define a fixed pocket for the tool: <ul style="list-style-type: none"> <li>■ No value entered: No fixed pocket</li> <li>■ <b>F</b>: Fixed pocket</li> </ul> Input: No value, <b>F</b>
<b>L</b>	<b>Locked pocket?</b> To lock a pocket for tools (e.g., the pockets next to special tools): <ul style="list-style-type: none"> <li>■ No value entered: Do not lock</li> <li>■ <b>L</b>: Lock</li> </ul> Input: No value, <b>L</b>
<b>DOC</b>	<b>Pocket comment?</b> The control automatically loads the tool comment from the tool table. <b>Further information:</b> "Tool table tool.t", Page 451 Input: <b>Text width 32</b>
<b>PLC</b>	<b>PLC status?</b> Information about this tool pocket, which is transferred to the PLC The machine manufacturer defines the function of this parameter. Refer to your machine manual. Entry: <b>%00000000...%11111111</b>
<b>P1 ... P5</b>	<b>Value?</b> The machine manufacturer defines the function of this parameter. Refer to your machine manual. Input: <b>-99999.9999...+99999.9999</b>
<b>PTYP</b>	<b>Tool type for pocket table?</b> Tool type for evaluation in the pocket table The machine manufacturer defines the function of this parameter. Refer to your machine manual. Input: <b>0...99</b>
<b>LOCKED_ABOVE</b>	<b>Lock pocket above?</b> Box magazine: Lock the pocket above This parameter depends on the machine. Refer to your machine manual. Input: <b>0...99999</b>
<b>LOCKED_BELOW</b>	<b>Lock pocket below?</b> Box magazine: Lock the pocket below This parameter depends on the machine. Refer to your machine manual. Input: <b>0...99999</b>
<b>LOCKED_LEFT</b>	<b>Lock pocket at left?</b> Box magazine: Lock the pocket at left This parameter depends on the machine. Refer to your machine manual. Input: <b>0...99999</b>



Parameter	Meaning
<b>LOCKED_RIGHT</b>	<b>Lock pocket at right?</b> Box magazine: Lock the pocket at right This parameter depends on the machine. Refer to your machine manual. Input: <b>0...99999</b>
<b>LAST_USE</b>	<b>LAST_USE</b> The control automatically loads the date and time of the last tool call from the tool table. <b>Further information:</b> "Tool table tool.t", Page 451 Refer to your machine manual. Entry: <b>Text width 20</b>
<b>S1</b>	<b>S1</b> Value for evaluation in the PLC The machine manufacturer defines the function of this parameter. Refer to your machine manual. Entry: <b>Text width 16</b>
<b>S2</b>	<b>S2</b> Value for evaluation in the PLC The machine manufacturer defines the function of this parameter. Refer to your machine manual. Entry: <b>Text width 16</b>

## 20.7 Tool usage file

### Application

The control saves information about the tools of an NC program in a tool usage file (e.g., all the required tools and the tool usage times). The control needs this file for the tool usage test.

### Related topics

- Using the tool usage test  
**Further information:** "Tool usage test", Page 215
- Working with a pallet table  
**Further information:** User's Manual for Programming and Testing
- Tool data from the tool table  
**Further information:** "Tool table tool.t", Page 451

### Requirements

- **Generate tool-usage file** is enabled by your machine manufacturer  
In the machine parameter **createUsageFile** (no. 118701), the machine manufacturer defines whether the **Generate tool-usage file** function will be enabled.  
**Further information:** "Creating the tool usage file", Page 216
- The **Generate tool-usage file** setting is set to **Once** or **Always**  
**Further information:** "Channel Settings", Page 546

### Description of function

The tool usage file provides the following parameters:

Parameter	Meaning
NR	Row number in the tool usage file Input: <b>0...99999</b>
TOKEN	In the <b>TOKEN</b> column, the control uses one word to show which information is contained in the respective row: <ul style="list-style-type: none"> <li>■ <b>TOOL</b>: Data per tool call; listed in chronological order</li> <li>■ <b>TTOTAL</b>: All data of a tool; listed in alphabetical order</li> <li>■ <b>STOTAL</b>: Called NC programs; listed in chronological order</li> <li>■ <b>TIMETOTAL</b>: Total tool usage time of an NC program</li> <li>■ <b>TOOLFILE</b>: Path of the tool table</li> </ul> This enables the control during the tool usage test to detect whether you have performed the simulation with the tool table <b>tool.t</b> Input: <b>Text width 17</b>
TNR	Tool number If the control has not yet inserted a tool, the column contains the value <b>-1</b> . Input: <b>-1...32767</b>
IDX	Tool index Input: <b>0...9</b>
NAME	Tool name Input: <b>Text width 32</b>
TIME	Tool usage time in seconds Time during which the tool is cutting a workpiece (excluding rapid traverse movements) Input: <b>0...9999999</b>
WTIME	Total tool usage time in seconds Total time between the tool changes, during which the tool is cutting a workpiece Input: <b>0...9999999</b>
RAD	Sum of the tool radius <b>R</b> and the delta radius <b>DR</b> from the tool table Input: <b>-999999.9999...999999.9999</b>
BLOCK	NC block number of the tool call Input: <b>0...999999999</b>
PATH	Path of the NC program, the pallet table, or the tool table Input: <b>Text width 300</b>
T	Tool number, including the tool index If the control has not yet inserted a tool, the column contains the value <b>-1</b> . Input: <b>-1...32767.9</b>

Parameter	Meaning
<b>OVRMAX</b>	Maximum feed-rate override If you only simulate the machining operation, then the control will enter the value <b>100</b> . Input: <b>0...32767</b>
<b>OVRMIN</b>	Minimum feed rate override If you only simulate the machining operation, then the control will enter the value <b>-1</b> . Input: <b>-1...32767</b>
<b>NAMEPRG</b>	Type of tool definition during a tool call: <ul style="list-style-type: none"> <li>■ <b>0</b>: The tool number is programmed</li> <li>■ <b>1</b>: The tool name is programmed</li> </ul> Input: <b>0, 1</b>
<b>LINENR</b>	Row number of the pallet table in which the NC program is defined Input: <b>-1...99999</b>

### Note

The control saves the tool usage file as a dependent file (\*.dep).

In the settings of the **Files** operating mode, you can specify whether the control displays dependent files in the file management.

**Further information:** User's Manual for Programming and Testing

## 20.8 T usage order (#93 / #2-03-1)

### Application

In the **T usage order** table, the control displays the tool call sequence in an NC program. Before starting the program, you can see, for example, when a manual tool change will take place.

### Requirements

- Software option Advanced Tool Management (#93 / #2-03-1)
- Tool-usage file has been created

**Further information:** "Creating the tool usage file", Page 216

**Further information:** "Tool usage file", Page 485

### Description of function

When you select an NC program in the **Program Run** operating mode, the control will automatically create the **T usage order** table. The control displays the table in the **T usage order** application in **Tables** operating mode. The control lists all the tools called within the active NC program and all the tools called within called NC programs in chronological order. You cannot edit the table.

The **T usage order** table provides the following parameters:

Parameter	Meaning
NR	Sequential number of the table rows
T	Number of the tool used, including an index as needed <b>Further information:</b> "Indexed tool", Page 182 May differ from the programmed tool (e.g., when a replacement tool is used)
NAME	Name of the tool used, including an index as needed <b>Further information:</b> "Indexed tool", Page 182 May differ from the programmed tool (e.g., when a replacement tool is used)
TOOL INFO	The control displays the following tool information: <ul style="list-style-type: none"> <li>■ <b>OK:</b> Tool is in order</li> <li>■ <b>Locked:</b> Tool is locked</li> <li>■ <b>Not found:</b> Tool is not defined in the pocket table <b>Further information:</b> "Pocket table tool_p.tch", Page 482</li> <li>■ <b>T no. missing:</b> Tool is not defined in the tool management <b>Further information:</b> "Tool management ", Page 205</li> </ul>
T PROG	Number or name of the programmed tool, including an index as needed <b>Further information:</b> "Indexed tool", Page 182
USAGE	Total tool usage time from the <b>WTIME</b> column of the <b>tool usage file</b> (in seconds) Total time between the tool changes, during which the tool is cutting a workpiece <b>Further information:</b> "Tool usage file", Page 485
TOOL TIME	Estimated time of tool change
M3/M4 TIME	Tool usage time from the <b>TIME</b> column of the <b>tool usage file</b> (in seconds) Time during which the tool is cutting a workpiece (excluding rapid traverse movements) <b>Further information:</b> "Tool usage file", Page 485
MIN OVRD	Minimum value of the feed-rate potentiometer during program run (in percent)
MAX OVRD	Maximum value of the feed-rate potentiometer during program run (in percent)
NC PGM	Path of the NC program in which the tool is programmed
MAGAZINE	In this column, the control writes whether the tool is currently in the magazine or in the spindle. This column remains empty if the tool is a zero tool or not defined in the pocket table. <b>Further information:</b> "Pocket table tool_p.tch", Page 482

## 20.9 Tooling list (#93 / #2-03-1)

### Application

In the **Tooling list** table, the control displays information about all the tools called within an NC program. Before starting the program, you can check, for example, whether all tools are contained in the magazine.

### Requirements

- Software option Advanced Tool Management (#93 / #2-03-1)
- Tool-usage file has been created

**Further information:** "Creating the tool usage file", Page 216

**Further information:** "Tool usage file", Page 485

### Description of function

When you select an NC program in the **Program Run** operating mode, the control will automatically create the **Tooling list** table. The control displays the table in the **Tooling list** application in **Tables** operating mode. The control lists all the tools called within the active NC program and all the tools called within called NC programs in numerical order. You cannot edit the table.

The **Tooling list** table provides the following parameters:

Parameter	Meaning
<b>T</b>	Number of the tool used, including an index as needed <b>Further information:</b> "Indexed tool", Page 182 May differ from the programmed tool (e.g., when a replacement tool is used)
<b>TOOL INFO</b>	The control displays the following tool information: <ul style="list-style-type: none"> <li>■ <b>OK:</b> Tool is in order</li> <li>■ <b>Locked:</b> Tool is locked</li> <li>■ <b>Not found:</b> Tool is not defined in the pocket table <b>Further information:</b> "Pocket table tool_p.tch", Page 482</li> <li>■ <b>T no. missing:</b> Tool is not defined in the tool management <b>Further information:</b> "Tool carrier management", Page 209</li> </ul>
<b>T PROG</b>	Number or name of the programmed tool, including an index as needed <b>Further information:</b> "Indexed tool", Page 182
<b>M3/M4 TIME</b>	Tool usage time from the <b>TIME</b> column of the <b>tool usage file</b> (in seconds) Time during which the tool is cutting a workpiece (excluding rapid traverse movements) <b>Further information:</b> "Tool usage file", Page 485
<b>MAGAZINE</b>	In this column, the control writes whether the tool is currently in the magazine or in the spindle. This column remains empty if the tool is a zero tool or not defined in the pocket table. <b>Further information:</b> "Pocket table tool_p.tch", Page 482

## 20.10 Preset table \*.pr

### Application

The **preset.pr** preset table allows you to manage presets, such as the position and misalignment of a workpiece in the machine. The active row in the preset table is used as a workpiece preset in the NC program and as the coordinate origin of the workpiece coordinate system **W-CS**.

**Further information:** "Presets in the machine", Page 172


### Related topics

- Setting and activating presets

**Further information:** "Preset management", Page 238

### Description of function



By default, the preset table has the name **preset.pr**, and is saved in the **TNC:\table** directory. The preset table is open in the **Tables** operating mode by default.




Refer to your machine manual.  
The machine manufacturer can define a different path for the preset table.  
In the optional machine parameter **basisTrans** (no. 123903), the machine manufacturer defines a specific preset table for each range of traverse.

## Icons and buttons of the preset table

The preset table contains the following icons:

Icon	Meaning
	Active row
	Write-protected row

When you define a preset, the control opens a window with the following input options:

Icon or button	Function
	<p><b>actual position capture</b></p> <p>The control opens or closes the position display of the status overview.</p> <p>When you select an axis, the control applies the selected value at <b>Set a preset</b>.</p> <p><b>Further information:</b> "actual position capture in the preset table", Page 495</p>
<b>Set a preset</b>	<p>The control interprets the entered value as desired display value for the actual position. The control calculates the required table value from this.</p> <p>The entered value is active in the basic coordinate system <b>B-CS</b>.</p> <p><b>Further information:</b> "Basic coordinate system B-CS", Page 227</p> <p>When you activate the edited preset, the control displays the entered value as actual position in the position display.</p>
<b>Correct</b>	<p>The control offsets the entered value against the actual table value. You can enter either a positive or a negative value.</p> <p>The entered value is active incrementally in the basic coordinate system <b>B-CS</b>.</p>
<b>Edit</b>	<p>The control accepts the entered value unchanged as table value.</p> <p>The entered value refers to the coordinate origin of the basic coordinate system <b>B-CS</b>.</p>

### Parameters of the preset table

The preset table contains the following parameters:

Parameter	Meaning
NO	Number of preset table row Input: <b>0...99999999</b>
DOC	Comment Entry: <b>Text width 16</b>
X	X coordinate of preset Basic transformation relating to the basic coordinate system <b>B-CS</b> <b>Further information:</b> "Basic coordinate system B-CS", Page 227 Input: <b>-99999.99999...+99999.99999</b>
Y	Y coordinate of preset Basic transformation relating to the basic coordinate system <b>B-CS</b> <b>Further information:</b> "Basic coordinate system B-CS", Page 227 Input: <b>-99999.99999...+99999.99999</b>
Z	Z coordinate of preset Basic transformation relating to the basic coordinate system <b>B-CS</b> <b>Further information:</b> "Basic coordinate system B-CS", Page 227 Input: <b>-99999.99999...+99999.99999</b>
SPA	Spatial angle of preset in the A axis Basic transformation relating to the basic coordinate system <b>B-CS</b> <b>Further information:</b> "Basic coordinate system B-CS", Page 227 Has the effect of a 3D basic rotation for tool axis <b>Z</b> <b>Further information:</b> "Basic rotation and 3D basic rotation", Page 240 Input: <b>-99999.99999999...+99999.99999999</b>
SPB	Spatial angle of preset in the B axis Basic transformation relating to the basic coordinate system <b>B-CS</b> <b>Further information:</b> "Basic coordinate system B-CS", Page 227 Has the effect of a 3D basic rotation for tool axis <b>Z</b> <b>Further information:</b> "Basic rotation and 3D basic rotation", Page 240 Input: <b>-99999.99999999...+99999.99999999</b>
SPC	Spatial angle of preset in the C axis Basic transformation relating to the basic coordinate system <b>B-CS</b> <b>Further information:</b> "Basic coordinate system B-CS", Page 227 Has the effect of a basic rotation for tool axis <b>Z</b> <b>Further information:</b> "Basic rotation and 3D basic rotation", Page 240 Input: <b>-99999.99999999...+99999.99999999</b>
X_OFFS	Position of the X axis for the preset Offset relating to the machine coordinate system <b>M-CS</b> <b>Further information:</b> "Machine coordinate system M-CS", Page 224 Input: <b>-99999.99999...+99999.99999</b>
Y_OFFS	Position of the Y axis for the preset Offset relating to the machine coordinate system <b>M-CS</b> <b>Further information:</b> "Machine coordinate system M-CS", Page 224 Input: <b>-99999.99999...+99999.99999</b>



Parameter	Meaning
<b>Z_OFFS</b>	Position of the Z axis for the preset Offset relating to the machine coordinate system <b>M-CS</b> <b>Further information:</b> "Machine coordinate system M-CS", Page 224 Input: <b>-99999.99999...+99999.99999</b>
<b>A_OFFS</b>	Axis angle of the A axis for the preset Offset relating to the machine coordinate system <b>M-CS</b> <b>Further information:</b> "Machine coordinate system M-CS", Page 224 Input: <b>-99999.9999999...+99999.9999999</b>
<b>B_OFFS</b>	Axis angle of the B axis for the preset Offset relating to the machine coordinate system <b>M-CS</b> <b>Further information:</b> "Machine coordinate system M-CS", Page 224 Input: <b>-99999.9999999...+99999.9999999</b>
<b>C_OFFS</b>	Axis angle of the C axis for the preset Offset relating to the machine coordinate system <b>M-CS</b> <b>Further information:</b> "Machine coordinate system M-CS", Page 224 Input: <b>-99999.9999999...+99999.9999999</b>
<b>U_OFFS</b>	Position of the U axis for the preset Offset relating to the machine coordinate system <b>M-CS</b> <b>Further information:</b> "Machine coordinate system M-CS", Page 224 Input: <b>-99999.99999...+99999.99999</b>
<b>V_OFFS</b>	Position of the V axis for the preset Offset relating to the machine coordinate system <b>M-CS</b> <b>Further information:</b> "Machine coordinate system M-CS", Page 224 Input: <b>-99999.99999...+99999.99999</b>
<b>W_OFFS</b>	Position of the W axis for the preset Offset relating to the machine coordinate system <b>M-CS</b> <b>Further information:</b> "Machine coordinate system M-CS", Page 224 Input: <b>-99999.99999...+99999.99999</b>
<b>ACTNO</b>	Active workpiece preset The control automatically enters <b>1</b> in the active row. Input: <b>0, 1</b>
<b>LOCKED</b>	Write-protection of the table row Entry: <b>Text width 16</b>



Refer to your machine manual.

In the optional machine parameter **CfgPresetSettings** (no. 204600), the machine manufacturer can block the setting of a preset in individual axes.


Basic transformation and offset

The control interprets the basic transformations **SPA**, **SPB** and **SPC** as basic rotation or 3D basic rotation in the workpiece coordinate system **W-CS**. During program execution, the control moves the linear axes in accordance with the basic rotation without any change in the workpiece position.

**Further information:** "Basic rotation and 3D basic rotation", Page 240

The control interprets all offsets for each respective axis as a shift in the machine coordinate system **M-CS**. The effect that offsets have is contingent on the kinematics.

**Further information:** "Machine coordinate system M-CS", Page 224

 HEIDENHAIN recommends using 3D basic rotation because of its greater flexibility.

Application example

Use the **Rotation (ROT)** probing function to determine the misalignment of a workpiece. You can transfer the result to the preset table either as a basic transformation or as an offset.

**Further information:** "Determining and compensating the rotation of a workpiece", Page 388

Calculated results	Actual value	Nominal value
<input checked="" type="checkbox"/> Basic rotation	-360	<input type="text" value="0"/>
<input type="checkbox"/> Table rotation	0	0.00000
<div>Compensate the active preset    Align rotary table    Correct the pallet reference point</div>		

Results of the **Rotation (ROT)** probing function

If you activate the **Basic rotation** toggle switch, the control interprets the misalignment as a basic transformation. When using the **Compensate the active preset** button, the control saves the result in the columns **SPA**, **SPB** and **SPC** of the preset table. The **Align rotary table** button has no function in this case.

If you activate the **Table rotation** toggle switch, the control interprets the misalignment as an offset. When using the **Compensate the active preset** button, the control saves the result in the columns **A\_OFFS**, **B\_OFFS** and **C\_OFFS** of the preset table. To move the rotary axes to the position of the offset, use the **Align rotary table** button.

### Write-protection for table rows

The **Lock record** button allows protecting any rows of the preset table against overwriting. The control enters the value **L** in the **LOCKED** column.

**Further information:** "Protecting table rows without a password", Page 496

Alternatively, the row can be protected with a password. The control enters the value **###** into the **LOCKED** column.

**Further information:** "Protecting table rows with a password", Page 496

The control displays an icon ahead of write-protected rows.



If the control displays the value **OEM** in the **LOCKED** column, this column has been locked by the machine manufacturer.

### NOTICE

#### Caution: Data may be lost!

Rows protected by a password can be unlocked by entering the selected password exclusively. Forgotten passwords cannot be reset. This would lock the protected rows permanently.

- ▶ Protecting table rows without a password is recommended
- ▶ Note down your passwords

### 20.10.1 actual position capture in the preset table


To load the actual position of an axis into the preset table:



- ▶ Activate the **Edit** toggle switch



- ▶ Double-tap or double-click the table row to be changed (e.g., in the **X** column)
- The control opens a window with input options.
- ▶ Select **actual position capture**
- The control opens the position display of the status overview.
- ▶ Select the desired value
- The control loads the value into the window and activates the **Set a preset** button.



- ▶ Select **OK**
- The control calculates the table value that is needed and enters the value in the table.
- ▶ If required, close the position display of the status overview

20.10.2 Activating write protection

Protecting table rows without a password

To protect a table row without a password:



- ▶ Activate the **Edit** toggle switch



- ▶ Select the desired row
- ▶ Activate the **Lock record** toggle switch
- > The control enters the value **L** in the **LOCKED** column.



- > The control activates write-protection and displays an icon ahead of the row.

Protecting table rows with a password

**NOTICE**

**Caution: Data may be lost!**

Rows protected by a password can be unlocked by entering the selected password exclusively. Forgotten passwords cannot be reset. This would lock the protected rows permanently.

- ▶ Protecting table rows without a password is recommended
- ▶ Note down your passwords

To protect a table row with a password:



- ▶ Activate the **Edit** toggle switch
- ▶ Double-tap or double-click the **LOCKED** column of the desired row
- ▶ Enter the password
- ▶ Confirm your input
- > The control enters the value **###** in the **LOCKED** column.
- > The control activates write-protection and displays an icon ahead of the row.



20.10.3 Removing write protection

Unlocking table rows that are protected without a password

To unlock a table row that is protected without a password:



- ▶ Activate the **Edit** toggle switch



- ▶ Deactivate the **Lock record** toggle switch
- > The control removes the value **L** from the **LOCKED** column.
- > The control deactivates the write protection and removes the icon ahead of the row.

**Unlocking table rows that are protected with a password****NOTICE****Caution: Data may be lost!**

Rows protected by a password can be unlocked by entering the selected password exclusively. Forgotten passwords cannot be reset. This would lock the protected rows permanently.

- ▶ Protecting table rows without a password is recommended
- ▶ Note down your passwords

To unlock a table row that is protected with a password:




- ▶ Activate the **Edit** toggle switch
- ▶ Double-tap or double-click the **LOCKED** column of the desired row
- ▶ Delete ###
- ▶ Enter the password
- ▶ Confirm your input
- > The control deactivates write-protection and removes the icon ahead of the row.

20.10.4 Creating a preset table in inches

If you define inches as the unit of measure in the **Machine Settings** menu item, the unit of measure of the preset table will not be adjusted automatically.

**Further information:** "The Machine Settings menu item", Page 545

To create a preset table in inches:



- ▶ Restart the control
- ▶ Do not acknowledge the **Power interrupted** message
- ▶ Select the **Files** operating mode
- ▶ Open the **TNC:\table** folder
- ▶ Rename the original file (e.g., **preset.pr** as **preset\_mm.pr**)
- ▶ Select the **Tables** operating mode
- ▶ Select **Create new table**
  - The control opens the **Create new table** window.
- ▶ Select the **pr** folder
- ▶ Select the desired prototype
- ▶ Select a path
  - The control opens the **Save as** window.
- ▶ Select the **table** folder
- ▶ Enter the name **preset.pr**
- ▶ Select **Create** twice
  - The control opens the **Presets tab in the Tables** operating mode.
- ▶ Restart the control
- ▶ Acknowledge **Power interrupted** with the **CE** key
- ▶ Select the **Presets** tab in the **Tables** operating mode
  - The control uses the newly created table as a preset table.

## Notes

### NOTICE

#### Caution: Significant property damage!

Undefined fields in the preset table behave differently from fields defined with the value **0**: Fields defined with the value **0** overwrite the previous value when activated, whereas with undefined fields the previous value is kept. If the previous value is kept, there is a danger of collision!

- ▶ Before activating a preset, check whether all columns contain values.
- ▶ For undefined columns, enter values (e.g., **0**)
- ▶ As an alternative, have the machine manufacturer define **0** as the default value for the columns

- To optimize the file size and the processing speed, keep the preset table as short as possible.
- New rows can be inserted only at the end of the preset table.
- If you edit the value of the **DOC** column, then the preset must be reactivated. Only then does the control apply the new value.

**Further information:** "Activating presets", Page 239

- The control may feature a pallet preset table, depending on the machine. When a pallet preset is active, the presets in the preset table are referenced to this pallet preset.

**Further information:** User's Manual for Programming and Testing

- If a manual probing process or an NC program is interrupted or stopped, you cannot edit the preset table. When you double-tap or double-click a table cell the control shows the **Editing not possible. Perform internal stop?** window. If you select **Yes**, the control may lose touch points or modally active program information.

### Notes about machine parameters

- In the optional machine parameter **initial** (no. 105603), the machine manufacturer defines a default value for every column of a new row.
- If the unit of measure of the preset table does not match the unit of measure defined in the machine parameter **unitOfMeasure** (no. 101101), the control displays a message in the dialog bar of the **Tables** operating mode.
- The machine manufacturer uses the optional machine parameter **preset-ToAlignAxis** (no. 300203) to define for each axis how the control is to interpret offsets in the following NC functions:
  - **FUNCTION PARAXCOMP**
  - **FUNCTION POLARKIN** (#8 / #1-01-1)
  - **FUNCTION TCPM** or **M128** (#9 / #4-01-1)
  - **FACING HEAD POS** (#50 / #4-03-1)

**Further information:** User's Manual for Programming and Testing

20.11 Tables for AFC (#45 / #2-31-1)

20.11.1 Basic AFC settings in AFC.tab

Application

In the **AFC.tab** table, you define the feed-rate control settings to be used by the control. This table must be saved in the **TNC:\table** directory.

Related topics

- Programming AFC  
**Further information:** "Adaptive feed control (AFC) (#45 / #2-31-1)", Page 280


Requirement

- Adaptive Feed Control software option (AFC (#45 / #2-31-1))

Description of function

The data in this table are default values that, during a teach-in cut, are copied into an associated dependent file of the relevant NC program. The values are the basis for feedback control.

**Further information:** "Description of function", Page 503



If you define a tool-specific reference power in the **AFC-LOAD** column in the tool table, the control will create the associated dependent file for the respective NC program without a teach-in cut. The file is created shortly before feedback control becomes effective.



**Parameter**

The **AFC.tab** table provides the following parameters:

Parameter	Meaning
<b>NR</b>	Row number in the table Input: <b>0...9999</b>
<b>AFC</b>	Name of the control setting Enter this name in the <b>AFC</b> tool management column. It specifies the assignment of the control parameters to the tool. Input: Text width 10
<b>FMIN</b>	Feed rate at which the control will perform an overload response Enter the value in percent of the programmed feed rate Not necessary in turning mode (#50 / #4-03-1) If the <b>AFC.TAB</b> columns <b>FMIN</b> and <b>FMAX</b> each have a value of 100%, Adaptive Feed Control is deactivated, but cut-related tool wear monitoring and tool load monitoring remain active. <b>Further information:</b> "Monitoring tool wear and tool load", Page 288 Input: <b>0...999</b>
<b>FMAX</b>	Maximum feed rate within the material up to which the control can automatically increase the feed rate Enter the value in percent of the programmed feed rate Not necessary in turning mode (#50 / #4-03-1) If the <b>AFC.TAB</b> columns <b>FMIN</b> and <b>FMAX</b> each have a value of 100%, Adaptive Feed Control is deactivated, but cut-related tool wear monitoring and tool load monitoring remain active. <b>Further information:</b> "Monitoring tool wear and tool load", Page 288 Input: <b>0...999</b>
<b>FIDL</b>	Feed rate at which the control will traverse the tool outside of the material Enter the value in percent of the programmed feed rate Not necessary in turning mode (#50 / #4-03-1) Input: <b>0...999</b>
<b>FENT</b>	Feed rate at which the control will move the tool into and out of the material Enter the value in percent of the programmed feed rate Not necessary in turning mode (#50 / #4-03-1) Input: <b>0...999</b>

Parameter	Meaning
<b>OVLD</b>	<p>Desired reaction of the control to overload:</p> <ul style="list-style-type: none"> <li>■ <b>M</b>: Execution of a macro defined by the machine manufacturer</li> <li>■ <b>S</b>: Immediate NC stop</li> <li>■ <b>F</b>: Execute NC stop when the tool is no longer in the material</li> <li>■ <b>E</b>: Just display an error message on the screen</li> <li>■ <b>L</b>: Disable active tool</li> <li>■ <b>-</b>: No overload reaction</li> </ul> <p>If the maximum spindle power is exceeded for more than one second and the feed rate falls below the defined minimum while feedback control is active, the control will conduct an overload reaction.</p> <p>In conjunction with the cut-related tool wear monitoring function, the control will evaluate only the options <b>M</b>, <b>E</b>, and <b>L</b>!</p> <p>For tool-load monitoring with the column <b>AFC_OVLD2</b>, this parameter has no function.</p> <p>Input: <b>M, S, F, E, L</b>, or <b>-</b></p>
<b>POUT</b>	<p>Spindle power at which the control will detect that the tool exits the workpiece</p> <p>Enter the value in percent of the learned reference load</p> <p>Recommended input value: 8%</p> <p>In turning mode: Minimum load <b>Pmin</b> for tool monitoring (#50 / #4-03-1)</p> <p>Input: <b>0...100</b></p>
<b>SENS</b>	<p>Sensitivity (aggressiveness) of feedback control</p> <p>50 is for slow feedback control, 200 for a very aggressive feedback control. An aggressive feedback control responds quickly and significantly changes the values, but it tends to overshoot.</p> <p>In turning mode: Activate the monitoring of the minimum load <b>Pmin</b> (#50 / #4-03-1):</p> <ul style="list-style-type: none"> <li>■ <b>1</b>: Evaluate <b>Pmin</b></li> <li>■ <b>0</b>: Do not evaluate <b>Pmin</b></li> </ul> <p>Input: <b>0...999</b></p>
<b>PLC</b>	<p>Value that the control will transfer to the PLC at the beginning of a machining step</p> <p>The machine manufacturer defines whether and which function will be performed by the control.</p> <p>Input: <b>0...999</b></p>

### Notes

- If there is no AFC.TAB table in the **TNC:\table** directory, the control uses a permanently defined, internal control setting for the teach-in cut. If, alternatively, a tool-dependent reference power value exists, the control uses it immediately. HEIDENHAIN recommends using the AFC.TAB table in order to ensure safe and well-defined operation.
- The names of tables and table columns must start with a letter and must not contain an arithmetic operator (e.g., **+**). Due to SQL commands, these characters can cause problems when data are input or read.

**Further information:** User's Manual for Programming and Testing

## 20.11.2 AFC.DEP settings file for teach-in cuts

### Application

With a teach-in cut, the control at first copies the basic settings for each machining step, as defined in the AFC.TAB table, to a file called **<name>.H.AFC.DEP**. The string **<name>** is identical to the name of the NC program for which you have recorded the teach-in cut. In addition, the control measures the maximum spindle power consumed during the teach-in cut and saves this value to the table.

### Related topics

- AFC basic settings in the table **AFC.tab**  
**Further information:** "Basic AFC settings in AFC.tab", Page 500
- Setting up and using AFC  
**Further information:** "Adaptive feed control (AFC) (#45 / #2-31-1)", Page 280

### Requirement


- Adaptive Feed Control software option (AFC (#45 / #2-31-1))

### Description of function

Each row in the **<name>.H.AFC.DEP** file stands for a machining section, that you start with **FUNCTION AFC CUT BEGIN** and complete with **FUNCTION AFC CUT END**. You can edit all data of the **<name>.H.AFC.DEP** file for optimization purposes. If you have optimized the values from the AFC.TAB table, the control places a **\*** in front of these control settings in the AFC column.

**Further information:** "Basic AFC settings in AFC.tab", Page 500

In addition to the contents from the **AFC.tab** table, the **AFC.DEP** file provides the following information:

Column	Function
NR	Number of the machining step
TOOL	Number or name of the tool with which the machining step was performed (not editable)
	<div style="border: 1px solid black; padding: 5px;">  In conjunction with AFC (#45 / #2-31-1), the following characters are not permitted in the tool name: # \$ &amp; , . </div>
IDX	Index of the tool with which the machining step was performed (not editable)
N	Difference for tool call: <ul style="list-style-type: none"> <li>■ <b>0</b>: Tool was called by its tool number</li> <li>■ <b>1</b>: Tool was called by its tool name</li> </ul>
PREF	Reference load of the spindle. The control measures the value in percent with respect to the rated spindle power
ST	Status of the machining step: <ul style="list-style-type: none"> <li>■ <b>L</b>: In the next program run, a teach-in cut is recorded for this machining step. The control overwrites any existing values in this row</li> <li>■ <b>C</b>: The teach-in cut was completed successfully. The next program run can be conducted with automatic feed control</li> </ul>
AFC	Name of the control setting

### Notes

- Note that the **<name>.H.AFC.DEP** file is locked against editing as long as the NC program **<name>.H** is running.  
The control does not remove the editing lock until one of the following functions has been executed:
  - **M2**
  - **M30**
  - **END PGM**
- In the settings of the **Files** operating mode, you can specify whether the control displays dependent files in the file management.  
**Further information:** User's Manual for Programming and Testing

### 20.11.3 Log file AFC2.DEP

#### Application

The control stores various pieces of information for each machining step of a teach-in cut in the **<name>.H.AFC2.DEP** file. The string **<name>** is identical to the name of the NC program for which you have recorded the teach-in cut. During feedback control, the control updates the data and performs various evaluations.

#### Related topics

- Setting up and using AFC  
**Further information:** "Adaptive feed control (AFC) (#45 / #2-31-1)", Page 280

#### Requirement

- Adaptive Feed Control software option (AFC (#45 / #2-31-1))

### Description of function

The **AFC2.DEP** file provides the following information:

Column	Function
<b>NR</b>	Number of the machining step
<b>TOOL</b>	Number or name of the tool with which the machining step was performed
<b>IDX</b>	Index of the tool with which the machining step was performed
<b>SNOM</b>	Nominal spindle speed [rpm]
<b>SDIFF</b>	Maximum difference of the spindle speed in % of the nominal speed
<b>CTIME</b>	Machining time (tool in effect)
<b>FAVG</b>	Average feed rate (tool in effect)
<b>FMIN</b>	Smallest occurring feed factor. The control shows the value as a percentage of the programmed feed rate
<b>PMAX</b>	Maximum recorded spindle power during machining. The control shows the value as a percentage of the spindle's rated power
<b>PREF</b>	Reference load of the spindle. The control shows the value as a percentage of the spindle's rated power
<b>OVLD</b>	Overload reaction performed by the control: <ul style="list-style-type: none"> <li>■ <b>M</b>: A macro defined by the machine manufacturer has been run</li> <li>■ <b>S</b>: Immediate NC stop was conducted</li> <li>■ <b>F</b>: NC stop was performed once the tool was no longer in the material</li> <li>■ <b>E</b>: An error message was displayed</li> <li>■ <b>L</b>: The current tool was locked</li> <li>■ <b>-</b>: There was no overload response</li> </ul>
<b>BLOCK</b>	Block number at which the machining step begins



During feedback control, the control determines the current machining time as well as the resulting time saving in percent. The control enters the results of the evaluation between the key words **total** and **saved** in the last line of the log file. Where the time balance is positive, the percentage value is also positive.

### Note

In the settings of the **Files** operating mode, you can specify whether the control displays dependent files in the file management.

**Further information:** User's Manual for Programming and Testing

20.11.4 Editing the tables for AFC

You can open and, if necessary, edit the tables for AFC during program run. The control provides only the tables of the active NC program.

To open a table for AFC:



- ▶ Select the **Program Run** operating mode
- ▶ Select **AFC settings**
- > The control displays a selection menu. The control displays all the tables available for this NC program.
- ▶ Select a file (e.g., **AFC.TAB**)
- > The control opens the file in the **Tables** operating mode.

# 21

**Electronic  
Handwheel**

## 21.1 Fundamentals

### Application

If you want to approach a position in the machine's working space while the guard door is open or if you execute a small infeed movement, you can use the electronic handwheel. The electronic handwheel allows you to traverse the axes and perform various functions provided by the control.

### Related topics

- Incremental jog positioning  
**Further information:** "Incremental jog positioning of axes", Page 165
- Handwheel superimpositioning with GPS (#44 / #1-06-1)  
**Further information:** "The Handwheel superimp. function", Page 298
- Handwheel superimpositioning with **M118**  
**Further information:** User's Manual for Programming and Testing
- Virtual tool axis **VT** (#44 / #1-06-1)  
**Further information:** User's Manual for Programming and Testing
- Touch probe functions in **Manual** operating mode  
**Further information:** "Touch Probe Functions in the Manual Operating Mode", Page 375

### Requirement

- Electronic handwheel (e.g., HR 550FS)  
The control supports the following electronic handwheels:
  - HR 410: Cable-bound handwheel without display
  - HR 420: Cable-bound handwheel with display
  - HR 510: Cable-bound handwheel without display
  - HR 520: Cable-bound handwheel with display
  - HR 550FS: Wireless handwheel with display, data transmission via radio

### Description of function

You can use electronic handwheels in **Manual** or **Program Run** operating mode.

The HR 520 and HR 550FS portable handwheels feature a display that allows the control to show different types of information. You can use the handwheel soft keys for setup functions, such as the setting of presets or the activation of miscellaneous functions.

Once you have activated the handwheel with the handwheel activation key or the **Handwheel** toggle switch, you can operate the control only by using the handwheel. If you press the axis keys in this state, the control will display the message **Handwheel active: Handwheel-1, MB0**.

If you select **Manual** operating mode, the control deactivates the handwheel.

If more than one handwheel is connected to a control, you can activate or deactivate a handwheel only by pressing the handwheel activation key on the respective handwheel. You need to deactivate the active handwheel in order to be able to select another handwheel.



## Functions in Program Run operating mode


You can perform the following functions in **Program Run** operating mode:

- The **NC Start** key (**NC Start** handwheel key)
- The **NC Stop** key (**NC Stop** handwheel key)
- After you have pressed the **NC Stop** key: Internal stop (handwheel soft keys **MOP** and then **Stop**)
- After you have pressed the **NC Stop** key: Manual traverse of axes (handwheel soft keys **MOP** and then **MAN**)
- Return to the contour after axes were manually traversed during an interruption of the program run (handwheel soft keys **MOP** and then **REPO**). The handwheel soft keys are used for operating.

**Further information:** "Returning to the contour", Page 430

- Switch on/off the "Tilt working plane" function (handwheel soft keys **MOP** and then **3D**)

## Operating elements of an electronic handwheel

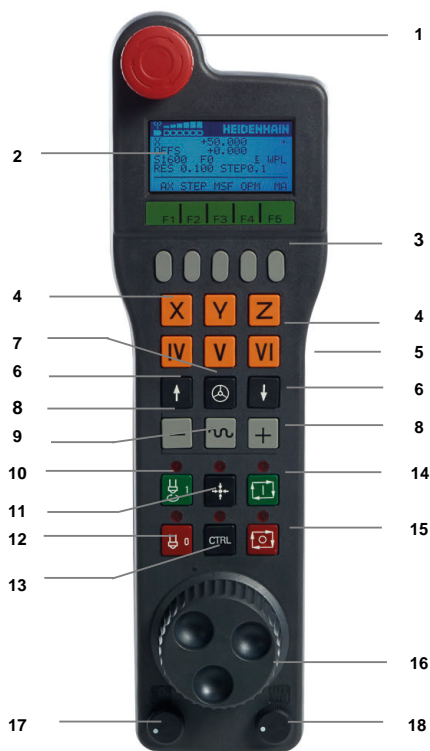


An electronic handwheel provides the following operating elements:

- 1 **EMERGENCY STOP** key
- 2 Handwheel display for status and for selecting functions
- 3 Handwheel soft keys
- 4 Axis keys; can be exchanged by the machine manufacturer depending on the axis configuration
- 5 Permissive button  
The permissive button is on the rear side of the handwheel.
- 6 Arrow keys for defining the handwheel resolution
- 7 Handwheel activation key  
You can activate or deactivate the handwheel.

- 8 Axis-direction key  
Key for the direction of the traverse motion
- 9 Rapid traverse override for the traverse motion
- 10 Spindle switch-on (machine-dependent function, key can be exchanged by the machine manufacturer)
- 11 **Generate NC block** key (machine-dependent function, key can be exchanged by the machine manufacturer)
- 12 Spindle switch-off (machine-dependent function, key can be exchanged by the machine manufacturer)
- 13 **CTRL** key for special functions (machine-dependent function, key can be exchanged by the machine manufacturer)
- 14 **NC Start** key (machine-dependent function, key can be exchanged by the machine manufacturer)
- 15 **NC Stop** key  
Machine-dependent function; key can be exchanged by the machine manufacturer
- 16 Handwheel
- 17 Spindle speed potentiometer
- 18 Feed rate potentiometer
- 19 Cable connection; not required for the HR 550FS wireless handwheel

Contents of an electronic handwheel display

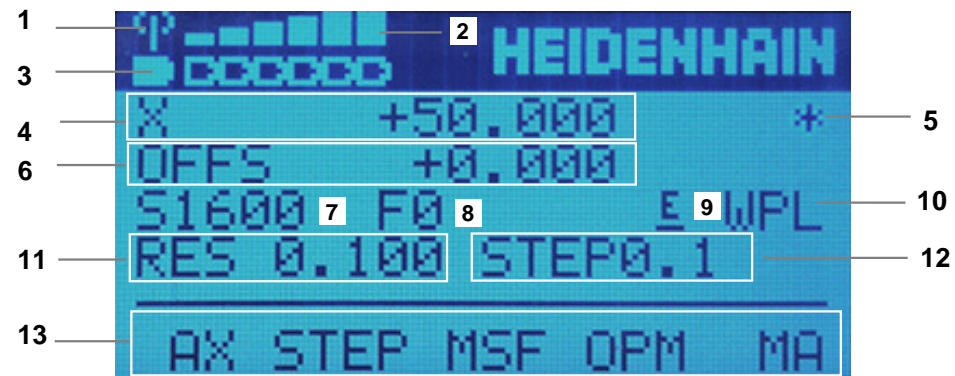

The display of an electronic handwheel consists of the following areas:

- 1 Handwheel is in the docking station or radio mode is active  
Only with HR 550FS wireless handwheel
- 2 Field strength  
Six bars = maximum field strength  
Only with HR 550FS wireless handwheel
- 3 Charging condition of battery  
Six bars = maximum charging condition. A bar moves from the left to the right during recharging.  
Only with HR 550FS wireless handwheel
- 4 **X+50.000**: Position of the selected axis

- 5 \*: Control in operation; program run has been started or axis is in motion
- 6 Handwheel superimpositioning from **M118** or the Global Program Settings GPS (#44 / #1-06-1)  
**Further information:** "The Handwheel superimp. function", Page 298  
**Further information:** User's Manual for Programming and Testing
- 7 **S1000**: Current spindle speed
- 8 Feed rate at which the selected axis is moving  
 The control displays the current contouring feed rate while the program is running.
- 9 **E**: Error message  
 If an error message appears on the control, the handwheel display shows the **ERROR** message for three seconds. Then the letter **E** is shown in the display as long as the error is pending on the control.
- 10 Active setting in the **3-D rotation** window:
  - **VT**: function **Tool axis**
  - **WP**: function **Basic rotation**
  - **WPL**: **3D ROT** function**Further information:** "The 3-D rotation window (#8 / #1-01-1)", Page 245
- 11 Handwheel resolution  
 Distance that the selected axis moves per handwheel revolution  
**Further information:** "Handwheel resolution", Page 512
- 12 Incremental jog active or inactive  
 If the function is active, the control will display the active traverse step.
- 13 Soft-key row  
 The soft key row provides the following functions:
  - **AX**: Select the machine axis  
**Further information:** "Creating a positioning block", Page 514
  - **STEP**: Incremental jog positioning  
**Further information:** "Incremental jog positioning", Page 514
  - **MSF**: Execute various functions of the **Manual** operating mode (e.g., entering the feed rate **F**)  
**Further information:** "Entering miscellaneous functions M", Page 513
  - **OPM**: Select the operating mode
    - **MAN**: **Manual** operating mode
    - **MDI**: **MDI** application in **Manual** operating mode
    - **RUN**: **Program Run** operating mode
    - **SGL**: **Single Block** mode of the **Program Run** operating mode
  - **MA**: Switching the magazine pockets

Handwheel resolution

The handwheel sensitivity specifies the distance an axis moves per handwheel revolution. The handwheel sensitivity results from the defined handwheel speed of the axis and the speed level used internally by the control. The speed level describes a percentage of the handwheel speed. The control calculates a specific handwheel sensitivity value for each speed level. The resulting handwheel sensitivity values are directly selectable with the handwheel arrow keys (only if incremental jog is not active).

The handwheel speed indicates the increment (e.g., 0.01 mm) traversed per handwheel detent position. You can change the handwheel speed with the handwheel's arrow keys.

If you have defined a handwheel speed of 1, the following handwheel resolutions are available:

Resulting handwheel sensitivity levels in mm/revolution and degrees/revolution:  
0.0001/0.0002/0.0005/0.001/0.002/0.005/0.01/0.02/0.05/0.1/0.2/0.5/1

Resulting handwheel sensitivity levels in inches/revolution:  
0.000127/0.000254/0.000508/0.00127/0.00254/0.00508/0.0127/0.0254/0.0508/0.127/0.254/0.508

Examples for resulting handwheel sensitivity values:

Defined handwheel speed	Speed level	Resulting handwheel sensitivity
10	0.01%	0.001 mm/revolution
10	0.01%	0.001 degrees/revolution
10	0.0127%	0.00005 inches/revolution

Effect of the feed-rate potentiometer when handwheel is active

**NOTICE**

**Caution: Possible damage to the workpiece!**  
When toggling between the machine operating panel and the handwheel, the feed rate may be reduced. This can cause visible marks on the workpiece.  
► Make sure to retract the tool before toggling between the handwheel and the machine operating panel.

The settings of the feed-rate potentiometer on the handwheel may differ from those on the machine operating panel. When you activate the handwheel, the control automatically activates the feed-rate potentiometer of the handwheel. When you deactivate the handwheel, the control automatically activates the feed-rate potentiometer of the machine operating panel.

In order to make sure that the feed rate does not increase while you switch between the potentiometers, the feed rate is either frozen or reduced.

If the feed rate before switching is higher than the feed rate after switching, the control automatically reduces the feed rate to the smaller value.

If the feed rate before switching is less than the feed rate after switching, the control automatically freezes the feed rate. In this case, you must turn the feed-rate potentiometer back to the previous value because the activated feed-rate potentiometer will only then be effective.

### 21.1.1 Entering spindle speed S

To enter the spindle speed **S** by using an electronic handwheel:

- ▶ Press the handwheel soft key **F3 (MSF)**
- ▶ Press the handwheel soft key **F2 (S)**
- ▶ Select the desired spindle speed by pressing the **F1** or **F2** key
- ▶ Press the **NC Start** key
- The control activates the entered spindle speed.



If you press and hold the **F1** or **F2** key, the control will increase the counting increment by a factor of 10 each time it reaches a decimal value of 0.

By additionally pressing the **CTRL** key, you can increase the counting increment by a factor of 100 when pressing **F1** or **F2**.

### 21.1.2 Entering the feed rate F

To enter the feed rate **F** by using an electronic handwheel:

- ▶ Press the handwheel soft key **F3 (MSF)**
- ▶ Press the handwheel soft key **F3 (F)**
- ▶ Select the desired feed rate by pressing the **F1** or **F2** key
- ▶ Load the new feed rate F with the handwheel soft key **F3 (OK)**



If you press and hold the **F1** or **F2** key, the control will increase the counting increment by a factor of 10 each time it reaches a decimal value of 0.

By additionally pressing the **CTRL** key, you can increase the counting increment by a factor of 100 when pressing **F1** or **F2**.


### 21.1.3 Entering miscellaneous functions M

To enter a miscellaneous function by using an electronic handwheel:

- ▶ Press the handwheel soft key **F3 (MSF)**
- ▶ Press the handwheel soft key **F1 (M)**
- ▶ Select the desired M function number by pressing the **F1** or **F2** key
- ▶ Press the **NC Start** key
- The control activates the miscellaneous function



**Further information:** User's Manual for Programming and Testing

### 21.1.4 Creating a positioning block



Refer to your machine manual.  
Your machine manufacturer can assign any function to the **Generate NC block** handwheel key.

To create a positioning block by using an electronic handwheel:


- 
  - ▶ Select the **Manual** operating mode
  - ▶ Select the **MDI** application
  - ▶ If necessary, select the NC block after which the positioning block should be inserted
  - ▶ Activate the handwheel
- 
  - ▶ Press the **Generate NC block** key on the handwheel
  - ▶ The control inserts a straight line **L**, including all of the axis positions.

### 21.1.5 Incremental jog positioning

Incremental jog positioning allows you to move the selected axis by a preset value.


To incrementally position an axis by using an electronic handwheel:

- ▶ Press the handwheel soft key F2 (**STEP**)
- ▶ Press the handwheel soft key 3 (**ON**)
- ▶ The control activates incremental jog positioning.
- ▶ Set the desired jog increment by using the **F1** or **F2** keys



The smallest possible increment is 0.0001 mm (0.00001 inches). The largest possible increment is 10 mm (0.3937 inches).

- ▶ Confirm the selected jog increment by pressing the handwheel soft key F4 (**OK**)
- ▶ Use the **+** or **-** handwheel key to move the active handwheel axis in the corresponding direction
- ▶ The control moves the active axis by the entered increment every time the handwheel key is pressed.



If you press and hold the **F1** or **F2** key, the control will increase the counting increment by a factor of 10 each time it reaches a decimal value of 0.

By additionally pressing the **CTRL** key, you can increase the counting increment by a factor of 100 when pressing **F1** or **F2**.

## Notes

### DANGER

#### Caution: hazard to the user!

Unsecured connections, defective cables, and improper use are always sources of electrical dangers. The hazard starts when the machine is powered up!

- ▶ Devices should be connected or removed only by authorized service technicians
- ▶ Only switch on the machine via a connected handwheel or a secured connection

### NOTICE

#### Caution: Danger to the tool and workpiece!

The wireless handwheel triggers an emergency stop reaction if the radio transmission is interrupted, the battery is fully empty, or if there is a defect. Emergency stop reactions during machining can cause damage to the tool or workpiece.

- ▶ Place the handwheel in the handwheel holder when it is not in use
- ▶ Keep the distance between the handwheel and the handwheel holder small (pay attention to the vibration alarm)
- ▶ Test the handwheel before machining

- The machine manufacturer can provide additional functions for the HR5xx handwheels.  
Refer to your machine manual.
- You can use the axis keys to activate the **X**, **Y**, and **Z** axes, as well as three other axes that can be defined by the machine manufacturer. Your machine manufacturer can also place the virtual axis **VT** on one of the free axis keys.
- If the handwheel is active, the control shows a symbol next to the selected axis in the **Positions** workspace. The symbol indicates whether you can move the axis with the handwheel.

**Further information:** "The Positions workspace", Page 121



Refer to your machine manual.

The machine manufacturer defines which axes you can move with the handwheel.

21.2 HR 550FS wireless handwheel

Application

With the HR 550FS wireless handwheel and its radio transmission characteristics, you can move farther away from the machine operating panel than with other handwheels. The HR 550FS wireless handwheel thus provides an important benefit, in particular for large machines.

Description of function

The HR 550FS wireless handwheel comes fitted with a rechargeable battery. The battery starts charging when you place the handwheel into the holder. The HRA 551FS handwheel holder and the HR 550FS handwheel together form one function unit.




HR 550FS handwheel



HRA 551FS handwheel holder

The HR 550FS handwheel can be operated by battery for up to eight hours before it needs recharging. A completely discharged handwheel takes approx. three hours for a full charge. When you do not use the HR 550FS, always place it into the handwheel holder. This charges the handwheel battery constantly and a direct connection with the emergency-stop circuit is provided.

When the handwheel is in its holder, it provides the same functionality as during radio mode. This allows you to use a completely discharged handwheel.



Clean the contacts of the handwheel holder and handwheel regularly to ensure their proper functioning.

If the control has triggered an emergency stop, you must reactivate the handwheel.

**Further information:** "Reactivating the handwheel", Page 520

If you happen to get close to the limit of the transmission range, the HR 550FS will set off a vibrating alarm. If this occurs, you must reduce the distance to the handwheel holder.



**Note****⚠ DANGER****Caution: hazard to the user!**

Wireless handwheels, due to their rechargeable batteries and the influence of other wireless devices, are more susceptible to interference than cable-bound connections are. Ignoring the requirements for and information about safe operation leads to endangerment of the user, for example during installation or maintenance work.

- ▶ Check the radio connection of the handwheel for possible overlapping with other wireless devices
- ▶ Switch off the wireless handwheel and the handwheel holder after an operating time of 120 hours at the latest so that the control can run a functional test when it is restarted
- ▶ If more than one wireless handwheel is being used in a workshop, then ensure an unambiguous assignment between the handwheels and the handwheel holders (such as with color-coded stickers)
- ▶ If more than one wireless handwheel is being used in a workshop, then ensure an unambiguous assignment between the handwheels and the respective machine (such as with a functional test)

## 21.3 The Configuration of wireless handwheel window

**Application**


The **Configuration of wireless handwheel** window shows the connection data of the HR 550FS wireless handwheel and provides various functions for optimizing the radio connection, such as setting the radio channel.

**Related topics**

- Electronic handwheel  
**Further information:** "Electronic Handwheel", Page 507
- HR 550FS wireless handwheel  
**Further information:** "HR 550FS wireless handwheel", Page 516

Description of function

Use the **Set Up Wireless Handwheel** menu item to open the **Configuration of wireless handwheel** window. The menu item is in the **Machine Settings** group of the **Settings** application.

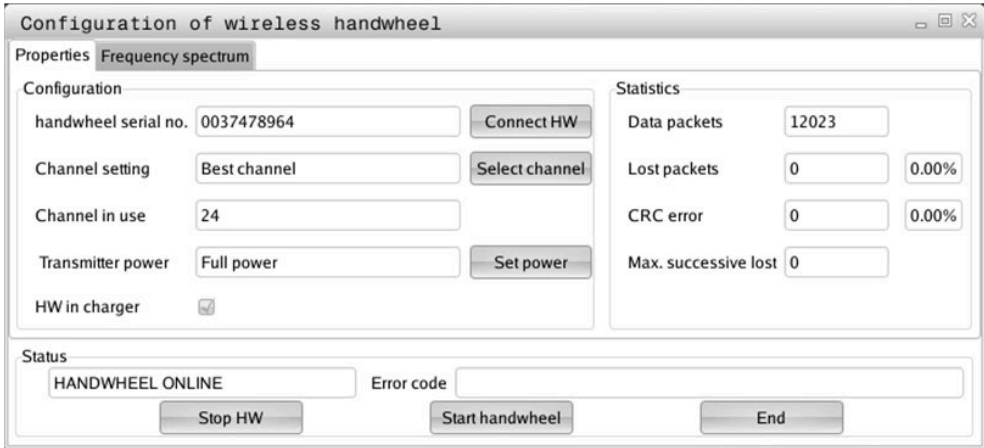

Areas of the Configuration of wireless handwheel window

The Configuration area

In the **Configuration** area, the control displays different types of information about the connected wireless handwheel, such as the serial number.

The Statistics area

In the **Statistics** area, the control displays information about the transmission quality.

If the received signal quality is impaired and no longer ensures a perfect, safe stop of the axes, the wireless handwheel will perform an emergency stop.

A high value under **Max. successive lost** is an indication of a limited quality of reception. If the control repeatedly displays values greater than 2 during normal operation of the wireless handwheel within the desired range of use, there is a high risk of undesired disconnection.

If this occurs, try to improve the transmission quality by selecting a different channel or by increasing the transmitter power.

**Further information:** "Setting the radio channel", Page 520

**Further information:** "Selecting the transmission power", Page 519

The Status area

In the **Status** area, the control displays the current status of the handwheel, such as **HANDWHEEL ONLINE** and pending error messages concerning the connected handwheel.

### 21.3.1 Assigning a handwheel to a handwheel holder

In order to assign a handwheel to a handwheel holder, the handwheel holder must be connected to the control hardware.

To assign a handwheel to a handwheel holder:

- ▶ Place the handwheel into the handwheel holder



- ▶ Select the **Home** operating mode



- ▶ Select the **Settings** application



- ▶ Select the **Machine Settings** group



- ▶ Double-tap or double-click the **Set Up Wireless Handwheel** menu item
- > The control opens the **Configuration of wireless handwheel** window.
- ▶ Select the **Connect HW** button
- > The control saves the serial number of the inserted wireless handwheel and displays it in the configuration window to the left of the **Connect HW** button.
- ▶ Select the **END** button
- > The control saves the configuration.

### 21.3.2 Selecting the transmission power

If you reduce the transmission power, the range of the wireless handwheel will decrease.


To set the transmission power of the handwheel:



- ▶ Open the **Configuration of wireless handwheel** window
- ▶ Select the **Set power** button
- > The control displays the three available power settings.
- ▶ Select the desired transmission power setting
- ▶ Select the **END** button
- > The control saves the configuration.

21.3.3 Setting the radio channel

If the wireless handwheel is started automatically, then the control tries to select the radio channel providing the best radio signal.

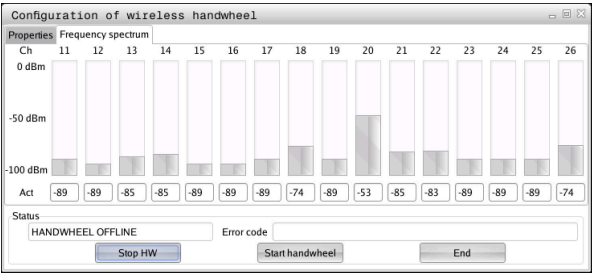

To set the radio channel manually:



- ▶ Open the **Configuration of wireless handwheel** window
- ▶ Select the **Frequency spectrum** tab
- ▶ Select the **Stop HW** button
- The control stops the connection to the wireless handwheel and determines the current frequency spectrum for all 16 available channels.
- ▶ Note the number of the channel with the least amount of radio traffic



The smallest bar indicates the channel with the least amount of radio traffic.

- ▶ Select the **Start handwheel** button
- The control restores the connection to the wireless handwheel.
- ▶ Select the **Properties** tab
- ▶ Select the **Select channel** button
- The controls shows all available channel numbers.
- ▶ Select the number of the channel with the least amount of radio traffic
- ▶ Select the **END** button
- The control saves the configuration.

21.3.4 Reactivating the handwheel

To reactivate the handwheel:



- ▶ Open the **Configuration of wireless handwheel** window
- ▶ Use the **Start handwheel** button to reactivate the wireless handwheel
- ▶ Select the **END** button

## 22 Override Controller

### Application

The override controller is an operating element with additional functions compared to a usual override potentiometer.

In conjunction with the override controller, the control gives you the following possibilities:


- Use the dial to manipulate the feed rate and/or rapid traverse
- Start NC programs with the integrated **NC Start** button
- Receive tactile responses through vibrations
- Use breakpoints to define conditional stops
- Resume the NC program by increasing the override

### Requirements

- Override controller OC 310  
The availability of the Override Controller depends on the machine.  
Refer to your machine manual.
- Control is fully booted  
The control only detects the override controller once the machine control voltage has been acknowledged.
- Tool inspection has been performed  
**Further information:** "The Tool check column in the Program workspace",  
Page 217

Description of function

Elements of the override controller

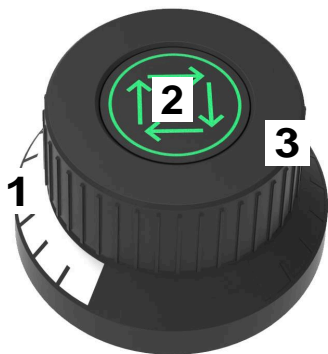

The override controller consists of the following elements:

- 1   Override scale  
The override scale is illuminated in color up to the current override value.  
**Further information:** "Visual feedback from the override controller",  
Page 522
- 2   The **NC Start** button  
The **NC Start** button starts the NC program.  
Depending on the setting in the **Program run options** window, the  
NC program can be continued with the **NC Start** button.
- 3   Dial  
Use the dial to change the override for the feed rate and/or rapid traverse.  
Depending on the setting in the **Program run options** window, the  
NC program can be continued with the Override.

Visual feedback from the override controller

The override controller uses the following visual feedback:

Status	Override scale
Override Controller not active (e.g., because of an emergency stop)	Not illuminated
Override value of 0%	Not illuminated
Override value between 0% and 99.5%	White
Override value of 100%	Green
Override value greater than 100.5%	Blue


The **NC Start** button lights up green. The actual color may differ, depending on the machine.

**Tactile feedback from the override controller**

The override controller uses the following tactile feedback:

Status	Acknowledgment
Minimum or maximum override value	The override controller vibrates as soon as the minimum or maximum override value is reached.
Override value of 100%	The override controller vibrates as soon as the override value is at 100%.
Stop at the breakpoint	The override controller vibrates as soon as the control stops at a breakpoint.

The Program run options window

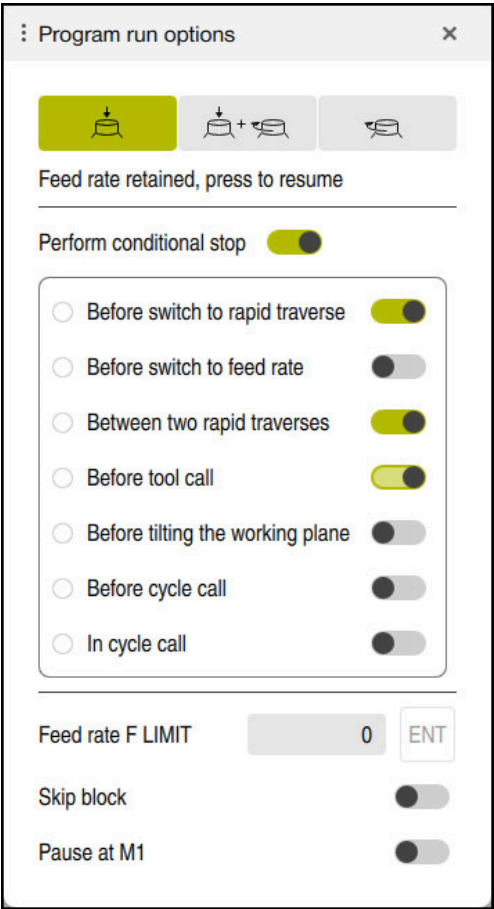
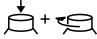


The **Program run options** window



You can open the **Program run options** window as follows:

- In the **Program Run** operating mode with the **Program run options** button  
**Further information:** "Icons and buttons", Page 414
- In the **Simulation** workspace with the **Program run options** toggle switch in the **Visualization options** column  
**Further information:** User's Manual for Programming and Testing

The following settings of the **Program run options** window are relevant for the override controller:

Icon or button	Meaning
	<b>Feed rate retained, press to resume</b> When this button is active, the control does not change the override value when stopping at a breakpoint. Continue the NC program by pushing the <b>NC Start</b> button.
	<b>Feed rate set to 0%, press and turn to resume</b> When this button is active, the control changes the override value to 0% when stopping at a breakpoint. Continue the NC program by pushing the <b>NC Start</b> button and increasing the override value.



Icon or button	Meaning
	<p><b>Feed rate set to 0%, turn to resume</b></p> <p>When this button is active, the control changes the override value to 0% when stopping at a breakpoint. Continue the NC program by increasing the override value.</p> <div>  Refer to your machine manual.  The machine manufacturer uses the optional machine parameter <b>resumeByTurning</b> (no. 141801) to define if this button is available. </div>

**Perform conditional stop** Toggle switch for activating and deactivating breakpoints  
**Further information:** "Breakpoints", Page 525

- i** The following functions are available also without the override controller:
- **Feed rate F LIMIT**  
**Further information:** "Feed rate limit F LIMIT", Page 416
  - **Skip block**  
**Further information:** User's Manual for Programming and Testing
  - **Pause at M1**  
**Further information:** User's Manual for Programming and Testing

### Breakpoints

The control offers the following breakpoints:

Breakpoint	Meaning
<b>Before switch to rapid traverse</b>	The control stops at each change from the feed rate <b>F</b> to rapid traverse <b>FMAX</b> .
<b>Before switch to feed rate</b>	The control stops at each change from rapid traverse <b>FMAX</b> to the feed rate <b>F</b> .
<b>Between two rapid traverses</b>	The control stops between two directly sequential <b>FMAX</b> rapid traverse movements.
<b>Before tool call</b>	<p>The control stops before every physical tool call with <b>TOOL CALL</b>.</p> <div> <b>i</b> The control does not stop, for example, before a <b>TOOL CALL</b> that simply changes the spindle speed. </div>
<b>Before tilting the working plane</b>	<p>The control stops before NC blocks with the following syntax elements:</p> <ul style="list-style-type: none"> <li>■ <b>PLANE</b> functions (#8 / #1-01-1)</li> <li>■ <b>M128</b> (#9 / #4-01-1)</li> <li>■ <b>FUNCTION TCPM</b> (#9 / #4-01-1)</li> <li>■ Cycle <b>19 WORKING PLANE</b> (#8 / #1-01-1)</li> </ul> <div> <b>i</b> You can still run NC programs from earlier controls that contain Cycle <b>19 WORKING PLANE</b>. </div>



Breakpoint	Meaning
Before cycle call	<p>The control stops before NC blocks with the following syntax elements:</p> <ul style="list-style-type: none"> <li>■ <b>M89</b> The control stops before each machining position.</li> <li>■ <b>M99</b></li> <li>■ <b>CYCL CALL</b></li> <li>■ <b>CYCL CALL POS</b></li> <li>■ <b>CYCL CALL PAT</b> The control stops before each machining position.</li> <li>■ Cycles <b>220 POLAR PATTERN</b>, <b>221 CARTESIAN PATTERN</b>, <b>224 DATAMATRIX CODE PATTERN</b> The control stops before each machining position.</li> </ul>
In cycle call	<p><b>Stop before the first infeed</b></p> <p>In the cycles below, the control stops before the first infeed:</p> <ul style="list-style-type: none"> <li>■ Cycles for drilling and thread machining <b>Further information:</b> User's Manual for Machining Cycles</li> <li>■ Cycle <b>255 ENGRAVING</b> <b>Further information:</b> User's Manual for Machining Cycles</li> <li>■ Cycle <b>292 CONTOUR.TURNG.INTERP.</b> (#96 / #7-04-1) Only when the spindle is engaged <b>Further information:</b> User's Manual for Machining Cycles</li> <li>■ Cycles for Grinding (#156 / #4-04-1) (#156 / #4-04-1) <b>Further information:</b> User's Manual for Machining Cycles</li> </ul> <hr/> <p><b>Stop before every infeed</b></p> <p>In the cycles below, the control stops before every infeed:</p> <ul style="list-style-type: none"> <li>■ Milling Cycles <b>Further information:</b> User's Manual for Machining Cycles</li> <li>■ Cycles for gear cutting (#157 / #4-05-1) <b>Further information:</b> User's Manual for Machining Cycles</li> </ul> <hr/> <p><b>Isolated case</b></p> <p>The control stops in Cycle <b>291 COUPLG.TURNG.INTERP.</b> (#96 / #7-04-1) after engaging the spindle. <b>Further information:</b> User's Manual for Machining Cycles</p> <hr/> <p><b>No stop</b></p> <p>The control will not stop in the following cycles:</p> <ul style="list-style-type: none"> <li>■ Programmable touch probe cycles <b>Further information:</b> User's Manual for Measuring Cycles for Workpieces and Tools</li> <li>■ Mill-Turning Cycles (#50 / #4-03-1) <b>Further information:</b> User's Manual for Machining Cycles</li> <li>■ Cycle <b>239 ASCERTAIN THE LOAD</b> (#143 / #2-22-1) <b>Further information:</b> User's Manual for Machining Cycles</li> <li>■ Cycle <b>238 MEASURE MACHINE STATUS</b> (#155 / #5-02-1) <b>Further information:</b> User's Manual for Machining Cycles</li> </ul>

The control displays active breakpoints on the **PGM** tab of the **Status** workspace.

**Further information:** "PGM tab", Page 136

## Displaying breakpoints

The control displays breakpoints with the following icons:

Icon	Meaning
	Active stop The control has detected a breakpoint and stops program run or the simulation at this point.
	Inactive stop The control has detected a breakpoint but does not stop program run or the simulation at this point. In order to stop before this NC block, you must first activate the corresponding toggle switch in the <b>Program run options</b> window. <b>Further information:</b> "The Program run options window", Page 524

The control displays the icons for breakpoints in the NC program before the block number as soon as at least one conditional stop is active in the **Program run options** window.

When you select an icon, the control displays the name of the associated breakpoint.

## Notes

- The override controller is also effective as a feed rate and/or rapid traverse override in the **Manual** operating mode.
- If the NC program contains breakpoints, the control displays a check mark in the **Perform conditional stop** area of the **Tool check** column.  
**Further information:** "The Tool check column in the Program workspace", Page 217
- If you turn the override controller down with a sudden jerk, the control will automatically set the override value to 0%, even if the override controller has not reached that position.
- When the execution cursor reaches a breakpoint, the two icons overlap so you can see why the control stops.
- If the **Feed rate set to 0%, turn to resume** button is active, the control reacts as follows:
  - You can continue the NC program only following a conditional stop and by increasing the override value. Otherwise an **NC Start** is necessary (e.g., when starting a program).
  - When the NC program includes two subsequent conditional stops, the 0% override value cannot be changed for 0.3 seconds. This way, the control ensures that you will not continue beyond both conditional stops by just one movement of the Override Controller.
  - After a conditional stop with a manual tool change you must press the **NC Start** button. You can't continue the NC program by increasing the override value.

**Notes about machine parameters**

Refer to your machine manual.

- The machine manufacturer defines the maximum override value for rapid traverse. If the maximum override value is, for example, 100% and you enter a rapid-traverse override value greater than 100%, the control still calculates with 100%. If you turn the dial down in this case, then there is no immediate effect. Only once the override controller actually reaches 100% will the control change the override value.
- The machine manufacturer can use the optional machine parameter **ocWaitTime** (no. 103412) to define whether a waiting time will be effective in the cases below:
  - When the program is continued at 0% after a breakpoint
  - When 100% of the override value is reached

# 23

**Embedded  
Workspace  
and Extended  
Workspace**

## 23.1 Embedded Workspace (#133 / #3-01-1)

### Application

You use Embedded Workspace to operate a Windows PC and display its screen contents on the control's user interface. You use Remote Desktop Manager to connect the Windows PC (#133 / #3-01-1).

### Related topics

- Remote Desktop Manager (#133 / #3-01-1)

**Further information:** "The Remote Desktop Manager window (#133 / #3-01-1)", Page 583

- Using Extended Workspace to operate a Windows PC through an additional connected monitor

**Further information:** "Extended Workspace", Page 532

### Requirements

- Established RemoteFX connection to the Windows PC through Remote Desktop Manager (#133 / #3-01-1)
- Connection defined in the machine parameter **CfgRemoteDesktop** (no. 133500)  
In the optional machine parameter **connections** (no. 133501), the machine manufacturer enters the name of the RemoteFX connection.  
Refer to your machine manual.

## Description of function

Embedded Workspace is available on the control as an operating mode and as a workspace. If the machine manufacturer does not define a name, then the operating mode and workspace are both named **RDP**.


Entries cannot be made through the Windows PC as long as the RemoteFX connection is active. This avoids the problem of conflicting operation.

**Further information:** "Windows Terminal Service (RemoteFX)", Page 584

If you open Embedded Workspace as an operating mode, the control displays a full-screen version of the Windows PC user interface in it.

If you open Embedded Workspace as a workspace, you can change the size and position of the workspace as you wish. The control rescales the user interface of the Windows PC after each modification.

**Further information:** "Workspaces", Page 91

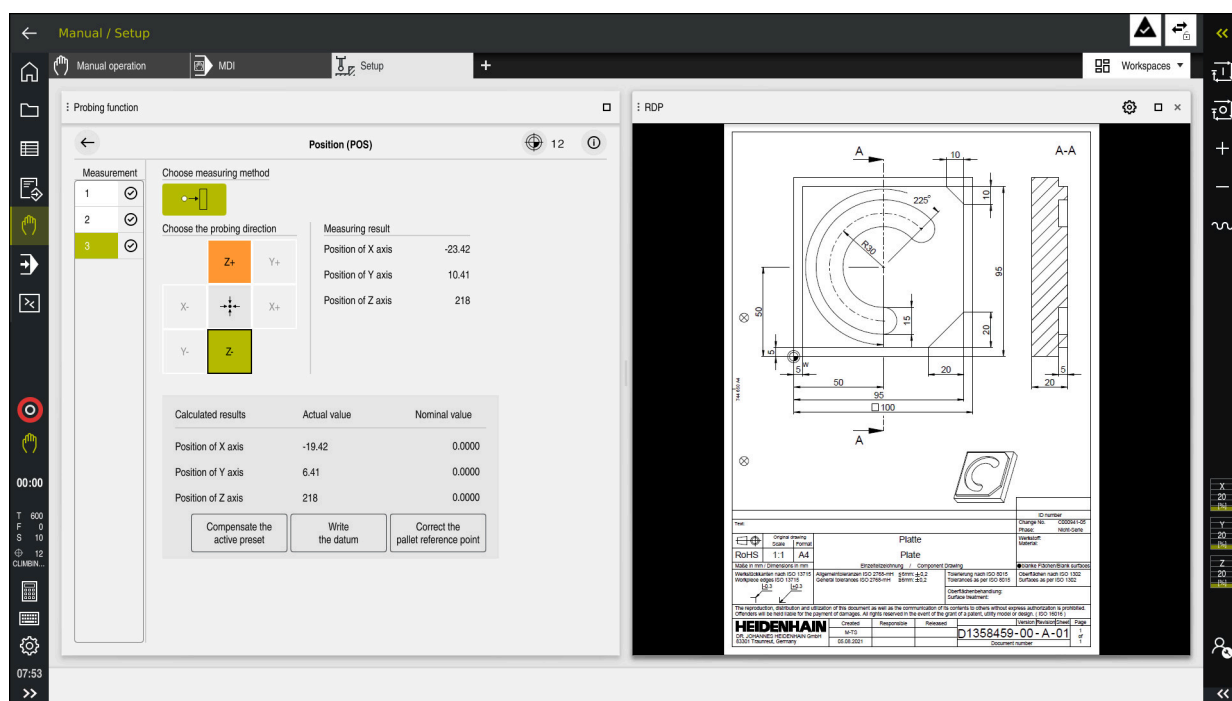

Embedded Workspace as workspace with opened PDF file

## The RDP settings window

If Embedded Workspace is open as a workspace, you can open the **RDP settings** window.

The **RDP settings** window contains the following buttons:

Button	Meaning
<b>Reconnect</b>	<p>If the control could not establish a connection to the Windows PC, for example due to a timeout, press this button to try again.</p> <p>The control can also display this button in the operating mode and the workspace.</p>
<b>Adjust resolution</b>	<p>With this button the control rescales the user interface of the Windows PC to the size of the workspace.</p>

## 23.2 Extended Workspace

### Application

With Extended Workspace you can use an additional attached monitor as a second screen of the control. That way you can use the additional monitor independently of the control's user interface and also to show the control's applications.

### Related topics

- Using Embedded Workspace to operate a Windows PC within the control's user interface (#133 / #3-01-1)

**Further information:** "Embedded Workspace (#133 / #3-01-1)", Page 530

- ITC hardware expansion

**Further information:** "Hardware enhancements", Page 86

### Requirement

- Additional attached monitor configured by the machine manufacturer as Extended Workspace  
Refer to your machine manual.

### Description of function

Here are some functions you can perform with Extended Workspace:

- Opening files from the control (e.g., drawings)
- Opening windows from HEROS functions in addition to the control's user interface

**Further information:** "HEROS menu", Page 632

- Displaying and operating computers connected through Remote Desktop Manager (#133 / #3-01-1)

**Further information:** "The Remote Desktop Manager window (#133 / #3-01-1)", Page 583



# 24

**Integrated  
Functional Safety  
(FS)**

## Application

The safety concept of integrated functional safety (FS) for machines with HEIDENHAIN controls offers supplementary software safety functions in addition to the mechanical safety features of the machine. For example, the integrated safety concept automatically reduces the feed rate when you perform operations with open guard doors. The machine manufacturer can modify or expand the FS safety concept.

## Requirements

- On controls with **SIK1**:
  - Integrated functional safety (FS, basic version; software option 160) or Integrated functional safety (FS, full version; software option 161)
  - Software options 162 to 166 or software option 169, if necessary  
Whether you need these software options depends on the machine's number of drives.
- On controls with **SIK2**:
  - Software option FS, basic version (#6-30-1)
  - Software option FS, Safe axes (#6-30-2), if applicable  
If your control is equipped with **SIK2**, software option #6-30-1 will enable four safe axes. You can order software option #6-30-2\* multiple times and thus enable up to six additional safe axes.
- The machine manufacturer must adapt the FS safety concept to the machine.

## Description of function

Every machine tool user is exposed to certain risks. While protective devices can prevent access to dangerous locations, the user must also be able to work on the machine without this protection (e.g., guard door opened).

## Safety functions

To ensure that the requirements for operator protection are met, integrated functional safety (FS) provides standardized safety functions. The machine manufacturer uses the standardized safety functions for implementing functional safety (FS) for the machine in question.

You can track the active safety functions in the axis status of functional safety (FS).

**Further information:** "The Axis status menu item", Page 537

Description	Meaning	Short description
<b>SS0, SS1, SS1D, SS1F, SS2</b>	Safe Stop	Safe stopping of drives using different methods
<b>STO</b>	Safe Torque Off	The power supply to the motor is interrupted. Provides protection against unexpected start of the drives
<b>SOS</b>	Safe Operating Stop	Safe operating stop. Provides protection against unexpected start of the drives
<b>SLS</b>	Safely Limited Speed	Safely limited speed. Prevents the drives from exceeding the specified speed limits when the protective door is opened
<b>SLP</b>	Safely Limited Position	Safely limited position. Monitors safe axes to keep them within the limit values of a defined area
<b>SBC</b>	Safe Brake Control	Dual-channel control of the motor holding brakes

## Safety-related operating modes of functional safety (FS)

Functional safety (FS) of a control offers various safety-related operating modes. The safety-related operating mode with the lowest number has the highest safety level.

Depending on how the machine manufacturer implements them, the following safety-related operating modes are available:



Refer to your machine manual.

The machine manufacturer must adapt the safety-related operating modes to each machine.


Icon	Safety-related operating mode	Short description
<b>SOM<sub>1</sub></b>	Operating mode <b>SOM_1</b>	Safe operating mode 1: Automatic mode, production mode
<b>SOM<sub>2</sub></b>	Operating mode <b>SOM_2</b>	Safe operating mode 2: Setup mode
<b>SOM<sub>3</sub></b>	Operating mode <b>SOM_3</b>	Safe operating mode 3: Manual intervention; only for qualified users
<b>SOM<sub>4</sub></b>	Operating mode <b>SOM_4</b> This function must be enabled and adapted by the machine manufacturer.	Safe operating mode 4: Advanced manual intervention, process monitoring, only for qualified users

Functional safety FS in the Positions workspace

On a control with functional safety (FS), the monitored operating states of the speed **S** and feed rate **F** are displayed in the **Positions** workspace. If a safety function is triggered while in a monitored state, the control stops the feed movement and the spindle or reduces the speed (e.g., if a guard door is opened).

**Further information:** "Axis display and position display", Page 122

The Functional safety application



Refer to your machine manual.  
The machine manufacturer configures the safety functions in this application.

In the **Functional safety** application in the **Home** operating mode, the control provides information about the status of the individual safety functions. In this application you can see whether individual safety functions are active and have been accepted by the control.

Start/Login Settings Help FS Functional safety Workspaces

Overview

DB ID	Key name	Accepted	CRG	Active
59	CtgSafety	✗	0xd9e982f	✓
60	CtgPtcSafety	✗	0x77c09a9b	✓
58	CtgApParSafety HSE-V9_X_K00_E00	✗	0xd1c39f10	✓
62	CtgMotParSafety HSE-V9_X_K00_E00	✗	0x55a79a2b	✓
85	CtgApParSafety HSE-V9_Y_K00_E00	✓	0xd43a109f	✓
64	CtgMotParSafety HSE-V9_Y_K00_E00	✓	0x42531a0	✓
65	CtgApParSafety HSE-V9_Z_K00_E00	✓	0xd8299386	✓
66	CtgMotParSafety HSE-V9_Z_K00_E00	✓	0xd98fa2a8	✓
67	CtgApParSafety HSE-V9_B_K00_E00	✓	0xb49b9c9e	✓
68	CtgMotParSafety HSE-V9_B_K00_E00	✓	0x2ca6d1d3	✓
69	CtgApParSafety HSE-V9_C_K00_E00	✗	0xbdd5c095	✓
70	CtgMotParSafety HSE-V9_C_K00_E00	✗	0xb51bda7d	✓
71	CtgApParSafety HSE-V9_U_K00_E00	✓	0x4a21405b	✓
72	CtgMotParSafety HSE-V9_U_K00_E00	✓	0xd69f5508	✓

FS config overview

The **Overview** workspace in the **Functional safety** application

## The Axis status menu item

In the **Axis status** menu item of the **Settings** application, the control provides the following information about the status of the individual axes:

Field	Meaning
<b>Axis</b>	Configured axes of the machine
<b>State</b>	Active safety function
<b>Stop</b>	Stop reaction <b>Further information:</b> "Functional safety FS in the Positions workspace", Page 536
<b>SLS2</b>	Maximum speed or feed-rate values for <b>SLS</b> in the <b>SOM_2</b> operating mode
<b>SLS3</b>	Maximum speed or feed-rate values for <b>SLS</b> in the <b>SOM_3</b> operating mode
<b>SLS4</b>	Maximum speed or feed-rate values for <b>SLS</b> in the <b>SOM_4</b> operating mode This function must be enabled and adapted by the machine manufacturer.
<b>Vmax_act</b>	Currently valid speed or feed-rate limit These are either values from the <b>SLS</b> settings or from the SPLC If values are greater than 999 999, the control displays <b>MAX</b> .

The screenshot shows the 'Settings' application with the 'Functional safety' tab selected. The 'Axis status' menu item is highlighted, displaying a table of functional safety parameters. The table includes columns for Axis, State, Stop, SLS2, SLS3, SLS4, and Vmax\_act. The active safe operating mode is 3.

Axis	State	Stop	SLS2	SLS3	SLS4	Vmax_act
X	✓ SOS	NONE	2000.0	5000.0	0.0	0.0 mm/min
Y	✓ SOS	NONE	2000.0	5000.0	0.0	0.0 mm/min
Z	✓ SOS	NONE	2000.0	5000.0	0.0	0.0 mm/min
B	✓ SOS	NONE	0.5	1.3	0.0	0.0 rpm
C	⚠ SOS	NONE	1.0	2.5	0.0	0.0 rpm
U	✓ SOS	NONE	2000.0	5000.0	0.0	0.0 mm/min
V	⚠ SOS	NONE				0.0 mm/min
S1	⚠ STO	SS1	700.0	1500.0	400.0	0.0 rpm

The **Axis status** menu item in the **Settings** application

Test status of the axes




In order for the control to ensure safe operation of the axes, it checks all monitored axes when the machine is switched on.

The control checks whether the position of an axis matches the position directly after shutdown. If a deviation is detected, the control marks the respective axis in the position display with a red warning triangle.


If checking of individual axes fails when starting the machine, you can check the axes manually.

**Further information:** "Checking axis positions manually", Page 539

The control indicates the test status of the individual axes with the following icons:

Icon	Meaning
	The axis has been tested or does not need to be tested.
	<p>The axis has not been tested, but must be tested to ensure safe operation.</p> <p><b>Further information:</b> "Checking axis positions manually", Page 539</p>
	<p>The axis is not monitored by functional safety (FS) or is not configured as a safe axis.</p> <p>The axis is monitored by functional safety (FS), but the <b>SLP</b> safety function is deactivated.</p> <p>In machine parameter <b>safeAbsPosition</b> (no. 403130), the machine manufacturer defines whether the <b>SLP</b> safety function is activated for an axis.</p>


Feed-rate limiting with functional safety (FS)



Refer to your machine manual.  
This function must be adapted by your machine manufacturer.

With the **F limited** toggle switch you can prevent the SS1 reaction for safe stopping of drives when the guard door is opened.

With the **F limited** toggle switch the control limits the speed of the axes and rotational speed of the spindle to the values defined by the machine manufacturer. The limitation depends on the active safety-related SOM\_x operating mode. You can select the safety-related operating mode with the keylock switch.



In the safety-related operating mode SOM\_1, the control stops the axes and spindles when the guard door is opened.

In the **Positions** and **Status** workspaces, the feed rate is displayed in orange.

**Further information:** "POS tab", Page 137

## 24.1 Checking axis positions manually



Refer to your machine manual.

This function must be adapted by your machine manufacturer.

The machine manufacturer defines the test position.

To check the position of an axis:



- ▶ Select the **Manual** operating mode

- ▶ Select **Approach test position**

- > The control displays the axes that have not been tested in the **Positions** workspace.

- ▶ Select the desired axis in the **Positions** workspace

- ▶ Press the **NC start** key



- > The axis moves to the test position.

- > After the test position has been reached, the control issues a message.

- ▶ Press the **permissive button** on the machine operating panel

- > The control displays the axis as a tested axis.

### NOTICE

#### Danger of collision!

The control does not automatically check whether collisions can occur between the tool and the workpiece. Incorrect pre-positioning or insufficient spacing between components can lead to a risk of collision while approaching the test positions.

- ▶ If necessary, move to a safe position before approaching the test positions
- ▶ Watch out for possible collisions

## Notes

- Machine tools with HEIDENHAIN controls may be equipped with integrated functional safety (FS) or with external safety. This chapter refers exclusively to machines with integrated functional safety (FS).
- The machine manufacturer defines the behavior of speed-controlled FS-NC axes while the guard door is open in the machine parameter **speedPosCompType** (no. 403129). The machine manufacturer can allow, for example, switching-on of the spindle and thus enable scratching of the workpiece while the guard door is open. Refer to your machine manual.

















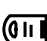






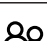


# 25



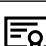

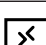


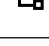
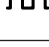









**The Settings  
Application**

## 25.1 Overview

The **Settings** application includes the following groups with menu items:

Icon	Category	Icon	Menu item
	Machine Settings		<b>Machine Settings</b> <b>Further information:</b> "The Machine Settings menu item", Page 545
			<b>General Information</b> <b>Further information:</b> "The General Information menu item", Page 548
			<b>SIK</b> <b>Further information:</b> "The SIK menu item", Page 549
			<b>Machine Times</b> <b>Further information:</b> "The Machine Times menu item", Page 552
			<b>Set Up Touch Probes</b> <b>Further information:</b> "Setting up touch probes", Page 372
			<b>Set Up Wireless Handwheel</b> <b>Further information:</b> "HR 550FS wireless handwheel", Page 516
	Operating System		<b>Date/Time</b> <b>Further information:</b> "The Adjust system time window", Page 553
			<b>Language/Keyboards</b> <b>Further information:</b> "Conversational language of the control", Page 554
			<b>About HeROS</b> <b>Further information:</b> "Information on licensing and use", Page 81
			<b>SELinux</b> <b>Further information:</b> "SELinux security software", Page 555
			<b>UserAdmin</b> <b>Further information:</b> "The User administration window", Page 614
			<b>Current User</b> <b>Further information:</b> "The Active user window", Page 614
			<b>Touchscreen Configuration</b> You can select the touchscreen sensitivity and define whether touch points should be shown or hidden.

Icon	Category	Icon	Menu item
	Network/Remote Access		<b>Shares</b> <b>Further information:</b> "Network drives on the control", Page 556
			<b>Network</b> <b>Further information:</b> "Ethernet interface", Page 559
			<b>PKI Admin</b> Manage certificates for the control (e.g., for <b>OPC UA NC Server</b> ) <b>Further information:</b> "PKI Admin", Page 566
			<b>OPC UA</b> <b>Further information:</b> "OPC UA NC Server (#56-61 / #3-02-1*)", Page 568
			<b>DNC</b> <b>Further information:</b> "The DNC menu item", Page 574
			<b>Embedded Workspace</b> Show the connection status <b>Further information:</b> "Embedded Workspace (#133 / #3-01-1)", Page 530
			<b>Printer</b> <b>Further information:</b> "Printers", Page 576
		vnc	<b>VNC</b> <b>Further information:</b> "The VNC menu item", Page 579
			<b>Remote Desktop Manager</b> <b>Further information:</b> "The Remote Desktop Manager window (#133 / #3-01-1)", Page 583
		vnc 	<b>Real VNC Viewer</b> Define settings for external software accessing the control (e.g., for maintenance purposes); for network specialists
			<b>Firewall</b> <b>Further information:</b> "Firewall", Page 589

Icon	Category	Icon	Menu item
	Diagnostics/Maintenance		<b>Terminal program</b> Enter and execute console commands
			<b>HeLogging</b> Define settings for internal diagnostic files
			<b>Portscan</b> <b>Further information:</b> "Portscan", Page 593
			<b>perf2</b> Check processor load and process load
			<b>NC/PLC Restore</b> <b>Further information:</b> "Backup and restore", Page 593
			<b>TNCdiag</b> <b>Further information:</b> "TNCdiag", Page 596
			<b>TNCscope</b> Software for data recording
			<b>NC/PLC Backup</b> <b>Further information:</b> "Backup and restore", Page 593
			<b>Touchscreen Cleaning</b> The control disables the touchscreen for input for 90 seconds.
	OEM Settings		<b>Update the documentation</b> <b>Further information:</b> "Update the documentation", Page 596
			Settings for the machine manufacturer
	Machine Parameters		The group contains machine parameters that can be edited, depending on your rights (e.g., <b>MPs for setters</b> ). <b>Further information:</b> "Machine parameters", Page 597
	Configurations		<b>Configurations</b> <b>Further information:</b> "Configuring the control's user interface", Page 602
	Functional safety		<b>Axis status</b> <b>Further information:</b> "The Axis status menu item", Page 537
			<b>Safety parameters</b> <b>Further information:</b> "The Functional safety application", Page 536

## 25.2 Code numbers

### Application

The top part of the **Settings** application contains the **Code number:** input field. This input field is accessible from every group.

### Description of function

You can enable the following functions or areas with code numbers:

Code number	Meaning
123	Editing machine-specific user parameters <b>Further information:</b> "Machine parameters", Page 597
555343	Special functions for programming with variables <b>Further information:</b> User's Manual for Programming and Testing Special functions defining the machine behavior <b>Further information:</b> "Special functions defining the machine behavior", Page 671 <b>Further information:</b> User's Manual for Programming and Testing
0	Resetting active code numbers



The control indicates whether the caps lock key is pressed during entry. This helps to avoid incorrect entries.

## 25.3 The Machine Settings menu item

### Application

In the **Machine Settings** menu item of the **Settings** application, you can define the settings for simulation and program run.

### Related topics

- Graphic settings for simulation

**Further information:** User's Manual for Programming and Testing

### Description of function

To navigate to this function:

**Settings** ► **Machine Settings** ► **Machine Settings**

### The Unit of Measure area

In the **Unit of Measure** area you can choose between mm and inch.

- Metric system: e.g. X = 15.789 (mm), the value is displayed to 3 decimal places
- Inch system: e.g. X = 0.6216 (inches), the value is displayed to 4 decimal places

If the display in inches is active, the control also displays the feed rate in inches/min. In an inch-based program, you must multiply the feed rate by 10 before entering it.

### Channel Settings

The control displays the channel settings separately for the **Editor** operating mode and the **Manual** and **Program Run** operating modes.

You can define the following settings:

Setting	Meaning
<b>Active Kinematics</b>	<p>Use the <b>Active Kinematics</b> function to change the kinematics model for the machine and the simulation. This way you can test NC programs that, for example, have been programmed for other machines.</p> <p>The control offers a selection menu with all available kinematics models. The machine manufacturer defines which kinematics models you can choose.</p> <p>The control displays the active kinematics model in the <b>Machine</b> mode of the <b>Simulation</b> workspace.</p>
<b>Generate tool-usage file</b>	<p>The control uses the tool-usage file to check tool usage.</p> <p><b>Further information:</b> "Tool usage test", Page 215</p> <p>You select when the control should generate a tool-usage file:</p> <ul style="list-style-type: none"> <li>■ <b>Never</b> The control does not generate a tool-usage file.</li> <li>■ <b>Once</b> The next time you simulate or run an NC program, the control will generate a tool-usage file once.</li> <li>■ <b>Always</b> When you simulate or run an NC program, the control will generate a tool-usage file each time.</li> </ul>

### Traverse Limits

Use the **Traverse Limits** function to limit the possible traverse path of an axis. You can define traverse limits for each axis (e.g., to protect an indexing head from collision).

The **Traverse Limits** function consists of a table with the following contents:

Column	Meaning
<b>Axis</b>	The TNC displays each axis of the active kinematics model in a row.
<b>Status</b>	If you have defined one or both limits, the control displays the contents <b>Valid</b> or <b>Invalid</b> .
<b>Lower Limit</b>	You define the lower traverse limit of the axis in this column. You can enter up to four decimal places.
<b>Upper Limit</b>	You define the upper traverse limit of the axis in this column. You can enter up to four decimal places.

The defined traverse limits are valid across power cycles of the control, until you delete all values from the table.

The following general conditions apply to the traverse limit values:

- The lower limit must be smaller than the upper limit.
- The upper and lower limit may not both equal 0.

Other conditions apply to traverse limits for modulo axes.

**Further information:** User's Manual for Programming and Testing

## Notes

### NOTICE

#### Danger of collision!

You can also select any stored kinematics model as the active machine kinematics. The control then executes all manual movements and machining operations using the selected kinematics. All subsequent axis movements pose a risk of collision!

- ▶ Use the **Active Kinematics** function for the simulation only
  - ▶ Use the **Active Kinematics** function for selecting the active machine kinematics only if required
- In the optional machine parameter **enableSelection** (no. 205601), the machine manufacturer defines for each kinematics model whether the **Active Kinematics** function can be selected.
  - You can open the tool-usage file in the **Tables** operating mode.  
**Further information:** "Tool usage file", Page 485
  - If the control generated a tool-usage file for an NC program, the **T usage order** and **Tooling list** tables contain data (#93 / #2-03-1).  
**Further information:** "T usage order (#93 / #2-03-1)", Page 487  
**Further information:** "Tooling list (#93 / #2-03-1)", Page 489

25.4 The General Information menu item

Application

In the **General Information** menu item of the **Settings** application, the control provides information about the control and the machine.

Description of function

To navigate to this function:

**Settings** ► **Machine Settings** ► **General Information**

The Version Information area

The control displays the following information:

Sub-area	Meaning
HEIDENHAIN	■ <b>Control Model</b> Designation of the control (managed by HEIDENHAIN)
	■ <b>NC-SW</b> Number of the NC software (managed by HEIDENHAIN)
	■ <b>NCK</b> Number of the NC software (managed by HEIDENHAIN)
PLC	<b>PLC-SW</b> Number or name of the PLC software (managed by the machine manufacturer)

The machine manufacturer can add further software numbers (e.g., that of a connected camera).

The Info about machine manufacturer area

The control shows the contents of the optional machine parameter **CfgOemInfo** (no. 131700). The control displays this area only if the machine manufacturer defines this machine parameter.

**Further information:** "Machine parameters in conjunction with OPC UA", Page 570

The Machine information area

The control shows the contents of the optional machine parameter **CfgMachineInfo** (no. 131600). The control displays this area only if the machine operator defines this machine parameter.

**Further information:** "Machine parameters in conjunction with OPC UA", Page 570



## 25.5 The SIK menu item

### Application

Use the **SIK** menu item of the **Settings** application to view control-specific information (e.g., the serial number and the available software options).

### Related topics

- Software options on the control

**Further information:** "Software options", Page 73

### Description of function

To navigate to this function:

**Settings ► Machine Settings ► SIK**

### The SIK Information area

The control displays the following information:

- **Serial Number**
- **ID number**
- **Control Model**
- **Performance Class**
- **Features**
- **Status**
- **Temporarily enable options / Disable options**

### The Machine manufacturer key area

In the **Machine manufacturer key** area, the machine manufacturer can define a manufacturer-specific password for the control.

### The General key area

In the **General key** area the machine manufacturer can enable all software options once for a period of 90 days (e.g., for testing).

The control indicates the status of the general key:

Status	Meaning
NONE	The general key has not yet been used for this software version.
dd.mm.yyyy	Date up to which all software options will be available. Once the general key has expired, it cannot be used again.
EXPIRED	The general key has expired for this software version.

If the software version of the control is increased (e.g., by an update), then the **General key** can be used again.


The Software Options area

In the **Software Options** area, the control shows all available software options in a table.

Column	Meaning
#	Number of the software option
Option	<p>Name of the software option</p> <p>On controls with <b>SIK2</b>, the part number and the name of the software option are displayed.</p> <p>The control indicates the status of the software option by means of the following symbols:</p> <ul style="list-style-type: none"><li>■ No symbol: The software option is not enabled.</li><li>■ Checkmark: The software option is enabled permanently with all functions.</li><li>■ Clock symbol: The software option has been enabled for a limited period of time or can be ordered again on controls with <b>SIK2</b>.</li><li>■ Padlock: The software option has been locked by the machine manufacturer.</li></ul>
Expiration Date or Status	<p>The control displays the following information on the status of the software option:</p> <ul style="list-style-type: none"><li>■ <b>Enabled</b></li><li>■ <b>YYYY-MM-DD</b> If a software option has been enabled for a limited period of time, the control shows the date up to which it will be available.</li><li>■ <b>X of X</b> On controls with <b>SIK2</b>, the control shows how often the software option has been enabled.</li></ul>
Details	Detailed information for the machine manufacturer
Config.	Function that the machine manufacturer can use to lock software options

25.5.1 Viewing of software options

To view enabled software options on the control:

- 
- ▶ Select the **Home** operating mode
  - ▶ Select the **Settings** application
  - ▶ Select **Machine Settings**
  - ▶ Select **SIK**
  - ▶ Navigate to the **Software Options** area
  - For enabled software options, the control displays the text **Enabled**.

## Definition

Abbreviation	Definition
<b>SIK</b> (System Identification Key)	<p><b>SIK</b> is the designation of the plug-in board for the control hardware. Each control can clearly be identified by the serial number of the <b>SIK</b>.</p> <p>The software options have been saved on the <b>SIK</b>. The TNC7 can be equipped with a <b>SIK1</b> or <b>SIK2</b> plug-in board. Depending which one is used, the numbers of the software options differ.</p>

## 25.6 The Machine Times menu item

### Application

In the **Machine Times** menu item of the **Settings** application, the control shows the run times since commissioning.

### Related topics

- Date and time of the control  
**Further information:** "The Adjust system time window", Page 553


### Description of function

To navigate to this function:

**Settings ▶ Machine Settings ▶ Machine Times**

The control displays the following machine times:

Machine time	Meaning
Control On	Run time of the control since being put into service
Machine On	Run time of the machine tool since being put into service
Program Run	Run time of all program runs since being put into service



Refer to your machine manual.  
The machine manufacturer can define up to 20 additional run times.

## 25.7 The Adjust system time window

### Application

In the **Adjust system time** window, you can set the time zone, date and time manually or by means of NTP server synchronization.

### Related topics

- Run times of the machine tool

**Further information:** "The Machine Times menu item", Page 552

### Description of function

To navigate to this function:

**Settings ► Operating System ► Date/Time**

The **Adjust system time** window contains the following areas:

Area	Function
<b>Set the time manually</b>	Activate this check box to define the following data: <ul style="list-style-type: none"><li>■ Year</li><li>■ Month</li><li>■ Day</li><li>■ Time</li></ul>
<b>Synchronize the time over NTP server</b>	If you activate this check box, the control will automatically synchronize the system time with the defined NTP server. You can add a server with a host name or a URL.
<b>Time zone</b>	You can select your time zone from a list.

## 25.8 Conversational language of the control

### Application

You use the **helocale** window to change the conversational language of the HEROS operating system and the machine parameters to change the NC conversational language of the control's user interface.

The HEROS conversational language only changes after a restart of the control.

### Related topics

- Machine parameters of the control  
    **Further information:** "Machine parameters", Page 597

### Description of function

To navigate to this function:

**Settings ► Operating System ► Language/Keyboards**

You can't define two different conversational languages for the operating system and control.

The **helocale** window consists of the following areas:

Area	Function
Language	Choose the HEROS conversational language from a selection menu  Only if the machine parameter <b>applyCfgLanguage</b> (no. 101305) is defined as <b>FALSE</b> .
Keyboards	Select the language layout of the keyboard for HEROS functions

### 25.8.1 Changing the language

By default, the control assumes the NC conversational language for the HEROS conversational language.

To change the NC conversational language:

- ▶ Select the **Settings** application
- ▶ Enter the code number 123
- ▶ Select **OK**
- ▶ Select **Machine Parameters**
- ▶ Double-tap or double-click **MPs for setters**
- > The control opens the **MPs for setters** application.
- ▶ Navigate to the machine parameter **ncLanguage** (no. 101301)
- ▶ Select the desired language
  - ▶ Select **Save**
    - > The control opens the **Configuration data changed. All changes.** window.
  - ▶ Select **Save**
    - > The control opens the notification menu and displays a "Question type" error.
  - ▶ Select **CLOSE CONTROL**
    - > The control restarts.
    - > Once the control has restarted, the NC conversational language and the HEROS conversational language are changed.

#### Note

Use the machine parameter **applyCfgLanguage** (no. 101305) to define whether the control assumes the setting for the NC conversational language for the HEROS conversational language.

- **TRUE** (default): The control assumes the NC conversational language. You can change the language only in the machine parameters.  
**Further information:** "Changing the language", Page 555
- **FALSE**: The control assumes the HEROS conversational language. You can change the language only in the **helocale** window.

## 25.9 SELinux security software

### Application

**SELinux** is an extension for Linux-based operating systems in the sense of Mandatory Access Control (MAC). The security software protects the system against the execution of unauthorized processes or functions (such as viruses and other malicious software).

The machine manufacturer defines the **SELinux** settings in the **Security Policy Configuration** window.

#### Related topics

- Security settings with firewall  
**Further information:** "Firewall", Page 589

Description of function

To navigate to this function:

Settings ► Operating System ► SELinux

By default, **SELinux** access control is implemented as follows:

- The control executes only programs that are installed with the HEIDENHAIN NC software.
- Safety-relevant files, such as **SELinux** system files or HEROS boot files, may only be modified using explicitly selected programs.
- New files created by other programs may not be run.
- USB data carriers can be deselected.
- Only two processes can run new files:
  - Software update: A software update from HEIDENHAIN can replace or modify system files.
  - SELinux configuration: The configuration of **SELinux** in the **Security Policy Configuration** window is usually protected by a password defined by the machine manufacturer. Please refer to the machine manual.

Note

HEIDENHAIN recommends using **SELinux** as additional protection against attacks from outside the network.

Definition

Abbreviation	Definition
<b>MAC</b> (mandatory access control)	MAC means that the control performs only explicitly permitted actions. <b>SELinux</b> is intended as protection in addition to the normal access restriction in Linux. Certain processes and actions can be performed only if the standard functions and access control of <b>SELinux</b> permit it.

25.10 Network drives on the control

Application

Use the **Mount Setup** window to connect network drives to the control. If a network drive is connected to the control, the control displays additional drives in the navigation column of the file management.

Related topics

- File management  
**Further information:** User's Manual for Programming and Testing
- Network settings  
**Further information:** "Ethernet interface", Page 559

Requirements

- Existing network connection
- Control and computer in same network
- Path and access data of drive to be connected are known



## Description of function

To navigate to this function:

**Settings ► Network/Remote Access ► Shares**

You can define any number of network drives, but only seven can be connected at a time.

## The Network drive area

In the **Network drive** area, the control shows a list of all defined network drives, as well as the status of each drive.

The control displays the following buttons:

Button	Meaning
<b>Mount</b>	Connect a network drive The control selects the check box in the <b>Mount</b> column if an active connection exists.
<b>Unmount</b>	Disconnect a network drive
<b>Auto</b>	Automatically connect the network drive when the control is booting. The control selects the check box in the <b>Auto</b> column if an active automatic connection exists.
<b>Add</b>	Define a new connection <b>Further information:</b> "Mount assistant window", Page 558
<b>Remove</b>	Delete an existing connection
<b>Copy</b>	Copy connection <b>Further information:</b> "Mount assistant window", Page 558
<b>Edit</b>	Edit the connection settings <b>Further information:</b> "Mount assistant window", Page 558
<b>Private network drive</b>	User-specific connection if user administration is active The control selects the check box in the <b>Privat</b> column if a user-specific connection exists.

## The Status Log area

In the **Status Log** area, the control shows status information and error messages about connections.

Use the **Clear** button to delete the contents of the **Status Log** area.

### Mount assistant window

In the **Mount assistant** window you define the settings for a connection with a network drive.

The **Add**, **Copy** and **Edit** buttons open the **Mount assistant** window.

The **Mount assistant** window contains tabs with the following settings:

Tab	Setting
Drive name	<ul style="list-style-type: none"> <li>■ <b>Drive name:</b> Network drive name in the file management of the control The names must be all uppercase letters, terminated by a colon (:).</li> <li>■ <b>Private network drive</b> With user administration active, the connection is only visible to the user who created it.</li> </ul>
Share type	Transfer protocol <ul style="list-style-type: none"> <li>■ <b>Windows share (CIFS/SMB) or Samba server</b></li> <li>■ <b>UNIX share (NFS)</b></li> </ul>
Server and Share	<ul style="list-style-type: none"> <li>■ <b>Server name:</b> Server name or IP address</li> <li>■ <b>Share name:</b> Directory accessed by the control</li> </ul>
Automount	<b>Connect automatically (not possible with the "Ask for password?" option)</b> The control connects the network drive automatically during the starting process.
User name and password (only with Windows share)	<ul style="list-style-type: none"> <li>■ <b>Single Sign On</b> With user administration active, the control automatically connects an encrypted network drive when the user logs in.</li> <li>■ <b>Windows user name:</b></li> <li>■ <b>Ask for password? (not possible with the "Connect automatically" option)</b> Select whether a password is required upon connecting.</li> <li>■ <b>Password</b></li> <li>■ <b>Password verification</b></li> </ul>
Mounting options	<b>Parameters for mount option "-o":</b> Auxiliary parameters for the connection <b>Further information:</b> "Examples of Mounting options", Page 559
Check	The control displays a summary of the defined settings. You can check the settings and save them with <b>Apply</b> .

**Examples of Mounting options**

Enter options without a space, only separated by a comma

**Options for SMB**

Example	Meaning
domain=xxx	Name of the domain HEIDENHAIN recommends not to include the domain in the user name, but rather specify it as an option.
vers=3.1.1	Protocol version
sec=ntlmssp	Authentication method ntlm Use this option if the control displays the <b>Permission denied</b> error message upon connecting.

**Options for NFS**

Example	Meaning
rsz=8192	Packet size in bytes for data reception Input: <b>512...8192</b>
wsz=4096	Packet size in bytes for data transmission Input: <b>512...8192</b>
soft,timeo=3	Conditional Mount Time in tenths of a second after which the control will try to connect again
nfsvers=2	Protocol version



If you use the CIMCO NFS software, you must set this option. CIMCO NFS supports NFS only up to version 2.

**Notes**

- Have a network specialist configure the control.
- To avoid security gaps, prefer the current versions of the **SMB** and **NFS** protocols.

**25.11 Ethernet interface****Application**

The control is provided with an Ethernet interface as a standard feature so that you can integrate it into a network.

**Related topics**


- Firewall settings  
**Further information:** "Firewall", Page 589
- Network drives on the control  
**Further information:** "Network drives on the control", Page 556
- External access  
**Further information:** "The DNC menu item", Page 574

Description of function

The control transfers data via the Ethernet interface using the following protocols:


- **CIFS** (common internet file system) or **SMB** (server message block)  
The control supports versions 2, 2.1 and 3 of these protocols.
- **NFS** (network file system)  
The control supports versions 2 and 3 of this protocol.

Connection options

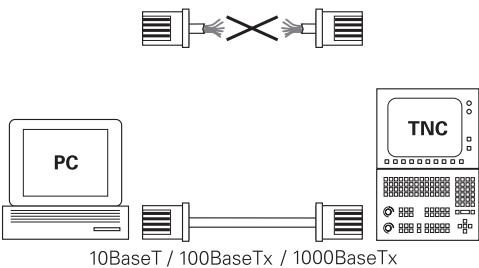


You can integrate the Ethernet interface of the control into the network or connect it directly to a PC through the RJ45 connection X26. The connection is electrically isolated from the control electronics.

Use a Twisted Pair cable to connect the control to your network.



The maximum cable length permissible between the control and a node depends on the quality grade of the cable, the sheathing, and the type of network.

Ethernet connection icon

Icon	Meaning
	<p>Ethernet connection</p> <p>The control displays the icon at the bottom right in the taskbar.</p> <p><b>Further information:</b> "Taskbar", Page 636</p> <p>When you click the icon, the control opens a pop-up window. The pop-up window contains the following information and functions:</p> <ul style="list-style-type: none"><li>■ Connected networks You can disconnect the network connection. Select the network name to reconnect.</li><li>■ Available networks</li><li>■ VPN connections</li></ul> <p>Currently no function</p>


Notes

- Protect your data and the control by running the machines in a secure network.
- To avoid security gaps, prefer the current versions of the **SMB** and **NFS** protocols.

25.11.1 The Network settings window

Application

In the **Network settings** window you define the settings for the control's Ethernet interface.

 Have a network specialist configure the control.


Related topics

- Network configuration  
**Further information:** "Network configuration with Advanced Network Configuration", Page 647
- Firewall settings  
**Further information:** "Firewall", Page 589
- Network drives on the control  
**Further information:** "Network drives on the control", Page 556

Description of function

To navigate to this function:

**Settings ► Network/Remote Access ► Network**

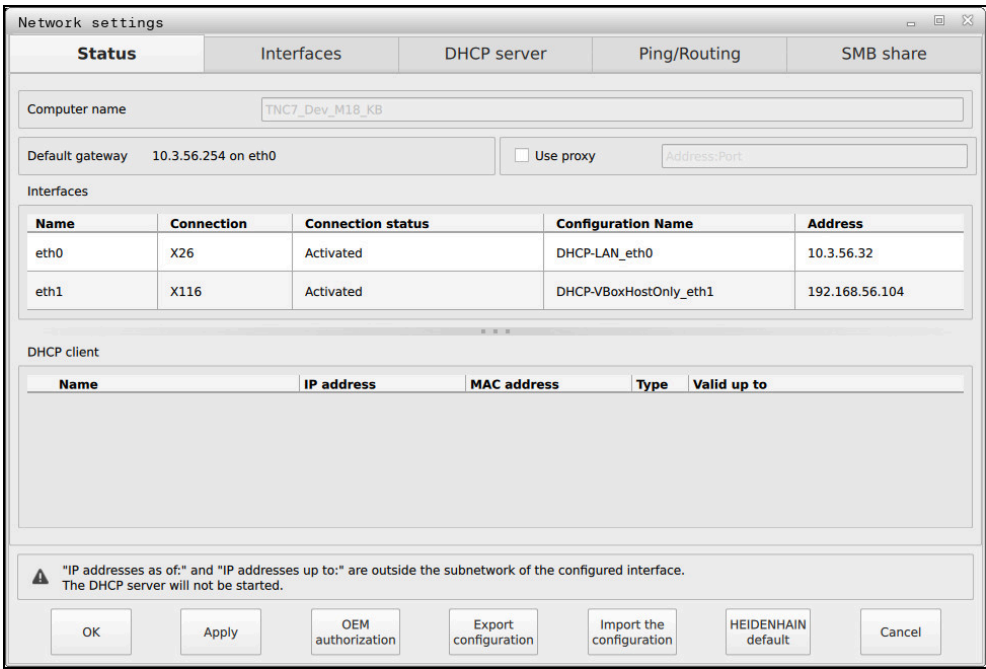

The **Network settings** window

The Status tab

The **Status** tab contains the following information and settings:

Domain	Information or Setting
Computer name	The control displays the name under which the control is visible in the company network. You can change the name.
Default gateway	The control shows the default gateway and the Ethernet interface being used.
Use proxy	You can define the <b>address</b> and the <b>port</b> of a proxy server in the network.
Interfaces	<p>The control shows an overview of available Ethernet interfaces. If there is no network connection, the table is empty.</p> <p>The control displays the following information in the table:</p> <ul style="list-style-type: none"><li>■ <b>Name</b> (e.g., <b>eth0</b>)</li><li>■ <b>Connection</b> (e.g., <b>X26</b>)</li><li>■ <b>Connection status</b> (e.g., <b>CONNECTED</b>)</li><li>■ <b>Configuration Name</b> (e.g., <b>DHCP</b>)</li><li>■ <b>Address</b> (e.g., <b>10.7.113.10</b>)</li></ul> <p><b>Further information:</b> "The Interfaces tab", Page 563</p>
DHCP client	<p>The control displays an overview of the devices that have received a dynamic IP address in the machine network. If there are no connections to other network components of the machine network, the table is empty.</p> <p>The control displays the following information in the table:</p> <ul style="list-style-type: none"><li>■ <b>Name</b> Host name and connection status of the device. The control shows the following connection status:<ul style="list-style-type: none"><li>■ Green: Connected</li><li>■ Red: No connection</li></ul></li><li>■ <b>IP address</b> Dynamically assigned IP address of the device</li><li>■ <b>MAC address</b> Physical address of the device</li><li>■ <b>Type</b> Type of connection The control displays the following connection types:<ul style="list-style-type: none"><li>■ <b>TFTP</b></li><li>■ <b>DHCP</b></li></ul></li><li>■ <b>Valid up to</b> Time until which the IP address is valid without being renewed</li></ul> <p>The machine manufacturer can make settings for these devices. Refer to your machine manual.</p>

### The Interfaces tab

The control displays the available Ethernet interfaces on the **Interfaces** tab.

The **Interfaces** tab contains the following information and settings:

Column	Information or Setting
<b>Name</b>	The control displays the name of the Ethernet interface. You can activate or deactivate the connection by means of a toggle switch.
<b>Connection</b>	The control displays the number of the network connection.
<b>Connection status</b>	<p>The control displays the connection status of the Ethernet interface.</p> <p>The following connection statuses may be displayed:</p> <ul style="list-style-type: none"> <li>■ <b>CONNECTED</b> Connected</li> <li>■ <b>DISCONNECTED</b> Connection separated</li> <li>■ <b>CONFIGURING</b> The IP address is being fetched from the server</li> <li>■ <b>NOCARRIER</b> No cable present</li> </ul>
<b>Configuration Name</b>	<p>You can execute the following functions:</p> <ul style="list-style-type: none"> <li>■ Select a profile for the Ethernet interface In the factory default setting, two profiles are available: <ul style="list-style-type: none"> <li>■ <b>DHCP-LAN</b>: Settings for the standard interface for a standard company network</li> <li>■ <b>MachineNet</b>: Settings for the second, optional Ethernet interface; for configuration of the machine network</li> </ul> <p><b>Further information:</b> "Network configuration with Advanced Network Configuration", Page 647</p> </li> <li>■ Reconnect the Ethernet interface with <b>Reconnect</b></li> <li>■ Edit the selected profile <b>Further information:</b> "Network configuration with Advanced Network Configuration", Page 647</li> </ul>



- If you have changed the profile of an active connection, the control will not update the profile being used. Reconnect the corresponding interface with **Reconnect**.
- The control exclusively supports the **Ethernet** connection type.

### The DHCP server tab

The machine manufacturer can use the **DHCP server** tab in the control to configure a DHCP server in the machine network. Using this server, the control can establish connections with other network components of the machine network (e.g., with industrial computers).

Refer to your machine manual.

**Ping/Routing tab**

You can check the network connection on the **Ping/Routing** tab.  
The **Ping/Routing** tab contains the following information and settings:


Domain	Information or Setting
Ping	<p><b>Address:Port</b> and <b>Address:</b></p> <p>You can enter the IP address of the computer and possibly the port number for checking the network connection.</p> <p>Entry: Four numerical values separated by dots and, if necessary, a port number separated by a colon (e.g., <b>10.7.113.10:22</b>)</p> <p>As an alternative, you can enter the name of the computer whose connection you want to check.</p> <p>Starting and stopping the test</p> <ul style="list-style-type: none"><li>■ <b>Start</b> button: starts the test The control displays status information in the ping field.</li><li>■ <b>Stop</b> button: stops the test</li></ul>
Routing	<p>The control displays status information of the operating system about the current routing for network administrators.</p>

**The SMB share tab**

The **SMB share** tab is included only in connection with a VBox programming station.

When the check box is active, the control releases areas or partitions protected by a code number for the Explorer of the Windows PC used, e.g. **PLC**. You can activate or deactivate the check box only by using the machine manufacturer code number.

In the **TNC VBox Control Panel**, select a drive letter within the **NC share** tab for displaying the selected partition and then connect the drive with **Connect**. The host displays the partitions of the programming station.



**Further information:** Programming station for milling controls

You download the documentation together with the programming station software.



## Exporting and importing a network profile

To export a network profile:

- ▶ Opening the **Network settings** window
- ▶ Select **Export configuration**
- > The control opens a window.
- ▶ Select the storage location for the network profile (e.g., **TNC:/etc/sysconfig/net**)
- ▶ Select **Open**
- ▶ Select the desired network profile
- ▶ Select **Export**
- > The control saves the network profile.



You can't export **DHCP** or **eth1** profiles.

To import an exported network profile:

- ▶ Open the **Network settings** window
- ▶ Select **Import the configuration**
- > The control opens a window.
- ▶ Select the storage location of the network profile
- ▶ Select **Open**
- ▶ Select the desired network profile
- ▶ Press **OK**
- > The control opens a window with a prompt.
- ▶ Press **OK**
- > The control imports and activates the selected network profile.
- ▶ You might need to restart the control



Use the **HEIDENHAIN presets** button to import the default values of the network settings.

## Notes

- Preferably restart the control after making changes in the network settings.
- The HEROS operating system manages the **Network settings** window. You must restart the control in order to change the HEROS conversational language.

**Further information:** "Conversational language of the control", Page 554

## 25.12 PKI Admin

### Application

With **PKI Admin**, you can manage the server and client certificates on the control. To define access rights to the control, you can classify the certificates as trusted or not trusted, for example.

### Related topics

- Quickly and easily connecting the OPC UA client application to the control (#56-61 / #3-02-1\*)

**Further information:** "The OPC UA connection assistant function (#56-61 / #3-02-1\*)", Page 572

## Description of function

To navigate to this function:

**Settings ► Network/Remote Access ► PKI Admin**

The **Administration of the PKI Infrastructure** window contains the following tabs:

Tab	Function
<b>Trusted</b>	<p>The server knows the certificate and trusts it after successful validation.</p> <p>For connection to the server, the client certificate must have been specified on this tab.</p> <p>For a <b>OPC UA</b> connection (#56-61 / #3-02-1*), you also need to assign a <b>OPC UA</b> license to the certificate.</p> <p><b>Further information:</b> "The OPC UA license settings function (#56-61 / #3-02-1*)", Page 573</p>
<b>Issuers</b>	<p>On this tab, you can specify the issuer of the trusted certificates.</p> <p>The server uses the issuer's information to validate the certificate.</p>
<b>Rejected</b>	<p>On this tab, the control specifies client certificates whose connection attempt to the <b>OPC UA NC Server</b> (#56-61 / #3-02-1*) failed.</p> <p>Connection failures can occur in the following situations:</p> <ul style="list-style-type: none"> <li>■ The client certificate is unknown and has not been classified as trusted. If you want to connect the client application to the server, you can use the <b>Move</b> function to move the certificate to the <b>Trusted</b> tab.</li> <li>■ A trusted client certificate has expired.</li> </ul>
<b>Revocation lists</b>	<p>On this tab, you can specify CRL files that list untrusted certificates.</p> <p>The server prohibits connections that use these certificates.</p>
<b>Own certificates</b>	<p>The control provides the following functions:</p> <ul style="list-style-type: none"> <li>■ <b>Recreate certificate</b> The control recreates the server's chain of trust. After the next restart of the control, it will use the new certificate.</li> <li>■ <b>Export certificate chain</b> The control saves the server's chain of trust that you import into the client application.</li> <li>■ <b>Load certificate</b> You can import a customized certificate. Please note the requirements for self-created certificates for <b>OPC UA</b> (#56-61 / #3-02-1*). <b>Further information:</b> "Required certificates", Page 570</li> <li>■ <b>Check the configuration</b> The control checks the validity of the server certificates.</li> </ul>
<b>Advanced settings</b>	<p>The tab contains the following areas:</p> <ul style="list-style-type: none"> <li>■ <b>Certificate settings</b></li> </ul>

Tab	Function
	<p>The control adds static IP addresses to the server certificates. You can select the IP address of the <b>eth0</b> or <b>eth1</b> interface or specify the required IP addresses.</p> <ul style="list-style-type: none"><li>■ <b>Settings for revocation lists</b><p>You can permit connections of applications with certificates in a multi-level certificate chain even if no associated CRL files exist.</p></li></ul>

Definition

PKI

PKI (public key infrastructure) is the management structure for digital certificates that are required for safe communication. A digital certificate has the same purpose as an identity card or passport. With a digital certificate, its owner can encrypt, sign and authenticate the communication.

25.13 OPC UA NC Server (#56-61 / #3-02-1\*)

25.13.1 Fundamentals

Open Platform Communications Unified Architecture (OPC UA) describes a collection of specifications. These specifications are used to standardize machine-to-machine communication (M2M) in the field of industrial automation. OPC UA enables the data exchange across operating systems between products from different manufacturers, e.g. between a HEIDENHAIN control system and third-party software. Thus, OPC UA has become the data exchange standard for secure, reliable, manufacturer- and platform-independent industrial communication over the last years.


In 2016, the German Federal Office for Information Security (BSI) published a security analysis related to **OPC UA**. The security analysis was updated in 2022. The specification analysis performed by the BSI determined that **OPC UA** provides a high level of security as compared to most other industrial protocols.

HEIDENHAIN follows the BSI recommendations and provides SignAndEncrypt, which exclusively features up-to-date IT security profiles. For this purpose, OPC UA-based industrial applications and the **OPC UA NC Server** exchange certificates for authentication. In addition, any transferred data is encrypted. This effectively prevents messages between the communication partners from being intercepted or altered.

Application

Both standard and custom software can be used with the **OPC UA NC Server**. Compared to other established interfaces, significantly less development effort is required for OPC UA connection, thanks to the uniform communication technology.

The **OPC UA NC Server** allows you to access the data and functions of the HEIDENHAIN NC information model exposed in the server address space.

 Pay attention to the interface documentation of the **OPC UA NC Server** as well as the documentation of the client application.

**Related topics**

- **Information Model** interface documentation with the specification of the **OPC UA NC Server** in English  
ID: 1309365-xx or **OPC UA NC Server Interface Documentation**
- Quickly and easily connecting the OPC UA client application to the control  
**Further information:** "The OPC UA connection assistant function (#56-61 / #3-02-1\*)", Page 572

**Requirements**

- OPC UA NC Server software options (#56-61 / #3-02-1\*)  
For OPC UA-based communication, the HEIDENHAIN control provides the **OPC UA NC Server**. For each OPC UA client to be connected, you need one of the six available software options (56 to 61).  
If your control features a **SIK2**, you can order this software option multiple times and enable up to six connections.
- Firewall configured  
**Further information:** "Firewall", Page 589
- The OPC UA client supports the **security policy** and authentication method of the **OPC UA NC Server**:
  - **Security Mode: SignAndEncrypt**
  - **Algorithm:**
    - **Basic256Sha256**
    - **Aes128Sha256RsaOaep**
    - **Aes256Sha256RsaPss**
  - **User Authentication: X509 certificates**

**Description of function**

Both standard and custom software can be used with the **OPC UA NC Server**. Compared to other established interfaces, significantly less development effort is required for OPC UA connection, thanks to the uniform communication technology.

The control supports the following OPC UA functions:

- Write and read variables
- Subscribe to value changes
- Run methods
- Subscribe to events
- Creation of service files
- Read and write tool data (the corresponding right is required)
- File system access to the **TNC**: drive
- File system access to the **PLC**: drive (the corresponding right is required)
- Validation of 3D models for tool carriers  
**Further information:** "Tool carrier management", Page 209
- Validate 3D models for tools (#140 / #5-03-2)  
**Further information:** "Tool model (#140 / #5-03-2)", Page 213

Machine parameters in conjunction with OPC UA

The **OPC UA NC Server** enables OPC UA client applications to query general machine information, such as the year of construction of the machine or its location. The following machine parameters are available for the digital identification of your machine:

- For users: **CfgMachineInfo** (no. 131700)  
**Further information:** "The Machine information area", Page 548
- For the machine tool manufacturer: **CfgOemInfo** (no. 131600)  
**Further information:** "The Info about machine manufacturer area", Page 548

Access to directories

The **OPC UA NC Server** enables read and write access to the **TNC:** and **PLC:** drives. The following actions are permitted:

- Creation and deletion of folders
  - Reading, editing, copying, moving, creating, and deleting of files.
- While the NC software is running, the files referenced in the following machine parameters are locked against write access:
- Tables referenced by the machine manufacturer in the machine parameter **CfgTablePath** (no. 102500)
  - Files referenced by the machine manufacturer in the machine parameter **dataFiles** (no. 106303, branch **CfgConfigData** no. 106300)

The **OPC UA NC Server** enables access to the control even if the NC software is switched off. As long as the operating system is active, you can create and transmit service files, for example.

**NOTICE**

**Caution: potential damage to property!**

The control does not automatically back up the files before editing or deletion. Files that are missing cannot be restored. The removal or editing of system-relevant files, such as the tool table, can negatively affect the control functions.

► System-relevant files must be edited only by authorized specialists

Required certificates

The **OPC UA NC Server** requires three different types of certificates. The server and the client need two of them, the application instance certificates, in order to establish a secure connection. The third certificate (user certificate) is required for authorization and for starting a session with specific user permissions.

The control automatically generates a two-level certificate chain referred to as the **Chain of Trust** for the server. This certificate chain consists of a self-signed root certificate (including a **revocation list**) and a certificate for the server that is created on the basis of the root certificate.

The client certificate must be added on the **Trusted** tab of the **PKI Admin** function. All other certificates should be added on the **Issuers** tab of the **PKI Admin** function for verification of the entire certificate chain.

**Further information:** "PKI Admin", Page 566

**User certificate**

The control uses the HEROS functions **Current User** or **UserAdmin** for administration of the user certificate. When you initiate a session, the rights of the associated internal user are active.

To assign a user certificate to a user:

- ▶ Open the **Current User** HEROS function
- ▶ Select **SSH keys and certificates**
- ▶ Press the **Import certificate** soft key
- > The control opens a pop-up window.
- ▶ Select the certificate
- ▶ Select **Open**
- > The control imports the certificate.
- ▶ Press the **Use for OPC UA** soft key

**Self-generated certificates**

You can also create and import all of the required certificates yourself.

Self-generated certificates must fulfill the following requirements:

- General requirements
  - File format: \*.der
  - Signature with hash SHA256
  - Validity period of at most 5 years is recommended
- Client certificates
  - Host name of the client
  - Application URI of the client
- Server certificates
  - Host name of the control
  - Application URI of the server according to the following structure:  
urn:<hostname>/HEIDENHAIN/OpcUa/NC/Server
  - Validity period of 20 years maximum

**Note**

OPC UA is a manufacturer/platform-independent, open communication standard. For this reason, an OPC UA client SDK is not included in the **OPC UA NC Server**.

**25.13.2 The OPC UA (#56-61 / #3-02-1\*) menu item****Application**

In the **OPC UA** menu item of the **Settings** application, you can set up the connections to the control and check the status of the **OPC UA NC Server**.

### Description of function

To navigate to this function:

**Settings ► Network/Remote Access ► OPC UA**

The **OPC UA NC Server** area contains the following functions:

Function	Meaning
<b>Status</b>	Shows with an icon whether the <b>OPC UA NC Server</b> is active: <ul style="list-style-type: none"> <li>■ Green icon <b>OPC UA NC Server</b> is active</li> <li>■ Gray icon: <b>OPC UA NC Server</b> is not active or software option not enabled</li> </ul> <p>You can manually start or restart the <b>OPC UA NC Server</b> as required.</p> <p><b>Further information:</b> "Manually starting the OPC UA NC Server", Page 572</p>
<b>OPC UA connection assistant</b>	Open the <b>OPC UA NC Server connection assistant</b> window <b>Further information:</b> "The OPC UA connection assistant function (#56-61 / #3-02-1*)", Page 572
<b>OPC UA license settings</b>	Open the <b>OPC UA NC Server - License Settings</b> window <b>Further information:</b> "The OPC UA license settings function (#56-61 / #3-02-1*)", Page 573
<b>PKI Admin</b>	Open the <b>Administration of the PKI Infrastructure</b> window <b>Further information:</b> "PKI Admin", Page 566
<b>Host computer operation</b>	Activate or deactivate host computer operation with a toggle switch <b>Further information:</b> "The DNC area", Page 575

### Manually starting the OPC UA NC Server

You can manually start or restart the **OPC UA NC Server** as required. Thus, you can apply changes made to the machine parameters or the certificates, which are relevant to the server, without having to shut down the control.

While an OPC UA connection is active, the control displays a confirmation prompt before the restart. During the restart, the control will disconnect active connections automatically.

For this function, you need the HEROS.SetNetwork permission.

**Further information:** "User administration roles and rights", Page 666

## 25.13.3 The OPC UA connection assistant function (#56-61 / #3-02-1\*)

### Application

For quick and easy setup of an OPC UA client application, you can use the **OPC UA NC Server connection assistant** window. This assistant guides you through the steps that are required to connect an OPC UA client application to the control.

### Related topics

- Assigning the OPC UA client application to a software option 56 to 61 or #3-02-1 to #3-02-6 using the **OPC UA NC Server - License Settings** window  
**Further information:** "The OPC UA license settings function (#56-61 / #3-02-1\*)", Page 573
- Managing certificates with the **PKI Admin** menu  
**Further information:** "PKI Admin", Page 566



### Description of function

Use the **OPC UA** menu item to open the **OPC UA NC Server connection assistant** window.

**Further information:** "The OPC UA (#56-61 / #3-02-1\*) menu item", Page 571

The assistant features the following steps:

- Export **OPC UA NC Server** certificates
- Import the certificates of the OPC UA client application
- Assign each of the available **OPC UA NC Server** software options to an OPC UA client application
- Import user certificates
- Assign user certificates to users
- Configure the firewall

If at least one software option is active for the OPC UA NC Server, the control will generate the server certificate as a part of a self-generated certificate chain during the first start-up. The client application or the manufacturer of the application creates the client certificate. The user certificate is linked to the user account. Please contact your IT department.

### Note

The **OPC UA NC Server connection assistant** also helps you create test or sample certificates for users and the OPC UA client application. Do not use the user and client application certificates created at the control for other purposes than development at the programming station.

## 25.13.4 The OPC UA license settings function (#56-61 / #3-02-1\*)

### Application

You can use the **OPC UA NC Server - License Settings** window to assign an OPC UA client application to a software option 56 to 61 or #3-02-1 to #3-02-6.

### Related topics

- Setting up the OPC UA client application with the **OPC UA connection assistant** function

**Further information:** "The OPC UA connection assistant function (#56-61 / #3-02-1\*)", Page 572

- Managing certificates with **PKI Admin**

**Further information:** "PKI Admin", Page 566

### Requirement

- Certificate has been added to the **Trusted** category in **PKI Admin**

### Description of function

Use the **OPC UA** menu item to open the **OPC UA license settings** window.

After using the **OPC UA connection assistant** or the **PKI Admin** menu item to import a certificate of an OPC UA client application, you can choose the certificate from a selection window.

If you enable the **Active** check box for a certificate, the control uses a software option for the OPC UA client application.

## 25.14 The DNC menu item

### Application

With the **DNC** menu item you can grant or restrict access to the control (e.g., connections over a network).

### Related topics




- Connecting network drives  
**Further information:** "Network drives on the control", Page 556
- Setting up a network  
**Further information:** "Ethernet interface", Page 559
- TNCremo  
**Further information:** "PC software for data transfer", Page 639
- Remote Desktop Manager (#133 / #3-01-1)  
**Further information:** "The Remote Desktop Manager window (#133 / #3-01-1)", Page 583

### Description of function



To navigate to this function:

**Settings ▶ Network/Remote Access ▶ DNC**

The **DNC** area contains the following symbols:

Icon	Meaning
	<b>Add</b> a computer-specific connection
	<b>Edit</b> a computer-specific connection
	<b>Delete</b> a computer-specific connection

When a connection is active, the control displays a symbol in the information bar:

Icon	Meaning
	<b>Secure connection configuration</b> External access to the control is active; all connections are using a secure connection configuration.
	<b>Non-secure connection configuration</b> An external access to the control is active but at least one connection is using a non-secure connection configuration.

**Further information:** "Areas of the control's user interface", Page 88

## The DNC area

In the **DNC** area you use toggle switches to activate the following functions:

Switches	Meaning
<b>DNC access permitted</b>	Permit or block all accesses to the control through a network or a serial connection
<b>TNCopt full access allowed</b>	Depending on the machine, permit or block access for diagnostics or initial setup software
<b>Host computer operation</b>	<p>Pass command control to an external host computer, for example to transfer data to the control; or end host computer operation</p> <p>If host computer operation is active, the control displays the <b>Host computer is active</b> message in the info bar. You cannot use the <b>Manual</b> and <b>Program Run</b> operating modes.</p> <p>You cannot activate host computer operation while running an NC program.</p>

## Secure connections for user

In the **Secure connections for user** area you activate the following functions:

Row	Meaning
<b>Setup permitted</b>	If the toggle switch is active, client applications can establish a secure connection for the current user.
<b>Key management</b>	<p>In this row you, open the <b>Certificate and keys</b> window.</p> <p><b>Further information:</b> "SSH-secured DNC connection", Page 627</p>

Computer-specific connections

If the machine manufacturer has defined the optional machine parameter **CfgAccessControl** (no. 123400), then in the **Connections** area you can permit or block access for up to 32 connections defined by you.  
The control shows the defined information in a table:

Column	Meaning
Name	Host name of the external computer
Description	Additional information
IP address	Network address of the external computer
Access	<div><div>■ <b>Permit</b></div><div>The control permits network access without confirmation.</div><div>■ <b>Inquire</b></div><div>The control asks for confirmation upon a network access attempt. You can choose whether to permit or block the access once or always.</div><div>■ <b>Deny</b></div><div>The control does not permit any network access</div></div>
Type	<div><div>■ <b>Com1</b></div><div>Serial interface 1</div><div>■ <b>Com2</b></div><div>Serial interface 2</div><div>■ <b>Ethernet</b></div><div>Network connection</div></div>
Active	If a connection is active, the control displays a green circle. If a connection is inactive, the control displays a gray circle.

Notes

- In the machine parameter **allowDisable** (no. 129202) the machine manufacturer defines whether the **Host computer operation** toggle switch is available.
- In the optional machine parameter **denyAllConnections** (no. 123403) the machine manufacturer defines whether the control permits computer-specific connections.

25.15 Printers

Application

You add and manage printers through the **Printer** menu item in the **Heros Printer Manager** window.

Related topics

- Using the **FN 16: F-PRINT** function for printing  
**Further information:** User's Manual for Programming and Testing

## Requirement

- PostScript-capable printer

The control can communicate only with printers that understand PostScript emulation such as KPDL3. Some printers enable setting the PostScript emulation in the printer menu.

**Further information:** "Note", Page 579

## Description of function

To navigate to this function:

**Settings ► Network/Remote Access ► Printer ► Heros Printer Manager**

You can print the following files:

- Text files
- Graphic files
- PDF files

**Further information:** User's Manual for Programming and Testing

Once you have added a printer, the control shows the **PRINTER:** drive in the file management. The drive contains one folder for each defined printer.

**Further information:** "Creating a printer", Page 579

There are various methods to start printing:


- Copying the file to be printed to the **PRINTER** drive  
The file to be printed is automatically forwarded to the default printer and deleted from the directory after the print job has been executed.  
You may also copy the file into the printer sub-directory if you wish to use a printer other than the default printer.
- Using the **FN 16: F-PRINT** function

## Buttons

The **Heros Printer Manager** window contains the following buttons:

Button	Meaning
<b>CREATE</b>	Creates a printer
<b>CHANGE</b>	Adapts the properties of the selected printer
<b>COPY</b>	Creates a copy of the selected printer setting At first the copy has the same properties as the copied setting. This can be useful if printing both portrait and landscape formats on the same printer
<b>DELETE</b>	Deletes the selected printer
<b>UP</b>	Selects a printer
<b>DOWN</b>	
<b>STATUS</b>	Displays the status information of the selected printer
<b>PRINT A TEST PAGE</b>	Prints a test page on the selected printer

The Change the printer window

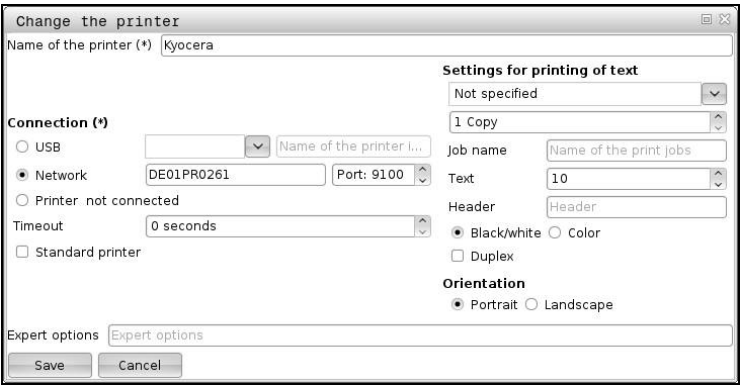

For each printer, the following properties can be set:

Setting	Meaning
Name of the printer	Customizes the printer name
Connection	Selects the connection <ul style="list-style-type: none"><li>■ <b>USB</b>: The control automatically displays the name</li><li>■ <b>Network</b>: Network name or IP address of the printer Port for the network printer (default: 9001)</li><li>■ <b>Printer %1 not connected</b></li></ul>
Timeout	Delays the printing process The control delays the printing process by the pre-set number of seconds after the last change has been made to the file to be printed in <b>PRINTER</b> . Use this setting if the file to be printed is populated with FN functions (e.g., when probing).
Standard printer	Selects the default printer The control automatically assigns this setting to the first printer added.
Settings for printing of text	These settings are applicable when printing text documents: <ul style="list-style-type: none"><li>■ Paper size</li><li>■ Number of copies</li><li>■ Job name</li><li>■ Font size</li><li>■ Header</li><li>■ Print options (black and white, color, duplex)</li></ul>
Orientation	Portrait or landscape for all printable files
Expert options	Available only to authorized specialists

### 25.15.1 Creating a printer

To create a new printer:

- ▶ Enter the printer name in the name dialog
- ▶ Select **CREATE**
- > The control creates a new printer.
- ▶ Press **CHANGE**
- > The control opens the **Change the printer** window.
- ▶ Define the properties
- ▶ Select **Save**
- > The control applies the settings and displays the defined printer in the list.

#### Note

If your printer does not permit PostScript emulation, change the printer settings if possible.

## 25.16 The VNC menu item

### Application

**VNC** is software that shows the screen contents of a remote computer on a local computer, and also sends keyboard actions and mouse movements of the local computer to the remote computer.

### Related topics

- Firewall settings  
**Further information:** "Firewall", Page 589
- Remote Desktop Manager (#133 / #3-01-1)  
**Further information:** "The Remote Desktop Manager window (#133 / #3-01-1)", Page 583




### Description of function

To navigate to this function:

**Settings ▶ Network/Remote Access ▶ VNC**

### Buttons and icons

The **VNC settings** window contains the following buttons and icons:

Button and icon	Meaning
<b>Add</b>	Add new VNC viewer or client
<b>Remove</b>	Delete the selected client Only possible with manually entered clients.
<b>Edit</b>	Edit the configuration of the selected client
<b>Update</b>	Refresh view Required with connection attempts during which the dialog is open.
<b>Set preferred owner of the focus</b>	Enable the <b>Preferred owner of the focus</b> check box
	Another client owns the focus Mouse and keyboard are disabled
	You own the focus Entries can be made
	Prompt by another client to receive the focus Mouse and keyboard are disabled until the focus is assigned.

### The VNC participant settings area

In the **VNC participant settings** area, the control shows a list of all clients.

The control displays the following contents:

Column	Contents
<b>Computer name</b>	IP address or computer name
<b>VNC</b>	Connection of the client to the VNC viewer
<b>VNC Focus</b>	The client participates in the focus assignment
<b>Type</b>	<ul style="list-style-type: none"> <li>■ Manual Manually entered client</li> <li>■ Denied This client is not permitted to connect.</li> <li>■ Enable TeleService and IPC Client via a TeleService connection</li> <li>■ DHCP Other computer that retrieves an IP address from this computer.</li> </ul>



### The Global settings area

In the **Global settings** area, you can define the following settings:

Function	Meaning
<b>Enable RemoteAccess and IPC</b>	If the check box is selected, the connection is always permitted.
<b>Password verification</b>	Client must enter a password for verification The control opens a window when you select the check box. In this window you define the password for this client. The client must enter the password when establishing the connection.

### The Enabling other VNC area


In the **Enabling other VNC** area, you can define the following settings:

Function	Meaning
<b>Deny</b>	Other VNC clients are not permitted.
<b>Inquire</b>	A dialog opens when another VNC client wants to connect. You must grant permission for this connection.
<b>Permitted</b>	Other VNC clients are permitted.

The VNC Focus Settings area

In the **VNC Focus Settings** area, you can define the following settings:

Function	Meaning
<b>Enabling VNC focus</b>	Enables focus assignment for this system When the check box is inactive, the focus owner actively gives away the focus by using the focus symbol. The remaining clients can request the focus only after it was given away.
<b>Reset the CapsLock key when changing the focus</b>	When the check box is active and the focus owner has activated the CapsLock key, the CapsLock key is deactivated if the focus changes. Only if the <b>Enabling VNC focus</b> check box is enabled
<b>Enable Concurrency VNC Focus</b>	When the check box is active, every client can request the focus at any time. The focus owner does not need to give away the focus before to enable that. When a client requests the focus, a pop-up window opens for all clients. If no client objects to the request within the pre-set period of time, the focus changes after the defined time limit. Only if the <b>Enabling VNC focus</b> check box is enabled
<b>Timeout Concurrency VNC Focus</b>	Period of time after requesting the focus during which the focus owner can object to the focus change (at most 60 seconds). This period of time is set by moving a slider. When a client requests the focus, a pop-up window opens for all clients. If no client objects to the request within the pre-set period of time, the focus changes after the defined time limit. Only if the <b>Enabling VNC focus</b> check box is enabled



Enable the **Enabling VNC focus** check box only in connection with HEIDENHAIN devices provided especially for this purpose (e.g., ITC industrial computers).

Notes

- The machine manufacturer defines the procedure for assigning the focus with multiple clients or operating units. Focus assignment depends on the setup and operating situation of the machine tool.  
Refer to your machine manual.
- The control displays a message if the firewall settings of the control do not permit the VNC protocol for all clients.

Definition

Abbreviation	Definition
<b>VNC</b> (virtual network computing)	<b>VNC</b> is software with which another computer can be controlled over a network connection.

## 25.17 The Remote Desktop Manager window (#133 / #3-01-1)

### Application

With Remote Desktop Manager you can display external computer units on the control screen that are connected via Ethernet, and operate them through the control. You can also shut down a Windows computer together with the control.

### Related topics

- External access

**Further information:** "The DNC menu item", Page 574

### Requirements

- Software option Remote Desktop Manager (#133 / #3-01-1)
- Existing network connection

**Further information:** "Ethernet interface", Page 559


### Description of function

To navigate to this function:

**Settings ► Network/Remote Access ► Remote Desktop Manager**

Remote Desktop Manager grants the following connection options:

- **Windows Terminal Service (RemoteFX):** Display the desktop of an external Windows computer on the control  
**Further information:** "Windows Terminal Service (RemoteFX)", Page 584
- **VNC:** Display the desktop of an external Windows, Apple or Unix computer on the control  
**Further information:** "VNC", Page 584
- **Switch-off/restart of a computer:** Automatically shut down a Windows computer together with the control
- **World Wide Web:** Available only to authorized specialists
- **SSH:** Available only to authorized specialists
- **XDMCP:** Available only to authorized specialists
- **User-defined connection:** Available only to authorized specialists

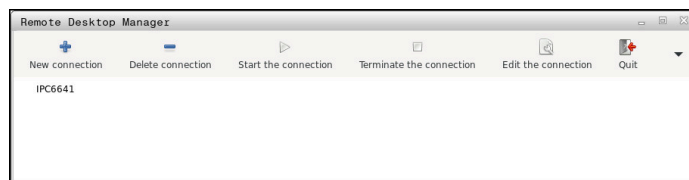

HEIDENHAIN offers the IPC 6641 as a Windows computer. With the IPC 6641 you can start and operate Windows-based applications directly from within the control.

If the desktop of the external connection or the external computer is active, all inputs from the mouse and the alphabetic keyboard are transmitted there.

When the operating system is shut down, the control automatically terminates all connections. Please note that only the connection is terminated, whereas the external computer or the external system is not shut down automatically.

### Buttons

**Remote Desktop Manager** contains the following buttons:

Button	Function
<b>New connection</b>	Create a new connection in the <b>Edit the connection</b> window <b>Further information:</b> "Establishing and starting a connection", Page 587
<b>Delete connection</b>	Delete the selected connection
<b>Start the connection</b>	Start the selected connection <b>Further information:</b> "Establishing and starting a connection", Page 587
<b>Terminate the connection</b>	Terminate the selected connection
<b>Edit the connection</b>	Edit the selected connection in the <b>Edit the connection</b> window <b>Further information:</b> "Connection settings", Page 585
<b>Exit</b>	Close <b>Remote Desktop Manager</b>
<b>Import connections</b>	Restore the selected connection <b>Further information:</b> "Exporting and importing connections", Page 588
<b>Export the connections</b>	Back-up the selected connection <b>Further information:</b> "Exporting and importing connections", Page 588

### Windows Terminal Service (RemoteFX)

You don't need any additional software on a computer for a RemoteFX connection, but you might need to change some settings on the computer.

**Further information:** "Configuring an external computer for Windows Terminal Service (RemoteFX)", Page 587

For integrating the IPC 6641, HEIDENHAIN recommends using a RemoteFX connection.

With RemoteFX, a separate window opens for the screen of the external computer. The active desktop on the external computer is then locked and the user logged off. This prevents two users from accessing the control simultaneously.

### VNC

You need an additional **VNC** server for your external computer when connecting through VNC. Install and configure the VNC server (e.g., TightVNC server) before establishing the connection.


**VNC** mirrors the screen of the external computer. The active desktop on the external computer is not locked automatically.

With a **VNC** connection you can shut down the external computer through the Windows menu. The computer cannot be restarted through the connection.

## Connection settings

### General settings

The following settings apply to all connection options:

Setting	Meaning	Usage
Connection name	Name of the connection in <b>Remote Desktop Manager</b>	Required
	<div>  You can use the following characters in the name of the connection:            A B C D E F G H I J K L M N O P Q R S T U V W X Y Z a            b c d e f g h i j k l m n o p q r s t u v w x y z 0 1 2 3 4 5 6            7 8 9 _         </div>	
Restarting after end of connection	Behavior after disconnection: <ul style="list-style-type: none"> <li>■ <b>Always restart</b></li> <li>■ <b>Never restart</b></li> <li>■ <b>Always after an error</b></li> <li>■ <b>Ask after an error</b></li> </ul>	Required
Automatic starting upon login	Connect automatically when starting	Required
Add to favorites	The control displays the connection's icon in the taskbar. Tap or click the icon to start the connection directly.	Required
Move to the following workspace	Number of the desktop for the connection; desktops 0 and 1 are reserved for the NC software. Default setting: Third desktop	Required
Release USB mass memory	Permit access to connected USB mass memory devices	Required
Private connection	Connection can be seen and used only by its creator	Required
Computer	Host name or IP address of the external computer HEIDENHAIN recommends the <b>IPC6641.machine.net</b> setting for the IPC 6641. The host name <b>IPC6641</b> must be assigned to the IPC in the Windows operating system for this setting.	Required
Password	Password of the user	Required
Entries in the <b>Advanced options</b> area	Available only to authorized specialists	Optional

### Additional settings for Windows Terminal Service (RemoteFX)

The control offers the following additional connection settings for the **Windows Terminal Service (RemoteFX)** option:

Setting	Meaning	Usage
User name	Name of the user	Required
Windows domain	Domain of the external computer	Optional
Full-screen mode or User-defined window size	Size of the connection window on the control	Required

### Additional settings for VNC

The control offers the following additional connection settings for the **VNC** option:

Setting	Meaning	Usage
<b>Full-screen mode</b> or <b>User-defined window size:</b>	Size of the connection window on the control	Required
<b>Permit further connections (share)</b>	Additionally grant other VNC connections access to the VNC server	Required
<b>View only</b>	In display mode, the external computer cannot be operated.	Required

### Additional settings for Switch-off/restart of a computer

The control offers the following additional connection settings for the **Switch-off/restart of a computer** option:

Setting	Meaning	Usage
<b>User name</b>	User name with which the connection should log in.	Required
<b>Windows domain:</b>	If required, domain of the target computer	Optional
<b>Max. waiting time (seconds):</b>	A shutdown of the control causes the Windows computer to shut down as well.  Before the control displays the <b>Now you can switch off.</b> message, it waits for the number of seconds defined here. While waiting, the control checks whether the Windows computer is still accessible (port 445).  If the Windows computer is switched off before the defined number of seconds have expired, the control will wait no longer.	Required
<b>Additional waiting time:</b>	Waiting time after the Windows computer has stopped being accessible.  Windows applications may delay the shutdown of the computer after port 445 has been closed.	Required
<b>Force</b>	Close all programs on the Windows computer, even if dialogs are still open.  If <b>Force</b> is not selected, Windows waits up to 20 seconds. This delays the shutdown process or the Windows computer is switched off before Windows has shut down.	Required
<b>Restart</b>	Restart the windows computer	Required
<b>Run during restart</b>	When the control restarts, restart the Windows computer as well. Effective only if the control is restarted using the shutdown icon at the bottom right in the taskbar or if it is restarted as a result of a change in the system settings (e.g. network settings).	Required
<b>Run during switch-off</b>	Shut down the Windows computer (no restart) when shutting down the control. This is the default behavior. Even the <b>END</b> key will then not trigger a restart.	Required

### 25.17.1 Configuring an external computer for Windows Terminal Service (RemoteFX)

To configure the external computer (e.g., in Windows 10 operating systems):

- ▶ Press the Windows key
- ▶ Select **Control Panel**
- ▶ Select **System and Security**
- ▶ Select **System**
- ▶ Select **Remote Settings**
- > The computer opens a pop-up window.
- ▶ Under **Remote Assistance**, enable **Allow Remote Assistance connections to this computer**
- ▶ In the **Remote Desktop** area, enable **Allow Remote connections to this computer**
- ▶ Press **OK** to confirm your settings

### 25.17.2 Establishing and starting a connection

To establish and start a connection:

- ▶ Open **Remote Desktop Manager**
- ▶ Select **New connection**
- > The control displays a selection menu.
- ▶ Select a connection option
- ▶ Under **Windows Terminal Service (RemoteFX)**, select the operating system
- > The control opens the **Edit the connection** window.
- ▶ Define the connection settings
- Further information:** "Connection settings", Page 585
- ▶ Press **OK**
- > The control saves the settings and closes the window.
- ▶ Select connection
- ▶ Select **Start the connection**
- > The control starts the connection.

### 25.17.3 Exporting and importing connections

To export a connection:

- ▶ Open **Remote Desktop Manager**
- ▶ Select the desired connection
- ▶ Select the right arrow icon in the menu bar
- > The control displays a selection menu.
- ▶ Select **Export the connections**
- > The control opens the **Select export file** window.
- ▶ Define the name of the saved file
- ▶ Select the target file
- ▶ Select **Save**
- > The control saves the connection data under the name defined in the window.

To import a connection:

- ▶ Open **Remote Desktop Manager**
- ▶ Select the right arrow icon in the menu bar
- > The control displays a selection menu.
- ▶ Select **Import connections**
- > The control opens the **Select file to import** window.
- ▶ Select file
- ▶ Select **Open**
- > The control creates the connection under the name that was defined originally in the **Remote Desktop Manager**.

#### Notes

NOTICE
<p><b>Caution: Data may be lost!</b></p> <p>If you do not shut down external computers properly, data may be irreversibly damaged or deleted.</p> <ul style="list-style-type: none"> <li>▶ Configure the automatic shutdown of the Windows computer</li> </ul>

- When you edit an existing connection, the control will automatically delete all impermissible characters from the name.

#### Notes in connection with the IPC 6641

- HEIDENHAIN assures a functioning connection between HEROS 5 and the IPC 6641. No guarantee is given for other combinations and connections.
- If you use the computer name **IPC6641.machine.net** to connect an IPC 6641, it is important to enter **.machine.net**.

With this entry, the control automatically searches the Ethernet interface **X116**, and not the interface **X26**; this reduces the time needed for access.



25.18 Firewall

Application

With the control you can set up a firewall for the primary network interface, and for a sandbox if needed. You can block incoming network traffic for specific senders and services.

Related topics




- Existing network connection  
**Further information:** "Ethernet interface", Page 559
- SELinux security software  
**Further information:** "SELinux security software", Page 555

Description of function


To navigate to this function:

**Settings ▶ Network/Remote Access ▶ Firewall**

If you activate the firewall, the **Firewall settings** window displays a symbol at the bottom right of the taskbar. The control displays the following symbols, depending on the security level:



Icon	Meaning
	Firewall protection does not yet exist although it has been activated.  Example: A dynamic IP address is used in the network interface configuration, but the DHCP server has not yet assigned an IP address.  <b>Further information:</b> "The DHCP server tab", Page 563
	Firewall active with medium security level.
	Firewall active with high security level. All services except for SSH are blocked.

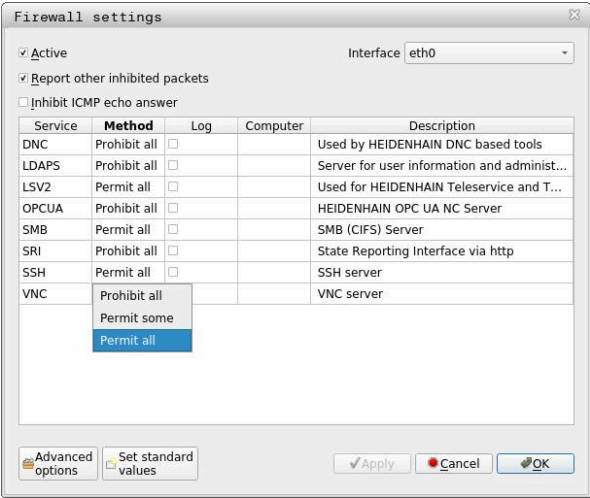Firewall settings



The **Firewall settings** window contains the following settings:

Setting	Meaning
Active	Activate or deactivate firewall
Interface	<div>Select the interface<ul style="list-style-type: none"><li>■ <b>eth0</b>: X26 of the control</li><li>■ <b>eth1</b>: X116 of the control</li><li>■ <b>brsb0</b>: Sandbox (optional)</li></ul>If a control has two Ethernet interfaces, then by default the DHCP server for the machine network is active for the second interface. With this setting you cannot activate the firewall for <b>eth1</b> because the firewall and DHCP server mutually exclude each other.</div>
Report other inhibited packets	<div>Activate the firewall with a high security level</div> <div>All services except for SSH are blocked.</div>
Inhibit ICMP echo answer	<div>If this check box is selected, the control does not respond to a ping request.</div>

Setting	Meaning
Service	<p>Brief designation of services configured with the firewall. You can change the settings even if the services are not started.</p> <ul style="list-style-type: none"> <li> <b>DNC</b>  DNC server using the RPC protocol for external applications that were developed with RemoTools SDK (port 19003) <div>  For more detailed information, consult the RemoTools SDK manual. </div> </li> <li> <b>LDAPS</b>  Server with user data and configuration of user administration </li> <li> <b>LSV2</b>  Functionality for <b>TNCremo</b>, TeleService, and other HEIDENHAIN PC tools (port 19000) <div>  The control might not support connection configurations that use the LSV2 protocol. When the control detects a non-secure connection, it displays a warning message with additional information. In this case, please contact the provider of the corresponding application. HEIDENHAIN recommends the use of the OPC UA or DNC application for access to the control.  <b>Further information:</b> "OPC UA NC Server (#56-61 / #3-02-1*)", Page 568  <b>Further information:</b> "The DNC menu item", Page 574 </div> </li> <li> <b>OPC UA</b>  Service provided by the <b>OPC UA NC Server</b> (port 4840). </li> <li> <b>SMB</b>  Only incoming SMB connections, meaning a Windows share on the control. Outgoing SMB connections are not influenced, meaning a Windows share connected to the control. </li> <li> <b>SSH</b>  SecureShell protocol (port 22) for secure LSV2 handling with active user administration; starting with HEROS 504 </li> <li> <b>VNC</b>  Access to screen contents. If you block this service, then not even TeleService programs from HEIDENHAIN can access the control. If you block this service, the control displays a warning in the <b>VNC settings</b> window.  <b>Further information:</b> "The VNC menu item", Page 579 </li> </ul>
Method	<p>Configure accessibility</p> <ul style="list-style-type: none"> <li> <b>Prohibit all:</b> Cannot be accessed by anyone </li> <li> <b>Permit all:</b> Can be accessed by everyone </li> <li> <b>Permit some:</b> Can be accessed only by specific clients </li> </ul> <p>In the <b>Computer</b> column you must define the computer for which access is permitted. If you do not define a computer, the control activates <b>Prohibit all</b>.</p>

Setting	Meaning
Log	<p>The control shows the following messages when transmitting network packets:</p> <ul style="list-style-type: none"><li>■ Red: Network packet blocked</li><li>■ Blue: Network packet accepted</li></ul>
Computer	<p>IP address or host name of the computers with access rights. Separated by commas, if there are multiple computers</p> <p>The control converts the host name to an IP address when the control starts. If the IP address changes, you must restart the control or change the setting. The control issues an error message if it cannot convert the host name to an IP address.</p> <p>Only for the <b>Permit some</b> method</p>
Advanced options	Only for network specialists
Set standard values	Reset the settings to the default values recommended by HEIDENHAIN

Notes

- Have your network specialist check and, if necessary, change the standard settings.
- When user administration is active, you can set up only secure network connections via SSH. The control automatically disables the LSV2 connections via the serial interfaces (COM1 and COM2) and the network connections without user authentication.
- The firewall does not protect the second network interface **eth1**. Connect only trustworthy hardware to this interface, and do not use this interface for Internet connections.

## 25.19 Portscan

### Application

With the **Portscan** function, the control checks all open, incoming TCP and UDP listen ports at defined intervals or when commanded. The control shows a message if a port is not listed.

### Related topics

- Firewall settings

**Further information:** "Firewall", Page 589

- Network settings

**Further information:** "Network configuration with Advanced Network Configuration", Page 647

### Description of function

To navigate to this function:

**Settings ► Diagnostics/Maintenance ► Portscan**

The control searches for all open, incoming TCP and UDP listen ports on the system and compares them to the following whitelists:

- System-internal whitelists **/etc/sysconfig/portscan-whitelist.cfg** and **/mnt/sys/etc/sysconfig/portscan-whitelist.cfg**
- Whitelist for ports with machine-manufacturer-specific functions: **/mnt/plc/etc/sysconfig/portscan-whitelist.cfg**
- Whitelist for ports with customer-specific functions: **/mnt/tnc/etc/sysconfig/portscan-whitelist.cfg**

Each whitelist contains the following information:

- Port type (TCP/UDP)
- Port number
- Offering program
- Comments (optional)

Start the portscan manually by selecting the **Start** button in the **Manual Execution** area. In the **Automatic Execution** area, you can use the **Automatic update on** function to specify that the control will perform the portscan automatically in the selected interval. You define the interval with a slider.

If the control performs the portscan automatically, then only ports listed in the whitelists may be open. The control shows a message window if a port is not listed.

## 25.20 Backup and restore

### Application

With the **NC/PLC Backup** and **NC/PLC Restore** functions you can back up and restore individual folders or the entire **TNC:** drive. You can save the backup files to various types of memory media.

### Related topics

- File management, **TNC:** drive

**Further information:** User's Manual for Programming and Testing

## Description of function

To navigate to this function:

**Settings ► Diagnostics/Maintenance ► NC/PLC Backup**

**Settings ► Diagnostics/Maintenance ► NC/PLC Restore**

The backup function creates a **\*.tncbck** file. The restore function can restore these files as well as files from existing TNCbackup programs. If you double-tap or double-click a **\*.tncbck** file in the file manager, the control starts the restore function.

**Further information:** User's Manual for Programming and Testing

Within the backup function you can choose between the following types of backups:

- **Back up the “TNC:” partition**  
Back-up all data on the **TNC:** drive
- **Back up the directory tree**  
Back-up the selected folders and their subfolders on the **TNC:** drive
- **Back up the machine configuration**  
Only for the machine manufacturer
- **Complete backup (TNC: and machine configuration)**  
Only for the machine manufacturer

Backup and restore is subdivided into several steps. Navigate between these steps with the **FORWARD** and **BACK** buttons.

### 25.20.1 Backing up data

To back-up the data of the **TNC:** drive:

- ▶ Select the **Settings** application
- ▶ Select **Diagnostics/Maintenance**
- ▶ Double-tap or double-click **NC/PLC Backup**
- > The control opens the **Back up the “TNC:” partition** window.
- ▶ Specify the type of backup
- ▶ Select **Forward**
- ▶ If necessary, pause the control with **Stop NC software**
- ▶ Select any predefined exclusion rules or ones you have defined yourself
- ▶ Select **Forward**
- > The control generates a list of files for backing up.
- ▶ Check list
- ▶ Deselect files if necessary
- ▶ Select **Forward**
- ▶ Enter the name of the backup file
- ▶ Select the storage path
- ▶ Select **Forward**
- > The control generates the backup file.
- ▶ Confirm with **OK**
- > The control concludes the backup process and restarts the NC software.

## 25.20.2 Restoring data

### NOTICE

**Caution: Data may be lost!**

When you restore data (Restore function), any existing data will be overwritten without a confirmation prompt. Existing data is not automatically backed up by the control before running the restore process. Power failures or other problems can interfere with the data restore process. As a consequence, data may be irreversibly damaged or deleted.

- ▶ Before starting the data restore process, make a backup of the existing data

To restore data:

- ▶ Select the **Settings** application
- ▶ Select **Diagnostics/Maintenance**
- ▶ Double-tap or double-click **NC/PLC Restore**
- > The control opens the **Restore data - %1** window.
- ▶ Select the archive to be restored
- ▶ Select **Forward**
- > The control generates a list of files for restoring.
- ▶ Check list
- ▶ Deselect files if necessary
- ▶ Select **Forward**
- ▶ If necessary, pause the control with **Stop NC software**
- ▶ Select **Extract archive**
- > The control restores the files.
- ▶ Confirm with **OK**
- > The control restarts the NC software.

### Note

The TNCbackup PC program can also process **\*.tncbck** files. TNCbackup is part of TNCremo.

## 25.21 TNCdiag


### Application

The control displays status and diagnostic information of HEIDENHAIN components in the **TNCdiag** window.


### Description of function

To navigate to this function:

**Settings ► Diagnostics/Maintenance ► TNCdiag**



Only use this function after consultation with your machine manufacturer.



For more information, please refer to the **TNCdiag** documentation.

## 25.22 Update the documentation

### Application

The **Update the documentation** function can be used, for example, to install or update the integrated **TNCguide** product help.

### Related topics

- Integrated product help **TNCguide**  
**Further information:** "User's Manual as integrated product aid: TNCguide", Page 60
- Product help on the HEIDENHAIN website  
**TNCguide**

### Description of function


To navigate to this function:

**Settings ► Diagnostics/Maintenance ► Update the documentation**

The file manager is located in the **Update the documentation** area. You can select and install the desired documentation from the file manager.

**Further information:** "Transferring TNCguide", Page 597

The control shows all available documents in the **Help** application.




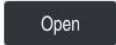
In the **Update the documentation** area, you can install all HEIDENHAIN-specific documents (e.g., NC error messages).




### 25.22.1 Transferring TNCguide

You can find and transfer the desired **TNCguide** version as follows:

- ▶ Select the link to the HEIDENHAIN website  
[https://content.heidenhain.de/doku/tnc\\_guide/html/de/index.html](https://content.heidenhain.de/doku/tnc_guide/html/de/index.html)
  - ▶ Select **TNC Controls**
  - ▶ Select **TNC7 Series**
  - ▶ Select the NC software number
  - ▶ Navigate to **Product help (HTML files)**
  - ▶ Select **TNCguide** in the desired language
  - ▶ Select path to save the file
  - ▶ Select **store**
  - > The download begins.
  - ▶ Transfer the downloaded file to the TNC control
- 

  - ▶ Select the **Home** operating mode
  - ▶ Select the **Settings** application
  - ▶ Select **Diagnostics/Maintenance**
  - ▶ Select **Update documentation**
  - > The control opens the **Select installation file** area.
  - ▶ Select the desired file with extension **\*.tncdoc**
- 

  - ▶ Select **Open**
  - > A pop-up window appears, stating whether the installation was successful or failed.
- 

  - ▶ Select the **Help** application
  - ▶ Select **home**
  - > The control shows all available documentation.

## 25.23 Machine parameters

### Application

You can configure the behavior of the control with machine parameters. For this purpose, the control provides the **MPs for Users** and **MPs for setters** applications. You can open the **MPs for Users** application at any time without having to enter a code number.

The machine manufacturer defines which machine parameters are in which applications. HEIDENHAIN offers a standard scope of parameters for the **MPs for setters** application. The following contents describe only the standard scope of the **MPs for setters** application.

### Related topics

- List of machine parameters for the **MPs for setters** application  
**Further information:** "Machine parameters", Page 654

### Requirements

- Code number 123  
**Further information:** "Code numbers", Page 545
- The contents of the **MPs for setters** application have been defined by the machine manufacturer

### Description of function

To navigate to this function:

**Settings ► Machine Parameters ► MPs for setters**

In the **Machine Parameters** group the control shows only those menu items that you can choose with the current access rights.


If you open an application for machine parameters, the control displays the configuration editor.

The configuration editor offers the following workspaces:

- **Details**
- **Document**
- **List**

You cannot close the **List** workspace.

## Configuration editor areas

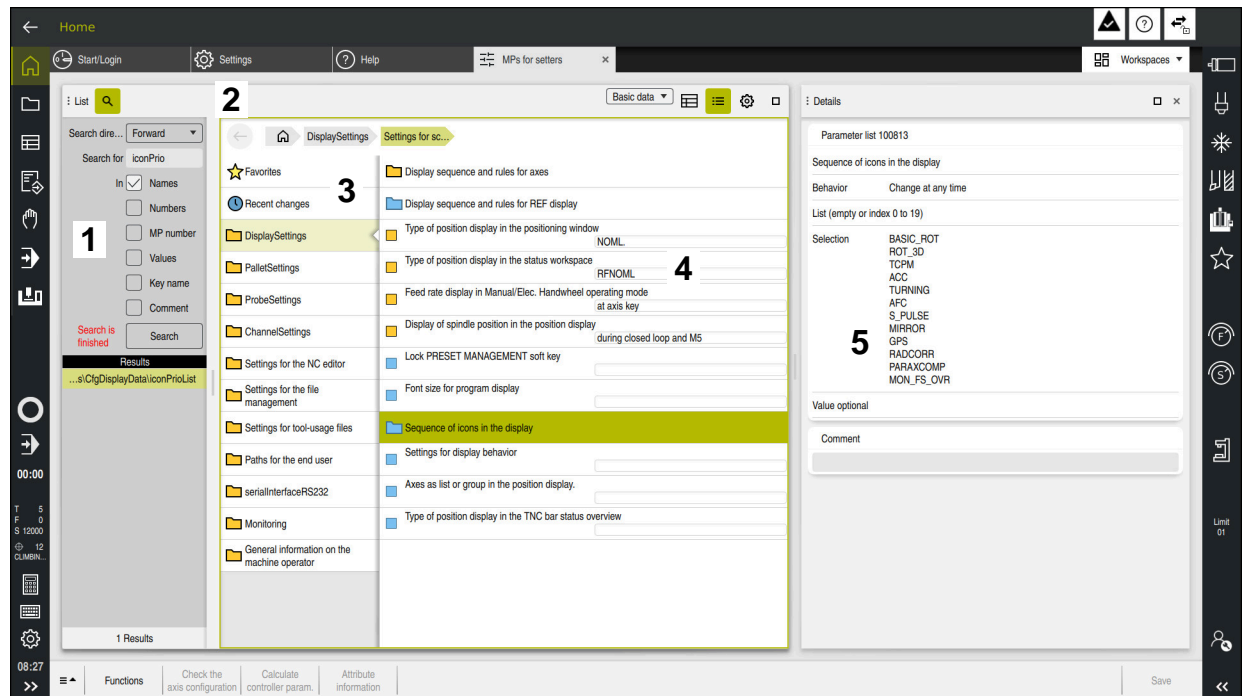

The **MPs for settings** application with a machine parameter selected

The configuration editor shows the following areas:

### 1 The **Search** column

You can search forward or backward with the following characteristics:

- **Name**  
This is the language-neutral name used for machine parameters in the User's Manual.
- **Number**  
This is the unique number used for machine parameters in the User's Manual.
- **MP number of the iTNC 530**
- **Value**
- **Key name**  
Machine parameters for axes or channels exist more than once. In order to avoid ambiguity, each axis and each channel is identified with a key name (e.g., **X1**)
- **Comment**

The control displays the results.

## 2 Title bar of the **List** workspace

The title bar of the **List** workspace includes the following functions:

- Open or close the **Search** column
  - Filter contents using a selection menu
  - Toggle between structure and table views
- In the table view, you can compare data objects.

The control displays the following information:

- Name of the objects
- Symbols of the objects
- Machine parameter values
- Open or close the **Details** workspace  
**Further information:** "The Details workspace", Page 602
- Open or close the **Configuration** window  
**Further information:** "Configuration window", Page 602

## 3 Navigation column

The control provides the following options for navigation:

- Navigation path
- Favorites
- 21 most recent changes
- Structure of the machine parameters

## 4 Content column

In the content column the control displays objects, machine parameters, or changes that you select using the search function or navigation column.













## 5 The **Details** workspace

The control displays information on the selected machine parameter or the most recent change you made.

**Further information:** "The Details workspace", Page 602

## Icons and buttons

The configuration editor contains the following icons and buttons:

Icon or button	Meaning
	Activate or deactivate the <b>table view</b> The control toggles between structure and table views. <b>Further information:</b> "Configuration editor areas", Page 599
	Open or close the <b>Details</b> workspace <b>Further information:</b> "The Details workspace", Page 602
	Open or close the <b>Configuration</b> window <b>Further information:</b> "Configuration window", Page 602
	Select <b>Recent changes</b>
	Object exists <ul style="list-style-type: none"> <li>■ Data object</li> <li>■ Directory</li> <li>■ Parameter list</li> </ul>
	Object empty
	Machine parameter exists
	Optional machine parameter does not exist
	Machine parameter invalid
	Machine parameter readable but not editable
	Machine parameter not readable and not editable
	Changes to the machine parameter not yet saved
<b>Functions</b>	Open the context menu <b>Further information:</b> User's Manual for Programming and Testing
<b>Check the axis configuration</b>	Only for the machine manufacturer
<b>Calculate controller param.</b>	Only for the machine manufacturer
<b>Attribute information</b>	Only for the machine manufacturer
<b>Save</b>	The control opens a window with all of the changes since the most recent saving. You can save or discard the changes.

## Configuration window

The **Configuration** window includes the **Show MP descriptive texts** toggle switch.

If the toggle switch is active, the control displays a description of the machine parameter in the active conversational language.

If the toggle switch is not active, the control displays the language-neutral name of the machine parameter.

## The Details workspace

If you select contents from the favorites or the structure, the control will display information in the **Details** workspace, such as:

- Type of object, such as data object list or parameter
- Descriptive text of machine parameter
- Permitted or required input
- Prerequisite for the change (e.g., program run blocked)
- Number of the machine parameter on the iTNC 530
- Machine parameter optional

This information is included if a machine parameter can be enabled optionally.

If you select contents from the most recent changes you made, the control will display the following information in the **Details** workspace:

- Sequential number of the last change
- Previous value
- New value
- Date and time of change
- Descriptive text of machine parameter
- Permitted or required input

### 25.23.1 Note

The machine manufacturer offers further applications for machine parameters.

If later customization of the machine configuration by the machine manufacturer is intended, the machine operator might incur additional costs.

## 25.24 Configuring the control's user interface

### Application

Each user can create and activate configurations in which the control's user interface is individually adapted.

### Related topics

- Workspaces

**Further information:** "Workspaces", Page 91

- Control interface

**Further information:** "Areas of the control's user interface", Page 88

## Description of function

To navigate to this function:

### Settings ► Configurations ► Configurations

A configuration contains all adaptations to the control's user interface that do not influence the control's actual functions.

- Settings for the TNC bar
- Arrangement of workspaces
- Font size
- Favorites

The **Configurations** area contains the following functions:

Function	Meaning
<b>Active Configuration</b>	Activate a configuration from a selection menu <b>Further information:</b> "The Desktop menu workspace", Page 105
<b>Default configuration</b>	Use the <b>Reset</b> button to apply the settings of the <b>OEM configuration</b> to the active configuration.
<b>Save as OEM Configuration</b>	The machine manufacturer can use the <b>Save</b> button to overwrite the <b>OEM configuration</b> .
<b>Save current settings</b>	With the <b>Save</b> button, you can save the current version of the active configuration.
<b>Restore last configuration</b>	With the <b>Reset</b> button, you can discard any customizations and revert to the saved version of the active configuration.

The control displays the following information about all available configurations in a table:


Column	Meaning
<b>Configuration Name</b>	Name of the configuration
<b>Selectable</b>	If this toggle switch is active, you can select the configuration in the <b>Active configuration</b> selection menu.
<b>Exportable</b>	If this toggle switch is active, you can export the configuration. <b>Further information:</b> "Exporting and importing configurations", Page 604
<b>Edit</b>	This column contains two buttons, for renaming and deleting the configuration.

Press the **Add** button to create a new configuration.


### 25.24.1 Exporting and importing configurations

To export configurations:

- ▶ Select the **Settings** application
- ▶ Select **Configurations**
- > The control opens the **Configurations** area.
- ▶ Activate the **Exportable** toggle switch for the desired configuration, if necessary




- ▶ Select **Export**
- > The control opens the **Save as** window.
- ▶ Select the target file
- ▶ Enter a file name




- ▶ Select **Create**
- > The control saves the configuration file.

To import configurations:



- ▶ Select **Import**
- > The control opens the **Import configurations** window.
- ▶ Select file

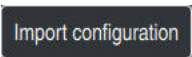

- ▶ Select **Import configuration**
- > If importing a configuration would overwrite a file with the same name, the control displays a prompt.
- ▶ Select the procedure:
  - **Overwrite**: the control overwrites the original configuration.
  - **Keep**: the control does not import the configuration.
  - **Cancel**: the control cancels the import process.

#### Notes

- Delete only inactive configurations. If you delete an active configuration, the control first activates a default configuration. This can lead to delays.
- The **Overwrite** function permanently replaces existing configurations.



# 26

## User Administration

## 26.1 Fundamentals

### Application

User administration enables you to create and administrate different users with different access rights to various functions of the control. You can assign roles to the various users that reflect their respective tasks, such as machine operator or setup technician.

User administration is inactive in the control's factory default setting. This status is called **Legacy-Mode**.


### Description of function

User administration supports you in the following fields of security, based on the requirements of the IEC 62443 series of standards:

- Application security
- Network security
- Platform security

The user administration differentiates between the following terms:

- User  
**Further information:** "Users", Page 606
- Roles  
**Further information:** "Roles", Page 608
- Rights  
**Further information:** "Rights", Page 608

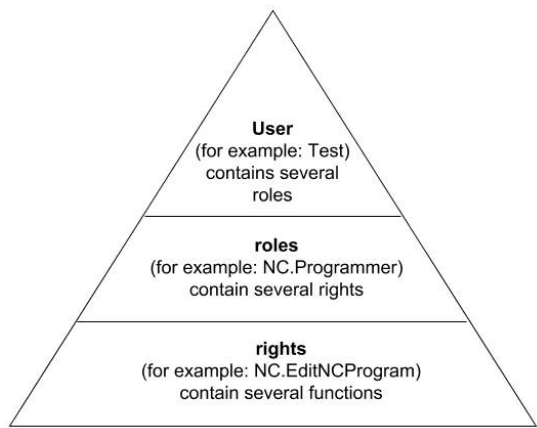

### Users

The user administration offers the following types of users:

- Function users pre-defined by HEIDENHAIN
- Function users pre-defined by the machine manufacturer
- Self-defined users

Depending on the task assigned, you can use one of the pre-defined function users or you have to create a new user.

**Further information:** "Creating a new user", Page 612

If you deactivate user administration, the control saves all configured users. Thus they will be available again when user administration is reactivated.

If you want to delete the configured users upon deactivation, you need to set this explicitly when deactivating user administration.

**Further information:** "Deactivating user administration", Page 613

### HEIDENHAIN function users

HEIDENHAIN function users are pre-defined users that are automatically created upon activation of user administration. Function users cannot be changed.

HEIDENHAIN provides four different function users in the control's factory default setting.

- **useradmin**

The **useradmin** function user is automatically created upon activation of user administration. The **useradmin** function user allows you to configure and edit user administration.

- **sys**

The **sys** function user allows you to access the **SYS:** drive of the control. This function user is reserved for use by HEIDENHAIN service personnel.

- **user**

In **legacy mode**, the **user** function user is automatically logged on to the system during control startup. When user administration is active, the **user** function user has no effect. The logged-on user of the type **user** cannot be changed in **legacy mode**.

- **oem**

The **oem** function user is intended for the machine manufacturer. The **oem** function user allows you to access the **PLC:** drive of the control.

### The useradmin function user

The **useradmin** user is comparable to the local administrator of a Windows system.

The **useradmin** account provides the following functions:

- Creating databases
- Assigning the password data
- Activating the LDAP database
- Exporting LDAP server configuration files
- Importing LDAP server configuration files
- Emergency access if the user database was destroyed
- Retroactive change of the database connection
- Deactivating user administration

### Function users pre-defined by the machine manufacturer

Your machine manufacturer defines function users who are required for specific tasks such as machine maintenance.

By entering code numbers or passwords that replace code numbers, you can temporarily enable rights of **oem** function users.

**Further information:** "The Active user window", Page 614

The machine manufacturer's function users can already be active in **legacy mode** and replace code numbers.

## Roles

HEIDENHAIN combines several rights for individual task areas to roles. Different pre-defined roles that you can use to assign rights to your users are available. The tables below describe the individual rights of the different roles.

**Further information:** "List of roles", Page 666

Advantages of classification in roles:

- Simplified administration
- Different rights are compatible between different software versions of the control and different machine manufacturers.

User administration offers roles for the following tasks:

- **Operating system roles:** access to functions of the operating system and interfaces
- **NC operator roles:** access to functions for programming, setting up and running NC programs
- **Machine tool builder (PLC) roles:** access to functions for configuring and checking the control

Every user should have at least one role from the operating system area and at least one role from the programming area.

HEIDENHAIN recommends permitting more than one person to access an account with the HEROS.Admin role. This ensures that necessary changes to user administration can also be made in the administrator's absence.

### Local or remote registration

You can enable a role either for local login or for remote login. With local login, the user directly logs on to the control at the control's screen. A remote login (DNC) is a connection via SSH.

**Further information:** "SSH-secured DNC connection", Page 627

If a role is only enabled for local login, Local. is added to the role name (e.g., Local.HEROS.Admin instead of HEROS.Admin).

If a role is only enabled for remote login, Remote. is added to the role name (e.g., Remote.HEROS.Admin instead of HEROS.Admin).

You can therefore also make the rights of a user dependent on the access used to operate the control.

## Rights

The user administration is based on the Unix rights management. Access to the control is controlled by means of rights.

Rights gather various functions of the control (e.g., editing the tool table).

User administration offers rights for the following tasks:

- HEROS rights
- NC rights
- PLC rights (machine manufacturer)

If more than one role is assigned to a user, he will be granted all rights contained in these roles.



Ensure that every user is assigned all access rights he needs. The access rights result from the tasks a user performs on the control.

The access rights of HEIDENHAIN function users are already pre-defined in the control's factory default setting.

**Further information:** "List of rights", Page 669

## Password settings

If you use an LDAP database, users with the HEROS.Admin role can define password requirements. For this, the control provides the **Password settings** tab.

**Further information:** "Saving user data", Page 615

The following parameters are available:

### Password lifetime

- **Validity period of password:**

Here, you can indicate how long the password can be used.

- **Warning before expiration:**

From the defined time, a warning will be issued that the password will soon expire.

### Password quality

- **Minimum password length:**

Here, you can indicate the minimum password length.

- **Minimal number of character classes (upper/lower, digits, special):**

Here, you can indicate the minimum number of different character classes required in the password.

- **Maximum number of repeated characters:**

Here, you can indicate the maximum number of identical successive characters in the password.

- **Maximum length of character sequences:**

Here, you can indicate the maximum length of the character sequences to be used in the password (e.g., 123).

- **Dictionary check (number of matching characters):**

Here, you can enable a check whether the password contains known words and specify the allowed number of meaningful characters.

- **Minimum number of characters changed compared to previous password:**

Here, you can specify how many characters in the new password must be different from the previous one.

You define the values for each parameter on a scale.

For reasons of security, passwords should comply with the following criteria:

- Eight characters minimum
- Letters, numbers, and special characters
- Avoid using whole words or a sequence of characters (e.g., Anna or 123)



If you want to use special characters, pay attention to the keyboard layout. HEROS assumes a US keyboard, the NC software assumes a HEIDENHAIN keyboard. External keyboards can be freely configured.

Additional directories

HOME: drive

When user administration is active, a private **HOME:** directory, to which you can save your private programs and files, is available to every user.

The **HOME:** directory can be viewed by the respectively logged-in users as well as users with the HEROS.Admin role.

public directory

Upon the first activation of user administration, the **public** directory below the **TNC:** drive will be connected.

The **public** directory can be accessed by any user.


In the **public** directory you can, for example, make files available to other users.

26.1.1 Configuring user administration

User administration needs to be configured before you can use it.

Perform the following steps for configuration:

- 1 Opening the **User administration** window
- 2 Activating user administration
- 3 Defining the password for the **useradmin** function user
- 4 Setting up a database
- 5 Creating a new user



- You can exit the **User administration** window after each configuration step.
- If you exit the **User administration** window directly after having activated user administration, the control will prompt you for a restart once.

Opening the User administration window

To open the **User administration** window:


- ▶ Select the **Settings** application
- ▶ Select **Operating System**
- ▶ Double-tap or double-click **CurrentUser**
- ▶ The control opens the **User administration** window in the **Settings** tab.

**Further information:** "The User administration window", Page 614

Activating user administration

To activate user administration:

- ▶ Select **User administration active**
- ▶ The control shows the message **Password for user 'useradmin' missing**.
- ▶ Retain or reactivate the active status of the **Anonymize users in log data** function



- The purpose of the **Anonymize users in log data** function is data privacy; this function is active by default. While this function is active, user data in all log files of the control will be anonymized.
- If you exit the **User administration** window directly after having activated user administration, the control will prompt you for a restart once.

## Define the password for the useradmin function user

If you are activating user administration for the first time, you must define a password for the **useradmin** function user.

**Further information:** "Users", Page 606

To define a password for the **useradmin** function user:

- ▶ Select **Password for useradmin**
- > The control opens the **Password for user 'useradmin'** pop-up window.
- ▶ Enter the password for the **useradmin** function user



Please observe the recommendations for passwords.

**Further information:** "Password settings", Page 609

- ▶ Repeat the password
- ▶ Select **Set new password**
- > The control shows the message **Settings and password for 'useradmin' were changed.**

## Setting up a database

To set up a database:

- ▶ Select the database for saving your user data (e.g., **Local LDAP database**)
- ▶ Select **Configuration**
- > The control opens a window for configuring the corresponding database.
- ▶ Follow the instructions from the control in the window
- ▶ Select **APPLY**



The following options are available for saving your user data:

- **Local LDAP database**
- **LDAP on remote computer**
- **Connection to Windows domain**

Parallel operation of Windows users and users from an LDAP database is possible.

**Further information:** "Saving user data", Page 615

### Creating a new user

To create a new user:

- ▶ Select the **User administration** tab
- ▶ Select **Create new user**
- > The control adds a new user to the **User list**.
- ▶ Change the name as needed
- ▶ Edit a password as needed
- ▶ Define a profile image as needed
- ▶ Enter a description as needed
- ▶ Select **Add role**
- > The control opens the **Add role** window.
- ▶ Select a role
- ▶ Select **Add**



You can also add roles using the **Add external login** and **Add local login** buttons.

**Further information:** "Roles", Page 608

- ▶ Select **Close**
- > The control closes the **Add role** window.
- ▶ Select **OK**
- ▶ Select **APPLY**
- > The control adopts the changes.
- ▶ Select **END**
- > The control opens the **System reboot required** window.
- ▶ Select **Yes**
- > The control restarts.



The user must change the password when logging in for the first time.



### 26.1.2 Deactivating user administration

User administration can only be deactivated by the following function users:

- **useradmin**
- **OEM**
- **SYS**

**Further information:** "Users", Page 606

To deactivate user administration:

- ▶ Log in as a function user
- ▶ Opening the **User administration** window
- ▶ Select **User administration inactive**
- ▶ If desired, check **Delete existing user databases** to delete all configured users and user-specific directories
- ▶ Select **APPLY**
- ▶ Select **END**
- > The control opens the **System reboot required** window.
- ▶ Select **Yes**
- > The control restarts.

#### Notes

#### NOTICE

##### Caution: Unwanted data transfer is possible!

If you deactivate the **Anonymize users in log data** function, the system will show personalized user data in all control log files.

If servicing becomes necessary or if the log files need to be transmitted for another reason, the contracting party will be able to view this user data. In this case, it is your responsibility to ensure that all required data protection provisions have been made at your company.

- ▶ Retain or reactivate the active status of the **Anonymize users in log data** function

- Some user administration areas are configured by the machine manufacturer. Refer to your machine manual.
- HEIDENHAIN recommends activating user administration as part of an IT safety concept.
- If both user administration and a screensaver are active, then the current user's password must be entered to unlock the screen.

**Further information:** "HEROS menu", Page 632

- If you used **Remote Desktop Manager** to establish private connections before user administration was activated, these connections are no longer available after the activation of user administration. Save your private connections before activating user administration.

**Further information:** "The Remote Desktop Manager window (#133 / #3-01-1)", Page 583

## 26.2 The User administration window

### Application

In the **User administration** window you can activate and deactivate user administration, as well as define its settings.

### Related topics

- The **Active user** window  
**Further information:** "The Active user window", Page 614

### Requirement

- If user administration is active, the HEROS.Admin role  
**Further information:** "List of roles", Page 666

### Description of function

To navigate to this function:

**Settings ► Operating System ► UserAdmin**

The **User administration** window contains the following tabs:

Tab	Meaning
<b>Settings</b>	Configure user administration <b>Further information:</b> "Configuring user administration", Page 610
<b>User administration</b>	Create or remove users, change rights, add profile images <b>Further information:</b> "Creating a new user", Page 612
<b>Password settings</b>	Define password requirements <b>Further information:</b> "Password settings", Page 609
<b>User-defined roles</b>	Roles created for a Windows domain <b>Further information:</b> "Connection to Windows domain", Page 618

## 26.3 The Active user window

### Application

In the **Active user** window, the control displays information about the logged on user, such as assigned rights. You can also manage other user settings, such as keys for SSH-secured DNC connections or smartcards for logon, and change the password.

### Related topics

- SSH-secured DNC connections  
**Further information:** "SSH-secured DNC connection", Page 627
- Logon with smartcards  
**Further information:** "Logon with smartcards", Page 625
- Available roles and rights  
**Further information:** "User administration roles and rights", Page 666

## Description of function

To navigate to this function:

**Settings ► Operating System ► Current User**

When you open the **Active user** window, by default the window shows the **Base rights** tab. On this tab the control displays information about the user and all assigned rights.

The **Base rights** tab contains the following buttons:

Button	Meaning
<b>Add rights</b>	On the <b>Added rights</b> tab, enable rights for another user or function user until the next logoff
<b>Open user administration</b>	Open the <b>User administration</b> window <b>Further information:</b> "The User administration window", Page 614
<b>SSH keys and certificates</b>	Manage keys and certificates for client connections <b>Further information:</b> "SSH-secured DNC connection", Page 627 <b>Further information:</b> "OPC UA NC Server (#56-61 / #3-02-1*)", Page 568
<b>Create token</b>	Manage smartcards for logon with a card reader <b>Further information:</b> "Logon with smartcards", Page 625
<b>Delete token</b>	
<b>Close</b>	Close the <b>Active user</b> window

On the **Change password** tab you can check your password against the current requirements or set a new password.

**Further information:** "Password settings", Page 609

## Note

In legacy mode, the **user** function user is automatically logged on to the system during control startup. When user administration is active, the **user** function user has no effect.

**Further information:** "Users", Page 606

## 26.4 Saving user data

### 26.4.1 Overview

The following options are available for saving your user data:

- **Local LDAP database**  
**Further information:** "Local LDAP database", Page 616
- **LDAP on remote computer**  
**Further information:** "LDAP database on a remote computer", Page 617
- **Connection to Windows domain**  
**Further information:** "Connection to Windows domain", Page 618



Parallel operation of Windows users and users from an LDAP database is possible.

## 26.4.2 Local LDAP database

### Application

With the **Local LDAP database** setting the control saves the user data locally. That way you can activate user administration even on machines without a network connection.

### Related topics

- Using an LDAP database on multiple controls  
**Further information:** "LDAP database on a remote computer", Page 617
- Connecting a Windows domain with user administration  
**Further information:** "Connection to Windows domain", Page 618

### Requirements

- User administration is active  
**Further information:** "Activating user administration", Page 610
- **useradmin** user is logged on  
**Further information:** "Users", Page 606

### Description of function

A local LDAP database offers the following options:

- Using user administration on one single control
- Setting up a central LDAP server for more than one control
- Exporting an LDAP server configuration file if the exported database is to be used by more than one control

### Setting up a Local LDAP database

To set up a **Local LDAP database**:

- ▶ Opening the **User administration** window
- ▶ Select **LDAP user database**
- > The control enables the dimmed area for editing the LDAP user database.
- ▶ Select **Local LDAP database**
- ▶ Select **Configuration**
- > The control opens the **Configure local LDAP database** window.
- ▶ Enter the name of the **LDAP domain**
- ▶ Enter the password
- ▶ Repeat the password
- ▶ Select **OK**
- > The control closes the **Configure local LDAP database** window.

### Notes

- Before you can start editing the user administration, the control prompts you to enter the password of your local LDAP database.  
 Passwords must not be trivial and must be known only to the administrators.
- If the host name or domain name of the control changes, you need to reconfigure the local LDAP databases.

### 26.4.3 LDAP database on a remote computer

#### Application

With the **LDAP on remote computer** function you can transmit the configuration of a local LDAP database between controls and computers. That way you can use the same users on multiple controls.

#### Related topics

- Configuring an LDAP database on a control  
**Further information:** "Local LDAP database", Page 616
- Connecting a Windows domain with user administration  
**Further information:** "Connection to Windows domain", Page 618

#### Requirements

- User administration is active  
**Further information:** "Activating user administration", Page 610
- **useradmin** user is logged on  
**Further information:** "Users", Page 606
- LDAP database has been set up in the company network
- Server configuration file of an existing LDAP database is stored on the control or a PC in the network  
If the configuration file is stored on a PC, the PC must be running and accessible through the network.  
**Further information:** "Providing a server configuration file", Page 617

#### Description of function

The **useradmin** function user can export the server configuration file of an LDAP database.

#### Providing a server configuration file

To provide a server configuration file:

- ▶ Opening the **User administration** window
- ▶ Select **LDAP user database**
- > The control enables the dimmed area for editing the LDAP user database.
- ▶ Select **Local LDAP database**
- ▶ Select **Export server configuration**
- > The control opens the **Export LDAP configuration file window**.
- ▶ Enter the name for the server configuration file into the name field
- ▶ Save the file to the desired folder
- > The control exports the server configuration file.

## Setting up LDAP on remote computer

To set up **LDAP on remote computer**:

- ▶ Opening the **User administration** window
- ▶ Select **LDAP user database**
- > The control enables the dimmed area for editing the LDAP user database.
- ▶ Select **LDAP on remote computer**
- ▶ Select **Import server configuration**
- > The control opens the **Import LDAP configuration file window**.
- ▶ Select the existing configuration file
- ▶ Select **FILE**
- ▶ Select **APPLY**
- > The control imports the configuration file.

### 26.4.4 Connection to Windows domain

#### Application

With the **Connection to Windows domain** function, you can connect the data of a domain controller with the control's user administration.

Ask your IT administrator to configure the connection to the Windows domain.

#### Related topics

- Configuring an LDAP database on a control  
**Further information:** "Local LDAP database", Page 616
- Using an LDAP database on multiple controls  
**Further information:** "LDAP database on a remote computer", Page 617

#### Requirements

- User administration is active  
**Further information:** "Activating user administration", Page 610
- **useradmin** user is logged on  
**Further information:** "Users", Page 606
- Windows domain controller present in the network
- Domain controller accessible in the network
- Organizational unit for HEROS roles known
- For logon with computer account:
  - You have access to the password of the domain controller
  - You have access to the user interface of the domain controller or you are supported by an IT administrator
- For logon with function user:
  - User name of the function user
  - Password of the function user

**Description of function**

The control provides the following options to join a Windows domain:

- Create a separate account for the control
- By means of a function user

Your IT administrator can set up a function user to facilitate connectivity to the Windows domain.

Click the **Configuration** button to open the **Configure Windows domain** window.

**Further information:** "The Configure Windows domain window", Page 620

### The Configure Windows domain window

After the domain search, you can customize the Windows domain information or specify new information in the **Configure Windows domain** window.

Your IT administrator will provide the required information.

The **Configure Windows domain** window contains the following settings:

Setting	Meaning
<b>Domain name:</b>	Server name of the Windows domain Is populated by domain search
<b>Key Distribution Center (KDC):</b>	KDC address Is populated by domain search
<b>Alternative admin server:</b>	Deviating server name where the passwords are managed
<b>Map SIDs to Unix UIDs</b>	Map the Windows user SIDs (Security IDs) in Active Directory to the matching Unix UIDs on the control
<b>Use LDAPs</b>	Transfer data using secure LDAPs. LDAPs encrypts user data and passwords. You can select a certificate or disable certificate validation.
<b>Group for login authorization:</b>	Define a special group of Windows users to whom you want to restrict the connection to this control
<b>Organizational unit for HEROS roles:</b>	Modify the organizational unit in which the HEROS role names are stored Specify the configuration of your domain.
<b>Prefix for HEROS role names:</b>	Change the prefix in order to manage users from different workshops, for example. Each prefix given to a HEROS role name can be changed (e.g., HEROS hall 1 and HEROS hall 2) Is populated by domain search
<b>Separator for HEROS role names:</b>	Modify the separator within the HEROS role names
<b>Advanced configuration of domain section</b>	Only for IT administrators

If you enable the **Active Directory with function user** check box, the window contains the following additional settings:

Setting	Meaning
<b>Function user:</b>	Enter the user name and password of the Active Directory function user
<b>Organizational unit for function user:</b>	Specify the organizational unit of the function user

The function user's user name must not contain blanks. The name and organizational unit form the complete path (Distinguished Name, DN) in the Active Directory.



### Groups of the domain

If not all of the required roles have been created in the domain as groups, the control issues a warning.

If the control issues a warning, proceed in one of the two following ways:

- Use the **Add role definition** function to enter a role directly in the domain
- Use the **Export role definition** function to export the roles to an \*.ldif file

There are the following ways to create groups corresponding to the different roles:


- Automatically when entering the Windows domain by specifying a user with administrator rights
- By importing an import file in .ldif format to the Windows server

The Windows administrator must add the users manually to the roles (security groups) on the domain controller.

Two suggestions describing how the groups can be structured by the Windows administrator are given by below.


#### Example 1

The user is a direct or indirect member of the respective group:

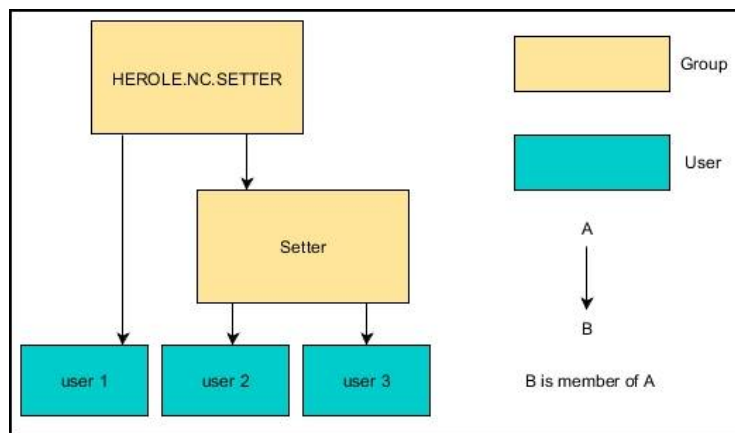

#### Example 2

Users from various sectors (workshops) are members of groups with different prefixes:

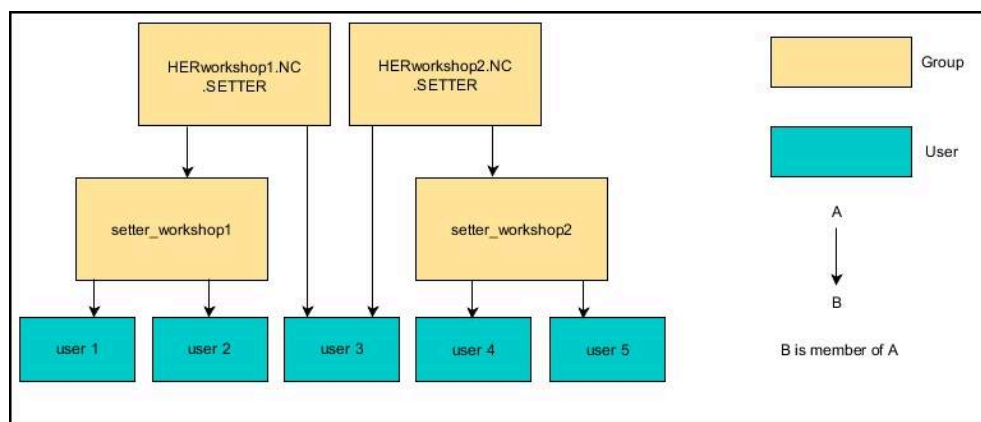

## Joining a Windows domain with a computer account

To join a Windows domain with a computer account:

- ▶ Opening the **User administration** window
- ▶ Select **Connection to Windows domain**
- ▶ Select the **Join Active Directory domain (with computer account)** check box
- ▶ Select **Find domain**
- > The control selects a domain.
- ▶ Select **Configuration**
- ▶ Check the data for **Domain name:** and **Key Distribution Center (KDC):**
- ▶ Enter **Organizational unit for HEROS roles:**
- ▶ Select **OK**
- ▶ Select **APPLY**
- > The control opens the **Connect to domain** window.



The **Organizational unit for computer account:** function allows you to specify in which of the already existing organizational units you want to create the access, such as

- ou=controls
- cn=computers

The values you enter must match the conditions of the domain. The terms are not exchangeable.

- ▶ Enter the user name of the domain controller
- ▶ Enter the password of the domain controller
- ▶ Confirm your input
- > The control connects to the Windows domain found.
- > The control checks whether all of the required roles have been created in the domain as groups.
- ▶ Add groups, if necessary

**Further information:** "Groups of the domain", Page 621

## Joining a Windows domain with a function user

To join a Windows domain with a function user:

- ▶ Opening the **User administration** window
- ▶ Select **Connection to Windows domain**
- ▶ Select the **Active Directory with function user** check box
- ▶ Select **Find domain**
- > The control selects a domain.
- ▶ Select **Configuration**
- ▶ Check the data for **Domain name:** and **Key Distribution Center (KDC):**
- ▶ Enter **Organizational unit for HEROS roles:**
- ▶ Enter the user name and password of the function user
- ▶ Press **OK**
- ▶ Select **APPLY**
- > The control connects to the Windows domain found.
- > The control checks whether all of the required roles have been created in the domain as groups.

## Exporting and importing a Windows configuration file

If you have connected the control to the Windows domain, you can export the required configurations for other controls.

To export the Windows configuration file:

- ▶ Open the **User administration** window
- ▶ Select **Connect to Windows domain**
- ▶ Select **Export the Windows config.**
- > The control opens the **Export the Windows domain configuration** window.
- ▶ Select the directory for the file
- ▶ Enter the name for the file
- ▶ Select the **Export the function user's password?** check box, if required
- ▶ Select **Export**
- > The control saves the Windows configuration as a BIN file.

To import the Windows configuration file of another control:

- ▶ Open the **User administration** window
- ▶ Select **Connect to Windows domain**
- ▶ Select **Import the Windows config.**
- > The control opens the **Import the Windows domain configuration** window.
- ▶ Select the existing configuration file
- ▶ Select the **Import the function user's password?** check box, if required
- ▶ Select **Import**
- > The control adopts the configurations for the Windows domain.

## 26.5 Autologin in user administration

### Application

If the **Autologin** function is enabled, during startup the control automatically logs on a selected user without the need to enter a password.

As opposed to the **legacy mode**, this enables you to restrict a user's rights without entering a password.

### Related topics

- User login

**Further information:** "Logging on with user administration", Page 624

- Configure user administration

**Further information:** "Configuring user administration", Page 610

### Requirements

- User administration has been configured
- The user for **Autologin** has been defined

### Description of function

With the **Enable autologin** check box in the **User administration** window, you can define a user for autologin.

**Further information:** "The User administration window", Page 614

The control then automatically logs this user on and displays the user interface according to the defined rights.

For further authorizations, the control still requires an authentication to be entered.

**Further information:** "Window for requesting additional rights", Page 626

## 26.6 Logging on with user administration

### Application

The control displays a dialog window for user logon. Within the dialog the user can log on with a password or a smartcard.

### Related topics

- Automatic user logon

**Further information:** "Autologin in user administration", Page 624

### Requirements

- User administration has been configured
- For logon with smartcards:
  - Euchner EKS card reader
  - Smartcard assigned to a user

**Further information:** "Assigning a smartcard to a user", Page 626

## Description of function

The control displays the Login dialog in the following cases:

- After the **User logout** function has been executed
- After the **Switch user** function has been executed
- After the screen has been locked by the **screensaver**
- Immediately after control startup if user administration is active and **Autologin** is not enabled

**Further information:** "HEROS menu", Page 632

The logon dialog gives you the following options:

- Users who logged in at least once
- **Other** user

## Logon with smartcards

You can save a user's logon data on a smartcard and then log the user on with a card reader, without needing to enter a password. You can define whether a PIN is necessary for logon.

The card reader is attached over a USB port. You assign the smartcard to a reader as a token.

**Further information:** "Assigning a smartcard to a user", Page 626

The smartcard also has additional memory space, where the machine manufacturer can store his own user-specific data.

### 26.6.1 Logging on a user with password

To logon a user the first time:

- ▶ Select **Other** in the login dialog
- > The control enlarges the user icon you selected.
- ▶ Enter the user name
- ▶ Enter the user's password




The control shows in the Login dialog whether CAPS LOCK is active.

- > The control opens a window with the message **Password expired. Change the password now.**
- ▶ Enter the current password
- ▶ Enter a new password
- ▶ Repeat the new password
- > The control uses the new user to log you in.
- > The control displays this user in the dialog during the next logon procedure.

### 26.6.2 Assigning a smartcard to a user

To assign a smartcard to a user:

- ▶ Insert a blank smartcard in the card reader
- ▶ Logon the desired smartcard user in user administration
- ▶ Select the **Settings** application
- ▶ Select **Operating System**
- ▶ Double-tap or double-click **Current User**
- > The control opens the **Active user** window.
- ▶ Select **Create token**
- > The control opens the **Write certificate to token** window.
- > The control displays the smartcard in the **Select token** area.
- ▶ Select the smartcard as the token to be written
- ▶ Enable the **PIN protection?** check box, if required
- ▶ Enter user password (and PIN, if desired)
- ▶ Select **Start writing**
- > The control saves the user's logon data on the smartcard.

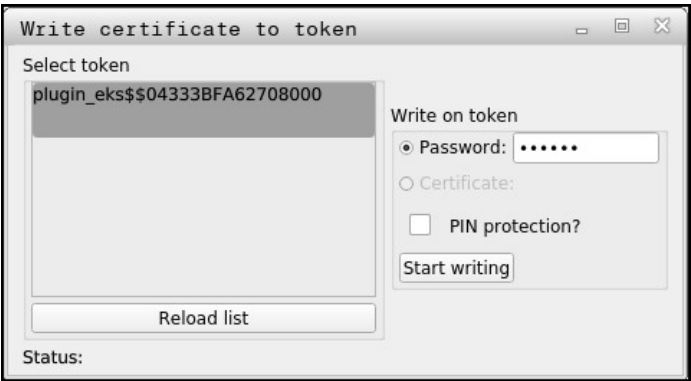

#### Notes

- You must restart the control in order for it to detect a card reader.
- You can overwrite smartcards that already contain information.
- If you change a user's password, you must reassign the smartcard.

## 26.7 Window for requesting additional rights

### Application

If you do not have the rights required for a specific **HEROS menu** item, the control opens the window for requesting additional rights.

In this window, you can temporarily obtain more rights by adding another user's rights.


### Related topics

- Temporarily granting additional rights in the **Active user** window
- Further information:** "The Active user window", Page 614

## Description of function

In the **Users that have this right:** field, the control lists all existing users that have the right to use this function.

You must enter the password in order to enable user rights.

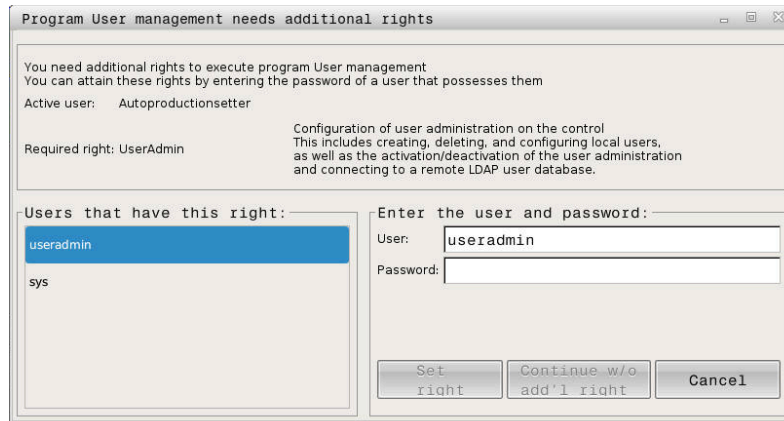

Window for requesting additional rights

To attain the rights of users that are not shown, enter their user data. The control will then recognize those users that are contained in the user database.

## Notes

- If **Connection to Windows domain** is used, only users that were recently logged on are shown in the selection menu.
- You can't use this window to change user administration settings. The user with the HEROS.Admin role must be logged on in order to do so.

## 26.8 SSH-secured DNC connection

### Application

If user administration is active, external applications also need to authenticate a user so that the suitable rights can be assigned.

For DNC connections using the RPC or LSV2 protocol, the connection is routed through an SSH tunnel. This method assigns the remote user to a user set up on the control, granting the remote user this user's rights.

### Related topics

- Forbidding non-secure connections  
**Further information:** "Firewall", Page 589
- Roles for remote logon  
**Further information:** "Roles", Page 608

### Requirements

- TCP/IP network
- The remote computer acts as SSH client
- The control acts as SSH server
- Key pair consisting of
  - Private key
  - Public key


Description of function

Concept of transmission through an SSH tunnel

An SSH connection is always set up between an SSH client and an SSH server.

A key pair is used to protect the connection. This key pair is generated on the client. The key pair consists of a private key and a public key. The private key remains with the client. During setup, the public key is transferred to the server and assigned to a certain user.

The client tries to connect to the server using the pre-defined user name. The server can use the public key to verify that the requester of the connection holds the associated private key. If yes, the server accepts the SSH connection and assigns it to the user that has been used for the login. Communication can then be "tunneled" through this SSH connection.

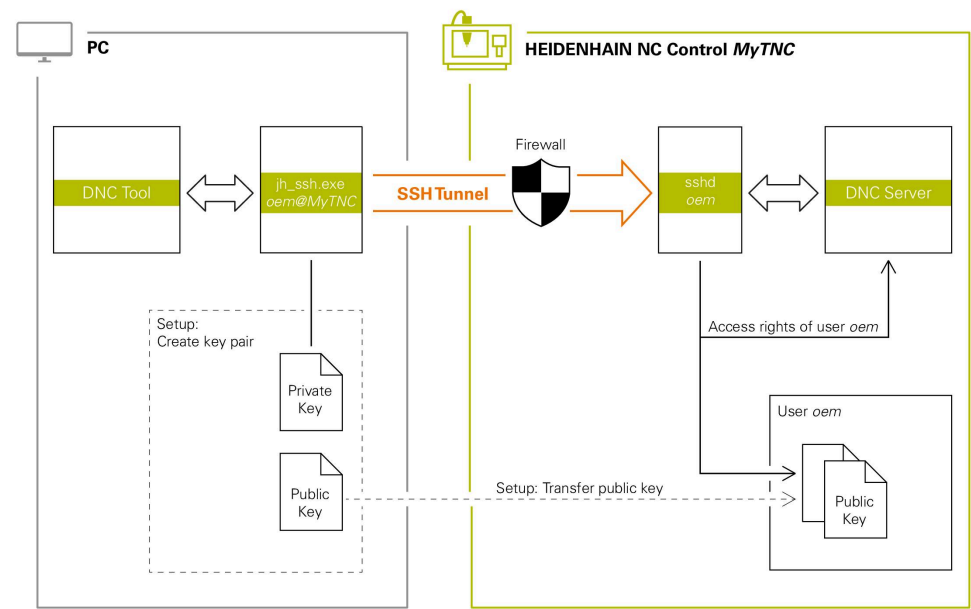


Use in external applications

The PC tools available from HEIDENHAIN, such as TNCremo with version **v3.3** or higher, provide all functions for setting up, establishing, and managing secure connections through an SSH tunnel.

When the connection is set up, the required key pair is generated in TNCremo and the public key is transferred to the control.

This also applies to applications that are using the HEIDENHAIN DNC component from RemoTools SDK for communication. There is no need to adapt existing customer applications.



In order to expand the connection configuration using the associated **CreateConnections** tool, you need to update to **HEIDENHAIN DNC v1.7.1**. A modification of the application source code is not required.



### 26.8.1 Setting up SSH-secured DNC connections

To set up an SSH-secured DNC connection for the logged-on user:

- ▶ Select the **Settings** application
- ▶ Select **Network/Remote Access**
- ▶ Select **DNC**
- ▶ Activate the **Setup permitted** toggle switch
- ▶ Use **TNCremo** to set up the secure connection (TCP secure).



For details, refer to the integrated help system of TNCremo.

- > TNCremo transmits the public key to the control.



In order to ensure maximum security, deactivate the **Allow password authentication** function after the public key has been stored.

- ▶ Deactivate the **Setup permitted** toggle switch

### 26.8.2 Removing a secure connection

If you delete a private key from the control, that user no longer has the possibility of a secure connection.

To delete a key:

- ▶ Select the **Settings** application
- ▶ Select **Operating System**
- ▶ Double-tap or double-click **Current User**
- > The control opens the **Active user** window.
- ▶ Select **Certificate and keys**
- ▶ Select the key to be deleted
- ▶ Select **Delete SSH key**
- > The control deletes the selected key.

#### Notes

- The the encryption used with the SSH tunnel protects the communication from attackers.
- For OPC UA connections, a stored user certificate is used for authentication.  
**Further information:** "OPC UA NC Server (#56-61 / #3-02-1\*)", Page 568
- When user administration is active, you can set up only secure network connections via SSH. The control automatically disables the LSV2 connections via the serial interfaces (COM1 and COM2) and the network connections without user authentication.  
If user administration is inactive, the control also automatically blocks non-secure LSV2 or RPC connections. In the optional machine parameters **allowUnsecureLsv2** (no. 135401) and **allowUnsecureRpc** (no. 135402), the machine manufacturer can define whether the control will permit non-secure connections. These machine parameters are included in the **CfgDncAllowUnsecur** (no. 135400) data object.
- Once the connection configurations have been set up, they can be shared among all HEIDENHAIN PC tools for establishing a connection.
- You can also transfer a public key to the control by using a USB device or network drive.
- In the **Certificate and keys** window, you can select a file with additional public SSH keys in the **Externally administered SSH key file** area. This allows you to use SSH keys without having to transfer them to the control.

# 27

**HEROS Operating  
System**

### 27.1 Fundamentals

HEROS is the fundamental basis for all NC controls from HEIDENHAIN. The HEROS operating system is based on Linux, and was adapted for the purposes of NC controls.  
The TNC7 features the version HEROS 5.

### 27.2 HEROS menu

#### Application


In the HEROS menu the control shows information about the operating system. You can change settings or use HEROS functions.  
By default you open the HEROS menu through the taskbar at the bottom edge of the screen

#### Related topics

- Opening HEROS functions through the **Settings** application  
**Further information:** "The Settings Application", Page 541

#### Description of function

You open the HEROS menu with the green DIADUR icon in the taskbar or with the **DIADUR** key.  
**Further information:** "Taskbar", Page 636

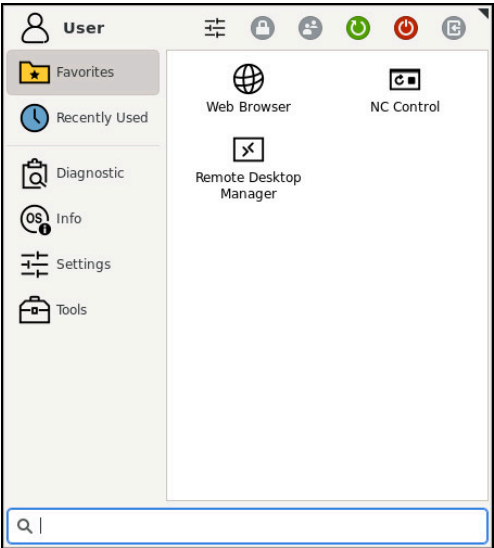


Standard view of the HEROS menu


The HEROS menu contains the following functions:

Area	Function
Header	<ul style="list-style-type: none"> <li>■ User name <b>Further information:</b> "The Active user window", Page 614</li> <li>■ User-specific settings</li> <li>■ Lock display Only if user administration is active</li> <li>■ Switch user Only if user administration is active</li> <li>■ Restart</li> <li>■ Shut down</li> <li>■ Log out Only if user administration is active <b>Further information:</b> "User Administration", Page 605</li> </ul>
Navigation	<ul style="list-style-type: none"> <li>■ Favorites</li> <li>■ Recently used</li> </ul>
Diagnostic	<ul style="list-style-type: none"> <li>■ <b>GSmartControl:</b> Available only to authorized specialists</li> <li>■ <b>HeLogging:</b> Define settings for internal diagnostic files</li> <li>■ <b>HeMenu:</b> Available only to authorized specialists</li> <li>■ <b>perf2:</b> Check processor load and process load</li> <li>■ <b>Portscan:</b> Test active connections <b>Further information:</b> "Portscan", Page 593</li> <li>■ <b>Portscan OEM:</b> Available only to authorized specialists</li> <li>■ <b>RemoteService:</b> Start and stop remote maintenance <b>Further information:</b> "Secure Remote Access", Page 643</li> <li>■ <b>Terminal:</b> Enter and execute console commands</li> <li>■ <b>TNCdiag:</b> Evaluates status and diagnostic information of HEIDENHAIN components (particularly motors) and presents it graphically <b>Further information:</b> "TNCdiag", Page 596</li> <li>■ <b>TNCscope</b> Software for data recording</li> </ul>

Area	Function
Settings	<ul style="list-style-type: none"> <li>■ <b>Adjust screen brightness:</b> Adjust screen brightness</li> <li>■ <b>Screensaver:</b> Screensaver</li> <li>■ <b>Current User</b> <b>Further information:</b> "The Active user window", Page 614</li> <li>■ <b>Date/Time</b> <b>Further information:</b> "The Adjust system time window", Page 553</li> <li>■ <b>Firewall</b> <b>Further information:</b> "Firewall", Page 589</li> <li>■ <b>HePacketManager:</b> Available only to authorized specialists</li> <li>■ <b>HePacketManager Custom:</b> Available only to authorized specialists</li> <li>■ <b>Language/Keyboards</b> <b>Further information:</b> "Conversational language of the control", Page 554</li> <li>■ <b>Network</b> <b>Further information:</b> "Ethernet interface", Page 559</li> <li>■ <b>OEM Function Users</b> <b>Further information:</b> "User Administration", Page 605</li> <li>■ <b>OPC UA NC Server Connection Assistant</b> <b>Further information:</b> "The OPC UA connection assistant function (#56-61 / #3-02-1*)", Page 572</li> <li>■ <b>OPC UA NC Server License</b> <b>Further information:</b> "The OPC UA license settings function (#56-61 / #3-02-1*)", Page 573</li> <li>■ <b>PKI Admin:</b> Manage certificates for the control, such as for <b>OPC UA NC Server</b> <b>Further information:</b> "OPC UA NC Server (#56-61 / #3-02-1*)", Page 568</li> <li>■ <b>Printer</b> <b>Further information:</b> "Printers", Page 576</li> <li>■ <b>Screenshot Config</b> In the <b>Screenshot settings</b> window, you can define under which path and file name the control saves screenshots. The file name can contain a placeholder (e.g., %N for sequential numbering).</li> <li>■ <b>SELinux</b> <b>Further information:</b> "SELinux security software", Page 555</li> <li>■ <b>Shares</b> <b>Further information:</b> "Network drives on the control", Page 556</li> <li>■ <b>UserAdmin</b> <b>Further information:</b> "The User administration window", Page 614</li> <li>■ <b>VNC</b> <b>Further information:</b> "The VNC menu item", Page 579</li> <li>■ <b>WindowManagerConfig:</b> Settings for the Window Manager <b>Further information:</b> "Window Manager", Page 637</li> </ul>
Info	<ul style="list-style-type: none"> <li>■ <b>About HeROS:</b> Open information about the operating system of the control</li> <li>■ <b>About Xfce:</b> Open information on the Window manager</li> </ul>

Area	Function
Tools	<ul style="list-style-type: none"> <li>■ <b>Switch-off:</b> Shut-down or restart</li> <li>■ <b>Screenshot:</b> Create screenshots</li> <li>■ <b>File Manager:</b> Available only to authorized specialists</li> <li>■ <b>Diffuse Merge Tool:</b> Compare and merge text files</li> </ul> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p> To compare NC programs, the control offers the <b>program comparison</b> function.  <b>Further information:</b> User's Manual for Programming and Testing</p> </div> <ul style="list-style-type: none"> <li>■ <b>Document Viewer:</b> Display and print files (e.g., PDF files)</li> <li>■ <b>Geeqie:</b> Open, manage, and print graphics</li> <li>■ <b>Gnumeric:</b> Open, edit, and print tables</li> <li>■ <b>IDS Camera Manager:</b> Manage cameras connected to the control</li> <li>■ <b>keypad horizontal:</b> Open virtual keyboard</li> <li>■ <b>keypad vertical:</b> Open virtual keyboard</li> <li>■ <b>Leafpad:</b> Open and edit text files</li> <li>■ <b>NC Control:</b> Start or stop the NC software independently of the operating system</li> <li>■ <b>NC/PLC Backup</b>  <b>Further information:</b> "Backup and restore", Page 593</li> <li>■ <b>NC/PLC Restore</b>  <b>Further information:</b> "Backup and restore", Page 593</li> <li>■ <b>QupZilla:</b> Alternative web browser for touch operation</li> <li>■ <b>Real VNC Viewer:</b> Define the settings for external software accessing the control (e.g., for maintenance purposes)</li> <li>■ <b>Remote Desktop Manager</b>  <b>Further information:</b> "The Remote Desktop Manager window (#133 / #3-01-1)", Page 583</li> <li>■ <b>Ristretto:</b> Open graphics files</li> <li>■ <b>Secure Remote Access</b>  <b>Further information:</b> "Secure Remote Access", Page 643</li> <li>■ <b>Combine fixtures</b>  <b>Further information:</b> "Combining fixtures in the New Fixture window", Page 275</li> <li>■ <b>TNCguide:</b> Open help files in CHM format</li> <li>■ <b>TouchKeyboard:</b> Open keyboard for touch operation</li> <li>■ <b>Web Browser:</b> Start the web browser</li> <li>■ <b>Xarchiver:</b> Extract or compress directories</li> </ul>
Searching	Full-text search for individual functions

## Taskbar

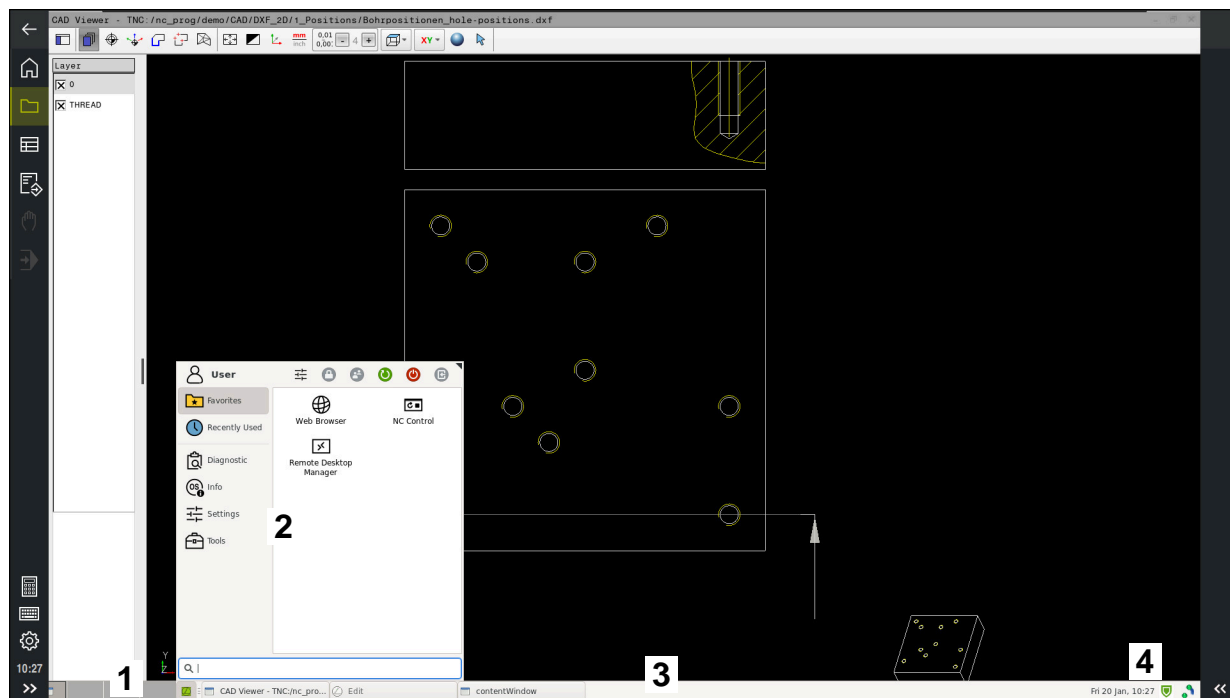

**CAD Viewer** opened in the third desktop with taskbar shown and active HEROS menu

The taskbar consists of the following areas:

- 1 Workspaces
- 2 HEROS menu
 

**Further information:** "Description of function", Page 632
- 3 Opened applications, e.g.:
  - Control interface
  - **CAD Viewer**
  - Window of HEROS functions

You can move the opened applications into any other workspaces.
- 4 Widgets
  - Calendar
  - Status of the firewall
 

**Further information:** "Firewall", Page 589
  - Network status
 

**Further information:** "Ethernet interface", Page 559
  - Notifications
  - Shut down or restart the operating system



## Window Manager

With the Window Manager, you manage functions of the HEROS operating system as well as windows opened in the third desktop, such as **CAD Viewer**.

The control features the Xfce window manager. Xfce is a standard application for UNIX-based operating systems, and is used to manage graphical user interfaces. The following functions are possible with the window manager:

- Display a taskbar for switching between various applications (user interfaces)
- Manage an additional desktop, on which special applications from your machine manufacturer can run
- Control the focus between NC software applications and those of the machine manufacturer
- You can change the size and position of pop-up windows. It is also possible to close, minimize and restore pop-up windows

If a window is opened in the third desktop, the control displays the **Window Manager** icon in the information bar. You can switch between the open applications by selecting the icon.

You can minimize the control's user interface by pulling down from the information bar. The TNC bar and the OEM bar remain visible.

**Further information:** "Areas of the control's user interface", Page 88

## Notes

- If a window is opened in the third desktop, the control displays an icon in the information bar.  
**Further information:** "Areas of the control's user interface", Page 88
- The machine manufacturer determines the scope of function and behavior of the window manager.
- The control shows a star in the upper left of the screen if an application of the window manager or the window manager itself has caused an error. In this case, switch to the window manager and correct the problem. If required, refer to your machine manual.

## 27.3 Serial data transfer

### Application

The TNC7 automatically uses the LSV2 transmission protocol for serial data transfer. All parameters of the LSV2 protocol are invariably fixed except for the baud rate in the machine parameter **baudRateLsv2** (no. 106606).

### Description of function

The machine parameter **RS232** (no. 106700) allows you to define another transmission type (interface). The settings described below are effective only for the respective newly defined interface.

**Further information:** "Machine parameters", Page 597

In the machine parameters that then appear you can define the following settings:

Machine parameters	Setting
<b>baudRate</b> (no. 106701)	Data transfer rate (baud rate) Input: <b>BAUD_110, BAUD_150, BAUD_300, BAUD_600, BAUD_1200, BAUD_2400, BAUD_4800, BAUD_9600, BAUD_19200, BAUD_38400, BAUD_57600, BAUD_115200</b>
<b>protocol</b> (no. 106702)	Communications protocol <ul style="list-style-type: none"> <li>■ <b>STANDARD</b>: Standard data transmission, line-by-line</li> <li>■ <b>BLOCKWISE</b>: Packet-based data transfer</li> <li>■ <b>RAW_DATA</b>: Transmission without protocol (purely character-by-character)</li> </ul> Input: <b>STANDARD, BLOCKWISE, RAW_DATA</b>
<b>dataBits</b> (no. 106703)	Data bits in each transferred character Input: <b>7 Bit, 8 Bit</b>
<b>parity</b> (no. 106704)	Parity bit used to check for transmission errors <ul style="list-style-type: none"> <li>■ <b>NONE</b>: No parity, no error detection</li> <li>■ <b>EVEN</b>: Even parity, error if the number of bits set is odd</li> <li>■ <b>ODD</b>: Odd parity, error if the number of bits set is even</li> </ul> Input: <b>NONE, EVEN, ODD</b>
<b>stopBits</b> (no. 106705)	The start bit and one or two stop bits enable the receiver to synchronize each transmitted character during serial data transmission. Input: <b>1 Stop-Bit, 2 Stop-Bits</b>
<b>flowControl</b> (no. 106706)	By handshaking, two devices control data transfer between them. A distinction is made between software handshaking and hardware handshaking. <ul style="list-style-type: none"> <li>■ <b>NONE</b>: No data-flow check</li> <li>■ <b>RTS_CTS</b>: Hardware handshaking, transmission stop is active through RTS</li> <li>■ <b>XON_XOFF</b>: Software handshaking, transmission stop is active through DC3</li> </ul> Input: <b>NONE, RTS_CTS, XON_XOFF</b>
<b>fileSystem</b> (no. 106707)	File system for the serial interface <ul style="list-style-type: none"> <li>■ <b>EXT</b>: Minimum file system for printers or non-HEIDENHAIN transmission software</li> <li>■ <b>FE1</b>: Communication with TNCserver or an external floppy disk unit</li> </ul> If you require no special file system, this machine parameter is not needed. Input: <b>EXT, FE1</b>
<b>bccAvoidCtrlChar</b> (no. 106708)	The BCC is a block check character. The BCC is optionally added to a transfer block to simplify error detection. <ul style="list-style-type: none"> <li>■ <b>TRUE</b>: The BCC does not correspond to any control character</li> <li>■ <b>FALSE</b>: Function not active</li> </ul> Input: <b>TRUE, FALSE</b>

Machine parameters	Setting
<b>rtsLow</b> (no. 106709)	<p>This optional parameter determines the level of the RTS line in the idle state.</p> <ul style="list-style-type: none"> <li>■ <b>TRUE</b>: Level is <b>LOW</b> in idle state</li> <li>■ <b>FALSE</b>: Level is <b>HIGH</b> in idle state</li> </ul> <p>Input: <b>TRUE, FALSE</b></p>
<b>noEotAfterEtx</b> (no. 106710)	<p>This optional parameter sets whether an EOT character (End of Transmission) is to be transmitted after receiving an ETX character (End of Text).</p> <ul style="list-style-type: none"> <li>■ <b>TRUE</b>: The EOT character is not sent</li> <li>■ <b>FALSE</b>: The EOT character is sent</li> </ul> <p>Input: <b>TRUE, FALSE</b></p>

### Example

In order to use the TNCserver PC software for data transfer, define the following settings in the machine parameter **RS232** (no. 106700):

Parameters	Selection
Data transfer rate in baud	Has to match the setting in TNCserver
Data transmission protocol	BLOCKWISE
Data bits in each transferred character	7 bits
Type of parity checking	EVEN
Number of stop bits	1 stop bit
Type of handshake	RTS_CTS
File system for file operations	FE1

TNCserver is part of the TNCremo software for PCs.

**Further information:** "PC software for data transfer", Page 639

## 27.4 PC software for data transfer

### Application


HEIDENHAIN offers the TNCremo software for connecting a Windows PC to a HEIDENHAIN control in order to transfer data.

### Requirements

- PC operating system:
  - Windows 8
  - Windows 10
- PC RAM: 2 GB
- Free PC hard-disk space: 15 MB
- A network connection to the control

Description of function

The TNCremo data transfer software provides the following areas:

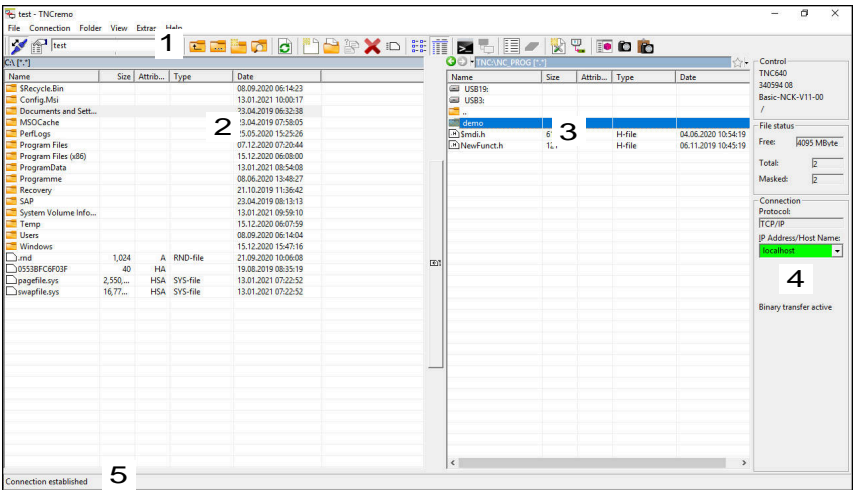

- 1 Toolbar  
This area provides the most important TNCremo functions.
- 2 File list of PC  
In this area, TNCremo displays all of the folders and files of the connected drive (e.g., hard disk of a Windows PC or a USB flash drive).
- 3 File list of control  
In this area, TNCremo displays all of the folders and files of the connected drive of the control.
- 4 Status display  
In the status display, TNCremo shows information about the current connection.
- 5 Connection status  
The connection status indicates whether a connection is currently active.

For more information, refer to the integrated help system of TNCremo. You can open the context-sensitive help function of the TNCremo software by pressing the **F1** key.

Notes

- When user administration is active, you can set up only secure network connections via SSH. The control automatically disables the LSV2 connections via the serial interfaces (COM1 and COM2) and the network connections without user authentication.  
If user administration is inactive, the control also automatically blocks non-secure LSV2 or RPC connections. In the optional machine parameters **allowUnsecureLsv2** (no. 135401) and **allowUnsecureRpc** (no. 135402), the machine manufacturer can define whether the control will permit non-secure connections. These machine parameters are included in the **CfgDncAllowUnsecur** (no. 135400) data object.
- You can download the current version of the TNCremo software from the **HEIDENHAIN website**.

## 27.5 File transfer with SFTP (SSH File Transfer Protocol)

### Application

SFTP (SSH File Transfer Protocol) provides a secure way to connect client applications to the control and to transfer files at high speed from a PC to the control. The connection is routed via an SSH tunnel.

### Related topics

- User administration  
**Further information:** "User Administration", Page 605
- Principle of the SSH connection  
**Further information:** "Concept of transmission through an SSH tunnel", Page 628
- Firewall settings  
**Further information:** "Firewall", Page 589

### Requirements

- PC software TNCremo with version 3.3 or higher is installed  
**Further information:** "PC software for data transfer", Page 639
- SSH service is permitted in the firewall of the control  
**Further information:** "Firewall", Page 589

### Description of function

SFTP is a secure transmission protocol supported by various operating systems for client applications.

To set up the connection, you need a key pair consisting of a public and a private key. You transfer the public key to the control and assign it to a user through the user administration. The private key is required by the client application to set up a connection to the control.


HEIDENHAIN recommends using the CreateConnections application to generate the key pair. CreateConnections is installed together with the PC software TNCremo with version 3.3 and higher. CreateConnections lets you transfer the public key directly to the control and assign it to a user.

You can also use other software to generate the key pair.

### 27.5.1 Setting up an SFTP connection with CreateConnections

For an SFTP connection using CreateConnections, the following are required:

- Connection with secure protocol, such as **TCP/IP Secure**
- User name and password of the desired user are known




When you transfer the public key to the control, you must enter the user's password twice.

If user administration is inactive, the user **user** is logged in. The password for the user **user** is **user**.


To set up an SFTP connection:

- ▶ Select the **Settings** application
- ▶ Select **Network/Remote Access**
- ▶ Select **DNC**
- ▶ Activate the **Setup permitted** toggle switch
- ▶ Create a key pair with CreateConnections and transfer it to the control



For more information, refer to the integrated help system of TNCremo. You can open the context-sensitive help function of the TNCremo software by pressing the **F1** key.

- ▶ Deactivate the **Setup permitted** toggle switch
- ▶ Transfer the private key to the client application
- ▶ Connect the client application to the control



Please refer to the manual of the client application.

#### Notes

- When user administration is active, you can set up only secure network connections via SSH. The control automatically disables the LSV2 connections via the serial interfaces (COM1 and COM2) and the network connections without user authentication. If user administration is inactive, the control also automatically blocks non-secure LSV2 or RPC connections. In the optional machine parameters **allowUnsecureLsv2** (no. 135401) and **allowUnsecureRpc** (no. 135402), the machine manufacturer can define whether the control will permit non-secure connections. These machine parameters are included in the **CfgDncAllowUnsecur** (no. 135400) data object.
- During the connection, the rights of the user to whom the used key is assigned are active. The directories and files displayed, as well as the access options, vary depending on the permissions.
- You can also transfer a public key to the control by using a USB device or network drive. In this case, you do not need to activate the **Allow password authentication** check box.
- In the **Certificate and keys** window, you can select a file with additional public SSH keys in the **Externally administered SSH key file** area. This allows you to use SSH keys without having to transfer them to the control.

## 27.6 Secure Remote Access

### Application

**Secure Remote Access** SRA allows you to set up an encrypted connection between a PC and your control via the Internet. SRA allows the control to be displayed and operated on a PC, such as for service trainings or remote maintenance.

### Related topics

- VNC settings

**Further information:** "The VNC menu item", Page 579

### Requirements

- Existing Internet connection

**Further information:** "Network configuration with Advanced Network Configuration", Page 647

- The following settings in the **VNC settings** window:

- **Enable RemoteAccess and IPC** check box is active
- In the **Enabling other VNC** area, the **Inquire** or **Permitted** check box is active

**Further information:** "The VNC menu item", Page 579

- PC with paid RemoteAccess software including the extension **Secure Remote Access**

### HEIDENHAIN website



For more information, refer to the integrated help system of RemoteAccess.

You can open the context-sensitive help function of the RemoteAccess software by pressing the **F1** key.


Description of function

To navigate to this function:

Tools ► Secure Remote Access

The PC provides a ten-digit session ID for you to enter in the **HEIDENHAIN Secure Remote Access** window.

SRA enables connection via an VPN server.

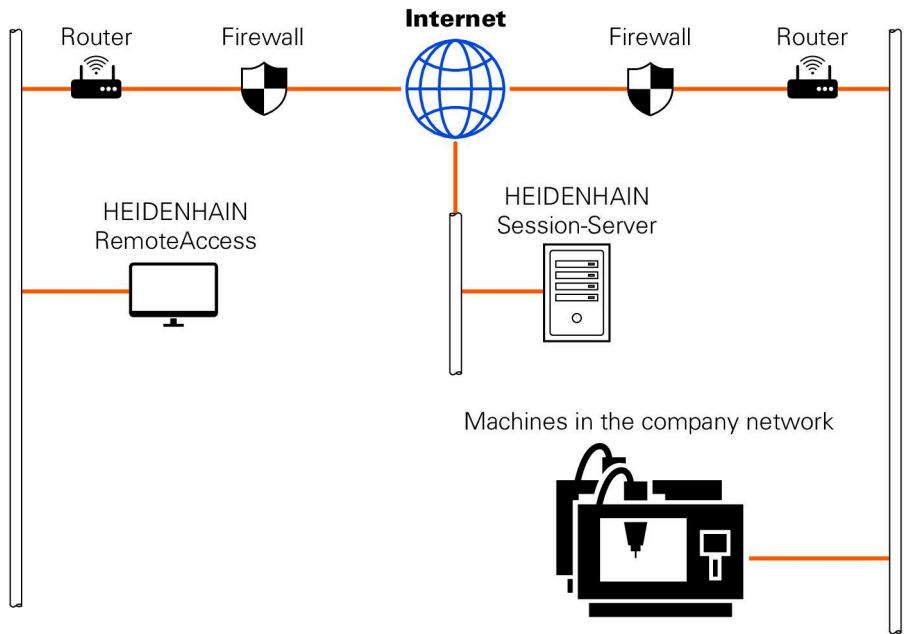

In the **Extended** area, the control shows the progress of the connection setup.  
The **HEIDENHAIN Secure Remote Access** window provides the following buttons:

Button	Function
Connect	The control starts the connection with the entered session ID.
Update	The control manually searches for updates for SRA. The control automatically searches for available updates when you open the <b>HEIDENHAIN Secure Remote Access</b> window. If an update is available, you can install it. The control restarts during the update.
Config.	The control opens the <b>Network settings</b> window. Only for network specialists
Show log	The control opens the log files of the SRA.

Notes

If, in the **VNC settings** window, you set the **Enabling other VNC** setting to **Inquire**, you can permit or deny any connection.



## 27.7 Data backup

### Application

If you create or modify files on the control, then you should back up these files periodically.

### Related topics

- File management

**Further information:** User's Manual for Programming and Testing

### Description of function

With the functions **NC/PLC Backup** and **NC/PLC Restore** you can create back-up files for specific directories or even an entire drive, and restore them as needed. You should store these backup files on an external storage medium.

**Further information:** "Backup and restore", Page 593

You have the following options for transferring files from the control:

- TNCremo

With TNCremo you can transfer files from the control to a computer.

**Further information:** "PC software for data transfer", Page 639

- External drive

You can transfer files from the control directly to an external drive.

**Further information:** "Network drives on the control", Page 556

- External data carriers

You can back-up files to external data carriers or use external data carriers to transfer the files.

**Further information:** User's Manual for Programming and Testing

### Notes

- You should back-up all machine-specific data, such as the PLC program or machine parameters. Consult your machine manufacturer about this.
- You must transmit files with the extensions PDF, XLS, ZIP, BMP, GIF, JPG and PNG in binary format from the PC to the control's hard disk.
- Backing up all files of the internal memory can take several hours. If required, perform the backup during a time when you don't need the machine.
- Periodically delete files that are no longer required. This ensures that the control has enough memory available for system files, such as the tool table.
- HEIDENHAIN recommends having the hard disk inspected after three to five years. After this time, and depending on the operating conditions (e.g., vibration loads), you must expect increased failure rates.

## 27.8 Opening files with additional software

### Application

The control provides several additional software programs for opening and editing standard file types:

### Related topics

- File types

**Further information:** User's Manual for Programming and Testing

Description of function

The control offers tools for the following file types:

File type	Tool
PDF	Document Viewer
XLSX (XLS) CSV	Gnumeric
INI A TXT	Leafpad
HTM/HTML	Web browser
<div><div></div><div><div>i</div><div>For networks and the Internet, the machine manufacturer or network administrator must guarantee that the control is protected against viruses and malware (e.g., by a firewall).</div></div></div>	
ZIP	Xarchiver
BMP GIF JPG/JPEG PNG	Ristretto or Geeqie
<div><div></div><div><div>i</div><div>Ristretto can only open graphics files. Geeqie can also edit and print graphics.</div></div></div>	
OGG	Parole
<div><div></div><div><div>i</div><div>With Parole you can open the file types OGA, OGG, OGV and OGX. The Fuendo Codec Pack (available for payment) is needed only for other formats, such as MP4 files.</div></div></div>	

If you double-tap or double-click a file in the file manager, the control automatically starts the file with the correct tool. If more than one tool is possible for a file, the control displays a selection window.

The control opens the tools in the third desktop.

27.8.1 Opening tools

- To open a tool:
- ▶ Select the HEIDENHAIN icon in the taskbar
  - > The control opens the HEROS menu.
  - ▶ Select **Tools**
  - ▶ Select the tool (e.g. **Leafpad**)
  - > The control opens the tool in its own workspace.

## Notes

- You can also open several tools from the **Desktop menu** workspace.
- Use the **ALT+TAB** key combination to switch between open workspaces.
- More information on how to use the various tools is provided within the respective tool under Help.
- After starting, the **web browser** checks at regular intervals whether updates are available.  
If you want to update the **web browser**, then you must deactivate the SELinux security software during this time and establish a connection to the Internet. Reactivate SELinux after the update!

**Further information:** "SELinux security software", Page 555

## 27.9 Network configuration with Advanced Network Configuration

### Application

Use **Advanced Network Configuration** to edit or remove profiles for the network connection.


### Related topics

- Network settings

**Further information:** "The Editing network connection window", Page 648

### Description of function

When you select the **Advanced Network Configuration** application in the HEROS menu, the control opens the **Network Connections** window.

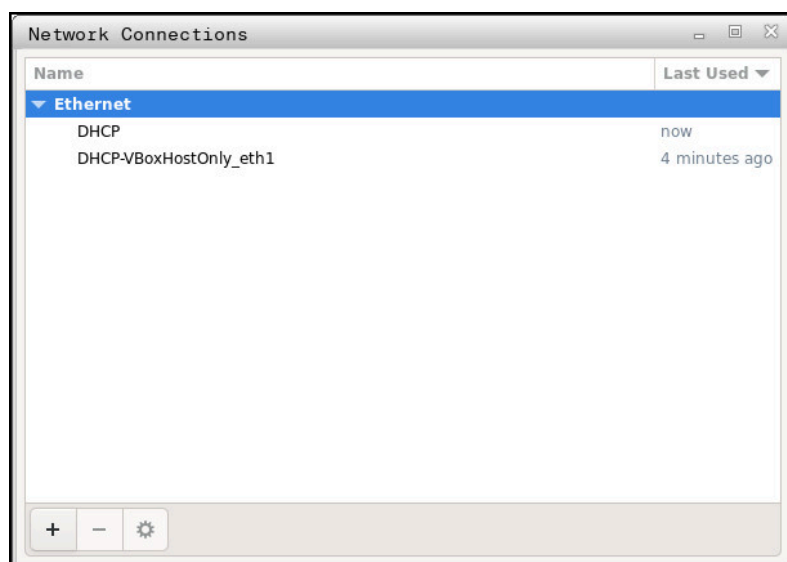

The **Network Connections** window


Symbols in the Network Connections window

The following symbols are shown in the **Network Connections** window:

Icon	Function
+	Add network connection
—	Remove network connection
⚙	Edit network connection The control opens the <b>Editing network connection</b> window. <b>Further information:</b> "The Editing network connection window", Page 648

27.9.1 The Editing network connection window

In the **Editing network connection** window, the control shows the connection name of the network connection in the upper area. You can change the name.

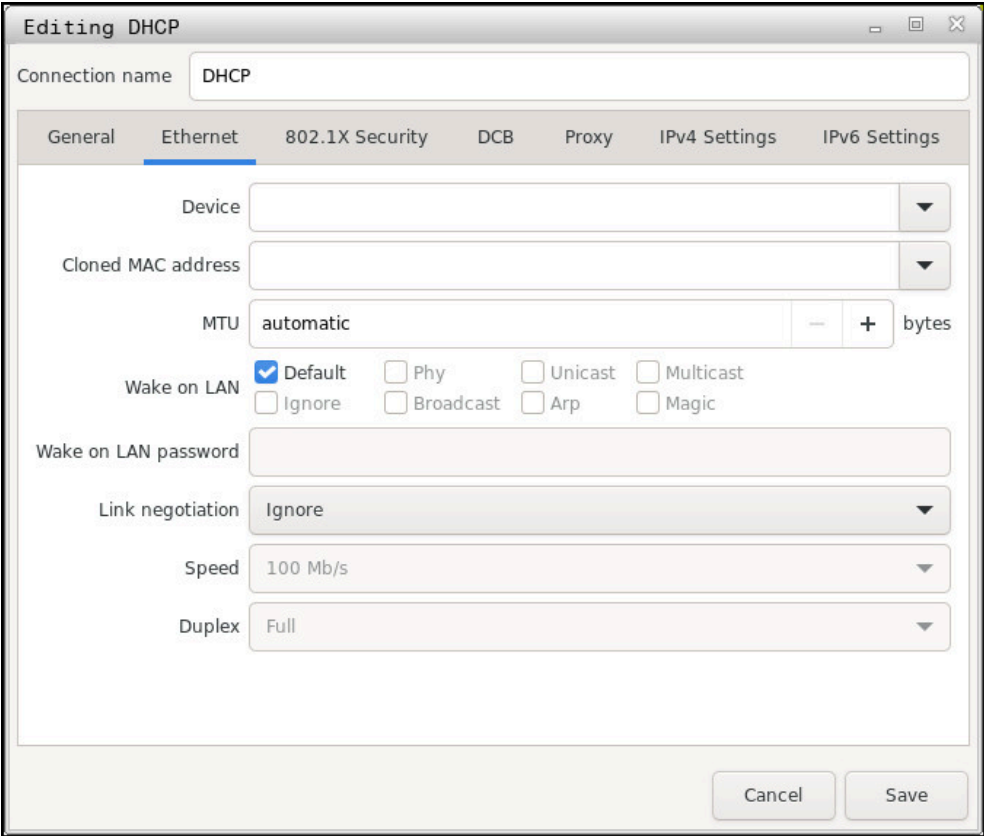

The Editing network connection window

## The General tab

The **General** tab contains the following settings:

Setting	Meaning
<b>Connect automatically</b>	If you are using several profiles, you can define an order of priority for the connection here. The control connects the network with the highest priority first. Input: <b>-999...999</b>
<b>All users may connect to this network</b>	Here you can enable the selected network for all users.
<b>Automatically connect to VPN when using this connection</b>	Currently no function
<b>Bonded connections:</b>	Currently no function

### The Ethernet tab

The **Ethernet** tab contains the following settings:

Setting	Meaning
<b>Service:</b>	Here you can select the Ethernet interface. If you do not select an Ethernet interface, this profile can be used for any Ethernet interface. Selection by means of a selection window
<b>Cloned MAC address:</b>	Currently no function
<b>_MTU:</b>	Here you can define the maximum package size in bytes. Input: <b>Automatic, 1...10000</b>
<b>_Private key password:</b>	Currently no function
<b>Wake-on-LAN password</b>	Currently no function
<b>Link negotiation</b>	Here you have to configure the settings for the Ethernet connection: <ul style="list-style-type: none"> <li>■ <b>Ignore</b> Retain the configurations already existing on the device.</li> <li>■ <b>Automatic</b> The speed and duplex settings are configured automatically for the connection.</li> <li>■ <b>Manual</b> Configure the speed and duplex settings for the connection manually. Selection by means of a selection window</li> </ul>
<b>Speed</b>	Here you have to select the speed settings: <ul style="list-style-type: none"> <li>■ <b>10 Mb/s</b></li> <li>■ <b>100 Mb/s</b></li> <li>■ <b>1 Gb/s</b></li> <li>■ <b>10 Gb/s</b></li> </ul> Only if <b>Link negotiation</b> has been selected <b>Manual</b> Selection by means of a selection window
<b>Full duplex</b>	Here you have to select the duplex setting: <ul style="list-style-type: none"> <li>■ <b>Half</b></li> <li>■ <b>Full</b></li> </ul> Only if <b>Link negotiation</b> has been selected <b>Manual</b> Selection by means of a selection window

### The 802.1X Security tab

Currently no function

### The DCB tab

Currently no function

## The Proxy tab

Currently no function

## The IPv4 Settings tab

The **IPv4 Settings** tab contains the following settings:

Setting	Meaning
<b>_Method:</b>	<p>Here you have to select a network connection method:</p> <ul style="list-style-type: none"> <li>■ <b>Automatic (DHCP)</b> If the network uses a DHCP server for IP address assignment</li> <li>■ <b>Automatic (DHCP) addresses only</b> If the network uses a DHCP server for IP address assignment, but you are assigning the DNS server manually</li> <li>■ <b>Manual</b> Assign the IP address manually</li> <li>■ <b>Link-Local Only</b> Currently no function</li> <li>■ <b>Shared to other computers</b> Currently no function</li> <li>■ <b>Disabled</b> Deactivate IPv4 for this connection</li> </ul>
<b>Automatic, addresses only</b>	<p>Here you can add static IP addresses that will be set up in addition to the IP addresses that are assigned automatically.</p> <p>Only with <b>_Method: Manual</b></p>
<b>Additional DNS servers:</b>	<p>Here you can add the IP addresses of DNS servers that are used to resolve computer names.</p> <p>Separate multiple IP addresses by commas.</p> <p>Only with <b>_Method: Manual</b> and <b>Automatic (DHCP) addresses only</b></p>
<b>Additional search domains:</b>	<p>Here you can add domains used by computer names.</p> <p>Separate multiple domains by commas.</p> <p>Only with <b>_Method: Manual</b></p>
<b>DHCP client ID:</b>	Currently no function
<b>Require IPv4 addressing for this connection to complete</b>	Currently no function

## The IPv6 Settings tab

Currently no function






# 28

**Overviews**

28.1 Pin layout and cables for data interfaces

28.1.1 V.24/RS-232-C interface for HEIDENHAIN devices



The interface complies with the requirements of EN 50178 for Secure separation from the power grid.

Control		25-pin: VB 274545-xx			9-pin: VB 366964-xx		
Male	Assignment	Male	Color	Female	Female	Color	Female
1	Do not assign	1	White/Brown	1	1	Red	1
2	RXD	3	Yellow	2	2	Yellow	3
3	TXD	2	Green	3	3	White	2
4	DTR	20	Brown	8	4	Brown	6
5	Signal GND	7	Red	7	5	Black	5
6	DSR	6		6	6	Violet	4
7	RTS	4	Gray	5	7	Gray	8
8	CTR	5	Pink	4	8	White/Green	7
9	Do not assign	8	Violet	20	9	Green	9
Housing	External shield	Housing	External shield	Housing	Housing	External shield	Housing

28.1.2 Ethernet interface RJ45 socket

Maximum cable length:

- 100 m unshielded
- 400 m shielded

Pin	Signal
1	TX+
2	TX-
3	RX+
4	Vacant
5	Vacant
6	RX-
7	Vacant
8	Vacant

28.2 Machine parameters

The following list shows the machine parameters that you can edit with the code number 123.

Related topics


















- Changing machine parameters with the **MPs for setters** application  
**Further information:** "Machine parameters", Page 597





















### 28.2.1 List of user parameters



















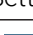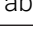














Refer to your machine manual.





















- The machine manufacturer can make additional machine-specific parameters available as user parameters, so that you can configure the functions that are available.
- The machine manufacturer can adapt the structure and contents of the user parameters. The display on your machine may be different.


















Depiction in the configuration editor	MP number
 <b>DisplaySettings</b>	
 <b>CfgDisplayData</b> Settings for screen displays	100800
 <b>axisDisplay</b> Display sequence and display rules for axes	100810
 <b>x</b>	
 <b>axisKey</b> Key name of the axis	100810. [Index].01501
 <b>name</b> Axis designation	100810. [Index].01502
 <b>rule</b> Display rule for the axis	100810. [Index].01503
 <b>axisDisplayRef</b> Sequence and rules for display axes before crossing the reference marks	100811
 <b>x</b>	
 <b>axisKey</b> Key name of the axis	100811. [Index].01501
 <b>name</b> Axis designation	100811. [Index].01502
 <b>rule</b> Display rule for the axis	100811. [Index].01503
 <b>positionWinDisplay</b> Type of position display in the position window	100803
 <b>statusWinDisplay</b> Type of position display in the Status workspace	100804
 <b>axisFeedDisplay</b> Display of the feed rate in the applications of the Manual operating mode	100806
 <b>spindleDisplay</b> Display of spindle position in the position display	100807
 <b>hidePresetTable</b> Disable the PRESET MANAGEMENT soft key	100808

Depiction in the configuration editor		MP number
	<b>displayFont</b> Font size for program display in the operating modes Program Run Full Sequence, Program Run Single Block, and Positioning with Manual Data Input.	100812
	<b>iconPrioList</b> Sequence of icons in the display	100813
	<b>compatibilityBits</b> Settings for display behavior	100815
	<b>axesGridDisplay</b> Axes as list or group in the position display.	100806
	<b>dashbrdWinDisplay</b> Type of position display in the status overview of the TNC bar	100817
	<b>CfgPosDisplayPace</b> Display step for the individual axes	101000
	<b>xx</b>	
	<b>displayPace</b> Display step for position display in [mm] or [°]	101001
	<b>displayPaceInch</b> Display step for position display in [inch]	101002
	<b>CfgUnitOfMeasure</b> Definition of unit of measure in effect for display	101100
	<b>unitOfMeasure</b> Unit of measure for display and user interface	101101
	<b>CfgProgramMode</b> Format of the NC programs and cycle display	101200
	<b>programInputMode</b> MDI: Program entry in HEIDENHAIN Klartext format or ISO format	101201
	<b>CfgDisplayLanguage</b> Definition of the NC and PLC conversational language	101300
	<b>ncLanguage</b> NC conversational language	101301
	<b>applyCfgLanguage</b> Load the language of the NC control	101305
	<b>plcDialogLanguage</b> PLC conversational language	101302
	<b>plcErrorLanguage</b> PLC error message language	101303
	<b>helpLanguage</b> Language for online help	101304
	<b>CfgStartupData</b> Behavior during control startup	101500




















Depiction in the configuration editor		MP number
	<b>powerInterruptMsg</b> Acknowledge the Power interrupted message	101501
	<b>opMode</b> Operating mode that is switched to when the control has fully booted	101503
	<b>subOpMode</b> Submode to be activated for the operating mode entered in 'opMode'	101504
	<b>CfgClockView</b> Display mode for time of day	120600
	<b>displayMode</b> Display mode for time of day on the screen	120601
	<b>timeFormat</b> Time format of digital clock	120602
	<b>CfgInfoLine</b> Link row on/off	120700
	<b>infoLineEnabled</b> Enable/disable info line	120701
	<b>CfgGraphics</b> Settings for 3D simulation graphics	124200
	<b>modelType</b> Model type of the 3D simulation graphics	124201
	<b>modelQuality</b> Model quality of the 3D simulation graphics	124202
	<b>clearPathAtBlk</b> Reset tool paths for new BLK FORM	124203
	<b>extendedDiagnosis</b> Write graphics journal files after restart	124204
	<b>CfgPositionDisplay</b> Settings for the digital readout	124500
	<b>progToolCallDL</b> Position display with TOOL CALL DL	124501
	<b>CfgTableEditor</b> Table editor configuration	125300
	<b>deleteLoadedTool</b> Behavior when deleting tools from the pocket table	125301
	<b>indexToolDelete</b> Behavior when deleting a tool's index entries	125302
	<b>CfgDisplayCoordSys</b> Setting the coordinate systems for the display	127500
	<b>transDatumCoordSys</b> Coordinate system for the datum shift	127501



















Depiction in the configuration editor		MP number
	<b>CfgGlobalSettings</b> GPS display settings	128700
	<b>enableOffset</b> Offset can/can't be selected in GPS dialog	128702
	<b>enableBasicRot</b> Additive basic rotation can/can't be selected in GPS dialog	128703
	<b>enableShiftWCS</b> Shift of W-CS can/can't be selected in GPS dialog	128704
	<b>enableMirror</b> Mirroring can/can't be selected in GPS dialog	128712
	<b>enableShiftMWCS</b> Shift of mW-CS can/can't be selected in GPS dialog	128711
	<b>enableRotation</b> Rotation can/can't be selected in GPS dialog	128707
	<b>enableFeed</b> Feed rate can/can't be selected in GPS dialog	128708
	<b>enableHwMCS</b> Show/hide M-CS coordinate system in GPS dialog	128709
	<b>enableHwWCS</b> Show/hide W-CS coordinate system in GPS dialog	128710
	<b>enableHwMWCS</b> Show/hide mW-CS coordinate system in GPS dialog	128711
	<b>enableHwWPLCS</b> Show/hide WPL-CS coordinate system in GPS dialog	128712
	<b>enableHwAxisU</b> U axis can/can't be selected in GPS dialog	128709
	<b>enableHwAxisV</b> V axis can/can't be selected in GPS dialog	128709
	<b>enableHwAxisW</b> W axis can/can't be selected in GPS dialog	128709
	<b>CfgRemoteDesktop</b> Settings for Remote Desktop connections	100800
	<b>connections</b> List of Remote Desktop connections to be displayed	133501
	<b>autoConnect</b> Start connection automatically	133505
	<b>title</b> Name of the OEM operating mode	133502
	<b>dialogRes</b> Name of a text	00501






















Depiction in the configuration editor		MP number
	<b>text</b> Language-sensitive text	00502
	<b>icon</b> Path/name for optional icon graphic file	133503
	<b>locations</b> List with positions where this Remote Desktop connection is displayed	133504
	<b>x</b>	
	<b>opMode</b> Operating mode	133504. [Index].133401
	<b>subOpMode</b> Optional submode for the operating mode specified in 'opMode'	133504. [Index].133402
	<b>PalletSettings</b>	
	<b>CfgPalletBehaviour</b> Behavior of the pallet control cycle	202100
	<b>failedCheckReact</b> Specify reaction to program check and tool check	202106
	<b>failedCheckImpact</b> Specify effect of program check or tool check	202107
	<b>ProbeSettings</b>	
	<b>CfgTT</b> Configuration of the tool calibration	122700
	<b>TT140_x</b>	
	<b>spindleOrientMode</b> M function for spindle orientation	122704
	<b>probingRoutine</b> Probing routine	122705
	<b>probingDirRadial</b> Probing direction for tool-radius measurement	122706
	<b>offsetToolAxis</b> Distance from lower edge of tool to upper edge of stylus	122707
	<b>rapidFeed</b> Rapid traverse in probing cycle for TT tool touch probe	122708
	<b>probingFeed</b> Probing feed rate for tool measurement with non-rotating tool	122709
	<b>probingFeedCalc</b> Calculation of the probing feed rate	122710







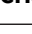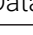

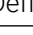











Depiction in the configuration editor		MP number
	<b>spindleSpeedCalc</b> Speed determination method	122711
	<b>maxPeriphSpeedMeas</b> Maximum permissible surface speed of the cutting edge for radius measurement	122712
	<b>maxSpeed</b> Maximum permissible speed during tool measurement	122714
	<b>measureTolerance1</b> Maximum permissible measuring error for tool measurement with rotating tool (first measuring error)	122715
	<b>measureTolerance2</b> Maximum permissible measuring error for tool measurement with rotating tool (second measuring error)	122716
	<b>stopOnCheck</b> NC Stop during "tool check"	122717
	<b>stopOnMeasurement</b> NC stop during tool measurement	122718
	<b>adaptToolTable</b> Change the tool table during tool check and tool measurement	122719
	<b>CfgTTRoundStylus</b> Configuration of a round stylus	114200
	<b>TT140_x</b>	
	<b>centerPos</b> Coordinates of the probe-contact center point	114201
	<b>safetyDistToolAx</b> Safety clearance around the probe contact of the TT tool touch probe for pre-positioning in the tool-axis direction	114203
	<b>safetyDistStylus</b> Safety zone around the stylus for pre-positioning	114204
	<b>CfgTTRectStylus</b> Configuration of a rectangular stylus	114300
	<b>TT140_x</b>	
	<b>centerPos</b> Coordinates of the stylus center	114313
	<b>safetyDistToolAx</b> Set-up clearance above the stylus for pre-positioning	114317






















Depiction in the configuration editor		MP number
	<b>safetyDistStylus</b> Safety zone around the stylus for pre-positioning	114318
	<b>ChannelSettings</b>	
	<b>CH_xx</b>	
	<b>CfgActivateKinem</b> Active kinematics	204000
	<b>kinemToActivate</b> Kinematics to be activated / active kinematics	204001
	<b>kinemAtStartup</b> The kinematics to be activated during control start-up	204002
	<b>CfgNcPgmBehaviour</b> Specify the behavior of the NC program.	200800
	<b>operatingTimeReset</b> Reset the machining time when program starts.	200801
	<b>plcSignalCycle</b> PLC signal for the number of the pending machining cycle	200803
	<b>plcSignalCycState</b> PLC signal for type of current cycle execution	200805
	<b>CfgGeoTolerance</b> Geometry tolerances	200900
	<b>circleDeviation</b> Permissible deviation of the radius	200901
	<b>threadTolerance</b> Permissible deviation in successive threads	200902
	<b>moveBack</b> Reserve for retraction movements	200903
	<b>CfgGeoCycle</b> Configuration of the fixed cycles	201000
	<b>pocketOverlap</b> Overlap factor for pocket milling	201001
	<b>posAfterContPocket</b> Traverse after machining the contour pocket	201007
	<b>displaySpindleErr</b> Display the Spindle is not rotating error message if M3/M4 is not active	201002
	<b>displayDepthErr</b> Display the Check the depth sign error message	201003

Depiction in the configuration editor		MP number
	<b>apprDepCylWall</b> Behavior when moving to wall of slot in the cylinder surface	201004
	<b>mStrobeOrient</b> M function for spindle orientation in machining cycles	201005
	<b>suppressPlungeErr</b> Do not show 'Plunging type is not possible' error message	201006
	<b>restoreCoolant</b> Behavior of M7 and M8 with Cycles 202 and 204	201008
	<b>facMinFeedTurnSMAX</b> Automatic feed rate reduction after attaining SMAX	201009
	<b>suppressResMatlWar</b> Do not show "Residual material" warning	201010
	<b>CfgThreadSpindle</b> Special spindle parameters for threads	113600
	<b>sourceOverride</b> Effective override potentiometer for feed rate during thread cutting	113603
	<b>thrdWaitingTime</b> Waiting time at reversal point in thread base	113601
	<b>thrdPreSwitchTime</b> Advanced switching time of spindle	113602
	<b>limitSpindleSpeed</b> Limit of spindle speed with Cycles 17, 207 and 18	113604
	<b>CfgEditorSettings</b> Settings for the NC editor	105400
	<b>createBackup</b> Generate a backup file *.bak	105401
	<b>deleteBack</b> Behavior of the cursor after deletion of lines	105402
	<b>lineBreak</b> Line break on NC blocks with more than one line	105404
	<b>stdTNChelp</b> Activate help graphics when entering cycle data	105405
	<b>warningAtDEL</b> Confirmation request when deleting an NC block.	105407
	<b>maxLineGeoSearch</b> Line number up to which a test of the NC program is to be run.	105408


Depiction in the configuration editor		MP number
	<b>blockIncrement</b> ISO programming: Block number increment	105409
	<b>useProgAxes</b> Specify programmable axes	105410
	<b>enableStraightCut</b> Allow or lock paraxial positioning blocks	105411
	<b>noParaxMode</b> Hide FUNCTION PARAXCOMP/PARAXMODE	105413
	<b>quotePaths</b> Put all path information in quotation marks	105414
	<b>CfgPgmMgt</b> Settings for the file management	122100
	<b>dependentFiles</b> Display of dependent files	122101
	<b>CfgProgramCheck</b> Settings for tool-usage files	129800
	<b>autoCheckTimeOut</b> Timeout for creation of tool-usage files	129803
	<b>autoCheckPrg</b> Create tool-usage file for NC program	129801
	<b>autoCheckPal</b> Create pallet-usage files	129802
	<b>CfgUserPath</b> Paths for the end user	102200
	<b>ncDir</b> List of drives and/or directories	102201
	<b>fn16DefaultPath</b> Default output path for the FN 16: F-PRINT function in the Program Run operating modes	102202
	<b>fn16DefaultPathSim</b> Default output path for the FN 16: F-PRINT function in the Programming and Test Run operating modes	102203
	<b>serialInterfaceRS232</b>	
	<b>CfgSerialPorts</b> Data record belonging to the serial port	106600
	<b>activeRs232</b> Enable the RS-232 interface in the program manager	106601
	<b>baudRateLsv2</b> Data transfer rate for LSV2 communication in baud	106606
	<b>CfgSerialInterface</b> Definition of data records for the serial ports	106700
	<b>RSxxx</b>	

Depiction in the configuration editor		MP number
	<b>baudRate</b> Data transfer rate for communication in baud	106701
	<b>protocol</b> Communications protocol	106702
	<b>dataBits</b> Data bits in each transferred character	106703
	<b>parity</b> Type of parity checking	106704
	<b>stopBits</b> Number of stop bits	106705
	<b>flowControl</b> Type of data-flow checking	106706
	<b>fileSystem</b> File system for file operation via serial interface	106707
	<b>bccAvoidCtrlChar</b> Avoid control characters in the block check character (BCC)	106708
	<b>rtsLow</b> Idle state of the RTS line	106709
	<b>noEotAfterEtx</b> Behavior after reception of an ETX control character	106710
	<b>Monitoring</b>	
	<b>CfgCompMonUser</b> User settings for component monitoring	129400
	<b>enforceReaction</b> The configured error reactions are enforced	129401
	<b>showWarning</b> Display warnings of monitoring tasks	129402
	<b>CfgProcMonUser</b> User settings for process monitoring	141600
	<b>permitAutoExport</b> Automatic export allowed	141601
	<b>CfgProcMonSnaps</b> Monitoring task templates	140600
	<b>snapshots</b> List of monitoring task templates	140601
	<b>x</b>	
	<b>alias</b> Name of the monitoring task template	...000.140402

Depiction in the configuration editor		MP number
	<b>task</b> Key of monitoring task	...000.140401
	<b>useAsDefault</b> Use as default for new monitoring sections	...000.140405
	<b>parameters</b> Monitoring task parameters	...000.140403
 x		
	 <b>name</b> Parameter name	...000.05101
	 <b>value</b> Parameter value	...000.05102
	<b>reactions</b> Monitoring task reactions	...000.140404
 x		
	 <b>reactionKey</b> Key of the reaction	...000.05201
	 <b>enabled</b>	...000.05202
	<b>CfgMachineInfo</b> General information of the machine operator	131700
	<b>machineNickname</b> Custom name (nickname) of the machine	131701
	<b>inventoryNumber</b> Inventory number or ID	131702
	<b>image</b> Photo or image of the machine	131703
	<b>location</b> Machine location	131704
	<b>department</b> Department or division	131705
	<b>responsibility</b> Responsible for the machine	131706
	<b>contactEmail</b> Contact email address	131707
	<b>contactPhoneNumber</b> Contact phone number	131708

28.3 User administration roles and rights

28.3.1 List of roles



The following contents can change in the following software versions of the control:

- HEROS role names
- Unix groups
- Basic ID number

Further information: "Roles", Page 608

Operating system roles:

Role	Privileges		
	HEROS role name	UNIX group	Basic ID number
HEROS.RestrictedUser	Role for a user with minimum rights on the operating system.		
	■ HEROS.MountShares	■ mnt	■ 335
	■ HEROS.Printer	■ lp	■ 9
HEROS.NormalUser	Role for a normal user with limited rights on the operating system.		
	This role grants the rights of the RestrictedUser role, as well as the following rights:		
	■ HEROS.SetShares	■ mntcfg	■ 334
HEROS.LegacyUser	■ HEROS.ControlFunctions	■ ctrlfct	■ 340
	With the <b>LegacyUser</b> role, the behavior regarding the operating system of the control is identical to that of older software versions without user administration. User administration remains active.		
	This role grants the rights of the NormalUser role, as well as the following rights:		
	■ HEROS.BackupUsers	■ userbck	■ 337
	■ HEROS.PrinterAdmin	■ lpadmin	■ 16
	■ HEROS.ReadLogs	■ logread	■ 342
	■ HEROS.SWUpdate	■ swupdate	■ 341
	■ HEROS.SetNetwork	■ netadmin	■ 336
	■ HEROS.SetTimezone	■ tz	■ 333
	■ HEROS.VMSharedFolders	■ vboxsf	■ 1000
HEROS.LegacyUserNoCtrlfct	This role determines the rights for remote log-in when user administration is disabled (e.g., via SSH). The control assigns this role automatically.		
	This role grants the rights of the LegacyUser role, with the exception of the following right:		
	■ HEROS.ControlFunctions	■ ctrlfct	■ 340

Role	Privileges		
	HEROS role name	UNIX group	Basic ID number
HEROS.Admin	The configuration of the network and the configuration of the user administration are some of the rights granted by this role.		
	This role grants the rights of the <b>LegacyUser</b> role, as well as the following rights:		
	■ HEROS.BackupMachine	■ backup	■ 338
	■ HEROS.UserAdmin	■ useradmin	■ 339
<b>NC operator roles:</b>			
Role	Privileges		
	HEROS role name	UNIX group	Basic ID number
NC.Operator	This role allows you to run NC programs.		
	■ NC.OPModeProgramRun	■ NCOpPgmRun	■ 302
NC.Programmer	This role grants the rights of NC programming.		
	This role grants the rights of the Operator role, as well as the following rights:		
	■ NC.EditNCProgram	■ NCEdNCProg	■ 305
	■ NC.EditPalletTable	■ NCEdPal	■ 309
	■ NC.EditPresetTable	■ NCEdPreset	■ 308
	■ NC.EditToolTable	■ NCEdTool	■ 306
	■ NC.OPModeMDi	■ NCOpMDI	■ 301
	■ NC.OPModeManual	■ NCOpManual	■ 300
NC.Setter	This role allows you to edit the pocket table.		
	This role grants the rights of the Programmer role, as well as the following rights:		
	■ NC.ApproveFsAxis	■ NCAp- proveFsAxis	■ 319
	■ NC.EditPocketTable		■ 307
	■ NC.SetupDrive	■ NCEdPocket	■ 315
	■ NC.SetupProgramRun	■ NCSetupDrv ■ NCSe- tupPgRun	■ 303
NC.AutoProductionSet- ter	This role allows you to execute all NC functions, including programming a scheduled NC program start.		
	This role grants the rights of the Setter role, as well as the following rights:		
	■ NC.ScheduleProgramRun	■ NCSched- ulePgRun	■ 304
NC.LegacyUser	With the <b>LegacyUser</b> role, the control's behavior regarding NC programming is identical to that of older software versions without user administration. User administration remains active. The <b>LegacyUser</b> has the same rights as the AutoProductionSetter.		

Role	Privileges		
	HEROS role name	UNIX group	Basic ID number
NC.AdvancedEdit	This role allows you to use special functions of the NC and table editors.		
	■ Special functions of Q parameter programming and editing the table header		
	Replacement for code number <b>555343</b>		
	■ NC.EditNCProgramAdv	■ NCEdit-NCPgmAdv	■ 327
	■ NC.EditTableAdv	■ NCEdit-TableAdv	■ 328
NC.RemoteOperator	This role allows you to start NC programs from an external application.		
	■ NC.RemoteProgramRun	■ NCRe-motePgmRun	■ 329

Machine manufacturer (PLC) roles:

Role	Privileges		
	HEROS role name	UNIX group	Basic ID number
PLC.ConfigureUser	This roles grants the rights on code number <b>123</b> .		
	■ NC.ConfigUserAdv	■ NCConfi-gUserAdv	■ 316
	■ NC.SetupDrive	■ NCSetupDrv	■ 315
PLC.ServiceRead	This role allows read-only access during servicing.		
	This role can be used to display various types of diagnostic information		
	■ NC.Data.AccessServiceRead	■ NCDASer-viceRead	■ 324



Refer to your machine manual.

The machine manufacturer can adapt the PLC roles.

When the **Machine manufacturer (PLC) roles:** are adapted by the machine manufacturer, the following contents may change:

- The names of the roles
- The number of roles
- The functionality of the roles



### 28.3.2 List of rights

The table below lists all of the individual rights.

**Further information:** "Rights", Page 608

#### Rights:

HEROS role name	Description
HEROS.Printer	Data output to network printers
HEROS.PrinterAdmin	Configuration of network printers
HEROS.ReadLogs	Currently no function
NC.OPModeManual	Operating the machine in the <b>Manual Operation</b> and <b>Electronic handwheel</b> operating modes.
NC.OPModeMDi	Working in the <b>Positioning w/ Manual Data Input</b> operating mode.
NC.OpModeProgramRun	Execution of NC programs in the <b>Program Run Full Sequence</b> or <b>Program run, single block</b> operating mode.
NC.SetupProgram-Run	Probing in the <b>Manual Operation</b> and <b>Electronic handwheel</b> operating modes. Using the <b>AFC</b> and <b>ACC</b> functions.
NC.ScheduleProgramRun	Programming a scheduled NC program start
NC.EditNCProgram	Editing NC programs
NC.EditToolTable	Editing the tool table
NC.EditPocketTable	Editing the pocket table
NC.EditPresetTable	Editing the preset table
NC.EditPalletTable	Editing pallet tables
NC.SetupDrive	Adjustment of drives by the end user
NC.ApproveFsAxis	Confirming test position of safe axes
NC.EditNCProgramAdv	Additional NC functions
NC.EditTableAdv	Additional table programming functions (e.g., editing of the table head)
HEROS.SetTimezone	Adjustment of date and time, time zone and time synchronization via NTP and the <b>HEROS menu</b> .
HEROS.SetShares	Configuration of public network drives mounted on the control
HEROS.MountShares	Connecting and disconnecting network shares with the control
HEROS.SetNetwork	Configuration of network and relevant settings for data security
HEROS.BackupUsers	Data backup on the control—for all users configured on the control
HEROS.BackupMachine	Backup and restoring data of the entire machine configuration
HEROS.UserAdmin	Configuration of user administration on the control This includes creating, deleting, and configuring local users

HEROS role name	Description
HEROS.ControlFunctions	Control function of the operating system <ul style="list-style-type: none"><li>■ Auxiliary functions, such as starting and stopping NC software</li><li>■ Telemaintenance</li><li>■ Advanced diagnostic functions, such as log data</li></ul>
HEROS.SWUpdate	Installation of software updates for the control
HEROS.VMShared-Folders	Access to shared folders of a virtual machine Only relevant when running a programming station within a virtual machine
NC.RemoteProgram-Run	NC program start from an external application (e.g., via the DNC interface)
NC.ConfigUserAdv	Configuration access to the contents that have been enabled through code number <b>123</b>
NC.DataAccessServiceRead	Read-only access to the <b>PLC:</b> drive during servicing
NC.OpcUaOEMConfiguredDataRead	Read-access through OPC UA NC Server to data defined by the machine manufacturer

## 28.4 Special functions defining the machine behavior

With code number 555343, you can enable NC functions that are intended for HEIDENHAIN, the machine manufacturer, and third-party providers only.

The following NC functions influence the machine behavior:

- Kinematics functions:
  - **WRITE KINEMATICS**
  - **READ KINEMATICS**
- PLC functions:
  - **FUNCTION SCOPE**
    - **START**
    - **STORE**
    - **STOP**
  - **READ FROM PLC**
  - **WRITE TO PLC**
  - **WRITE CFG**
    - **PREPARE**
    - **COMMIT TO DISK**
    - **COMMIT TO MEMORY**
    - **DISCARD PREPARATION**
- Variable programming:
  - **FN 19: PLC**
  - **FN 20: WAIT FOR**
  - **FN 29: PLC**
  - **FN 37: EXPORT**
- **CYCL QUERY**

### NOTICE

#### Caution: Significant property damage!

The use of special functions for machine behavior might result in undesired behavior and severe errors (e.g., the control might not be operable any longer). With these NC functions, HEIDENHAIN, the machine manufacturer, and third-party providers have the possibility of modifying the machine behavior under program control. It is not recommended that machine operators or NC programmers use this function. There is a danger of collision during the execution of these NC functions and during the subsequent machining operations!

- ▶ Only use special functions for machine behavior after checking with HEIDENHAIN, the machine manufacturer, or the third-party provider
- ▶ Comply with the documentation from HEIDENHAIN, the machine manufacturer, and third-party providers

## 28.5 Keycaps for keyboard units and machine operating panels






























































The keycaps with IDs 12869xx-xx and 1344337-xx are suitable for use on the following keyboard units and machine operating panels:

- TE 361 (FS)

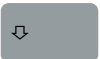





The keycaps with ID 679843-xx are suitable for use on the following keyboard units and machine operating panels:

- TE 360 (FS)









Keycaps for alphabetic keyboard

														
ID 1286909	-08	-09	-10	-11	-12	-13	-14	-15	-16					
														
ID 1286909	-17	-18	-19	-20	-21	-22	-23	-24	-25					
														
ID 1286909	-26	-27	-28	-29	-30	-31	-32	-33	-34					
														
ID 1286909	-35	-36	-	-38	-39	-	-41	-42	-43					
ID 1344337*)	-	-	-01*)	-	-	-02*)	-	-	-					
*) With tactile mark														
														
ID 1286909	-44	-45	-46	-47	-48	-49	-50	-51	-52					
														
ID 1286909	-53	-54	-55	-56	-57	-58	-59	-60						
ID 679843	-	-	-	-F4	-	-	-F6	-						
														
ID 1286911	-02	-03	-04	-05										
														
ID 1286914	-03													
														
ID 1286915	-02	-03												
														
ID 1286917	-01													
















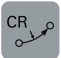



### Keycaps for operating aids

						
ID 1286909	-61	-62	-63	-64	-65	-66
ID 679843	–	-36	–	–	–	–










































### Keycaps for operating modes

								
ID 1286909	-67	-68	-69	-70	-71	-72	-73	-74
ID 679843	–	–	-66	–	–	–	–	–











### Keycaps for programming

									
ID 1286909	-75	-76	-77	-78	-79	-80	-81	-82	-83
									
ID 1286909	-84	-85	-86	-87	-88	-89	-90	-91	-93
									
ID 1286909	-92								
ID 679843	-D6								
































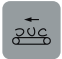












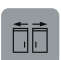


























Keycaps for axis input and value input





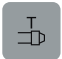








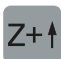

















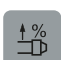
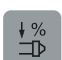










														
	Orange	Orange	Orange	Orange	Orange	Orange	Orange	Orange	Orange					
ID 1286909	-94	-95	-96	-4K	-4Y	-4L	-5K	-98	-4Z					
ID 679843	-C8	-D3	-53	-54	-C9	-88	-D4	-31	-55					
														
	Orange													
ID 1286909	-97	-0N	-3S	-4S	-4T	-3R	-3T	-3U	-3V					
ID 679843	-31	-E2	–	–	–	–	–	–	–					
														
ID 1286909	-0B	-0C	-0D	-0E	–	-0G	-0H	-2L	-2M					
ID 1344337*)	–	–	–	–	-03*)	–	–	–	–					
*) With tactile mark														
														
ID 1286909	-0K	-0L	-0M	-2N	-0P	-2P	-0R	-0S	-3N					
														
			Orange											
ID 1286909	-3W	-3P	-99	-0A										
														
ID 1286914	-04													

Keycaps for navigation










								
ID 1286909	-0T	-0U	-0V	-0W	—	-0Y	-0Z	-1A
ID 1344337*)	—	—	—	—	-04*)	—	—	—
*) With tactile mark								
								
ID 1344337*)	-06	-07						
ID 679843	-42	-41						
*) With tactile mark								


### Keycaps for machine functions

									
ID 1286909	-1D	-1E	-1F	-1G	-1H	-1K	-1L	-4X	-1N
ID 679843	-09	-07	-05	-11	-13	-03	-16	-E6	-06
									
ID 1286909	-1P	-1R	-1S	-1T	-1U	-1V	-1W	-1X	-1Y
ID 679843	-10	-14	-23	-22	-24	-29	-02	-21	-20
									
ID 1286909	-1Z	-2A	-2B	-2C	-2D	-2E	-2H	-2K	-2R
ID 679843	-25	-28	-01	-26	-27	-30	-57	-56	-04
									
ID 1286909	–	-2T	-2U	-2Z	-3A	-3E	-3F	-3G	-3H
ID 1344337*)	-05*)	–	–	–	–	–	–	–	–
ID 679843	-15	-08	-12	-59	-60	-40	-73	-76	-74
*) With tactile mark									
									
ID 1286909	-3L	-3M	-3X	-3Y	-3Z	-4A	-4B	-4C	-4D
ID 679843	-C6	-75	-46	-47	-F2	-67	-51	-68	-99
									
ID 1286909	-4E	-4F	-4H	-4M	-4N	-4P	-4R	-4U	-06
ID 679843	-B8	-B7	-45	-69	-70	-B2	-B1	-52	-18
									
ID 1286909	-07	-5A	-5B	-5C	-5D	-4V	-4W	-5E	-5H
ID 679843	-19	-B3	-B4	-61	-62	-A2	-A3	-A4	-E3
									
ID 1286909	-5F	-5G	2Y	-3K	-4G	-2V	-2W	-2X	
ID 679843	-A5	-A6	–	–	–	–	–	–	

									
ID 679843	-43	-44	-B5	-B6	-B9	-C1	-C2	-C3	-C4
									
ID 679843	-C5	-D9	-E1	-92	-91	-93	-94	-63	-64
									
ID 679843	-95	-96	-A1	-C7	-A9	-98	-97	-F3	-72
									
ID 679843	-E4	-E5	-E7	-E8	-48	-49	-50	-65	-17
									
ID 679843	Green -71	Green -D8	Green -90	Red -89	Red -D7				
									
ID 1286909	Red -2F	Red -2G							

Other keycaps

									
			Orange	Green	Red				
ID 1286909	-01	-02	-05	-03	-04	-	-	-	-
ID 679843	-33	-34	-35	-	-	-38	-39	-A7	-A8
									
ID 679843	-D5	-F5							

 If you need keycaps with additional symbols, please contact HEIDENHAIN.



## Index

**3**

3D basic rotation.....	240
3D calibration.....	392
3D mesh.....	351
3D-ROT menu.....	245
3D tool model.....	213

**A**

About the product.....	65
About the User's Manual.....	55
ACC.....	290
Accessories.....	86
Active Chatter Control (ACC).....	290
Active Directory.....	618
Export configuration.....	623
Function user.....	622
Adaptive feed control (AFC).....	280
Additional documentation.....	57
Additional software.....	645
Additional status display.....	129
Additive basic rotation.....	295
Additive offset.....	293
AFC.....	280
Basic settings.....	500
Programming.....	283
Teach-in cut.....	286
AFC settings.....	287
Angle encoder.....	171
Application	
Configuration editor.....	599
Functional safety.....	536
Help.....	61
Manual operation.....	162
MDI.....	365
Move to reference position....	157
MP for setters.....	597
MP for Users.....	597
Pocket table.....	482
Preset table.....	490
Retract.....	434
Settings.....	541
Setup.....	375
Start/Login.....	89
Tool management.....	205
Axes	
Moving.....	163
Referencing.....	157
Axis designation.....	170
Axis display.....	122
Axis key.....	164

**B**

Backup.....	593
Basic coordinate system.....	227
Basic rotation.....	<b>240</b>
Basic transformation.....	494

B-CS.....	227
Block scan.....	423
Multi-level.....	427
Pallet table.....	429
Point table.....	428
Returning to the contour.....	430
Single-level.....	426

**C**

CAD file.....	333
CAD Import.....	344
Contour, saving.....	345
Position, saving.....	346
CAD Viewer.....	333
Calibrating.....	391
Length.....	394
Radius.....	395
Calibration	
Deflection behavior.....	396
Cartesian coordinate system....	223
Certificate.....	566
CFG file.....	270
Chatter Control.....	290
Code number.....	545
Collision monitoring.....	250
Activating.....	255
Fixtures.....	257
Compensation table	
Program run.....	432
Configuration editor.....	599
List.....	599
Table.....	599
Connecting cable.....	654
Connection	
Network.....	559
Network drive.....	556
Connection assistant.....	572
Contact.....	64
Context-sensitive help.....	63
Control	
Powering off.....	158
Powering on.....	154
Control's user interface.....	88
Control-in-operation symbol.....	417
Control user interface	
User-defined.....	602
Conversational language.....	554
Coordinate system.....	222
Basics.....	223
Coordinate origin.....	223
CR2.....	180
CreateConnections.....	642
Creating a new table.....	440
Current user.....	614

**D**

Data backup.....	593, 645
------------------	----------

Database ID.....	182
Data interface.....	637
OPC UA.....	568
pin layout.....	654
Data transfer	
Software.....	639
Date and time.....	553
Datum table	
Program run.....	432
DCM.....	250
Activating.....	255
Fixtures.....	257
Directory	
public.....	610
Display unit.....	82
DNC.....	574
Secure connection.....	627
Dressing tool table.....	475
Columns.....	475
Drive	
HOME.....	610
Dynamic Collision Monitoring (DCM).....	250

**E**

Embedded Workspace.....	530
Encoder.....	171
Error message.....	<b>360</b>
Error window.....	360
Ethernet interface.....	<b>559</b> , 654
Configuration.....	647
Settings.....	561
Extended Workspace.....	532
External access.....	574

**F**

Feed control.....	280
Feed factor.....	301
Feed rate limit.....	416
File	
Backing up.....	645
Tools.....	645
Firewall.....	589
First steps.....	107
Program run.....	116
Setup.....	113
Tool.....	109
Fixture monitoring	
CFG file.....	258
Combined.....	275
Integrating.....	260
M3D file.....	259
STL file.....	258
Fixtures.....	257
CFG file.....	270
Combining.....	275
Form	
For tables.....	448

FreeTurn tool.....	187	Incremental jog positioning.....	165	Mid-program startup.....	423
Functional safety (FS).....	533	Indexed tool.....	182	Mirroring	
Functional safety (FS) operating modes.....	535	Input coordinate system.....	234	GPS.....	296
<b>G</b>		Integrated product aid		MOD menu.....	541
General status display.....	121	TNCguide.....	60	Overview.....	542
Gestures.....	95	Interface.....	88	Move to reference position.....	157
Global program settings.....	291	Ethernet.....	559	Moving	
Activating.....	293	OPC UA.....	568	Axis key.....	164
Additive basic rotation.....	295	User-defined.....	602	Incremental jog.....	165
Additive offset.....	293	<b>J</b>		<b>N</b>	
Feed factor.....	301	Jog increment.....	165	NC fundamentals.....	170
Handwheel superimpositioning....	298	<b>K</b>		Network.....	559
Mirroring.....	296	Keyboard.....	82	Configuration.....	647
Overview.....	292	Formula.....	358	Settings.....	561
Resetting.....	293	NC functions.....	357	Network configuration.....	647
Rotation.....	298	Text.....	358	DCB.....	650
Shift.....	295	Virtual.....	356	Ethernet.....	650
Shift mW-CS.....	297	Keys.....	95	General.....	649
GPS.....	291	Kinematics.....	545	IPv4 Settings.....	651
Activating.....	293	KinematicsDesign.....	270	IPv6 Settings.....	651
Additive basic rotation.....	295	<b>L</b>		Proxy.....	651
Additive offset.....	293	Language.....	554	Security.....	650
Feed factor.....	301	Changing.....	555	Network drive.....	556
Handwheel superimpositioning....	298	License settings.....	573	Connecting.....	557
Mirroring.....	296	Licensing terms.....	81	Network setting	
Overview.....	292	Linear encoder.....	171	Ping.....	564
Resetting.....	293	L-shaped stylus.....	392, 392	Routing.....	564
Rotation.....	298	<b>M</b>		SMB share.....	564
Shift.....	295	M92 datum M92-ZP.....	172	Network settings	
Shift mW-CS.....	297	Machine		DHCP Server.....	563
Grinding tool table.....	466	Powering off.....	158	Interface.....	563
Columns.....	467	Powering on.....	154	Status.....	562
<b>H</b>		Machine axes, moving.....	163	Notes, types of.....	58
Handwheel.....	507	Machine coordinate system.....	224	<b>O</b>	
Operating elements.....	509	Machine datum.....	172	Offset.....	494
Wireless handwheel.....	516	Machine information.....	548	OPC UA NC Server.....	568
Handwheel mode.....	162	Machine parameters.....	597	Connection assistant.....	572
Handwheel superimpositioning		Editing.....	597	License settings.....	573
Global Program Settings.....	298	List.....	655	Restart.....	572
Virtual tool axis VT.....	299	Overview.....	654	Operating elements.....	95
Hardware.....	81	Machine parameters for users... 597		Operating mode	
HEROS.....	631	Machine settings.....	545	Machine.....	89
HEROS function		Machine times.....	552	Manual.....	89
Overview.....	632	Machining time.....	147	Overview.....	89
Settings Application.....	541	Main menu.....	105	Program Run.....	412
HEROS menu.....	632	Manual axis.....	432	RDP.....	530
HEROS tool.....	645	Manual operation.....	162	Start.....	89
HOME.....	610	Manual tilting, activating.....	245	Tables.....	438
Host computer operation.....	574	Maximum feed rate.....	416	Operating system.....	631
<b>I</b>		M-CS.....	224	Override Controller.....	521
Icons, miscellaneous.....	103	MDI.....	365	Conditional stop.....	524
I-CS.....	234	Message.....	360	Displaying breakpoints.....	527
		Message menu.....	360	<b>P</b>	
				Pallet table	
				Block scan.....	429

Parameter list.....	151	Basic coordinate system.....	227	SRA.....	643
Pin layout		Input coordinate system.....	234	SSH connection.....	627
data interface.....	654	Machine coordinate system..	224	SSH File Transfer Protocol.....	641
PKI admin.....	566	Tool coordinate system.....	235	Start/Login.....	108
Place of operation.....	67	Working plane coordinate		Status display.....	119
Pocket table.....	482	system.....	231	Additional status display.....	129
Portscan.....	593	Workpiece coordinate system....		Axis.....	122
Position display.....	122	229		Overview.....	120
Mode.....	148	Remaining run time.....	147	Position.....	122
Status overview.....	127	Remote Desktop Manager.....	583	Simulation.....	146
Position encoder.....	171	External computer, shutting		technology.....	123
Positioning with Manual Data		down.....	583	TNC bar.....	127
Input.....	365	VNC.....	584	Status overview.....	127
Powering off.....	158	Windows Terminal Service... 584		Control-in-operation symbol.. 128	
Powering on.....	154	Remote maintenance.....	643	Remaining run time.....	147
Powering on and off.....	153	Remote Service.....	643	Step index.....	182
Preset.....	238	Restarting.....	158	STL file	
Activating.....	242	Restore.....	593	Optimizing.....	351
Inches.....	498	Retract.....	434	System time.....	553
Scratching.....	239	Returning to the contour.....	430		
Setting.....	241	Rotation		<b>T</b>	
Preset management.....	238	GPS.....	298	Table	
Preset table.....	490	Run time		Creating.....	440
Columns.....	492	Machine information.....	552	in Configuration editor.....	599
Inches.....	498	Program run.....	147	Preset table.....	490
Write-protection.....	495			Tool tables.....	451
Printer.....	576, 576	<b>S</b>		Workspace.....	442
Process monitoring.....	304	Safety precaution.....	68	Target group.....	56
First steps.....	306	Content.....	58	Taskbar.....	636
Overview of monitoring task.. 321		Scratching.....	239, 405	TCP.....	179
Procedure.....	324	Secure connection.....	627	T-CS.....	235
Reactions.....	331	Secure Remote Access.....	643	The Settings.....	541
Program call		Security software SELinux.....	555	Tilting	
Structure.....	422	Selection function		Manual.....	243
Program run.....	412	Structure.....	422	Time.....	553
Block scan.....	423	SELinux.....	555	Time zone.....	553
Canceling.....	417	Service file.....	360	TIP.....	178
Compensation table.....	432	Creating.....	362	TLP.....	179
Contextual reference.....	418	Process monitoring.....	362	TNCdiag.....	596
Datum table.....	432	Settings		TNCguide.....	61
Global program settings.....	291	Network.....	561	TNCremo.....	639
Manual traverse.....	422	VNC.....	579	Tool.....	175
Navigation path.....	420	Settings application		Database ID.....	182
Retract.....	434	Overview.....	542	Definition.....	205
Returning to the contour.....	430	Setting up a vice.....	267	Dressing tool.....	475
Program run time.....	147	Setting up fixtures.....	260	Exporting and importing.....	206
Proper and intended operation.... 67		Sequence.....	266	FreeTurn.....	187
Public directory.....	610	Vice.....	267	Grinding tool.....	466
		Setting up the workpiece.....	398	Measuring.....	405
<b>Q</b>		SFTP.....	641	Overview.....	176
Q parameter list.....	151	Shift.....	295	Preset.....	177
Q parameters		Shift mW-CS.....	297	Table.....	451
Show.....	151	SIK menu.....	549	Tool data, required.....	191
		Simulation status.....	146	Touch probe.....	478
<b>R</b>		Software number.....	71	Turning tool.....	461
RDP.....	530	Software option.....	73, 549	Tool carrier management.....	209
Reference point.....	172	Split screen layout of User's		Tool carrier reference point.....	177
Reference system.....	222	Manual.....	57	Tool center point TCP.....	179

Tool change position.....	172	Measure.....	167	Simulation status.....	146
Tool coordinate system.....	235	Unit of measure.....	545	Start/Login.....	108
Tool data.....	181	UserAdmin.....	614	Status.....	129
Exporting.....	208	User administration.....	606	Table in the Tables operating	
Importing.....	207	Activating.....	610	mode.....	442
Required.....	191	Autologin.....	624	WPL-CS.....	231
Tool ID number.....	181	Current user.....	614	Write-protection, preset table....	495
Tooling list.....	489	Database.....	615	Write protection for preset table	
Tool location point TLP.....	179	Domain.....	615	Activating.....	496
Tool management.....	205	Export Windows configuration....		Removing.....	496
Tool model.....	213	623			
Tool name.....	181	Logging on.....	624		
Tool radius 2 center CR2.....	180	Overview of roles and rights..	666		
Tool rotation point TRP.....	180	Rights.....	608		
Tool table.....	451	Roles.....	608		
Columns.....	451	Settings.....	614		
Inches.....	482	Users.....	606		
Input options.....	451	Windows domain.....	618		
Tool tip TIP.....	178	User aids.....	355		
Tool type		User interface of the control.....	88		
Tool data, required.....	191	User parameters			
Tool types.....	188	List.....	655		
Tool usage file.....	485				
Tool usage test.....	215	<b>v</b>			
Touch probe		Virtual keyboard.....	356		
3D calibration.....	396	VNC.....	579		
Calibrating.....	391				
Length, calibrating.....	394	<b>w</b>			
Radius, calibrating.....	395	W-CS.....	229		
Setting up fixtures.....	260	Window Manager.....	637		
Setting up the workpiece.....	398	Windows domain.....	618		
Setup.....	372	Export configuration.....	623		
Touch probe cycle		Function user.....	622		
Manual.....	375	Wireless handwheel.....	516		
Touch probe data.....	479	Configuring.....	517		
Touch Probe Function.....	375	Working plane.....	170		
Overview.....	378	Working plane, tilting			
Setting up the workpiece.....	398	Fundamentals.....	243		
Touch probe monitoring.....	408	Head rotary axis.....	244		
Touch probes		Manually.....	243		
Radio transmission.....	372	Table rotary axis.....	244		
Touch probe table.....	478	Working plane coordinate			
Columns.....	479	system.....	231		
Touchscreen.....	82	Workpiece coordinate system...	229		
Traverse		Workpiece datum.....	172		
Handwheel.....	507	Workpiece preset.....	172, 238		
Traverse limit.....	545	Workspace			
TRP.....	180	Form for tables.....	448		
Turning operation		Global program settings.....	291		
Measure unbalance.....	167	GPS.....	291		
Turning tool table.....	461	Keyboard.....	356		
Columns.....	462	List.....	599		
T usage order.....	487	Main menu.....	105		
<b>u</b>		Overview.....	92, 536		
Unbalance		Positions.....	121		
Compensation weight.....	168	Probing Function.....	375		
Function.....	166	Process monitoring.....	309		
		RDP.....	530		

# HEIDENHAIN

## DR. JOHANNES HEIDENHAIN GmbH

Dr.-Johannes-Heidenhain-Straße 5  
83301 Traunreut, Germany

☎ +49 8669 31-0

FAX +49 8669 32-5061

info@heidenhain.de

**Technical support** FAX +49 8669 32-1000

**Measuring systems** ☎ +49 8669 31-3104  
service.ms-support@heidenhain.de

**NC support** ☎ +49 8669 31-3101  
service.nc-support@heidenhain.de

**NC programming** ☎ +49 8669 31-3103  
service.nc-pgm@heidenhain.de

**PLC programming** ☎ +49 8669 31-3102  
service.plc@heidenhain.de

**APP programming** ☎ +49 8669 31-3106  
service.app@heidenhain.de

www.heidenhain.com

www.klartext-portal.com

The Information Site for  
HEIDENHAIN Controls

### Klartext App

Klartext on your  
mobile device

Google  
Play Store

Apple  
App Store



## Touch probes and vision systems

HEIDENHAIN provides universal, high-precision touch probe systems for machine tools, for example for the exact determination of workpiece edge positions and for tool measurement. Proven technology, such as a wear-free optical sensor, collision protection, or integrated blower/flusher jets for cleaning the measuring point ensure the reliability and safety of the touch probes when measuring workpieces and tools. For even higher process reliability, the tools can be monitored conveniently with the vision systems and tool-breakage sensor from HEIDENHAIN.



For more details on touch probes and vision systems:

[www.heidenhain.com/products/touch-probes-and-vision-systems](http://www.heidenhain.com/products/touch-probes-and-vision-systems)

